


GRACE 36"

BATHROOM VANITY SET

SKU: GRACE36QZ-ESP

Colors/Finishes: Espresso

Nominal Dimension:36W*22D*35H inches

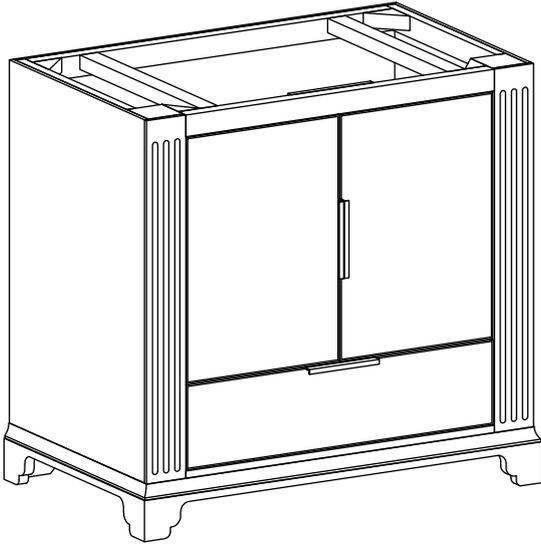


VANITY FEATURES:

- 1.Material: Solid poplar wood frame, high-quality veneer plywood.
- 2.Doors: 2 soft-close doors, Austria BLUM Soft-close hinges system.
- 3.Drawers: 1 soft-close drawers, Adams concealed soft-close sliders.
- 4.Hardware: Stainless steel
- 5.Installation Type: Freestanding
- 6.Built-in Adjusters: Adjustable height levelers
- 7.Vanity Top: High-quality quartz/marble with single undermount sink
- 8.Assemble required: No
- 9.Vanity top Included: Yes
- 10.Mirror Included: Optional
- 11.Medicine Cabinet Included: Optional

Contents

36"Vanity.....	PAGE2
36"Vanity Top.....	PAGE3
Vanity Installation.....	PAGE4

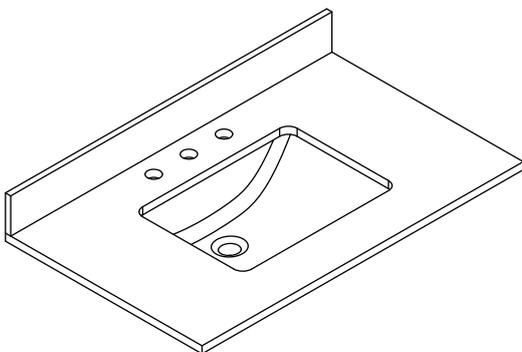

VANITY TOP FEATURES:

- 1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz,or natural Italian Carrera white marble.
- 2.Top Color: Carrera white
- 3.Sink: 1*20"undermount rectangle sink
- 4.Faucet Hole s: Top pre-drilled for 8"widespread faucet holes
- 5.Sink Certified: CUPC certified
- 6.Backsplash: 4"backsplash included
- 7.Faucet Included: No
- 8.Nominal Dimension(W*D*H): 36W*22D*0.79H inches

GRACE 36"


BATHROOM VANITY SET

SKU: GRACE36QZ-ESP

COMPONENTS:

Vanity	GRACE36QZ-ESP
Vanity Top	QZ36CW20HF
Wall Mirror	W5FM2836MB
Medicine Cabinet	W4MCL3030


PRODUCT DIAGRAMS:

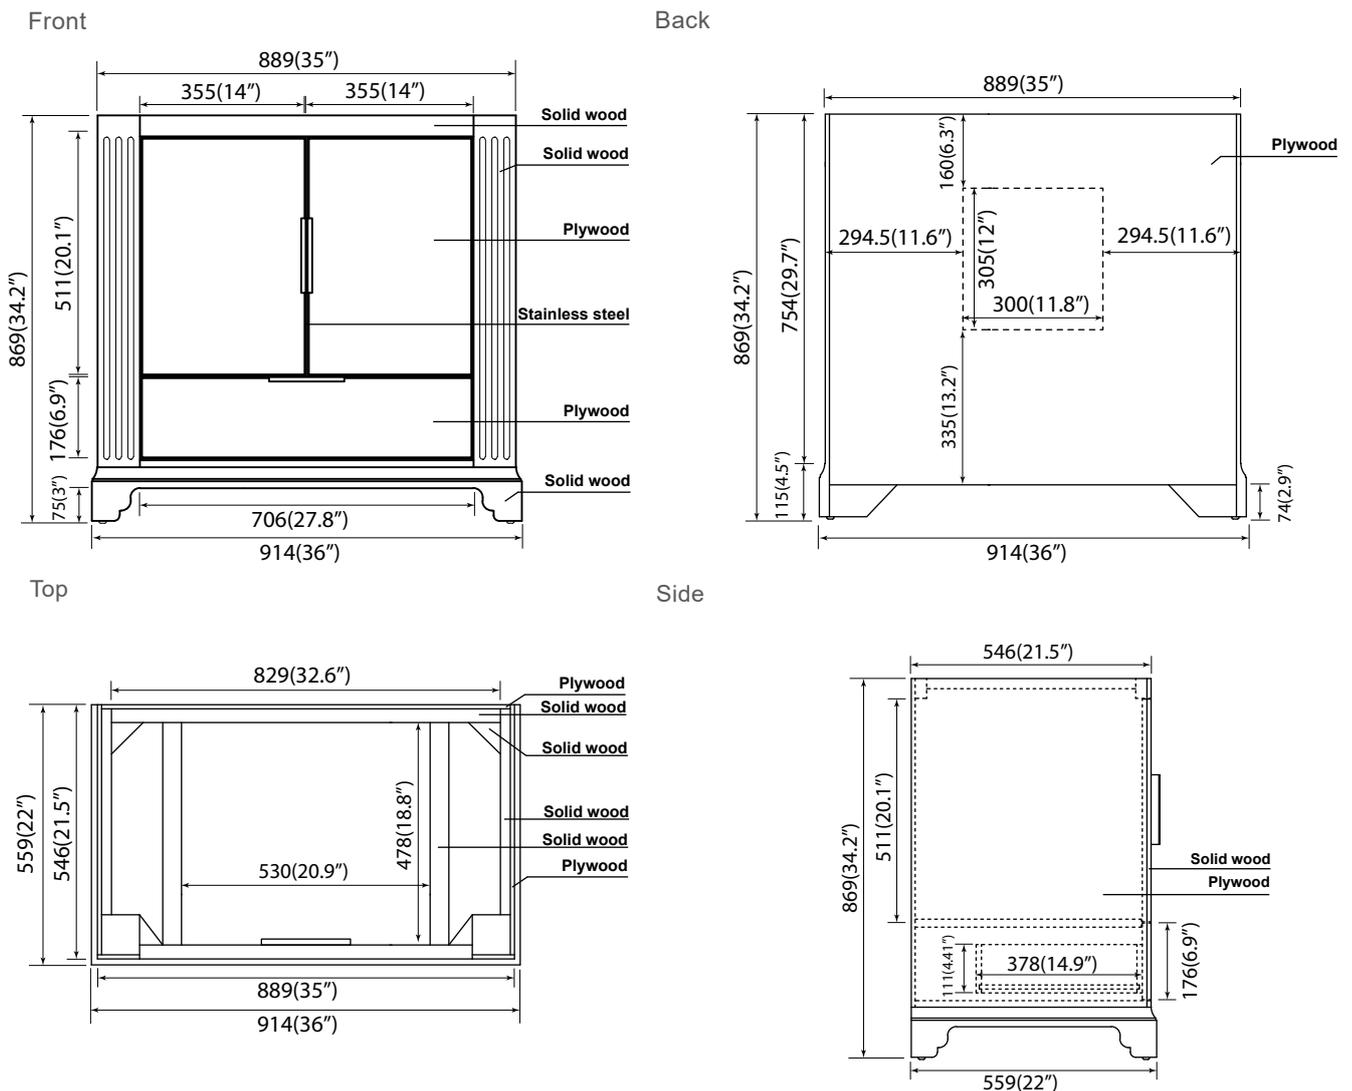

GRACE 36"


VANITY TOP

With rectangular undermount sink

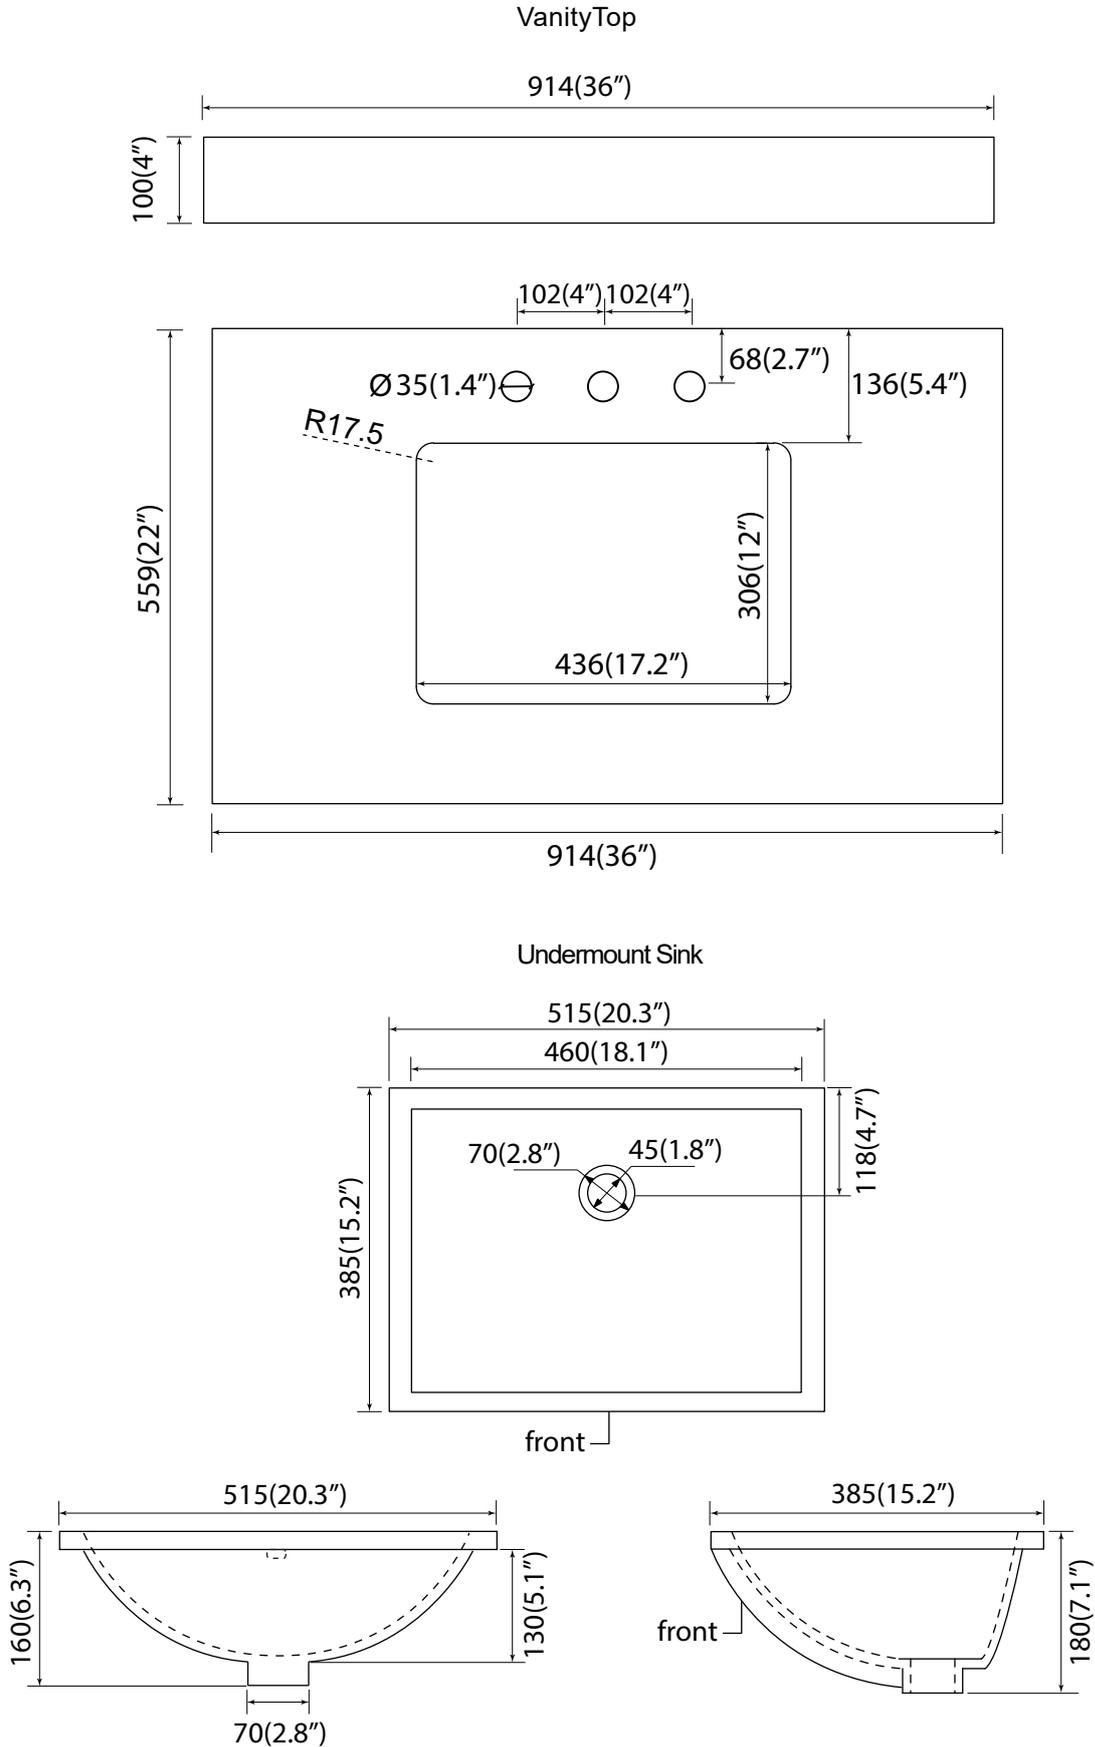

Vanity Installation

SUGGESTED TOOLS AND MATERIALS:



Sealant



Measuring tape



Safety glasses



Rag




Level

INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .We accept no liability for any damage to the floor,plumbing, vanity cabinet,sink,counter top,or personal injury during installation.

1

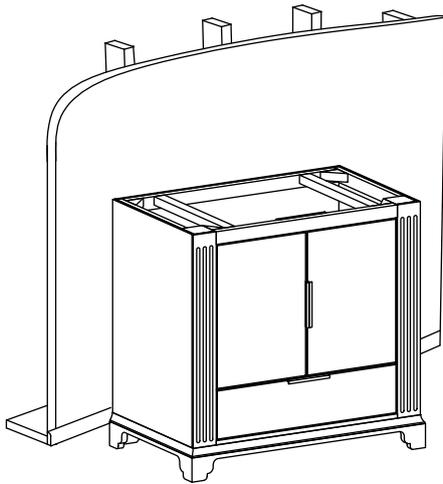


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

2

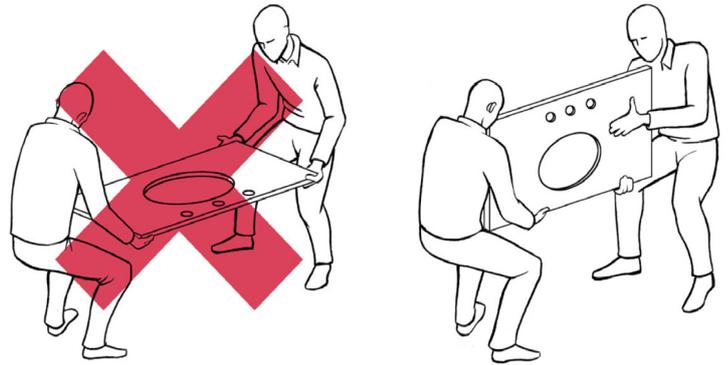


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

3

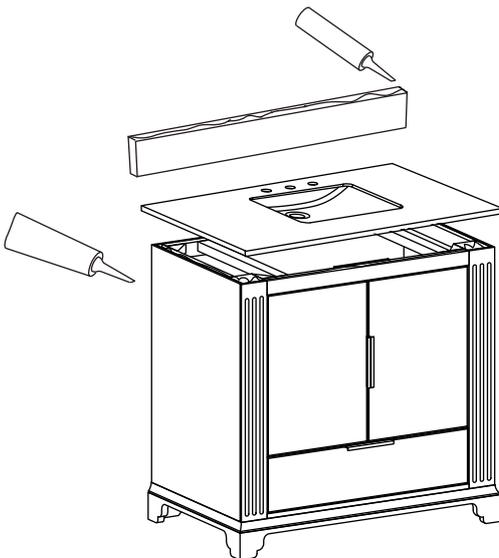

Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

4

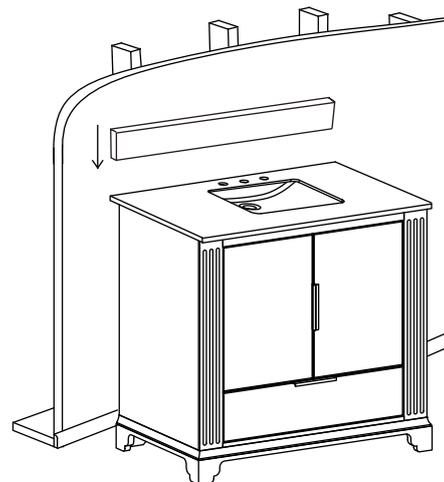

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.