


Tribesigns
LITTLE TREE
Assembly Instructions

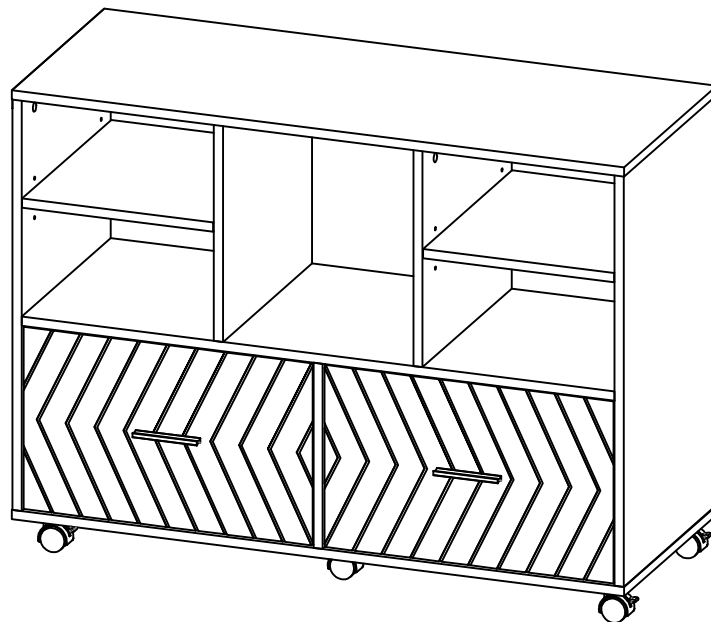

Model No. HOGA-F1810-B
Model No. HOGA-F1893-B
Model No. HOGA-F1963-B

File Cabinet

Call us!

We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at **support@tribesigns.com** or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:



Facebook



Twitter




Pinterest





YouTube










Instagram

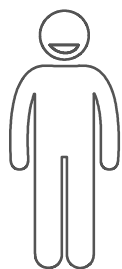


X2

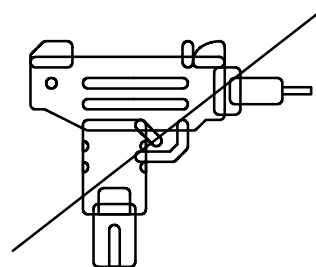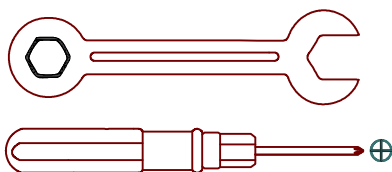

When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

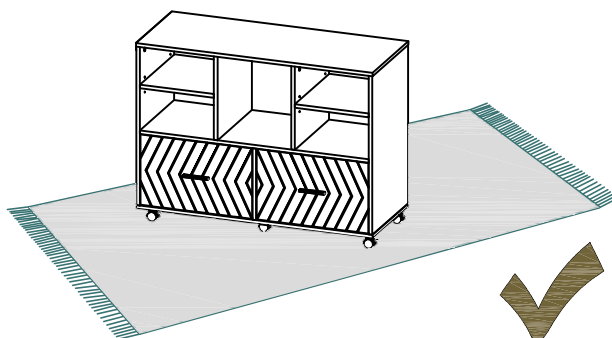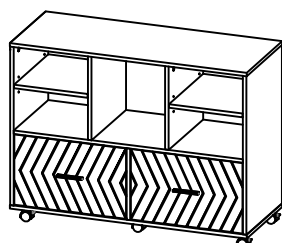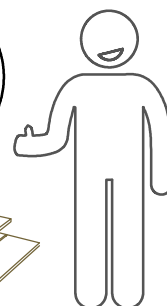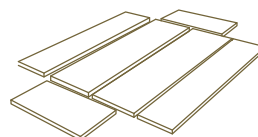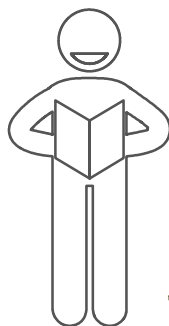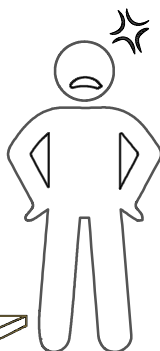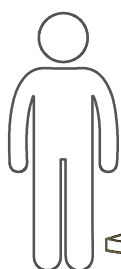


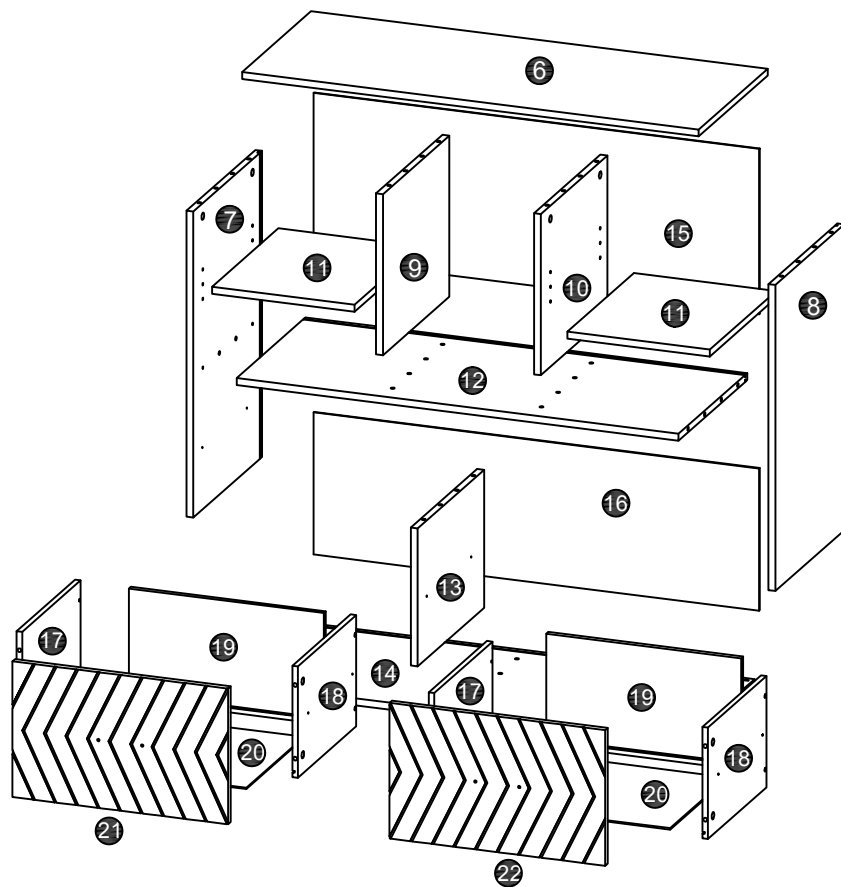


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. contact us for free replacement if having damaged or missing parts.

Parts & Hardware List

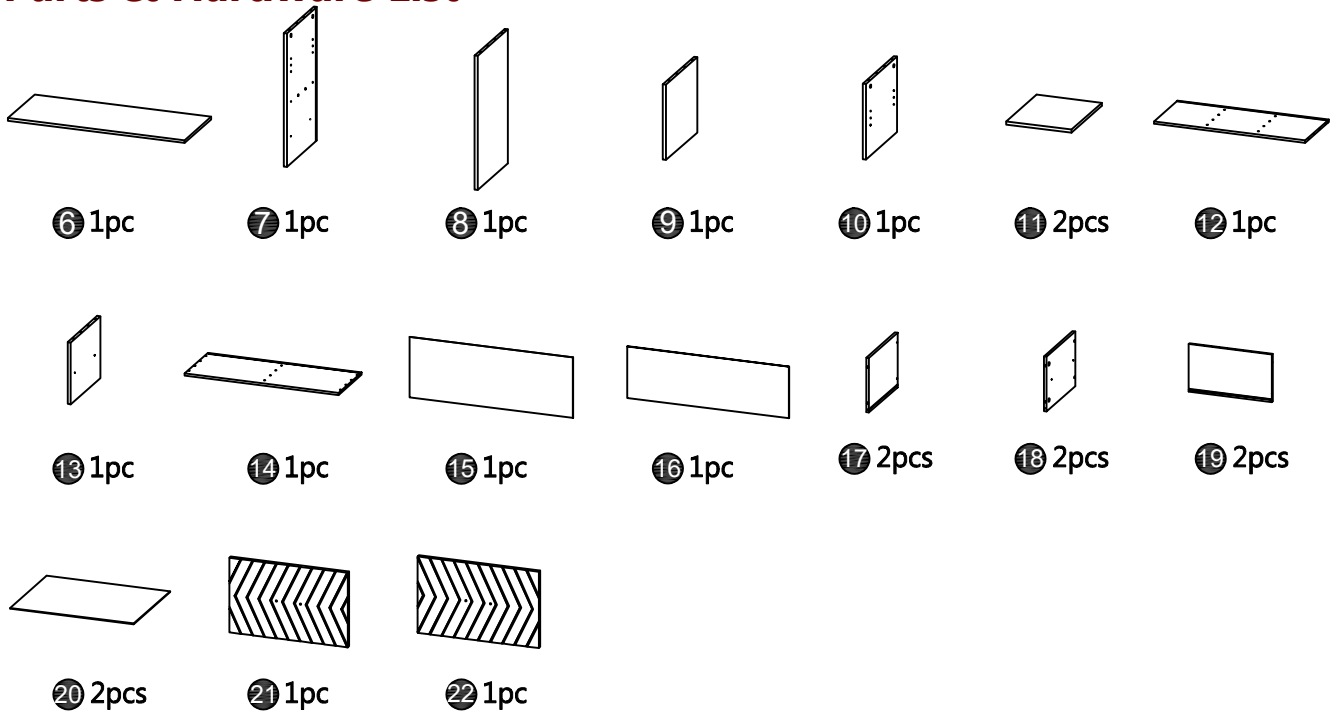


Hardware List

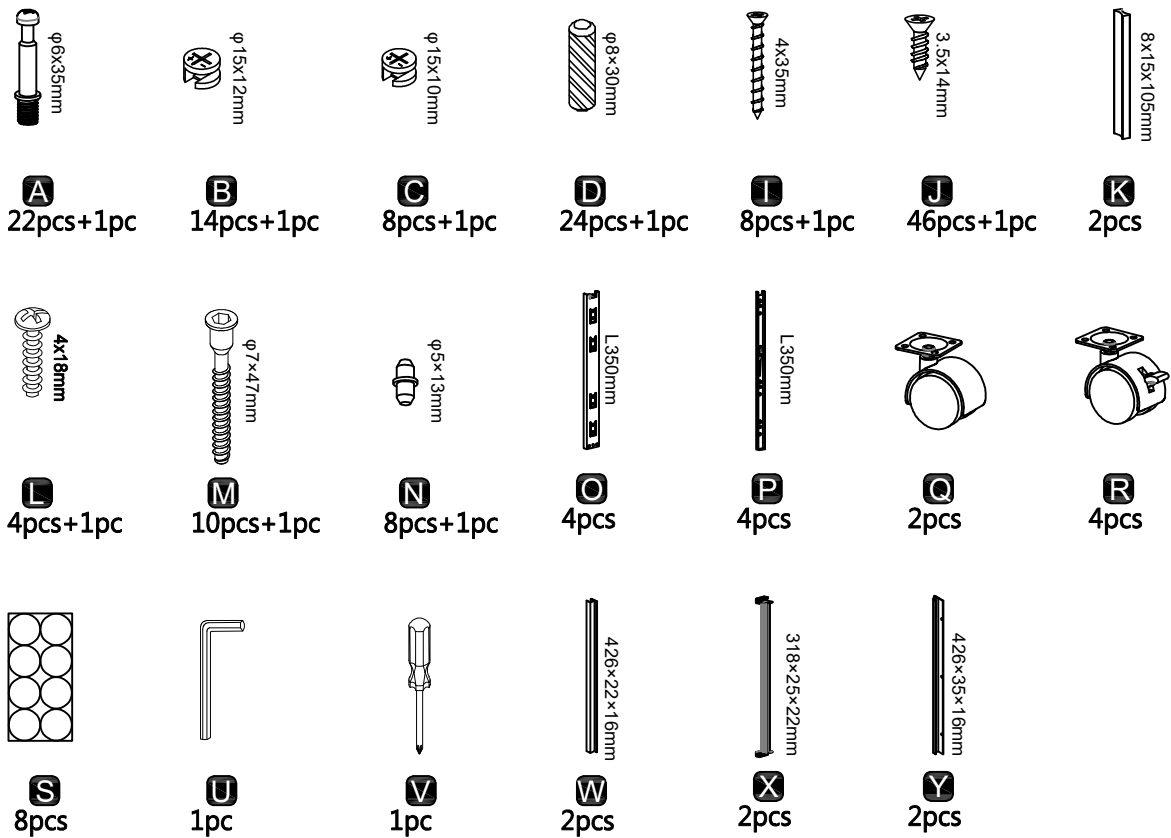


Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

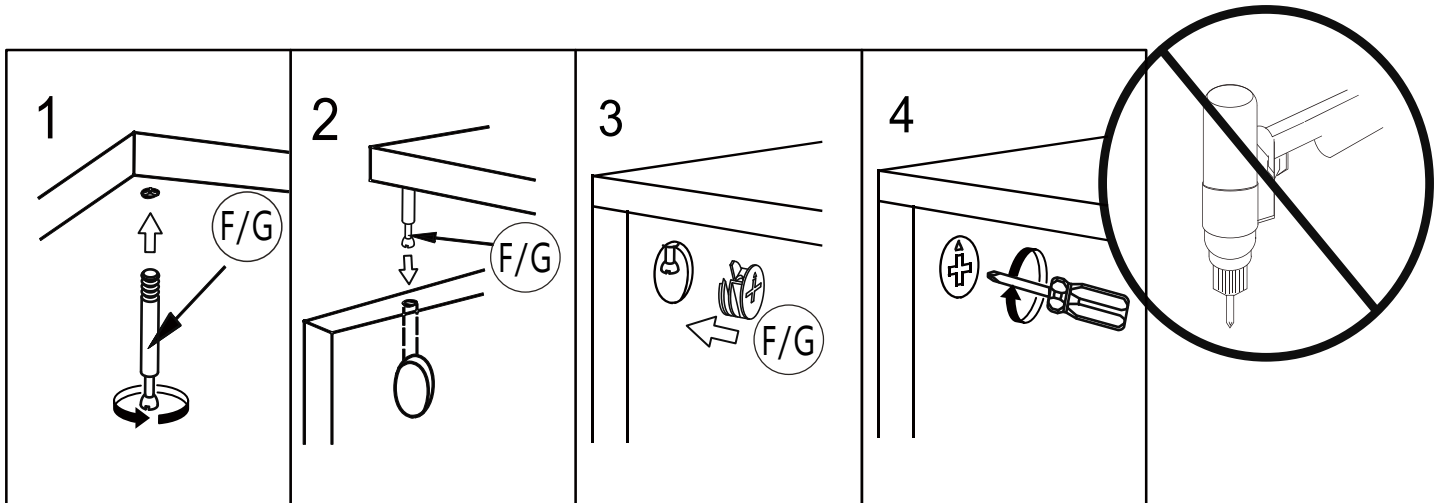


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

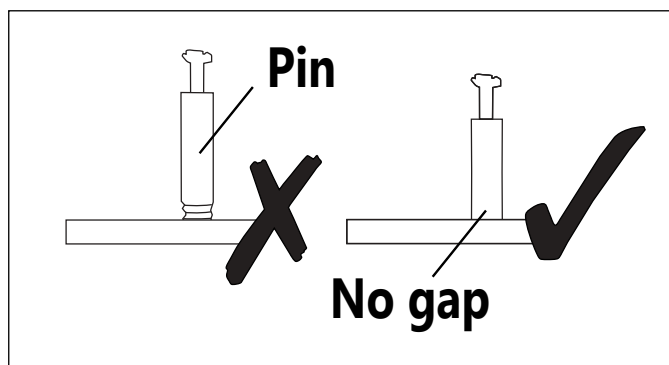


1

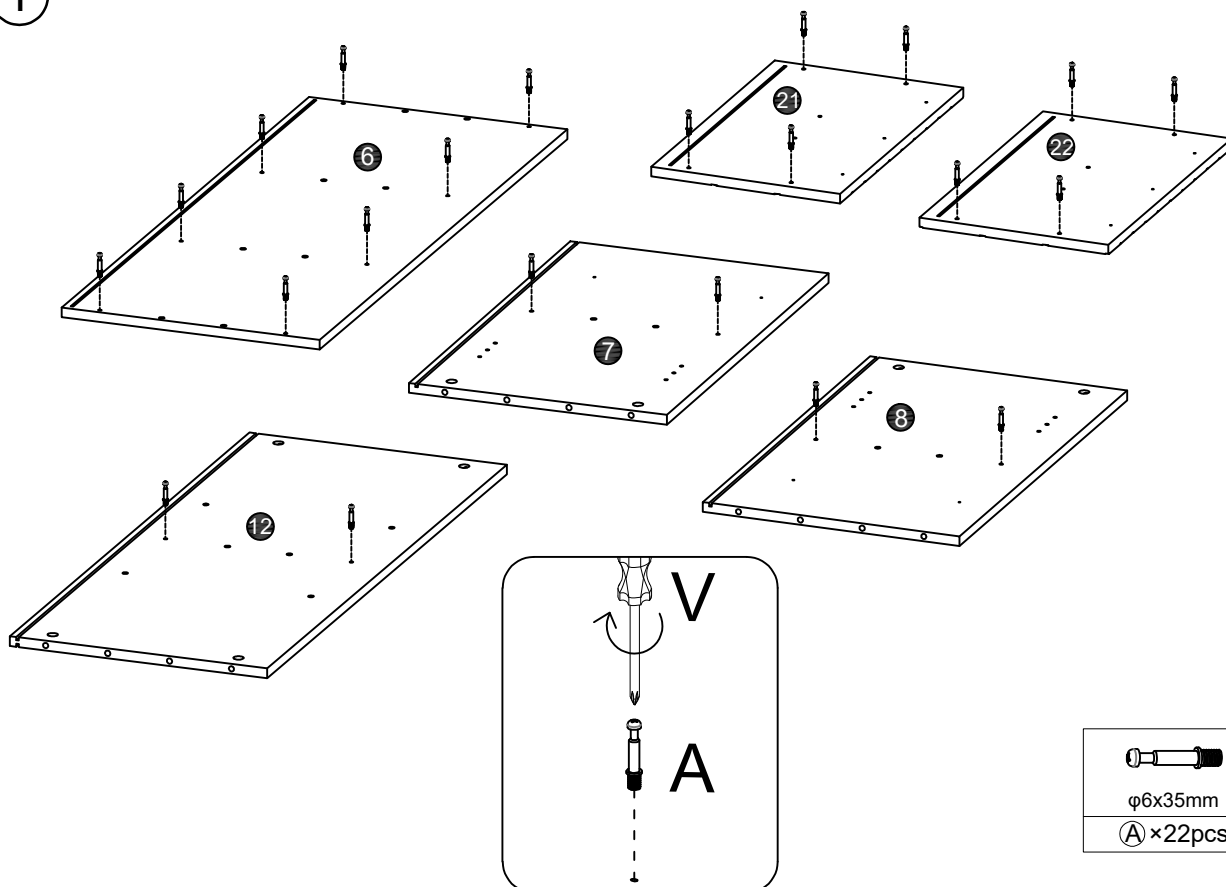


2

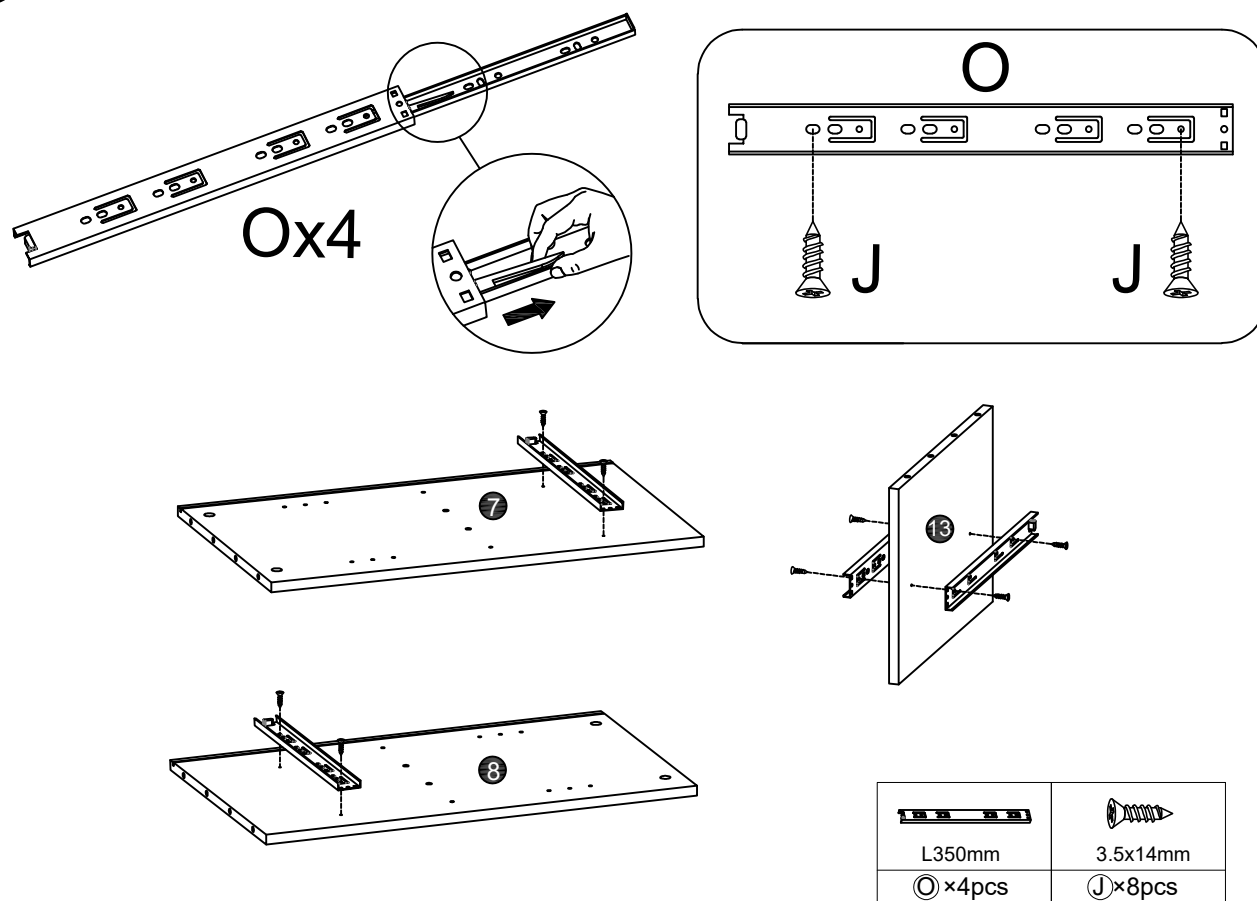


3

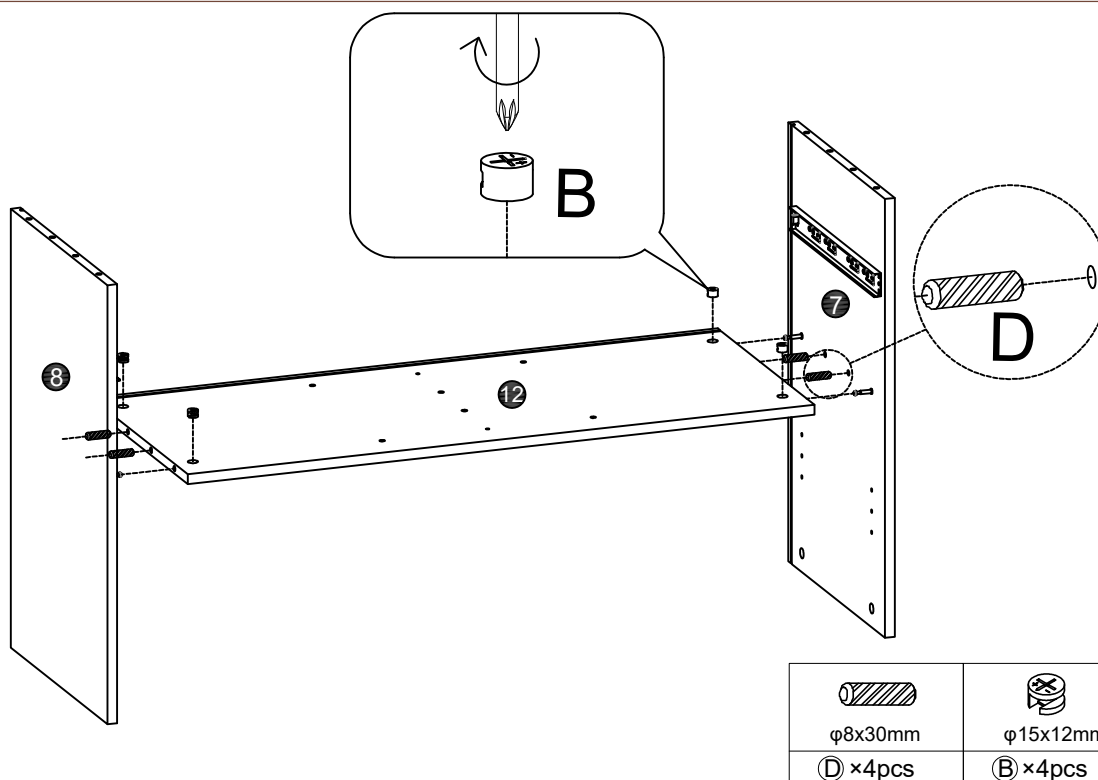


4

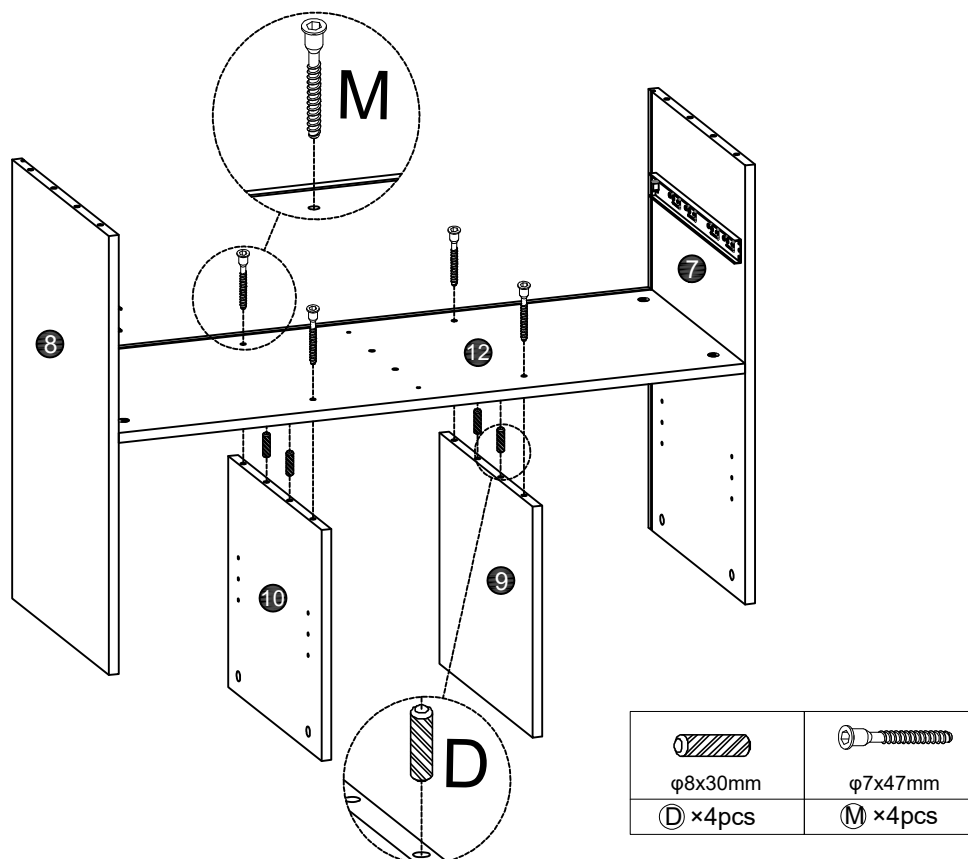


5

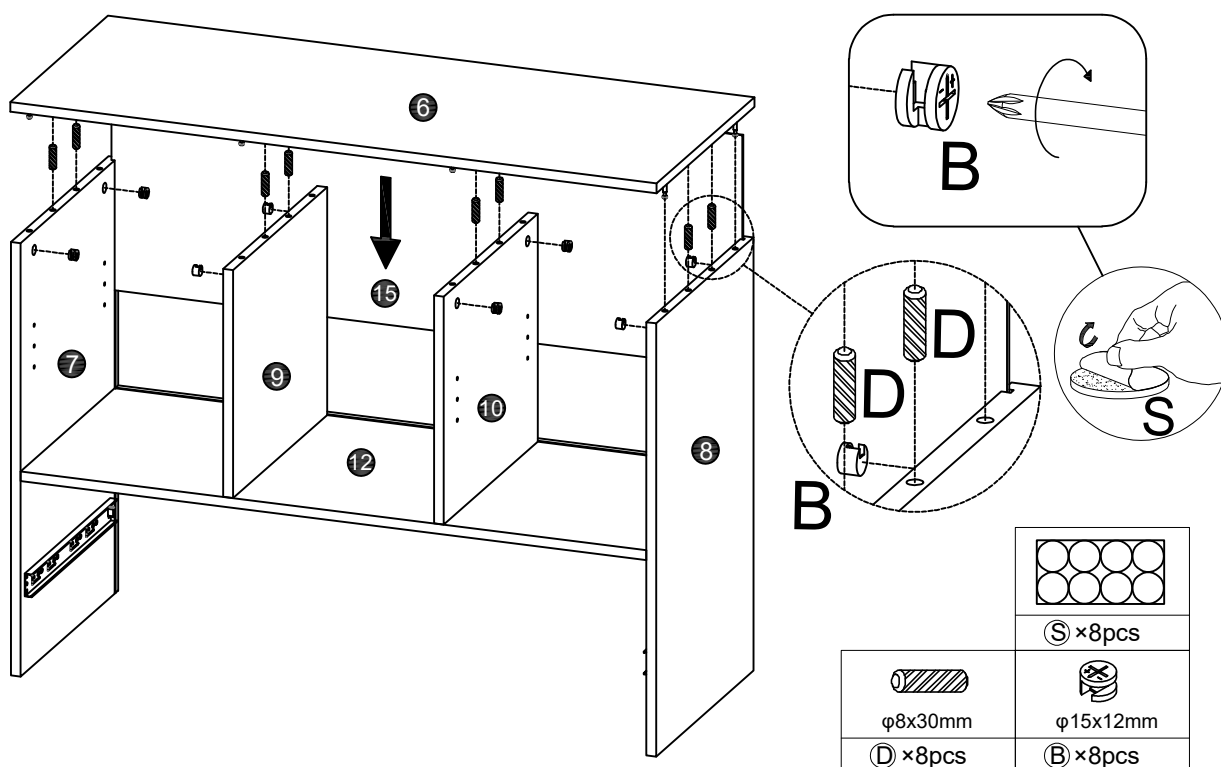


6

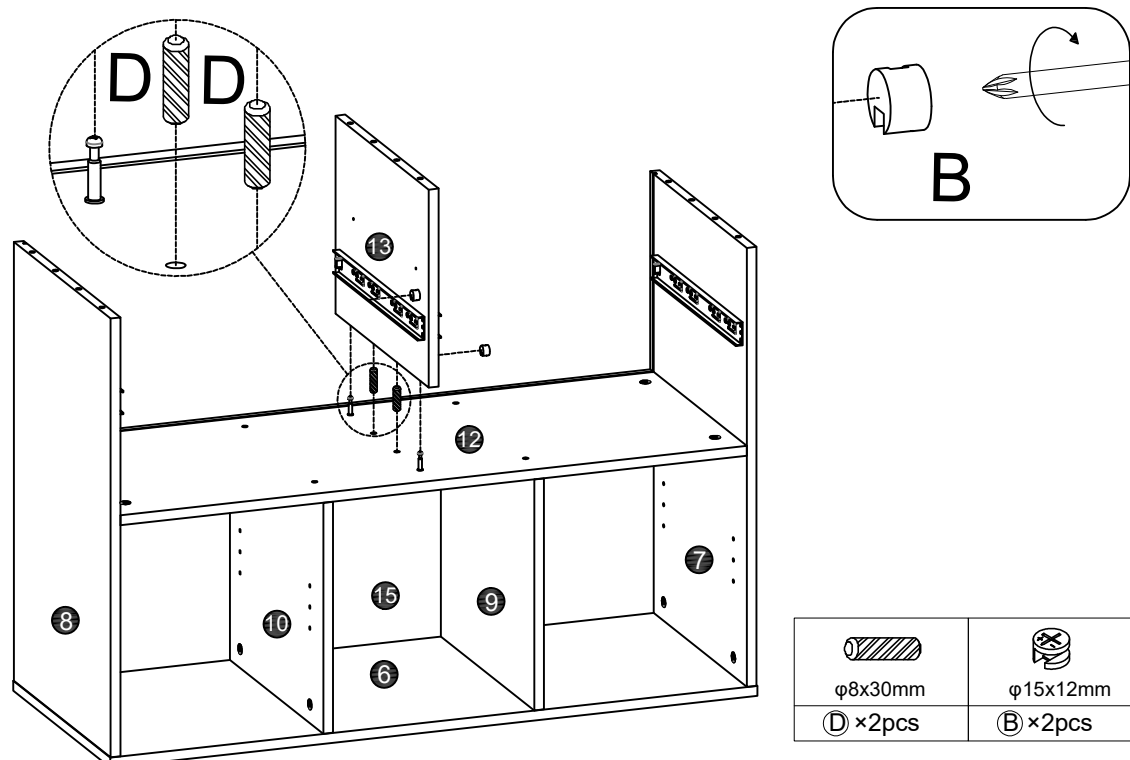



7

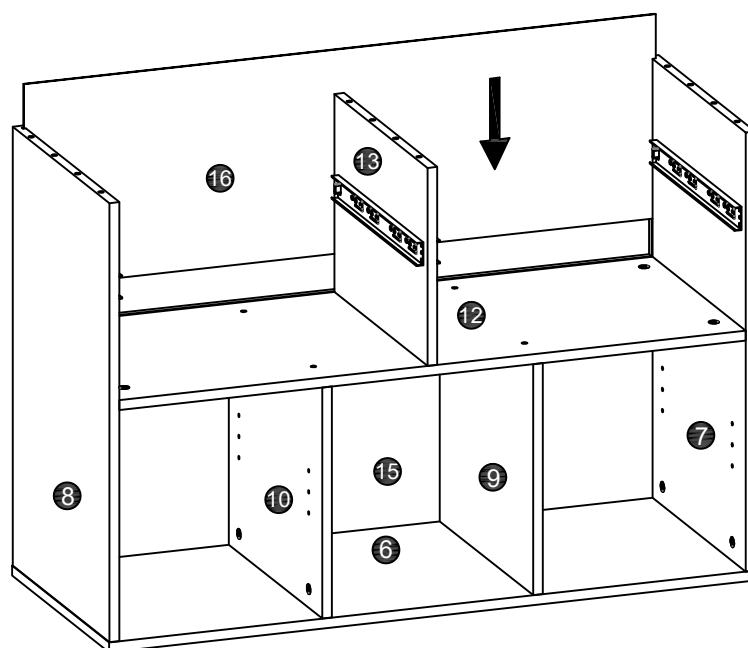


8



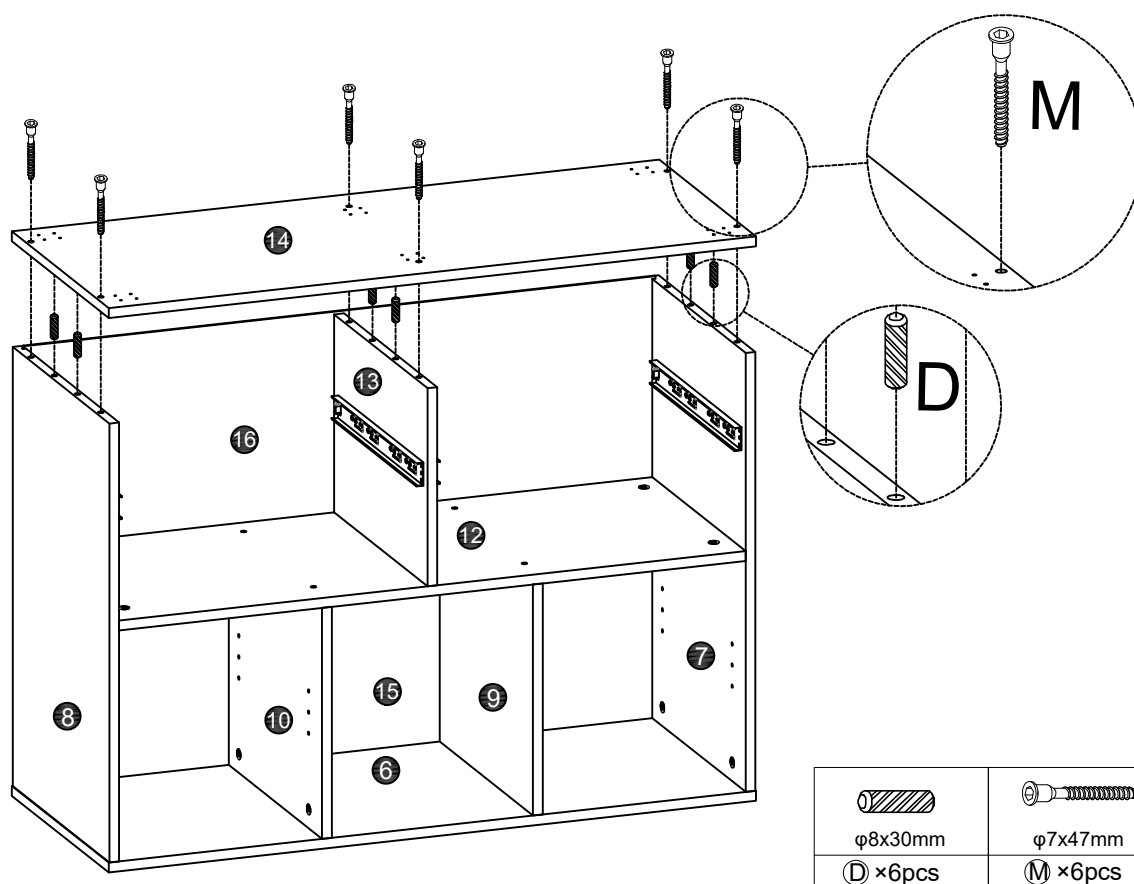


	
φ8x30mm	φ7x47mm
D ×6pcs	M ×6pcs

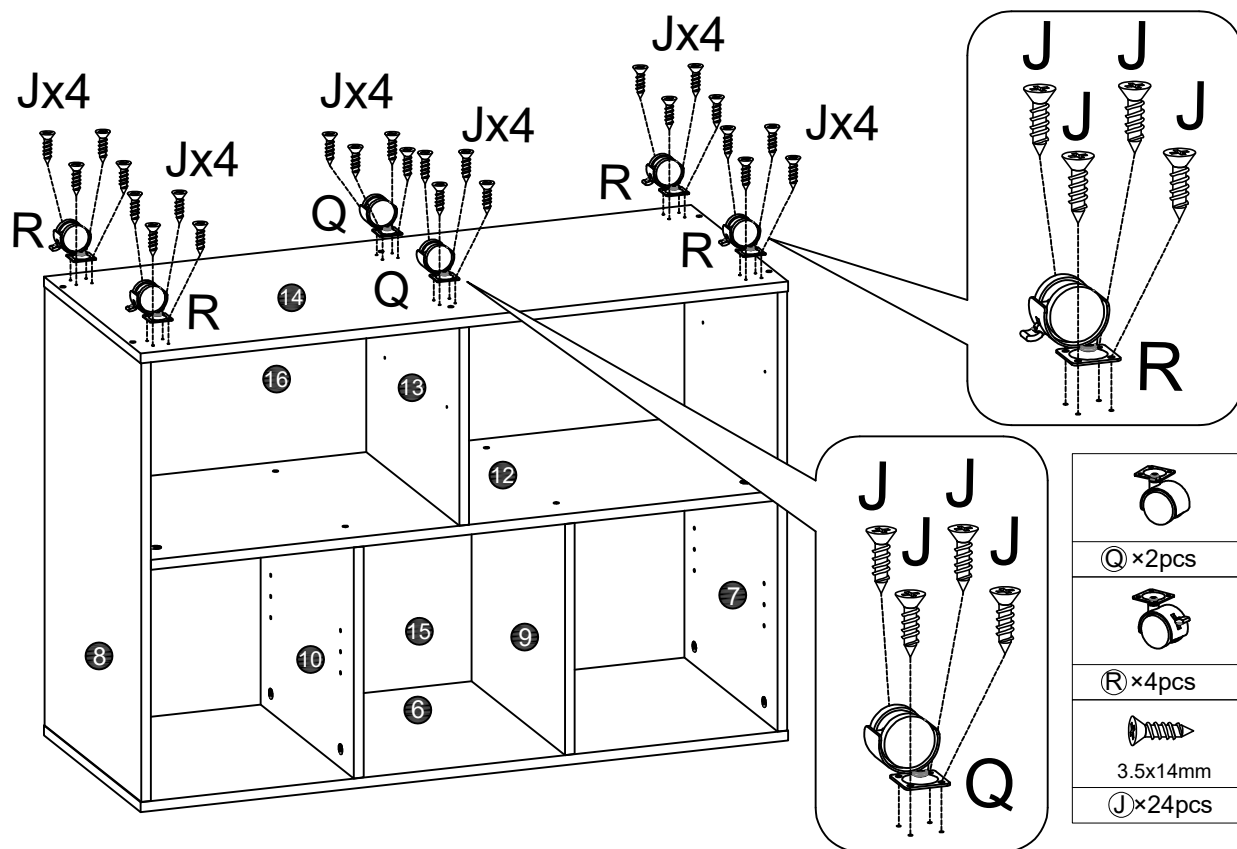

9

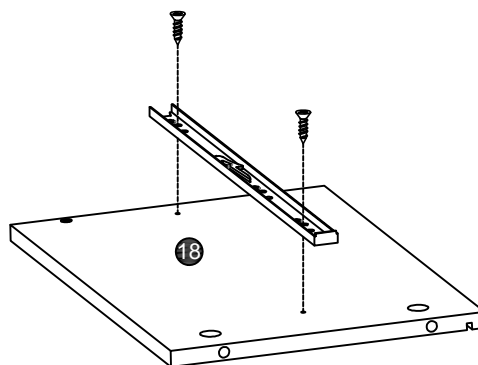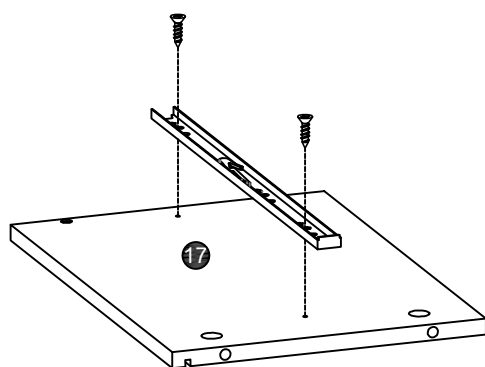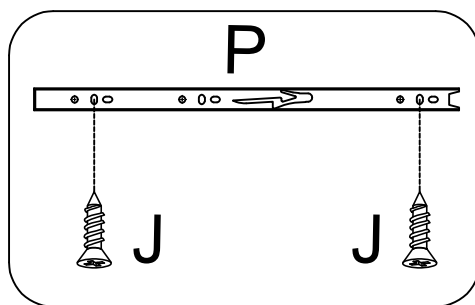


10




x2

	
L350mm	3.5x14mm
Ⓟ×4pcs	Ⓝ×8pcs


11

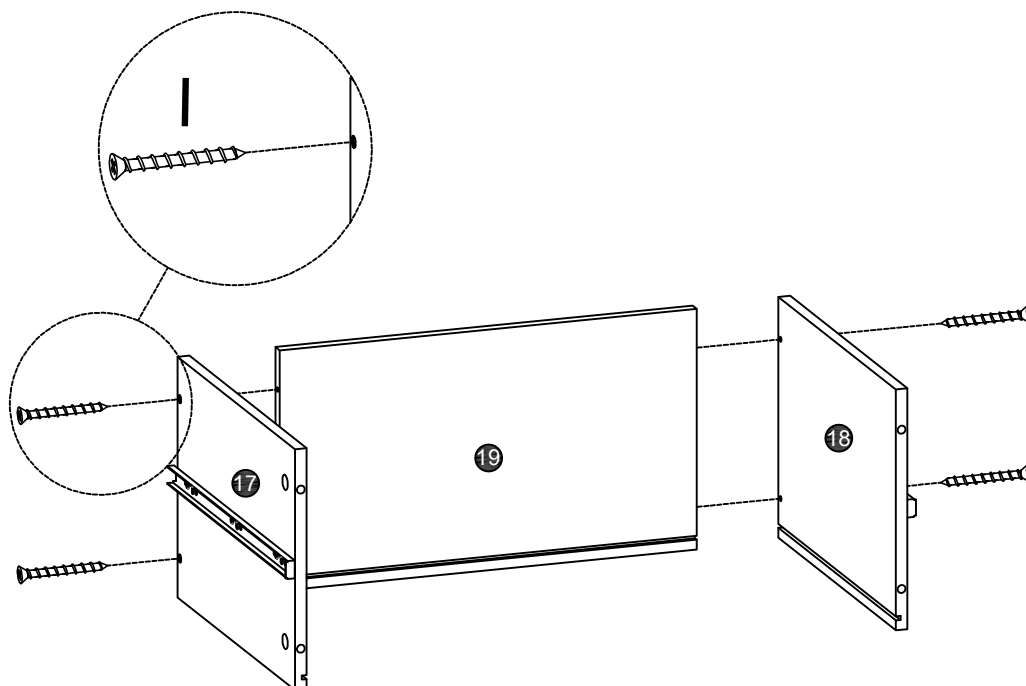

x2

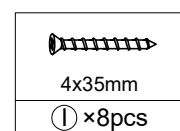




12

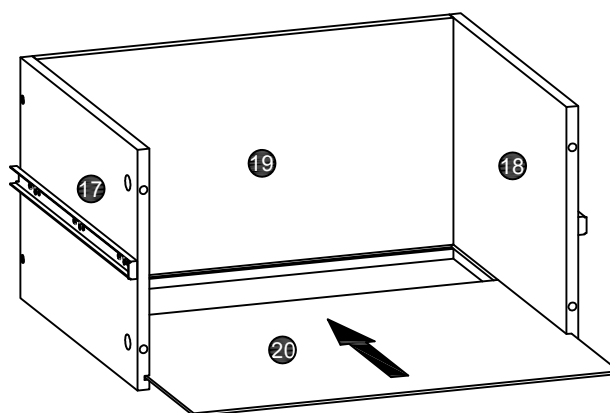


x2


13

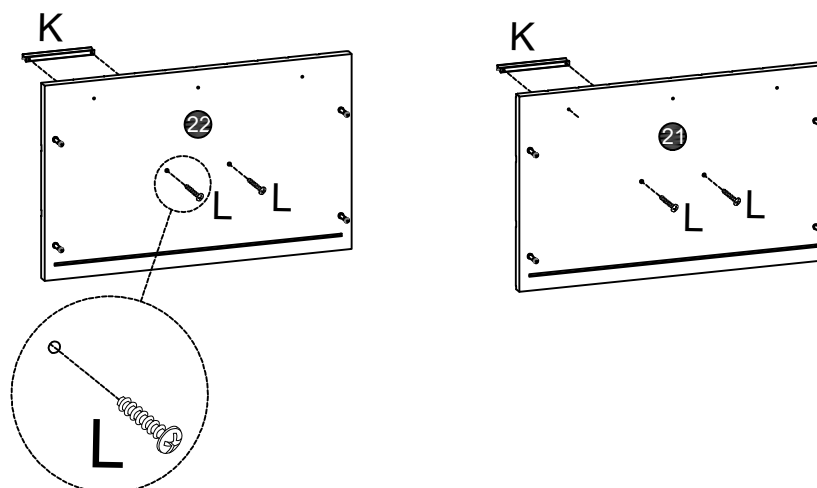


	
8x15x105mm	4x18mm
K × 2pcs	L × 4pcs



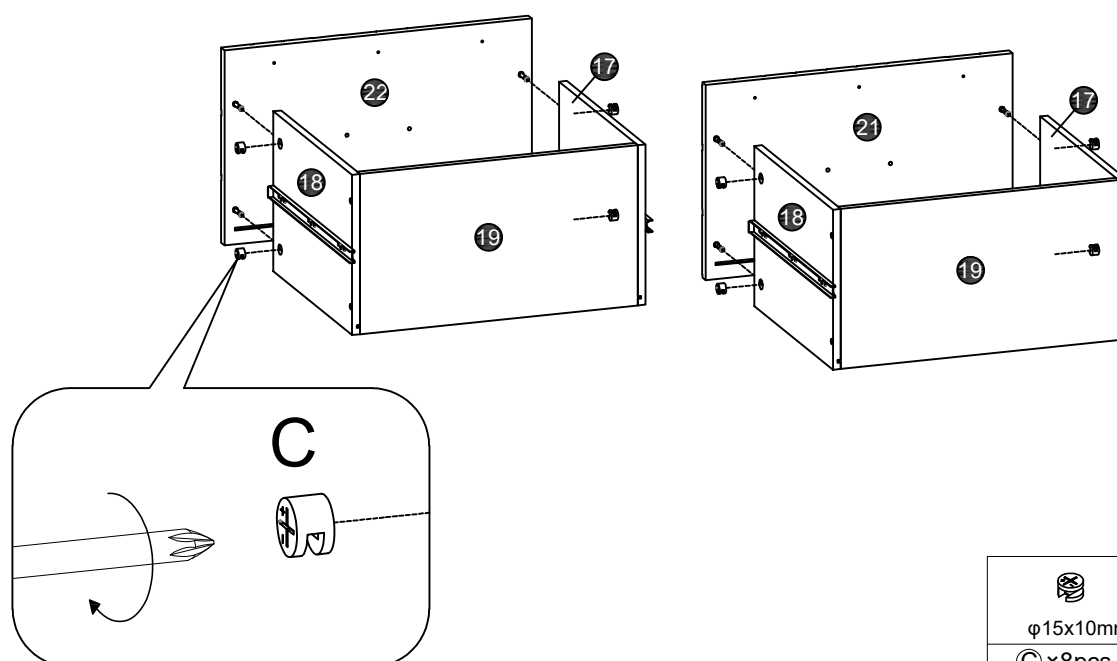

14

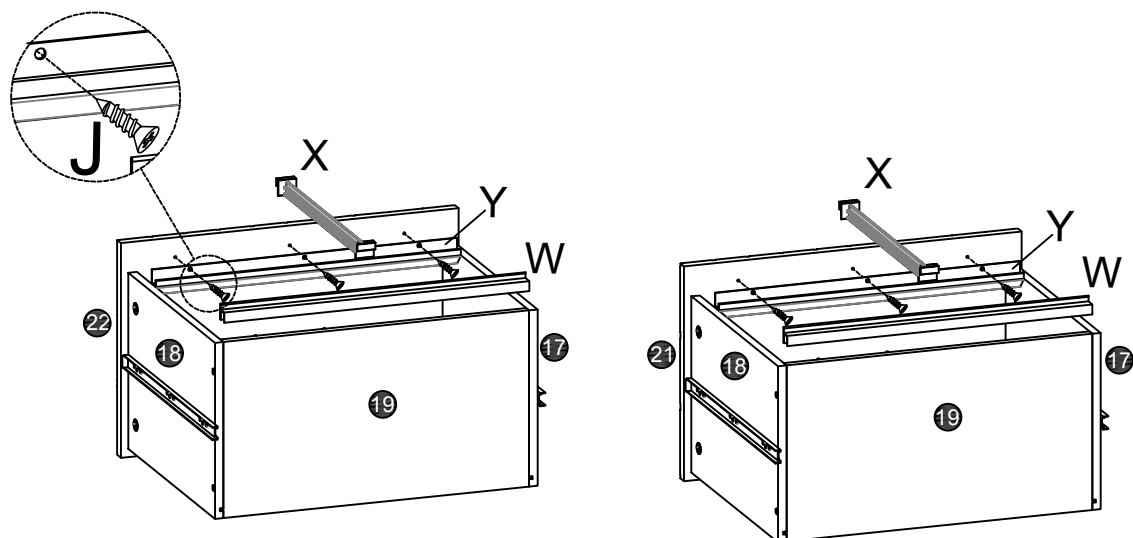



φ15x10mm
C × 8pcs

15





			
426×22×16mm	426×35×16mm	3.5×14mm	318×25×22mm
W ×2pcs	Y ×2pcs	J ×6pcs	X ×2pcs

16

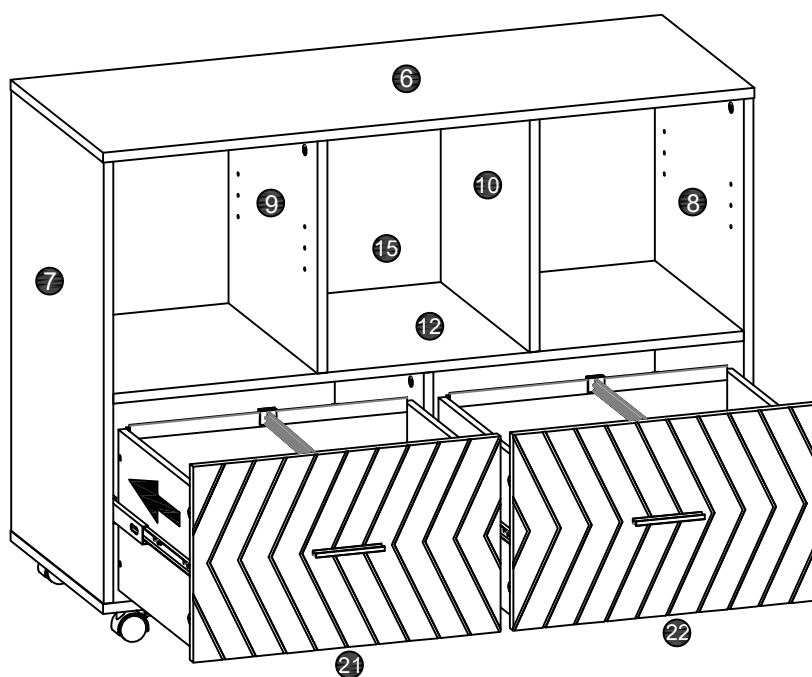

17

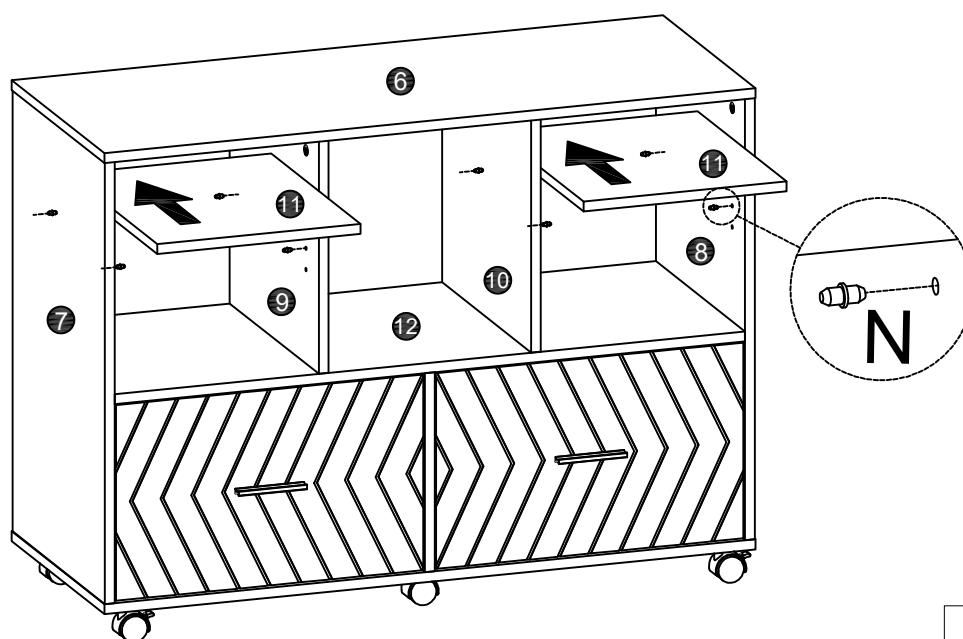


φ5x13mm
N ×8pcs

18

