
- 1. Before installation, please read the Assembly Instruction carefully.
- 2. Please check whether the Parts and Hardware are consistent with the list.
- $3.\,\mathrm{It}$ is normal for the sealed environment to smell, not a product quality

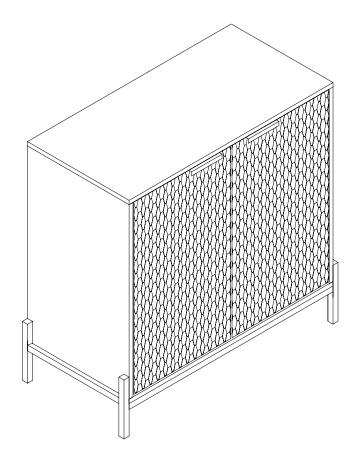

Web:https://clihome.net/

Service Contact : service@clihome.net

Phone Number:

(951) 213-4743/303-747-4421

Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Back panel		1

Part List:

ITEM	DESCRIPTION	PART	QTY
6	Left door		1
7	Right door		1
8	Shelf		1
9	Frame		2
10	Bar		2

hardware list:


1754	DECODIDATION	DADT	ОТУ
ITEM	DESCRIPTION	PART	QTY)
Α	Camlock bolt		4
В	Camlock		4
С	Wooden dowel	(M8*30mm	8
D	Flat head screw	≪ ∰ M4*12mm	24
E	Back screw	M2. 5*12mm	18
F	Flat head screw	≪((((((((((((((((((((((((((((((((((((6
G	Bolt	M6*30mm	8
Н	Bolt	M6*12mm	4
ı	Shelf support		4


hardware list:

ITEM	DESCRIPTION	PART	QTY
J	Door fitting	FARI	4
K	Allen wrench		1
М	Handle		2
N	Flat head screw	≪ ∰ M3*12mm	4
U	Safety wall strap		1
Z	Flat head screw	M4*35mm	1
Х	Plastic anchor		1
Р	Washer	0	1

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)

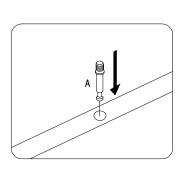


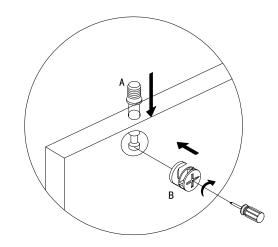



Screw camlock bolt (A) to wood part.


Do not assemble camlock (B)unless instructed.


To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

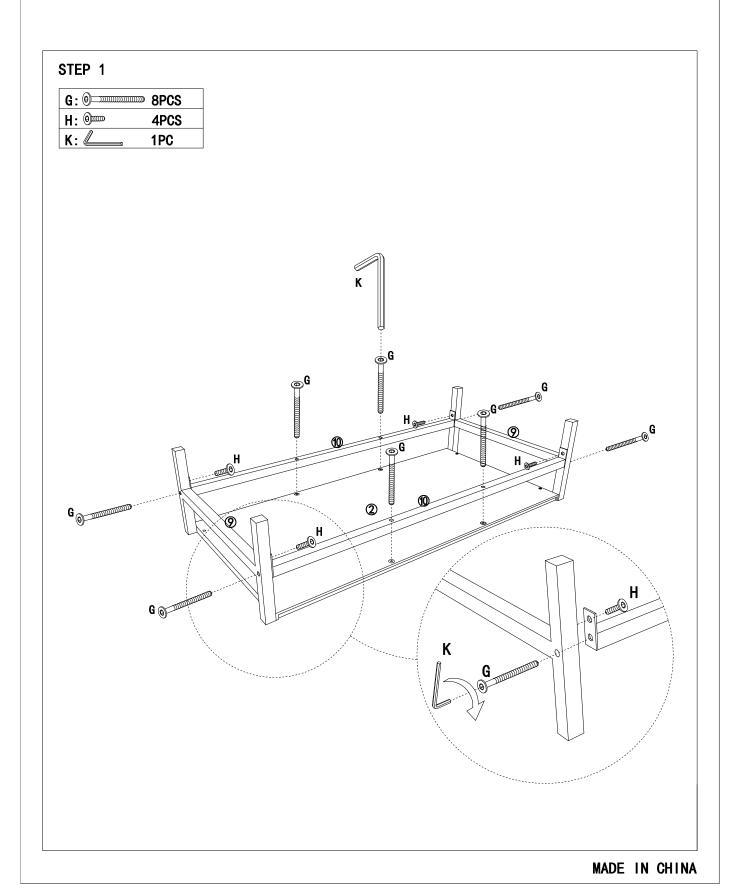

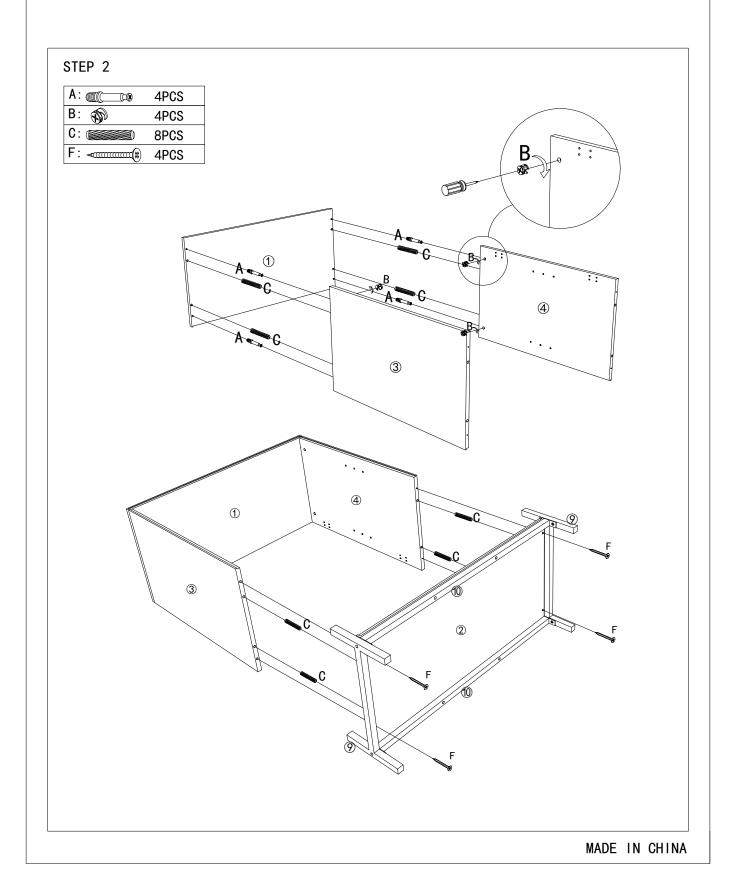

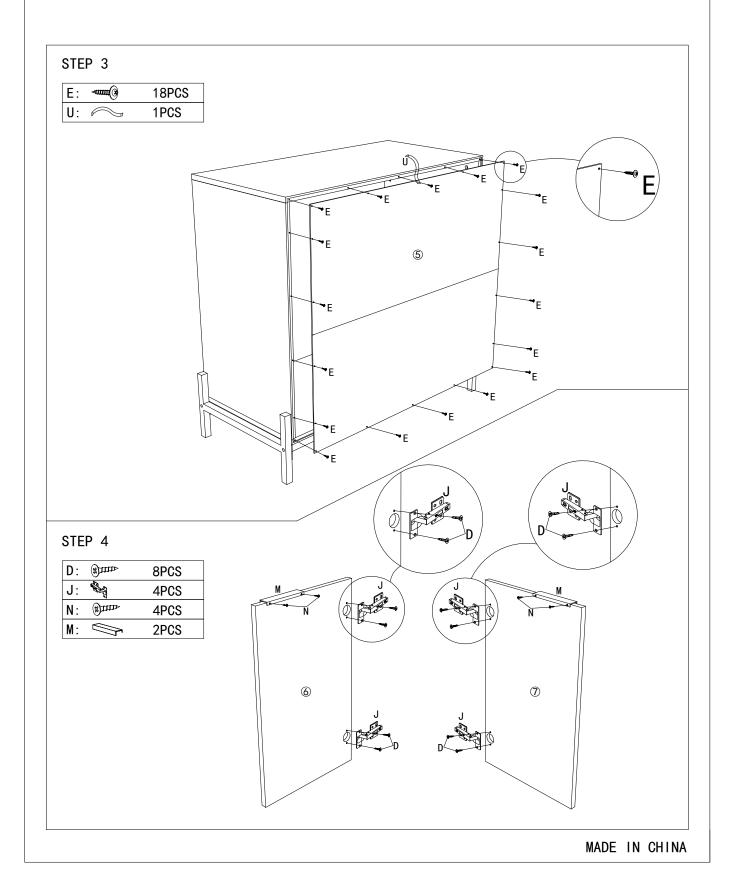

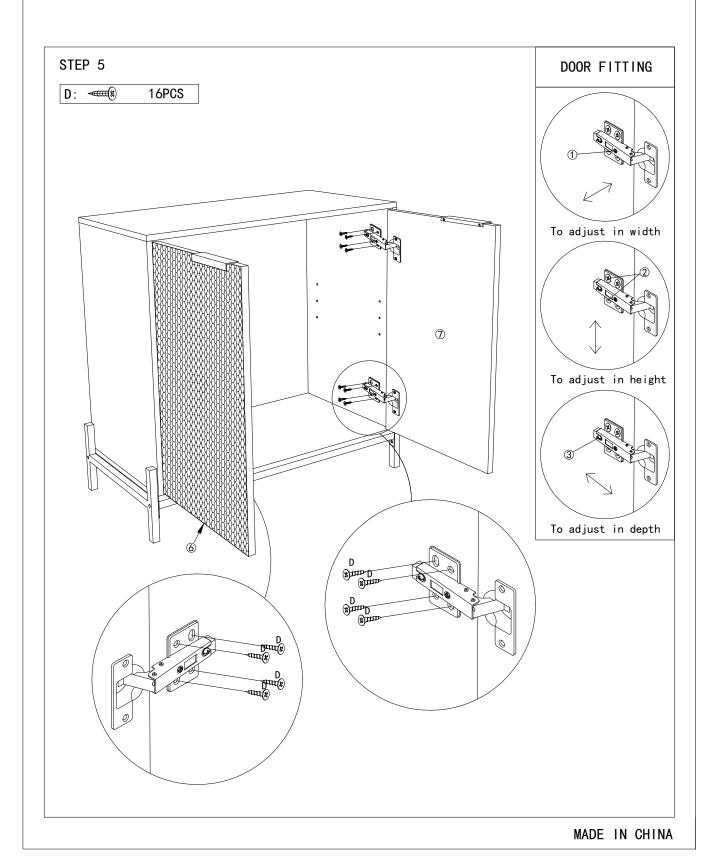

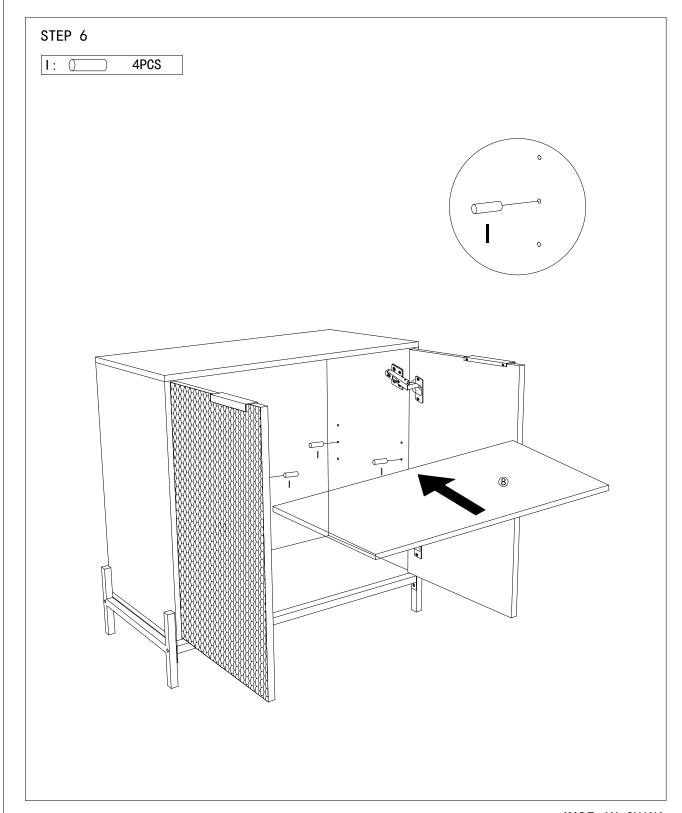

MADE IN CHINA

