

ASSEMBLY INSTRUCTIONS


BED WITH TRUNDLE

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net













WF194302





Detail View

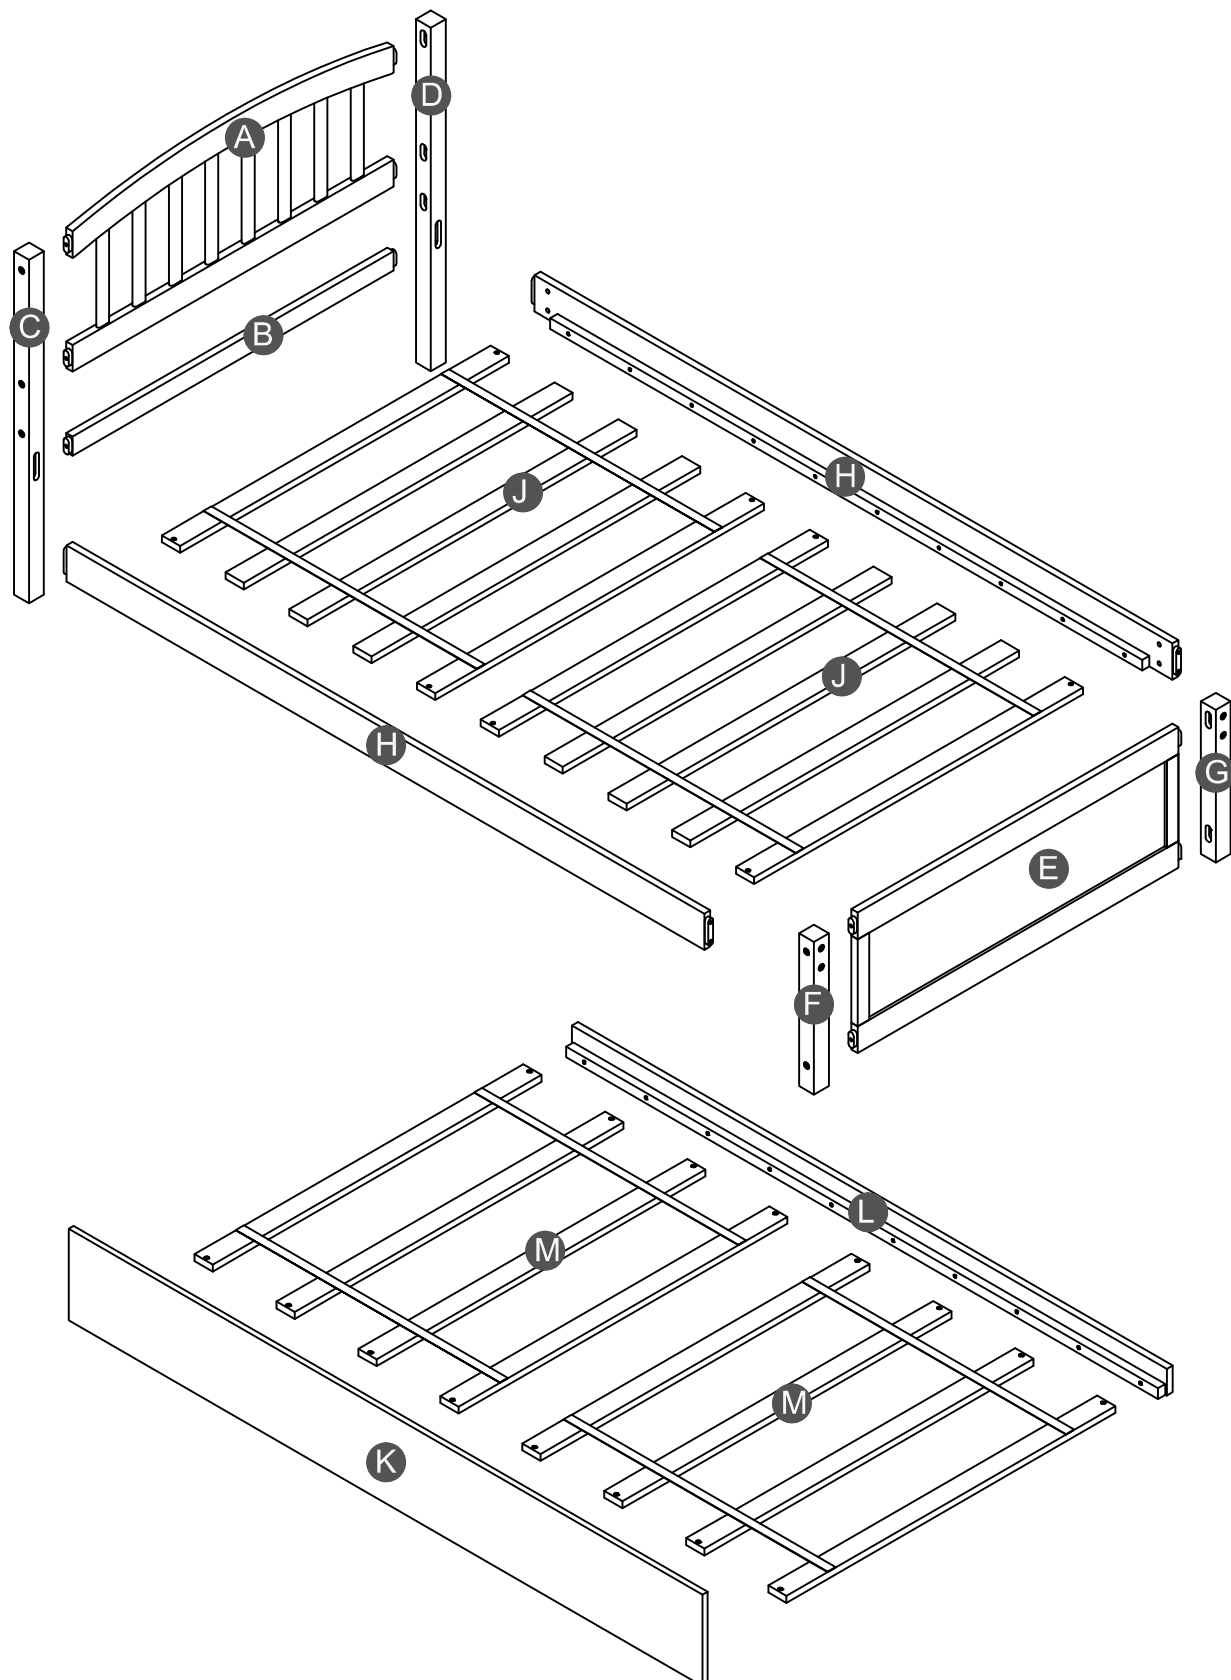



Part List

A  Headboard - 1pc	B  Horizontal bar - 1pc	C  Leg headboard(Left) - 1pc
D  Leg headboard(Right) - 1pc	E  Footboard - 1pc	F  Leg footboard(Right) - 1pc
G  Leg footboard(Left) - 1pc	H  Side rail - 2pcs	J  Slat - (10pcs)
K  Front panel of trundle - 1pc	L  Back panel side rail of trundle - 1pc	M  Trundle Slat - (8pcs)

Hardware List


1  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(18pcs)
4  (1/4")4.5*58mm Allen key (1pc)	5  Ø4*30mm Wood screws (32pcs)	6  40*18*18*2mm Metal bracket (2pcs)
7  100*63*20mm Wheels (4pcs)	8  95*95*18*3mm Metal bracket (2pcs)	9  Ø3.5*15mm Wood screws (16pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

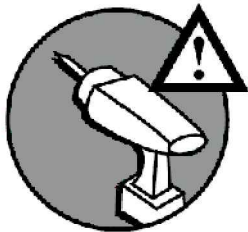



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

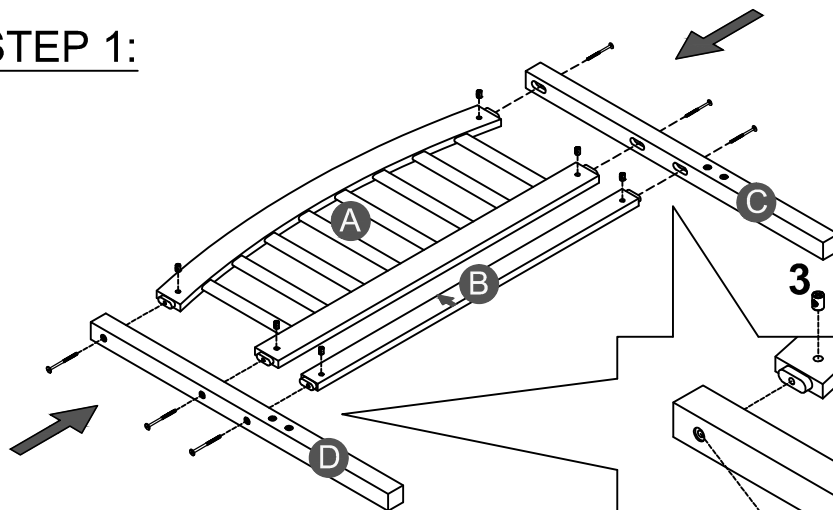


1	3
	
6PCS	6PCS

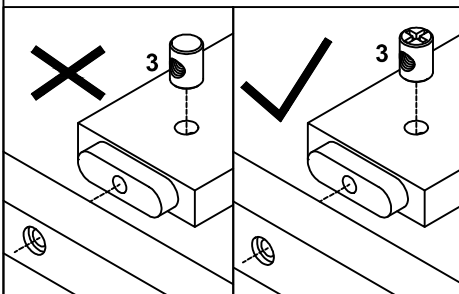
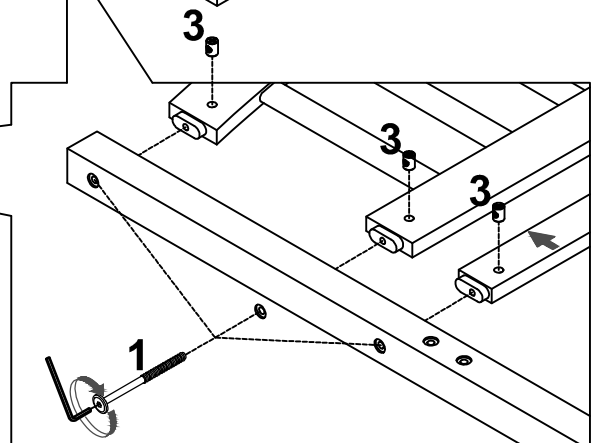


Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

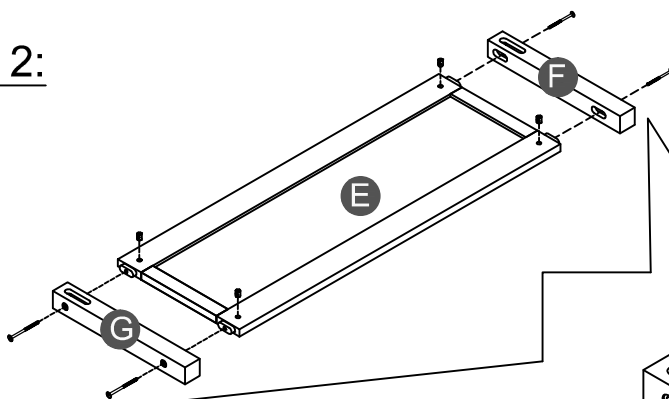


1	3
	
4PCS	4PCS

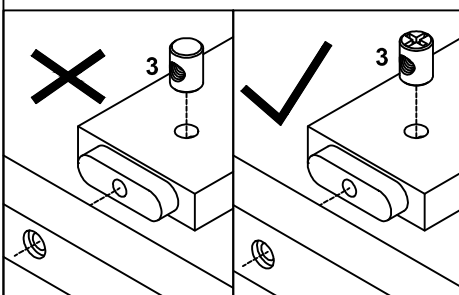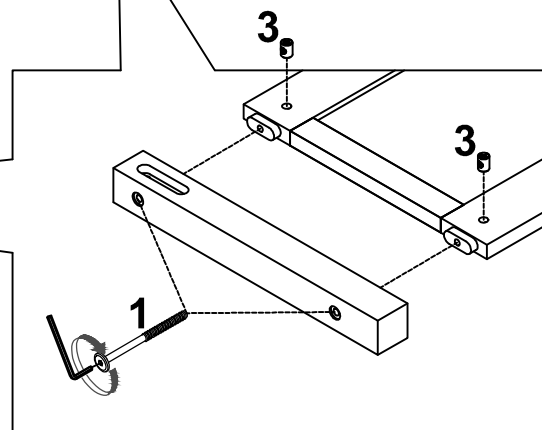

Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened



STEP 3:

2		3	
8PCS		8PCS	

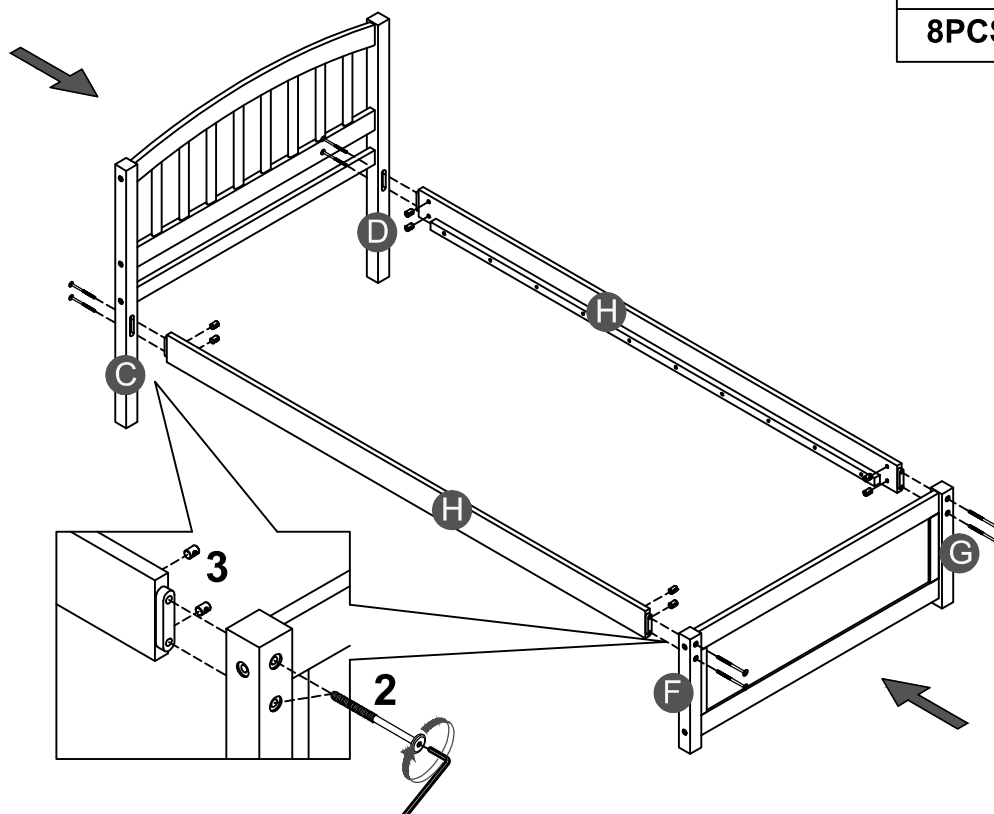

STEP 4:



5	
8PCS	

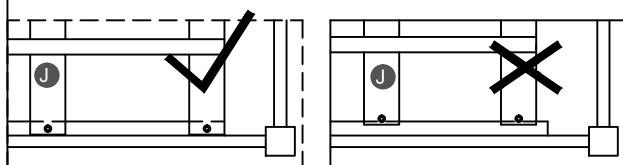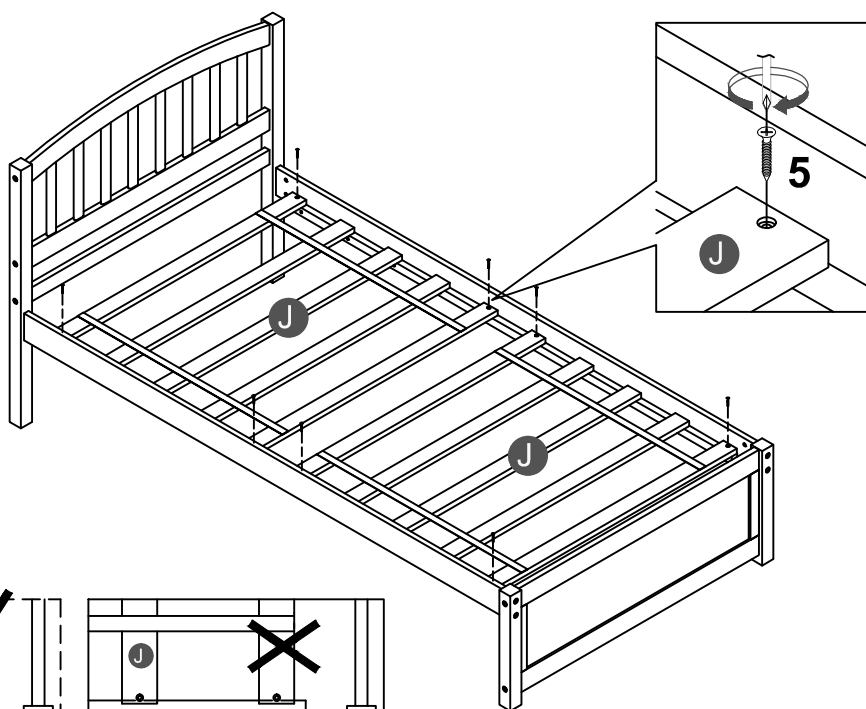

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 5:




7	5
	
4PCS	8PCS

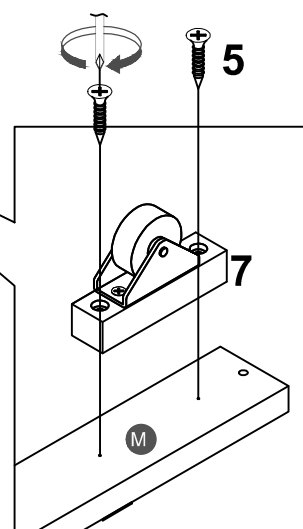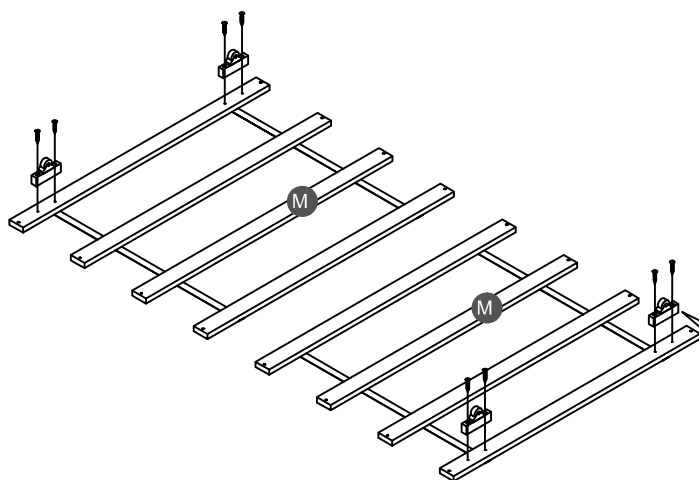

STEP 6:

5


16PCS

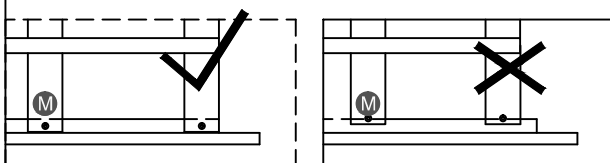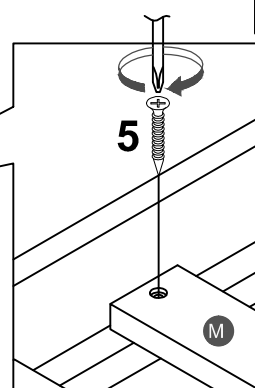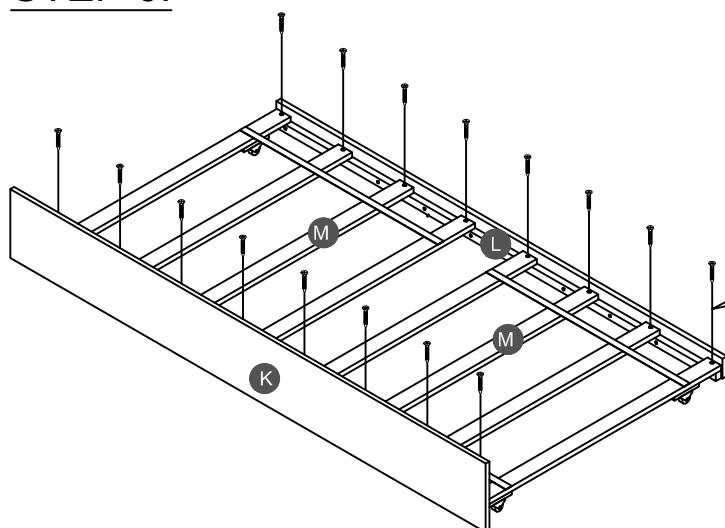

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break


STEP 7:

8	9
	
2PCS	8PCS

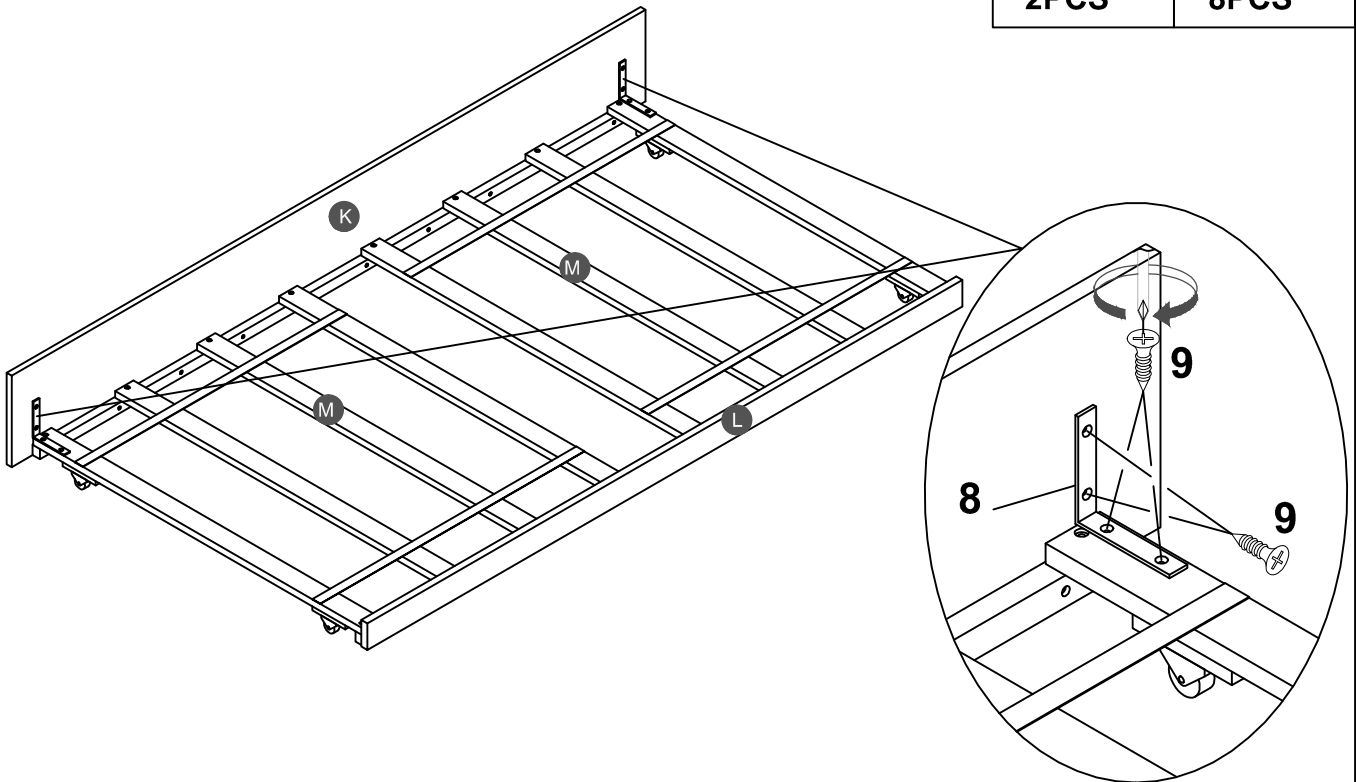


STEP 8:

9	6
	
8PCS	2PCS

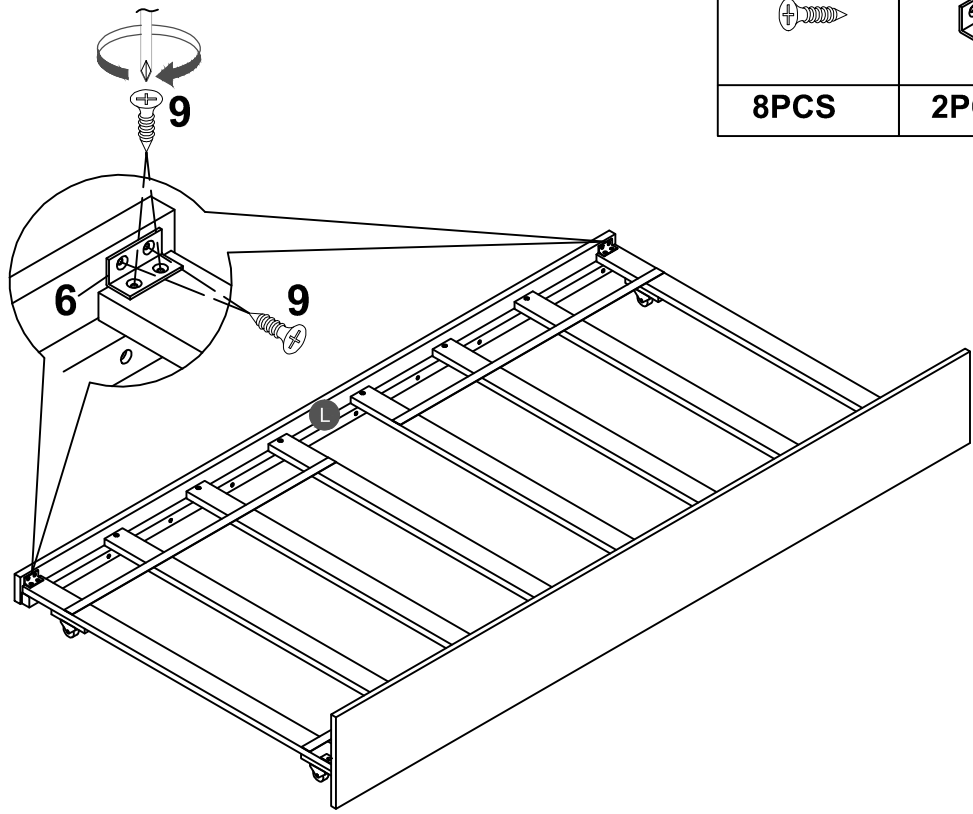

STEP 9:

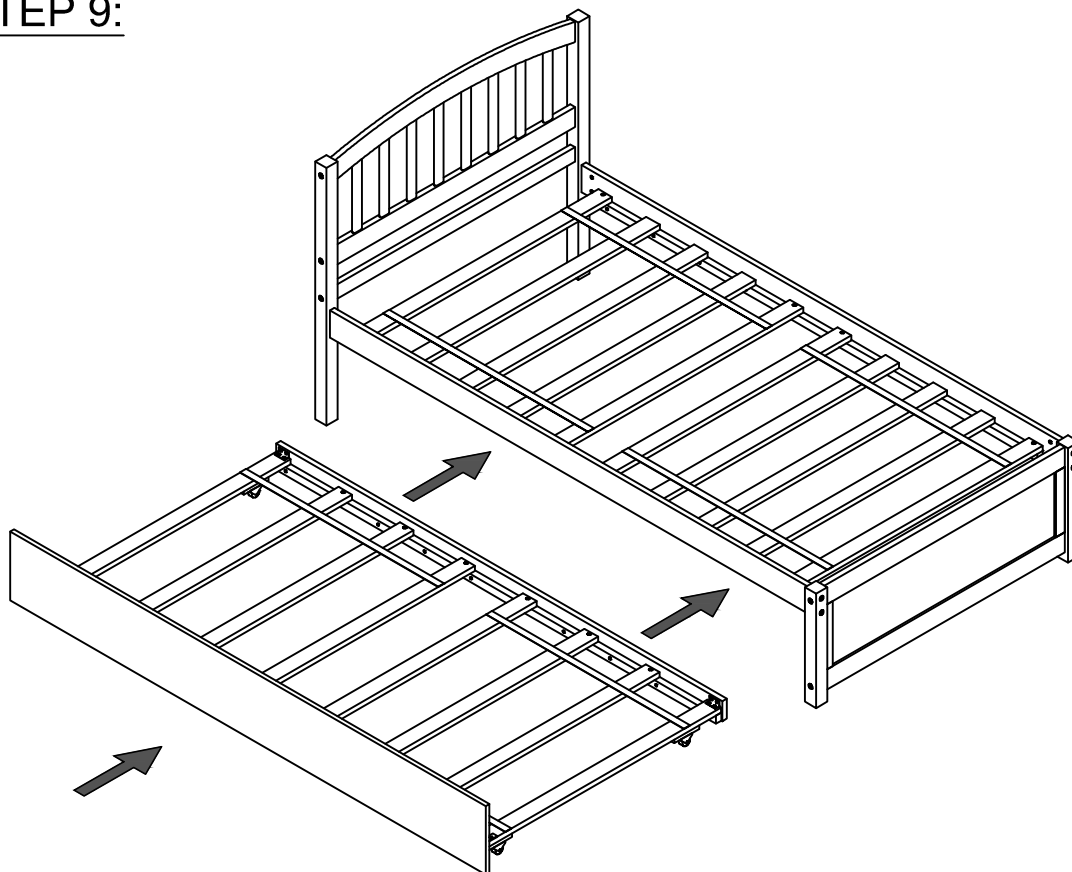

Push Trundle under the bottom of Twin Bed.

