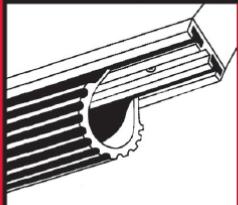
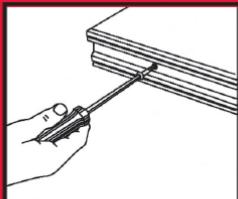


Installation:

1. Measure underside length of garage door, and cut aluminum base and vinyl to correct length.
2. Center aluminum base on garage door bottom and fasten into position with self-drilling screws provided.
3. Slide vinyl into aluminum channels.
4. On garage doors with guide rails: Slide one edge of rubber into position before fastening aluminum base. Once fastened, insert inside flange of opposite rubber edge, and push outside flange into channel with screwdriver. Begin at either end of aluminum base.

**Instalación**

1. Mida la longitud de cara inferior de puerta de garaje, y corte la base de aluminio y vinilo para la longitud correcta.
2. Centre las base de aluminio en el fondo de puerta de garaje y abrocha en la posición con ser-taladrar tornillos proporcionados.
3. Deslice el vinilo en canales de aluminio.
4. En puertas de garaje con carril guía: Deslice una orilla de caucho en la posición antes de abrochar la base de aluminio. Una vez que abrochado, insertar reborde interior de la orilla opuesta de caucho, y empuja fuera de reborde en el canal con destornillador. Empiece en cualquier lado de la base de aluminio.