


Sideboard

Assembly Instruction-please keep for future reference

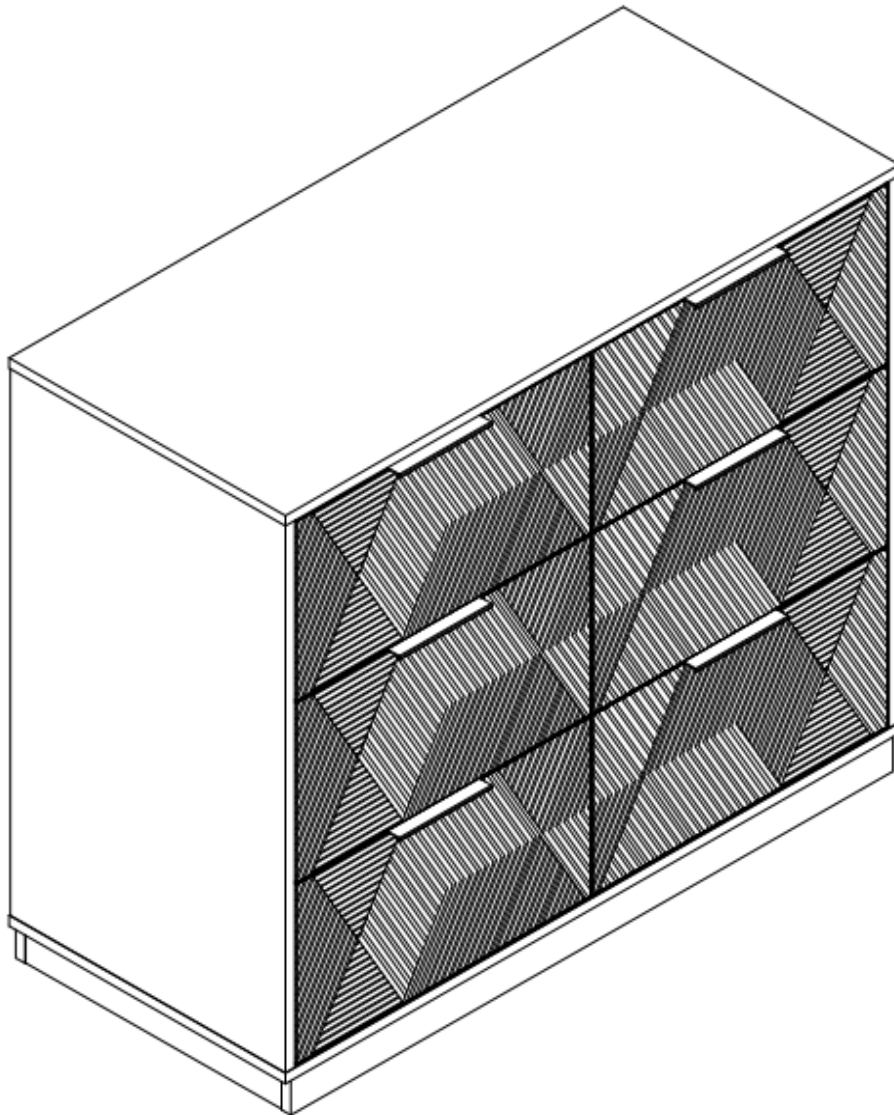

Dimensions

Width-39.4inch

Depth-17.7inch

Height-33.9inch

Important-please read this instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

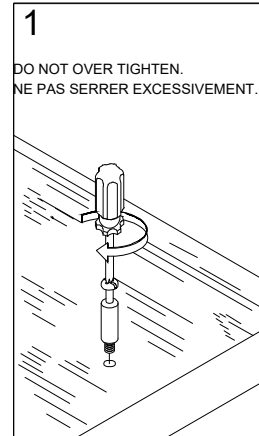

Step 2


Push the male camlock into the entry hole.

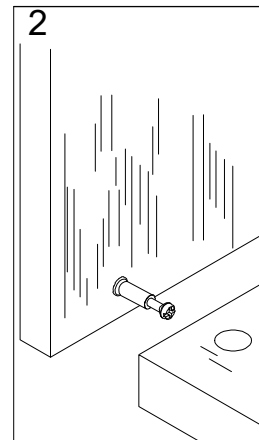

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

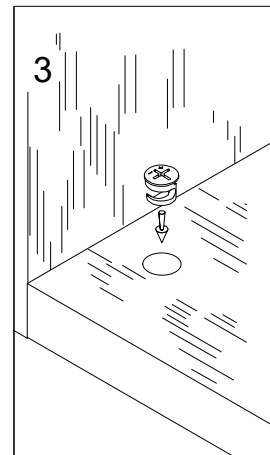




Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

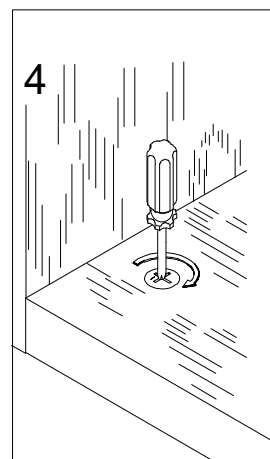

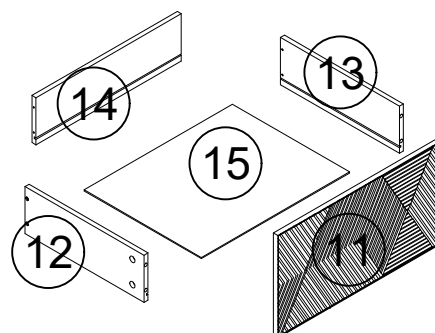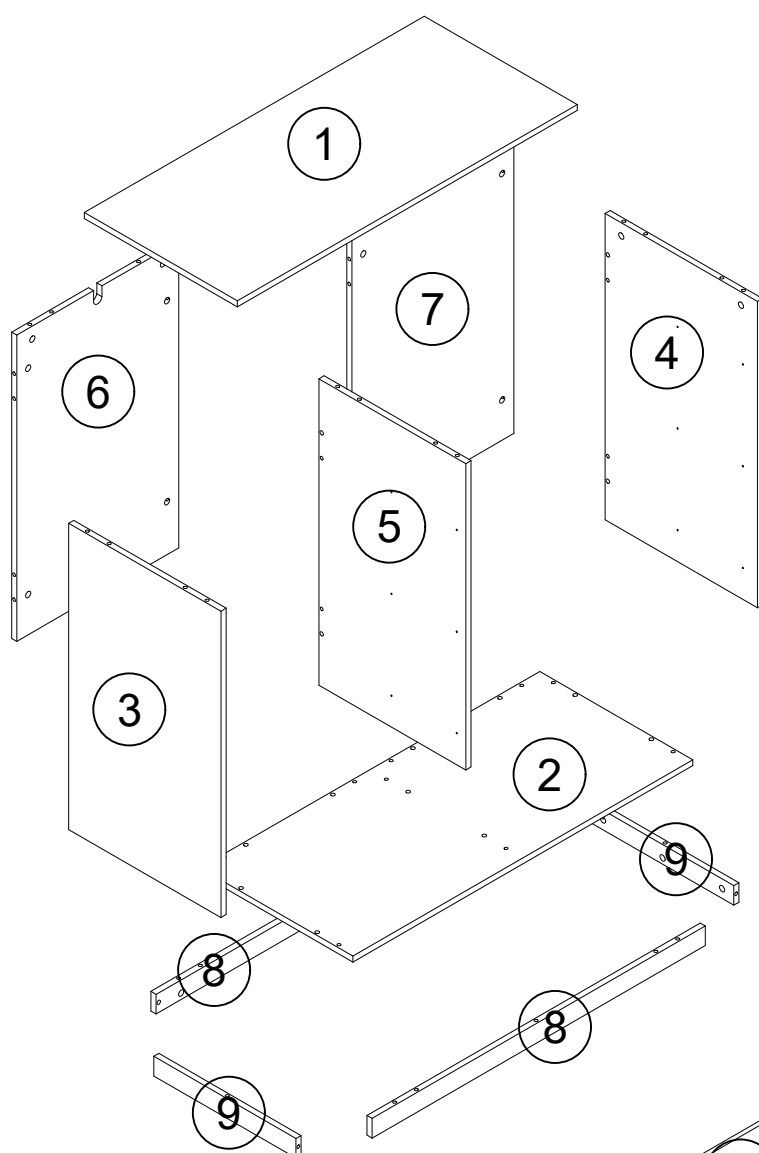


X3

X3


N735P492871

①

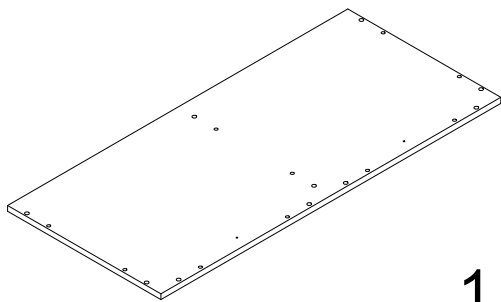


1

②

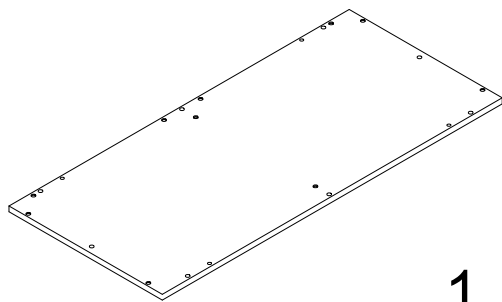


1

③

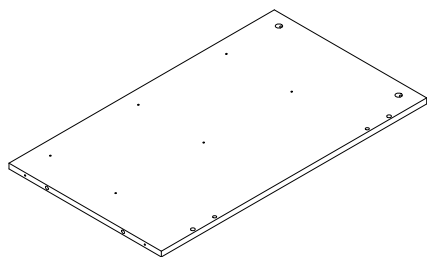


1

④

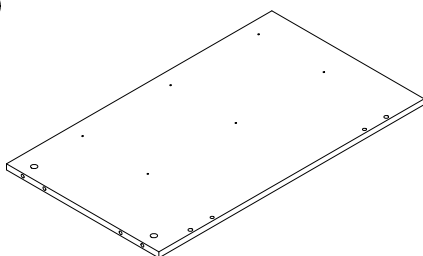


1

⑤

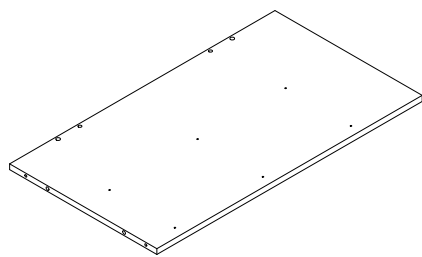

1


⑥

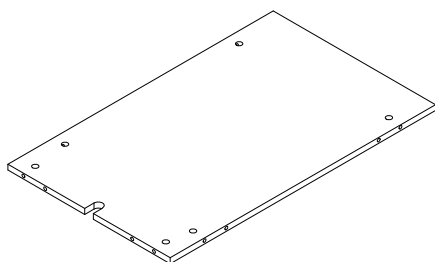

1


N735P492871

⑦

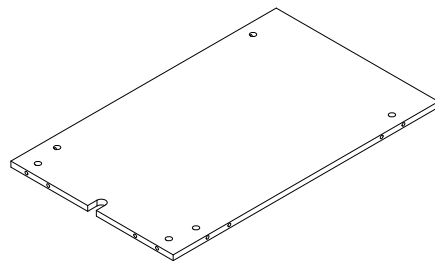


1

⑧

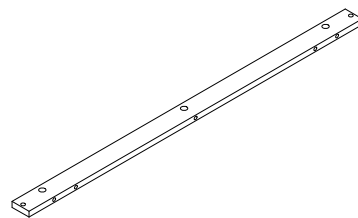


2

⑨

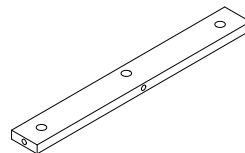


2

⑩

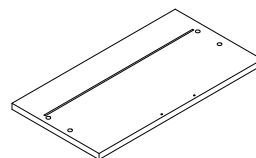


3

⑪

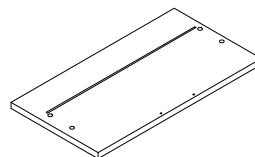


3

⑫

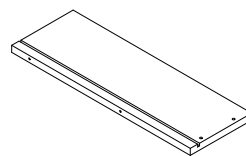

6


⑬

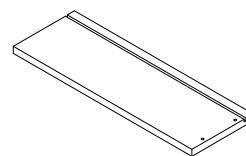

6


N735P492871

14

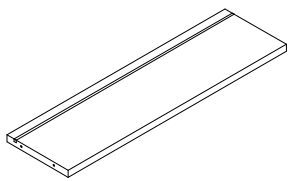










6

15

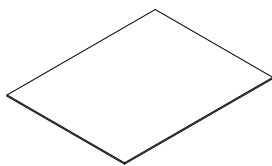


6

N735P492871

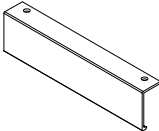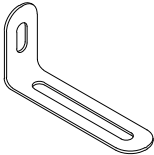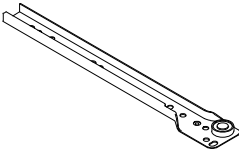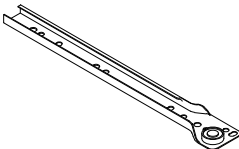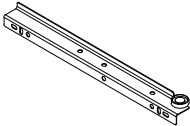
A1  Ø6*40 54PCS	A2  Ø15*9.5 54PCS	B  Ø6*30 32PCS	C  M7*50 10PCS
D  M3.5*35 24PCS	E  M3.5*14 60PCS	F  6PCS	G  54PCS
H  2PCS	I  6PCS	J  1PC	K  3.5*14 2PCS
L  M3.5*35 M6*30 2PCS	CL  250mm 6PCS	CR  250mm 6PCS	DL  250mm 6PCS
DR  250mm 6PCS			

Step1
Schritt1

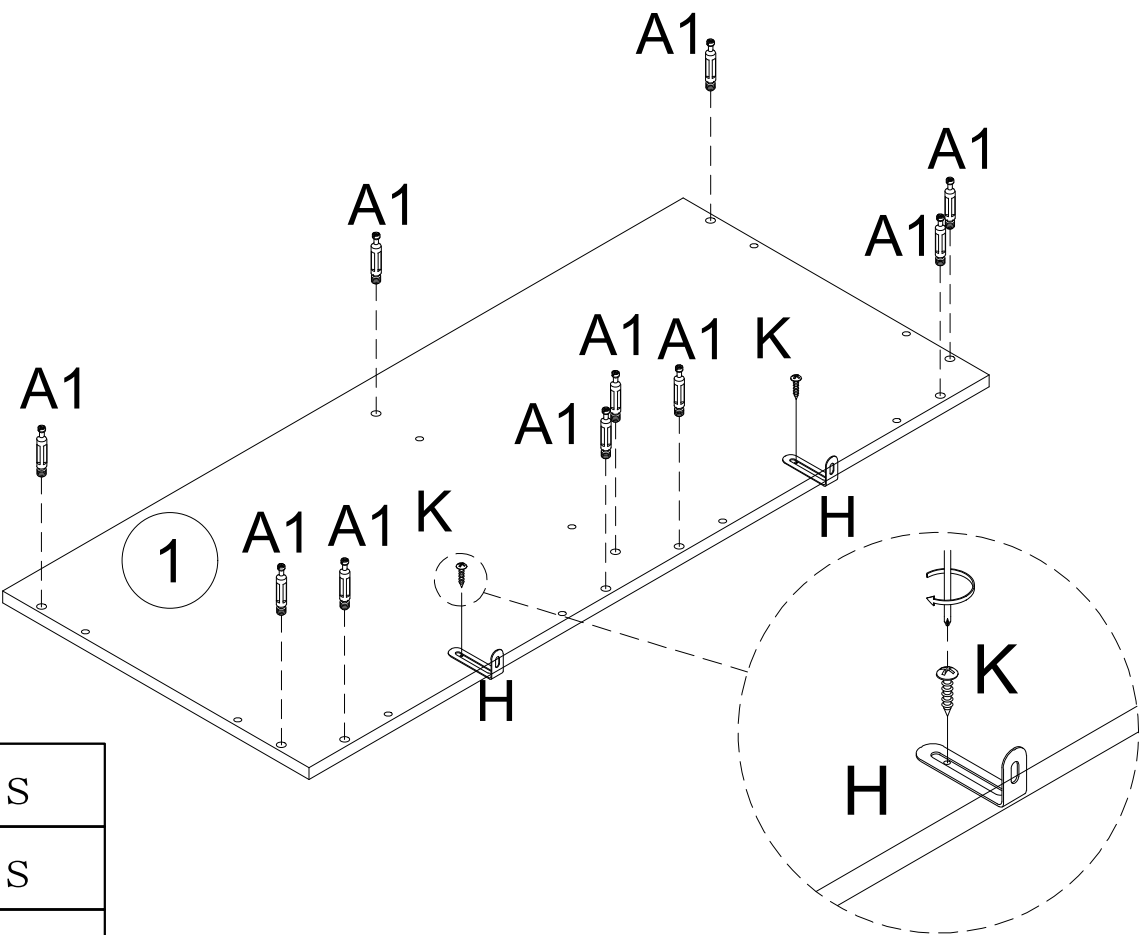


	Hx2pcs
	Kx2pcs
	A1x10pcs

Step2
Schritt2

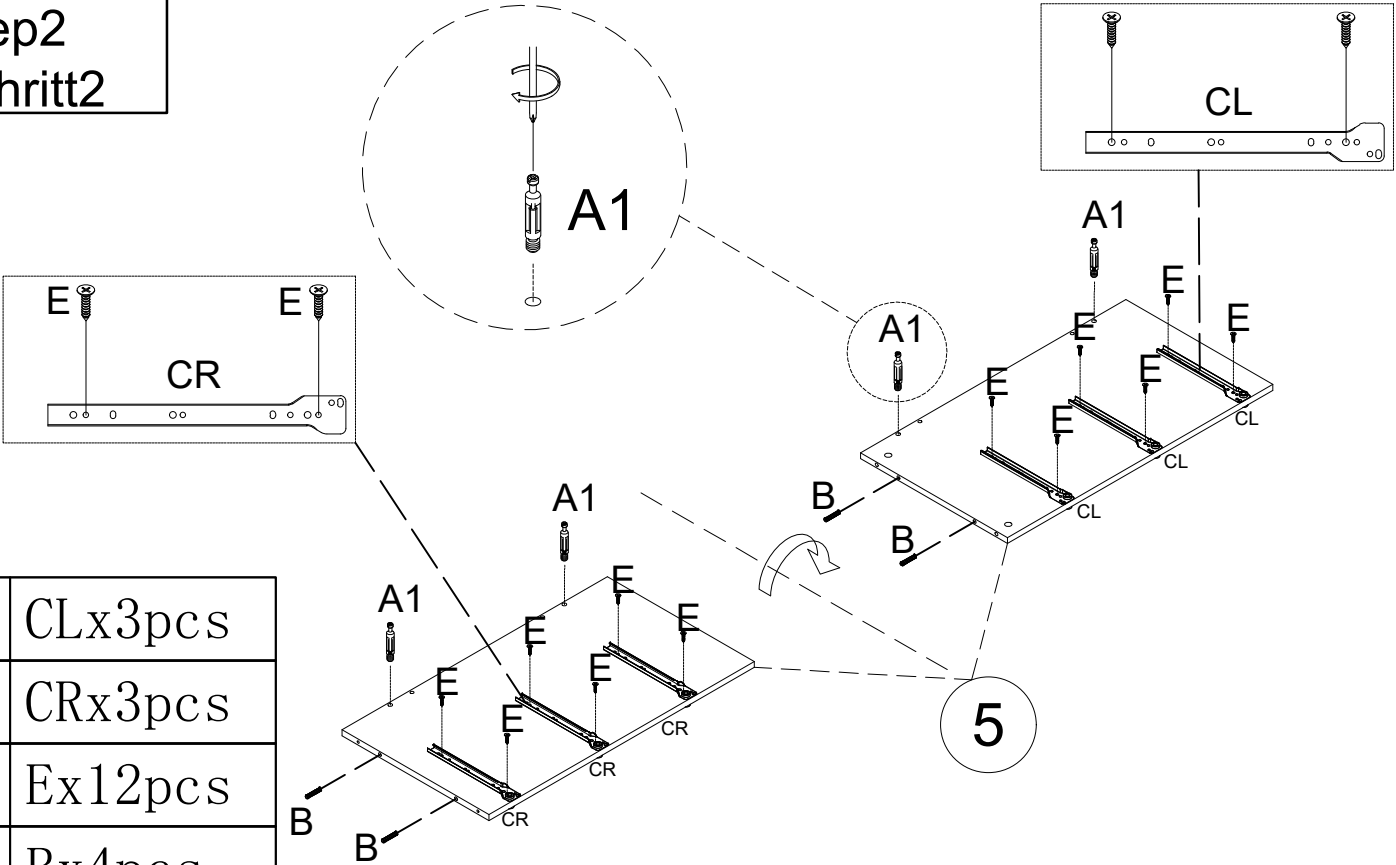



	CLx3pcs
	CRx3pcs
	Ex12pcs
	Bx4pcs
	A1x4pcs

Step3
Schritt3

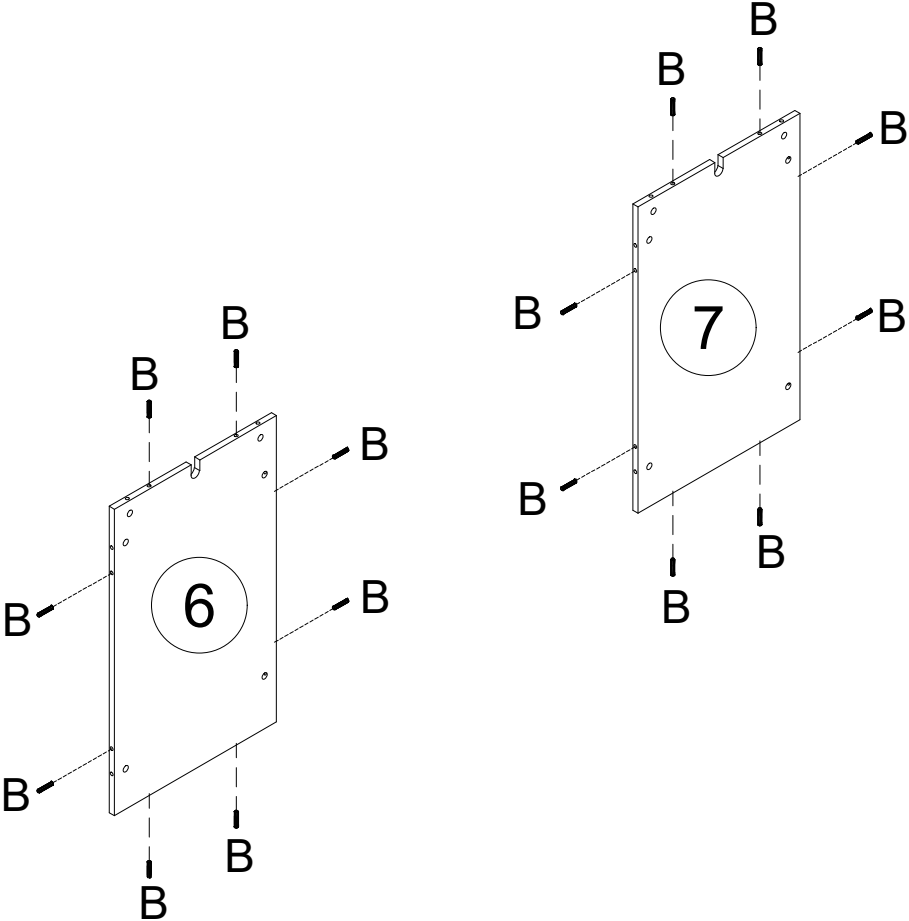


Bx16pcs

Step4
Schritt4


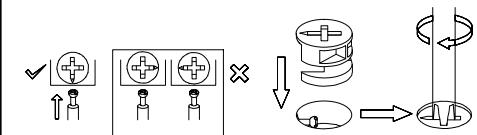
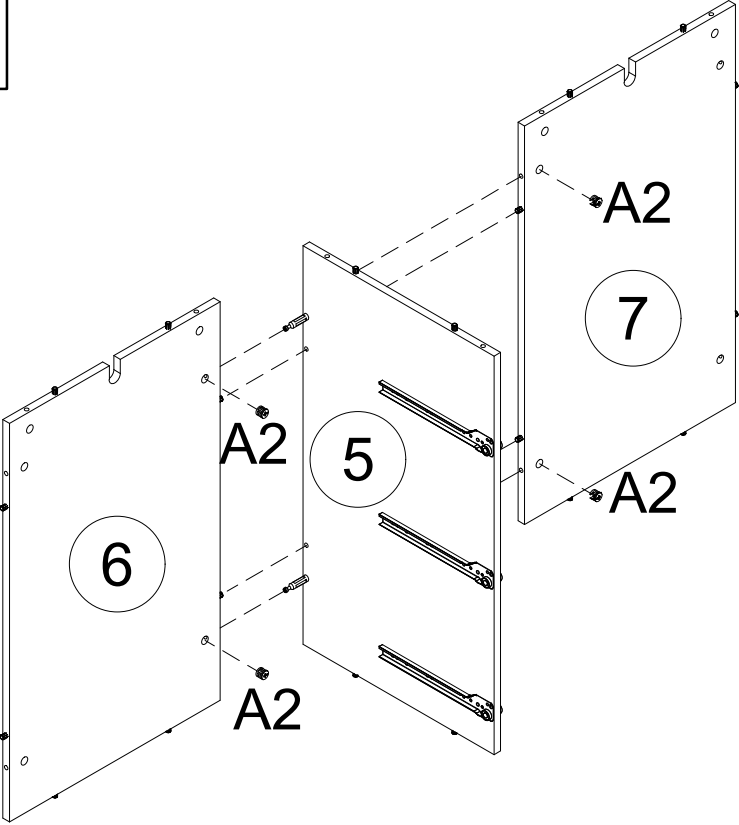


A2x4pcs

Step5
Schritt5


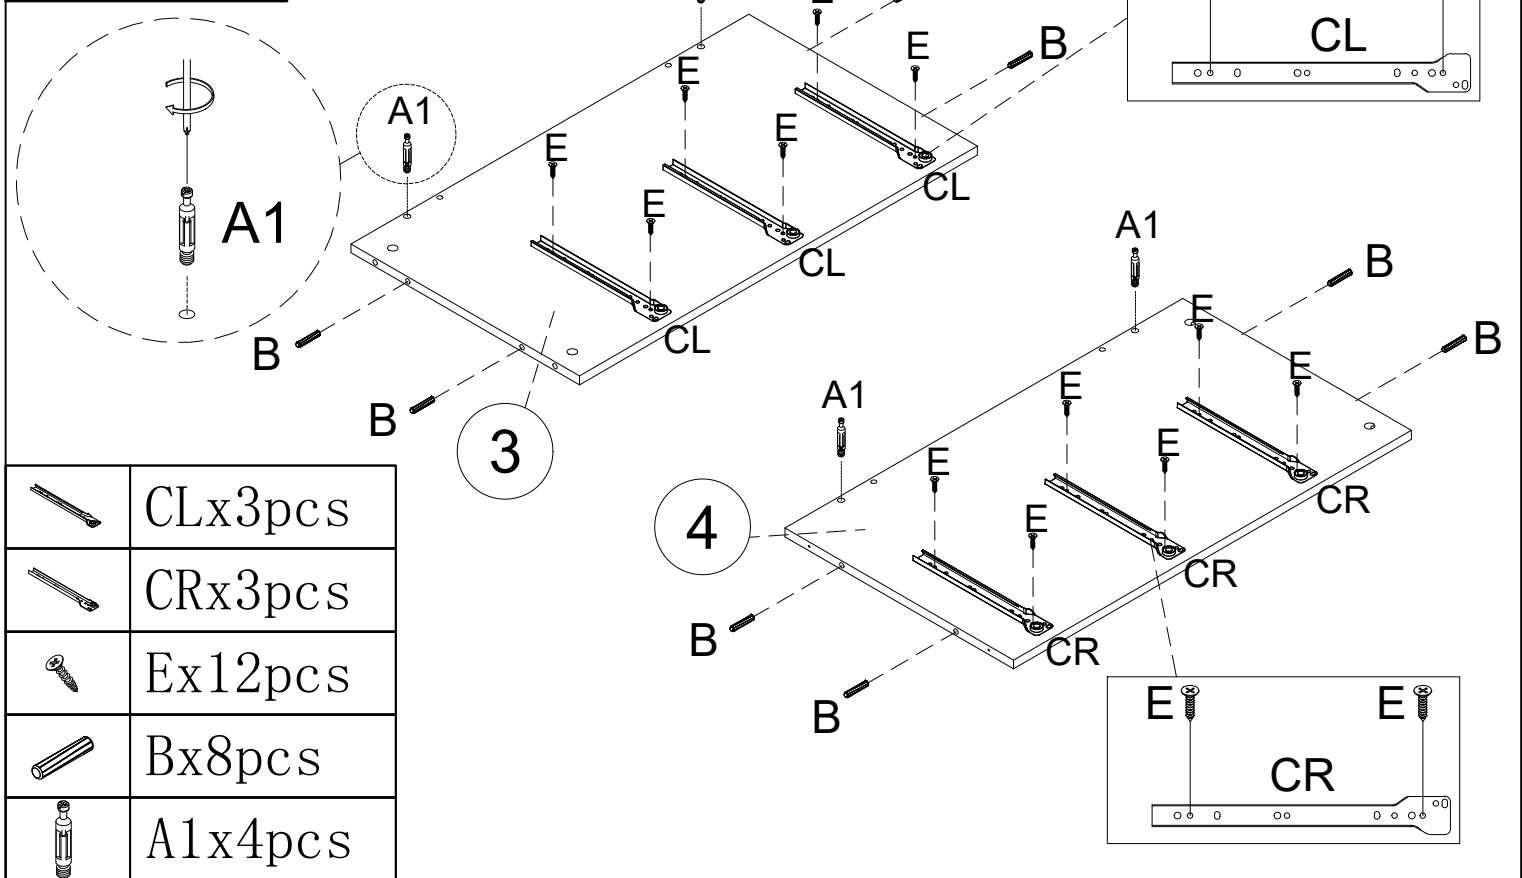


Step6
Schritt6

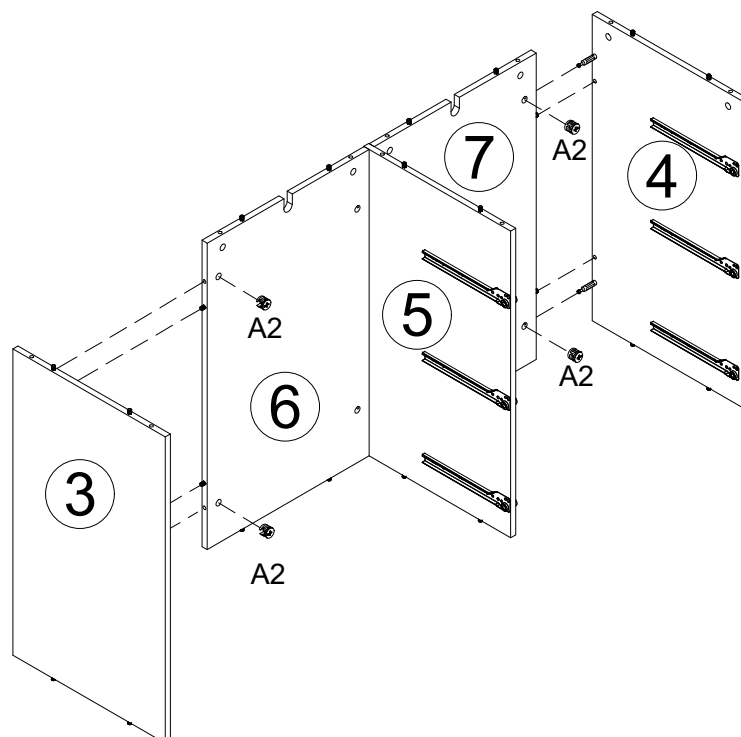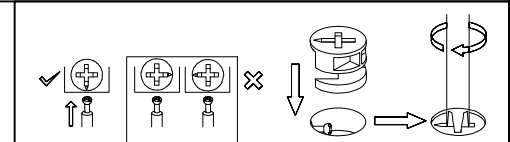


A2x4pcs

Step7
Schritt7

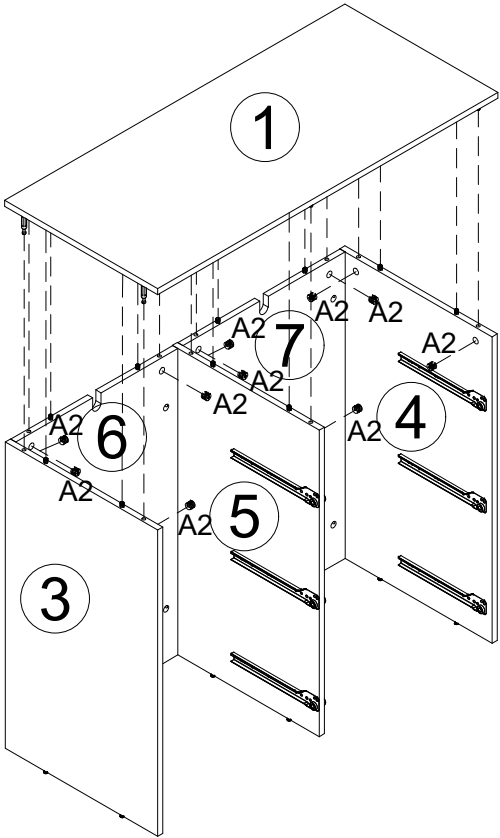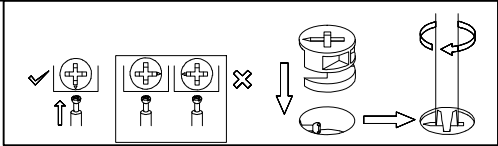



A2x10pcs

Step8
Schritt8

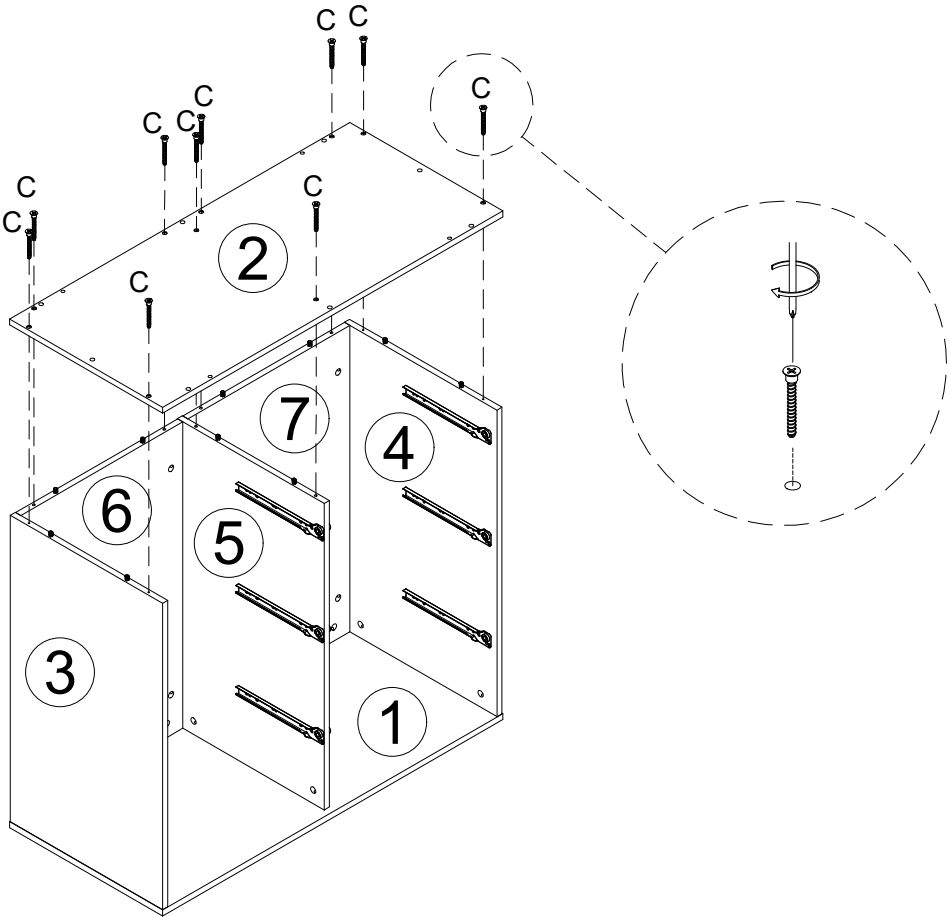


Cx10pcs

Step9
Schritt9

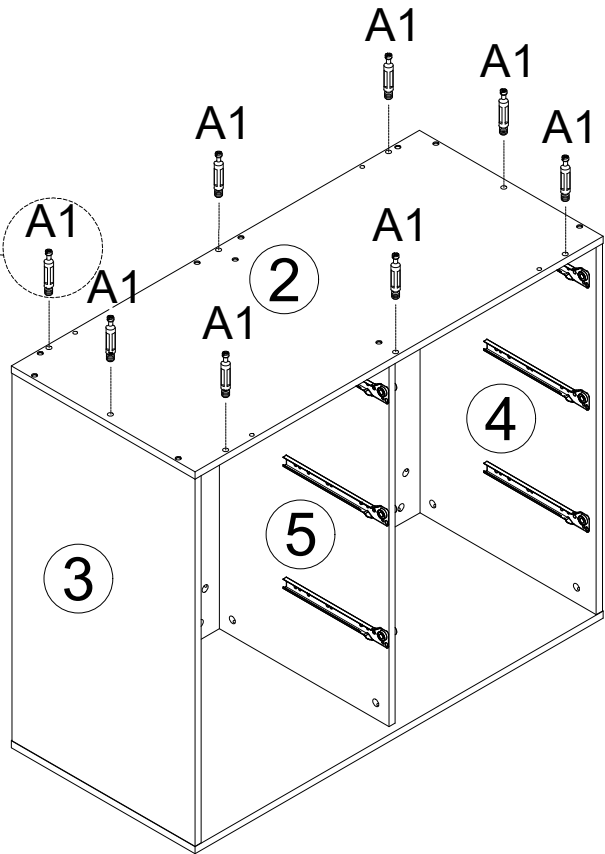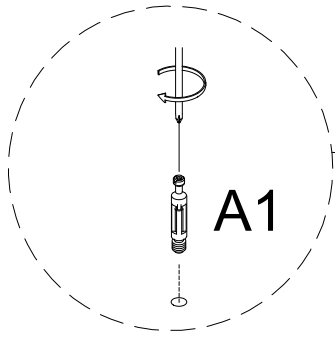

A1x8pcs



Step10
Schritt10

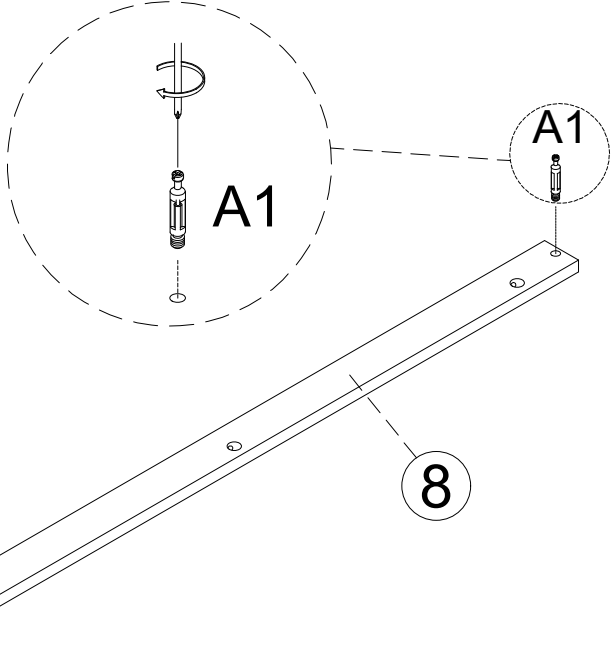

A1x4pcs

X2

Step11
Schritt11

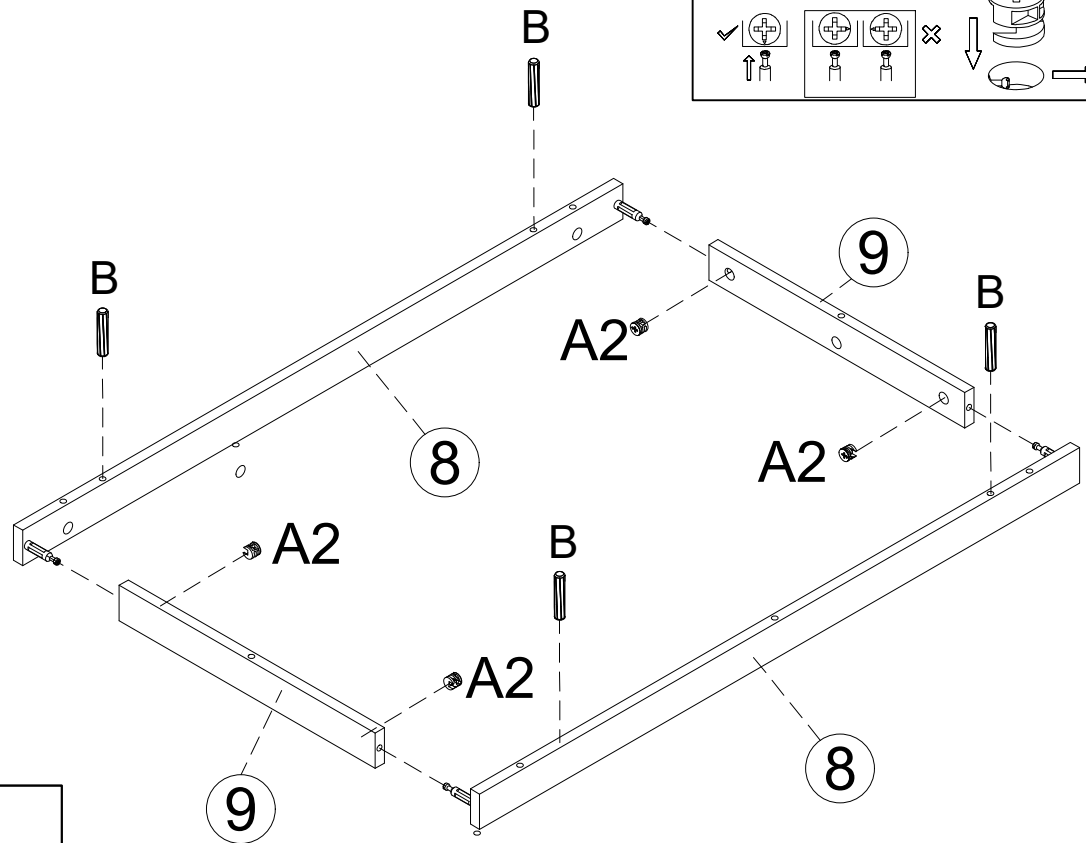
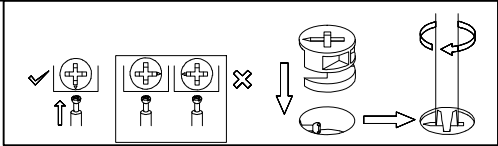


Bx4pcs




A2x4pcs

Step12
Schritt12

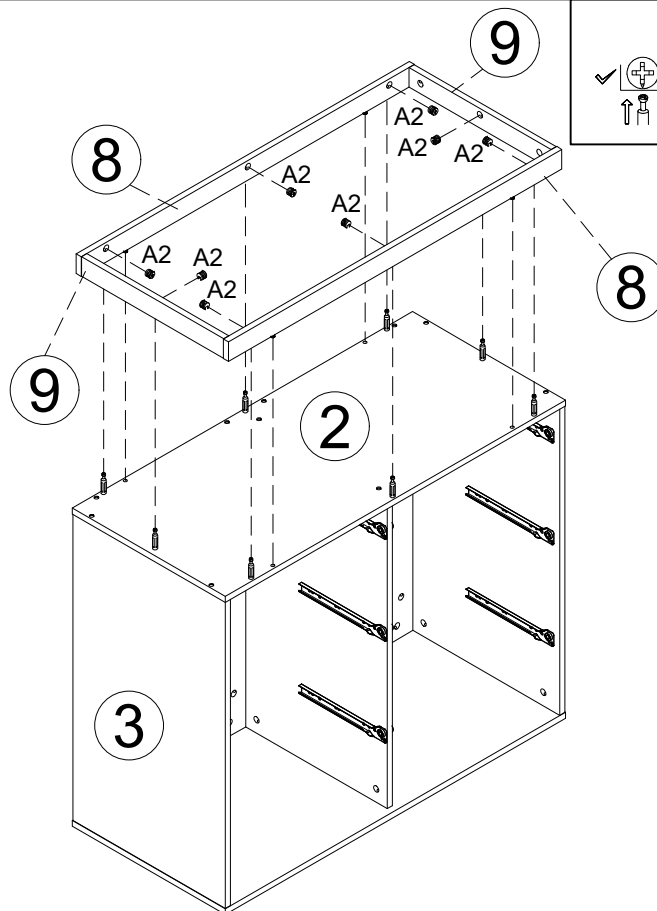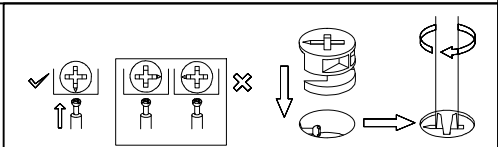


A2x8pcs

Step13
Schritt13

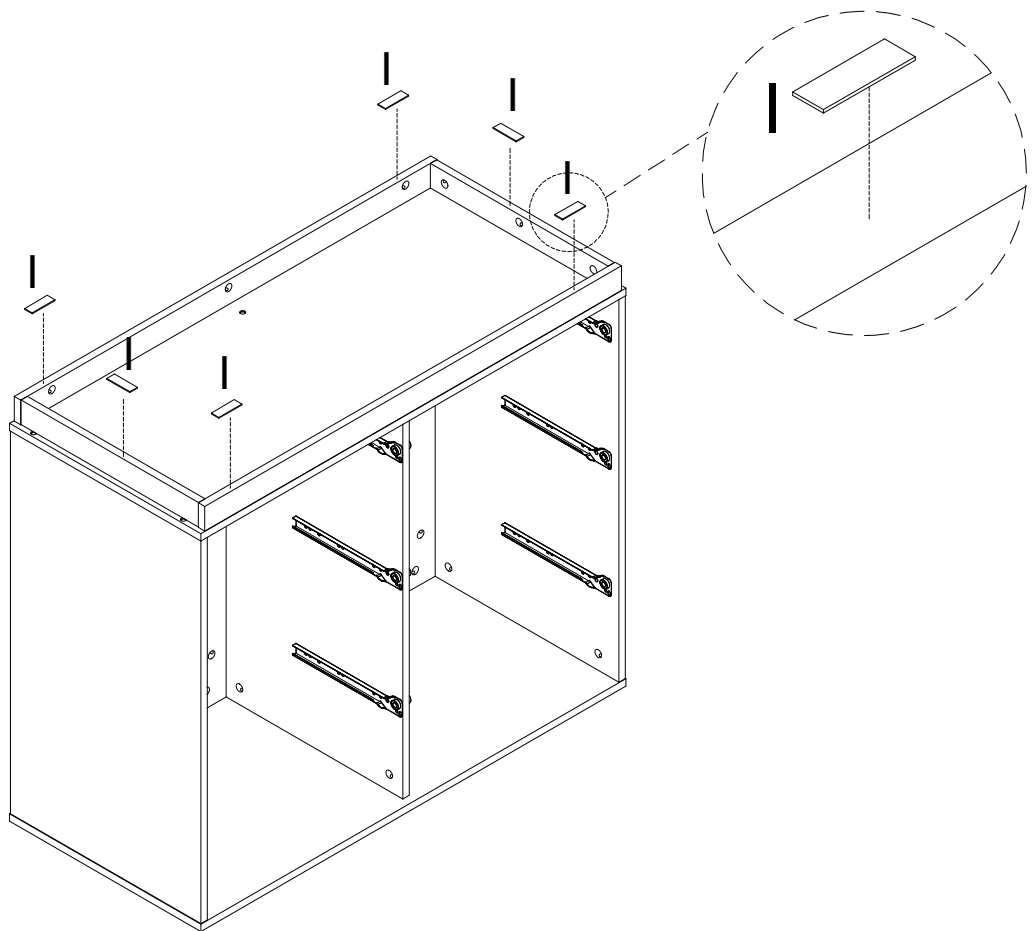

Ix6pcs


Step14
Schritt14

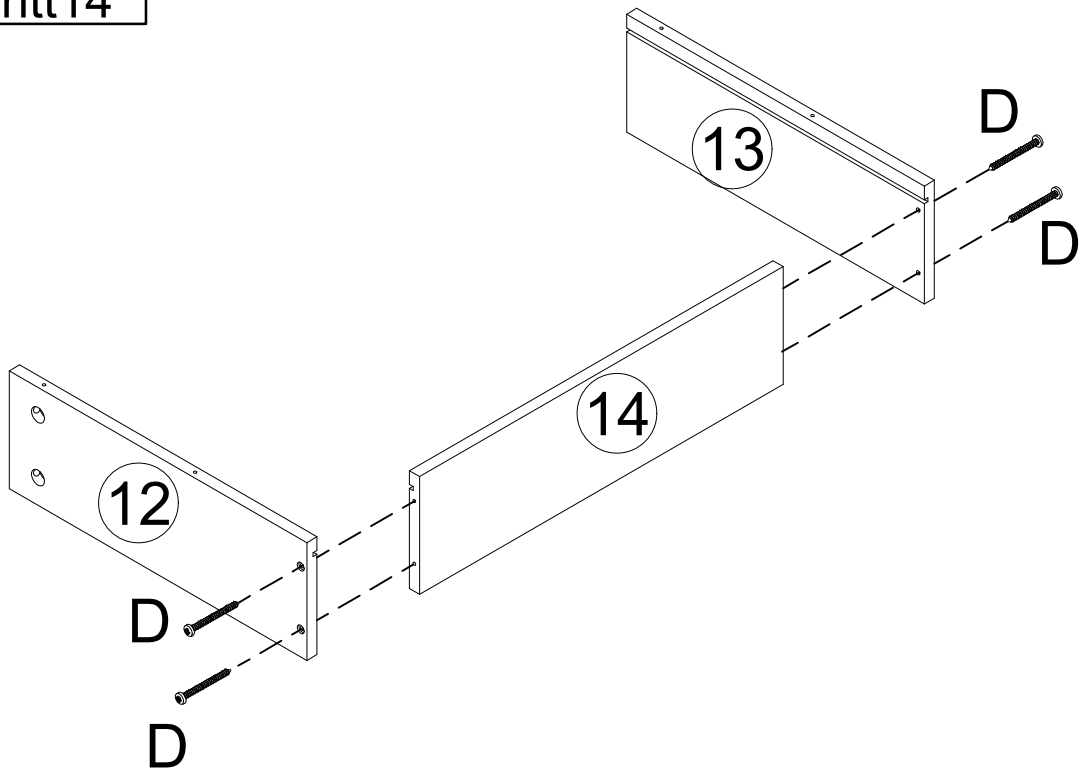

Dx24pcs


X6

Step15
Schritt15

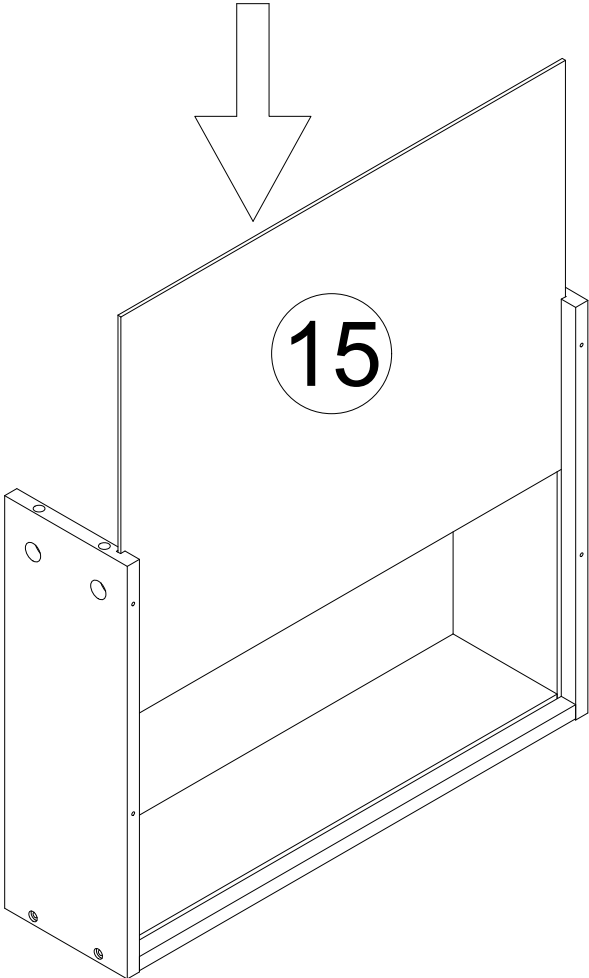

X6


Step16
Schritt16

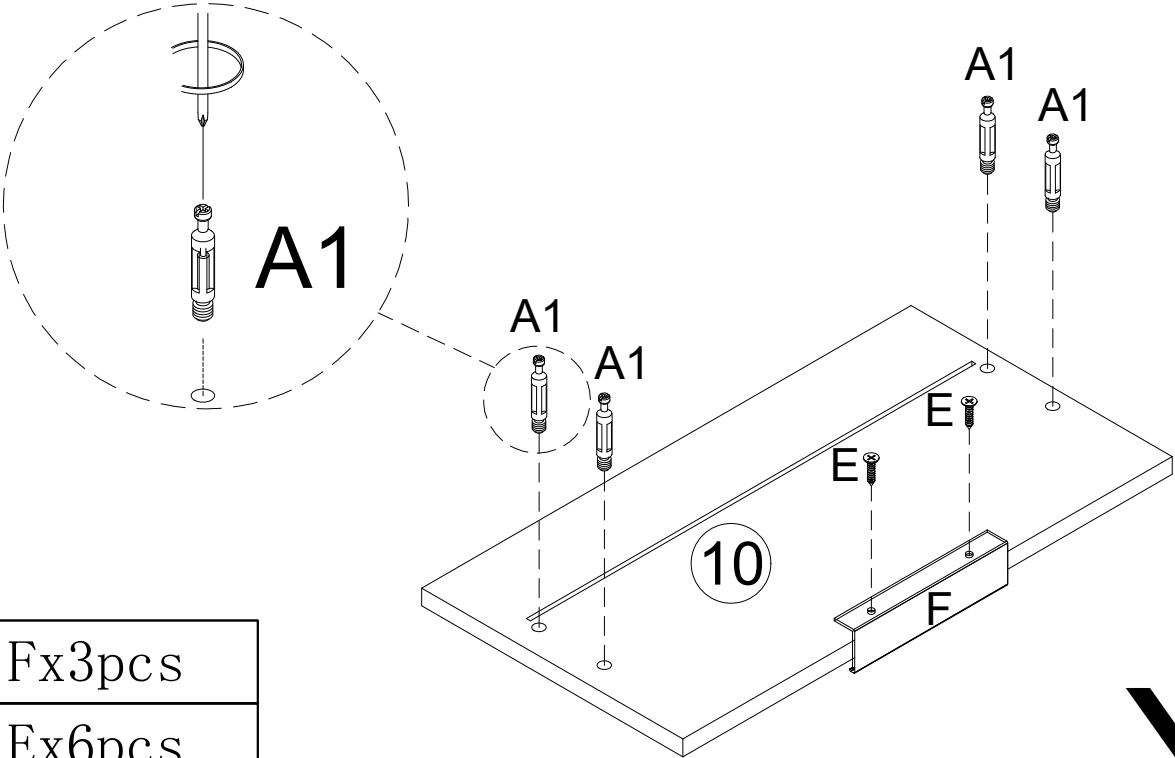

X3

	Fx3pcs
	Ex6pcs
	A1x12pcs



Step17
Schritt17

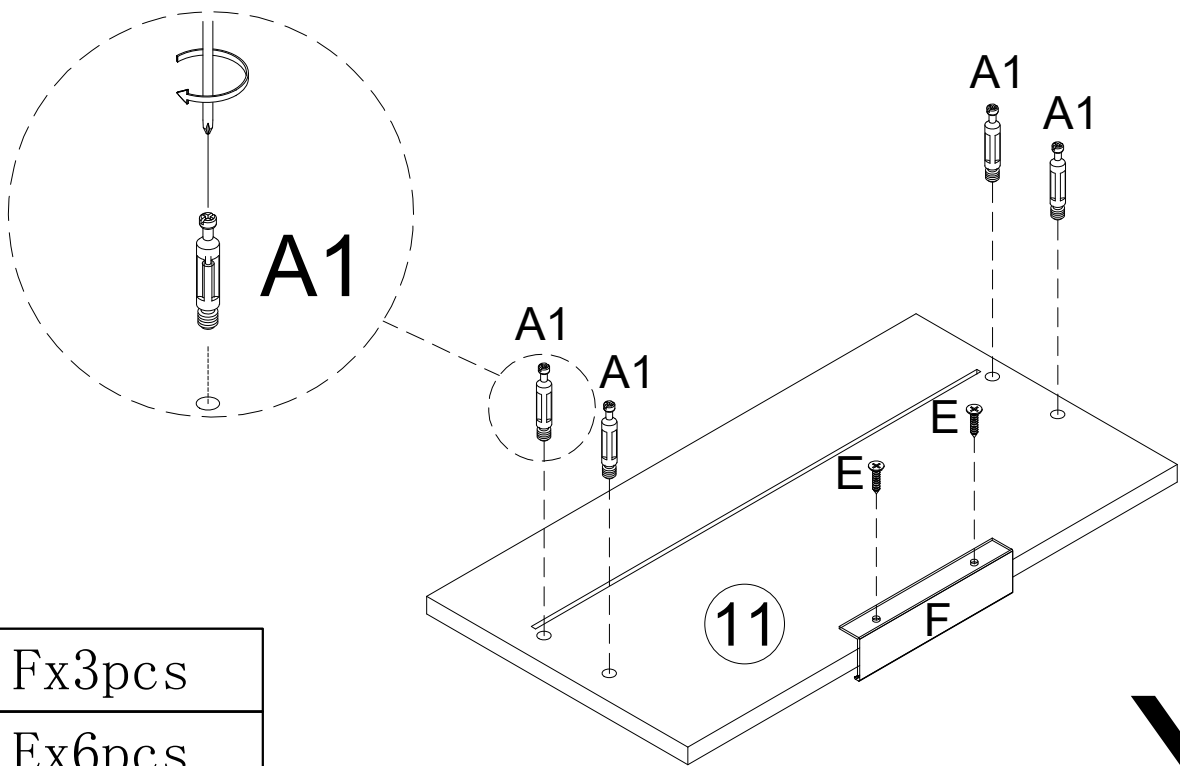

	Fx3pcs
	Ex6pcs
	A1x12pcs

X3



Step18
Schritt18

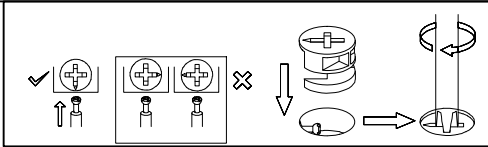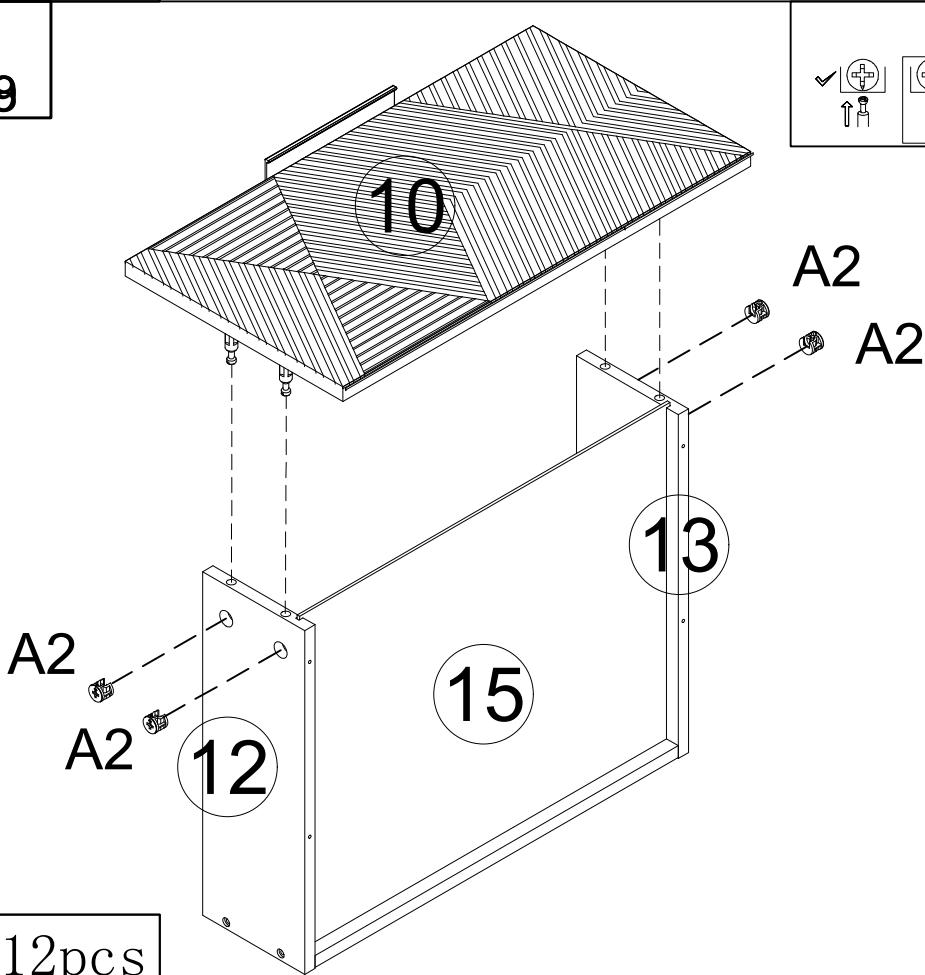

	A2x12pcs
--	----------


X3

Step20
Schritt20

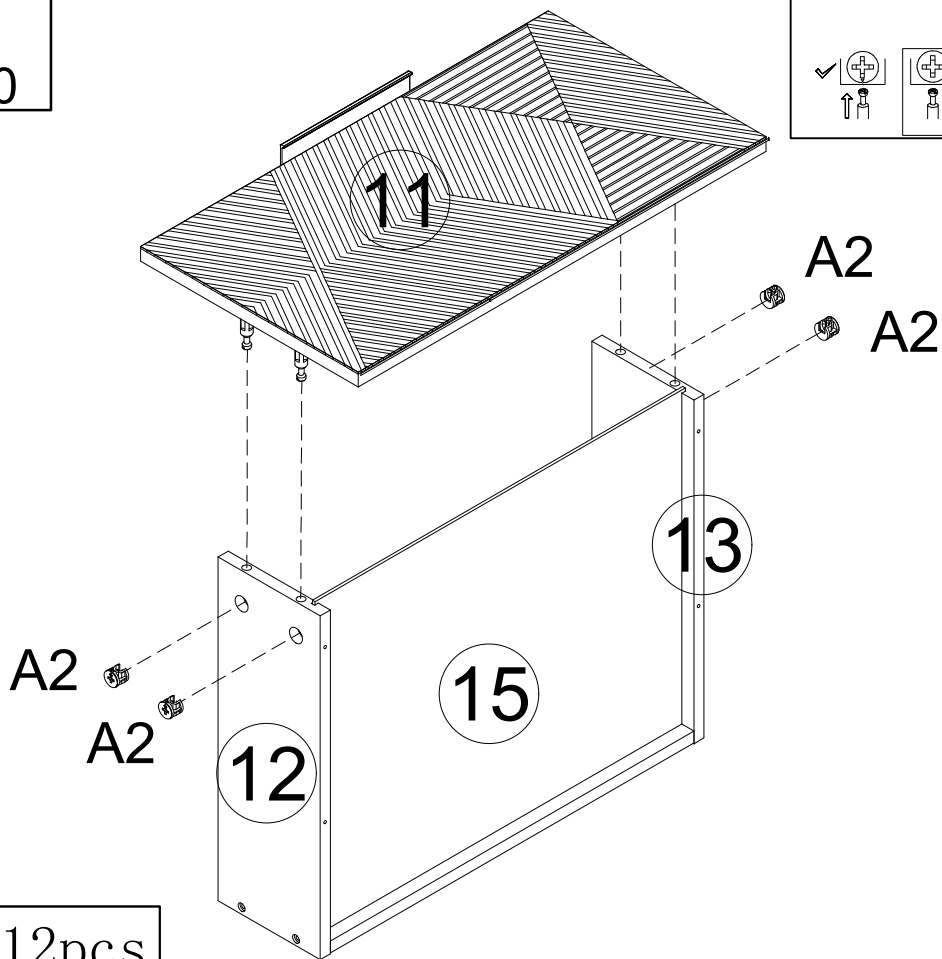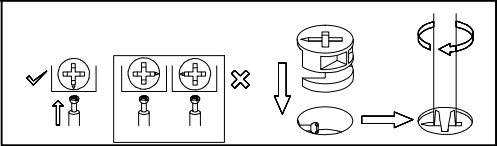


A2x12pcs

X3

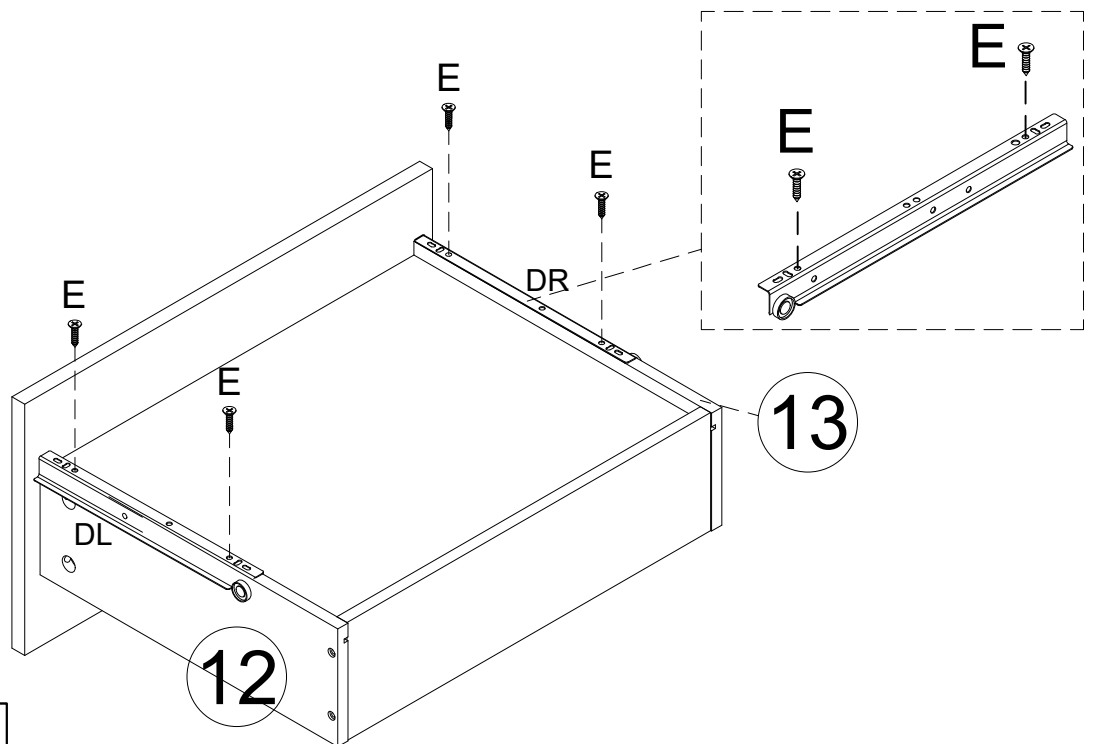

DLx6pcs




DRx6pcs




Ex24pcs

X6

Step21
Schritt21

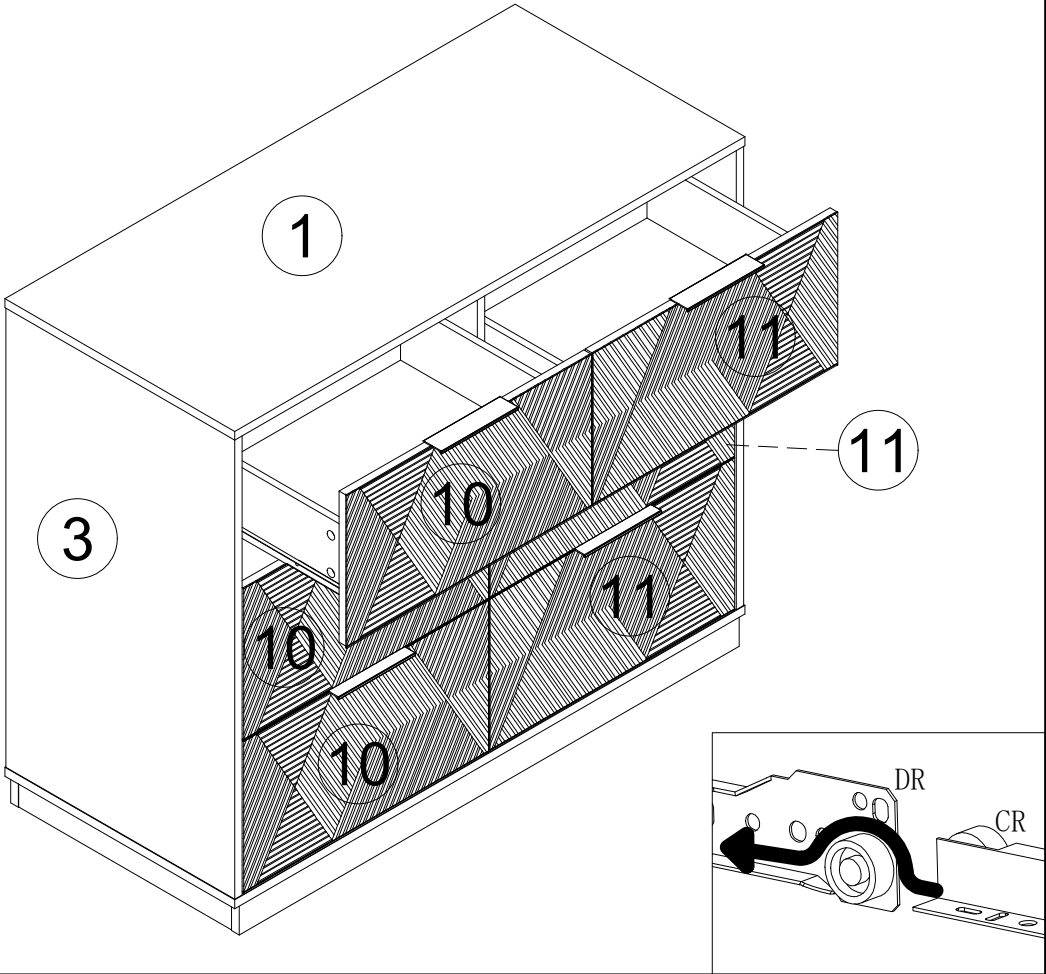

Step22
Schritt22

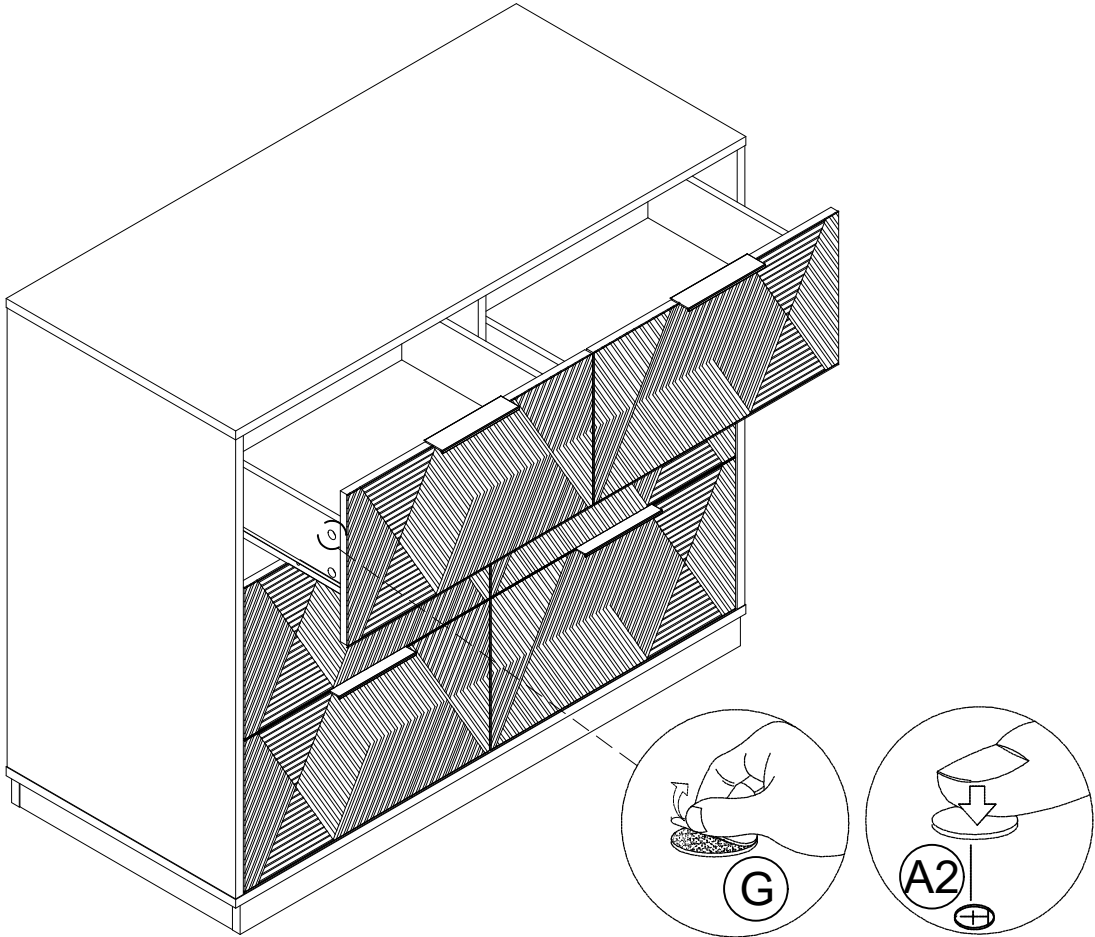

Gx54pcs


Step23
Schritt23

WALL

+

drilling hole

M6*30mm

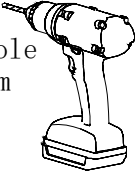


①

X2


WALL

L

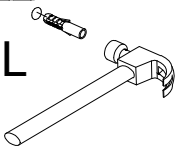

②

X2

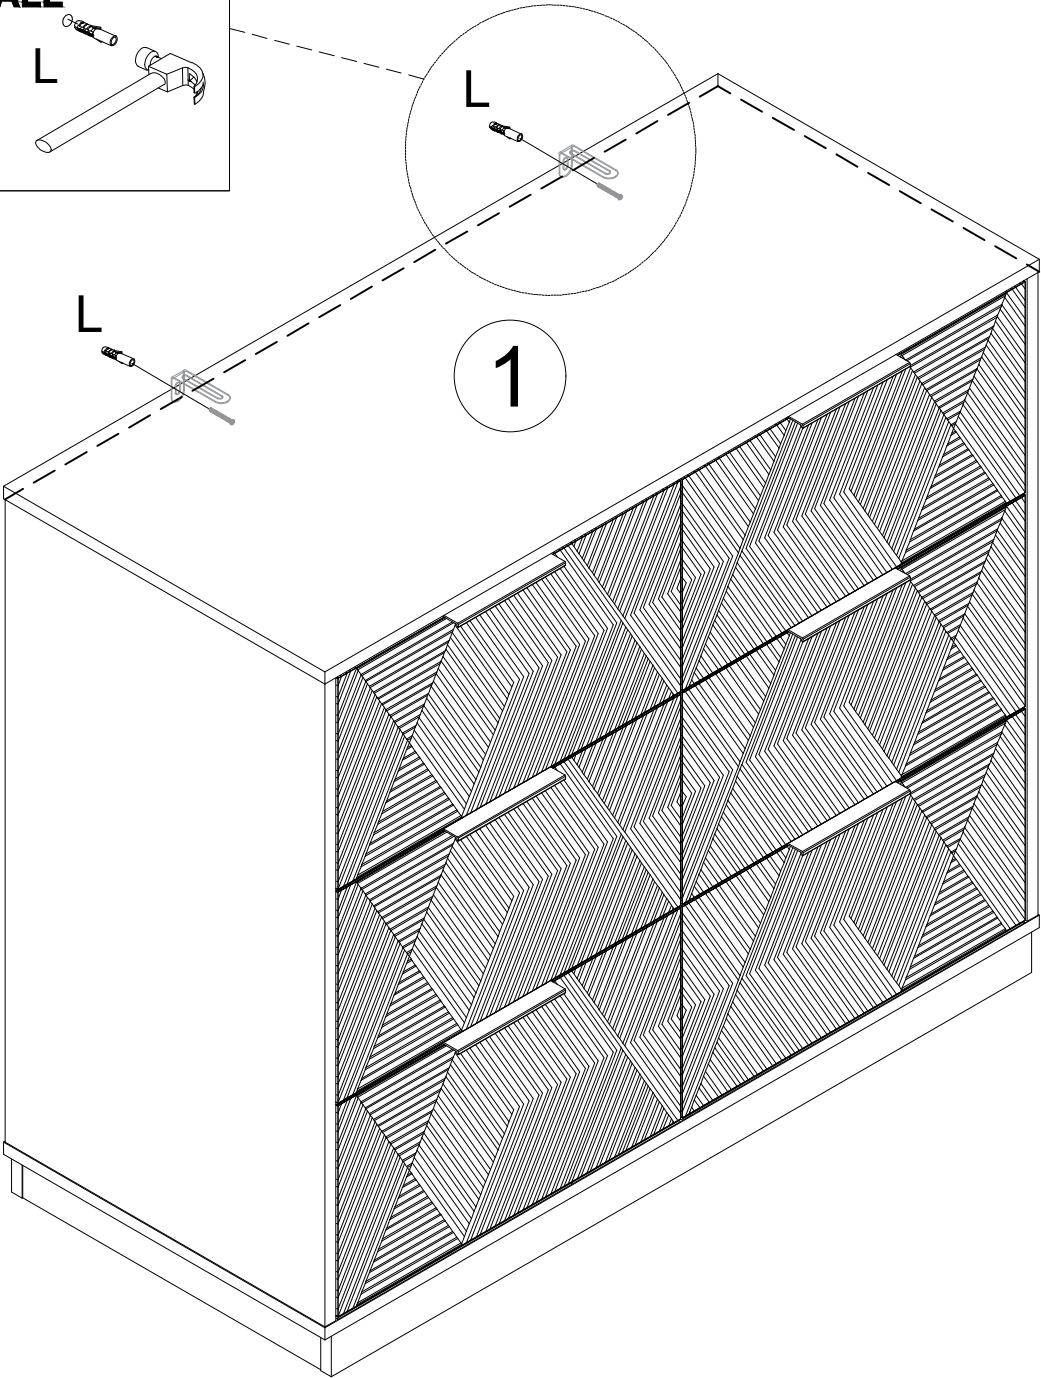

L*2pcs

Date	05/2026
Manufacturer	CARWIN FURNITURE COMPANY LIMITED
Address	37/38/58, GIANG MINH 2 STREET, QUARTER 7, TAN UYEN WARD, HO CHI MINH CITY VIET NAM