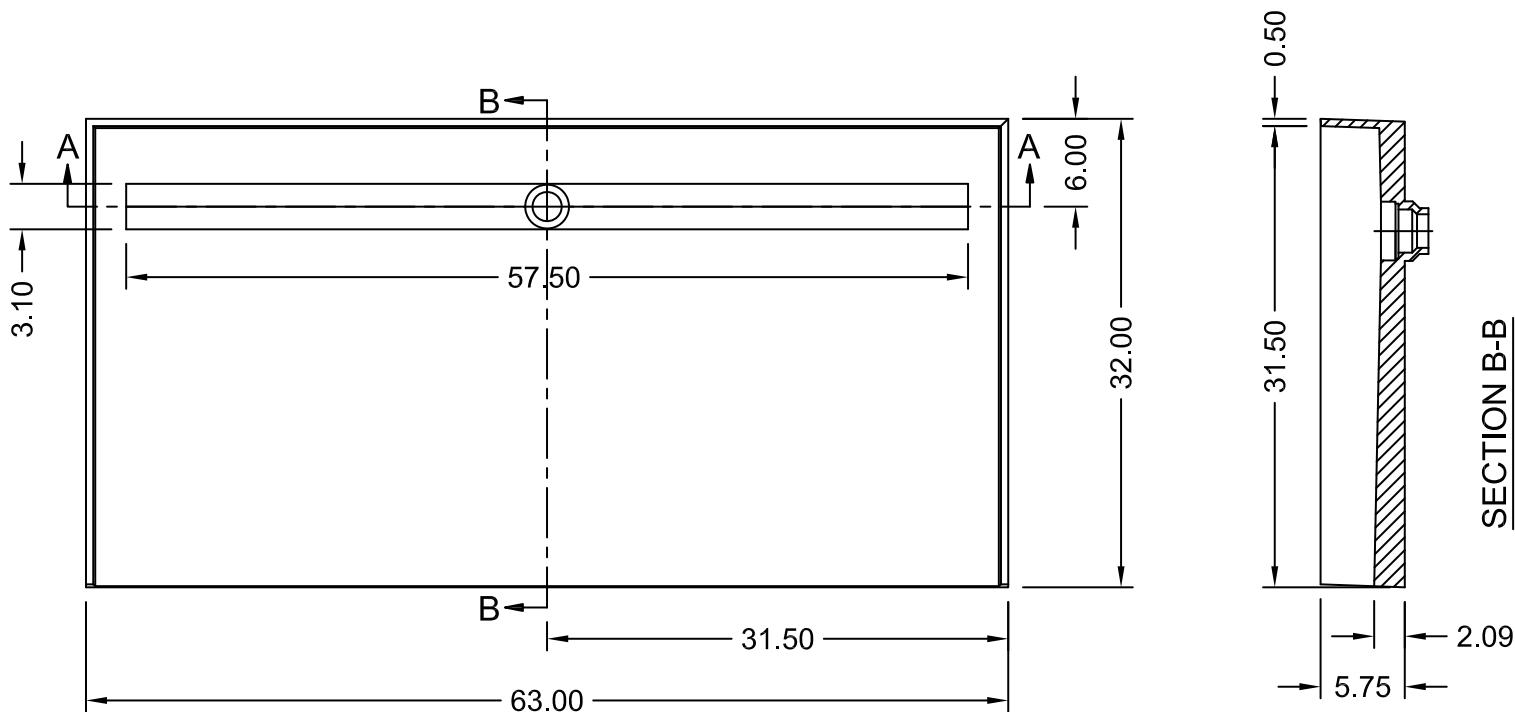


(Not to scale)

SECTION A-A**Redi Free
Installation:**

For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.