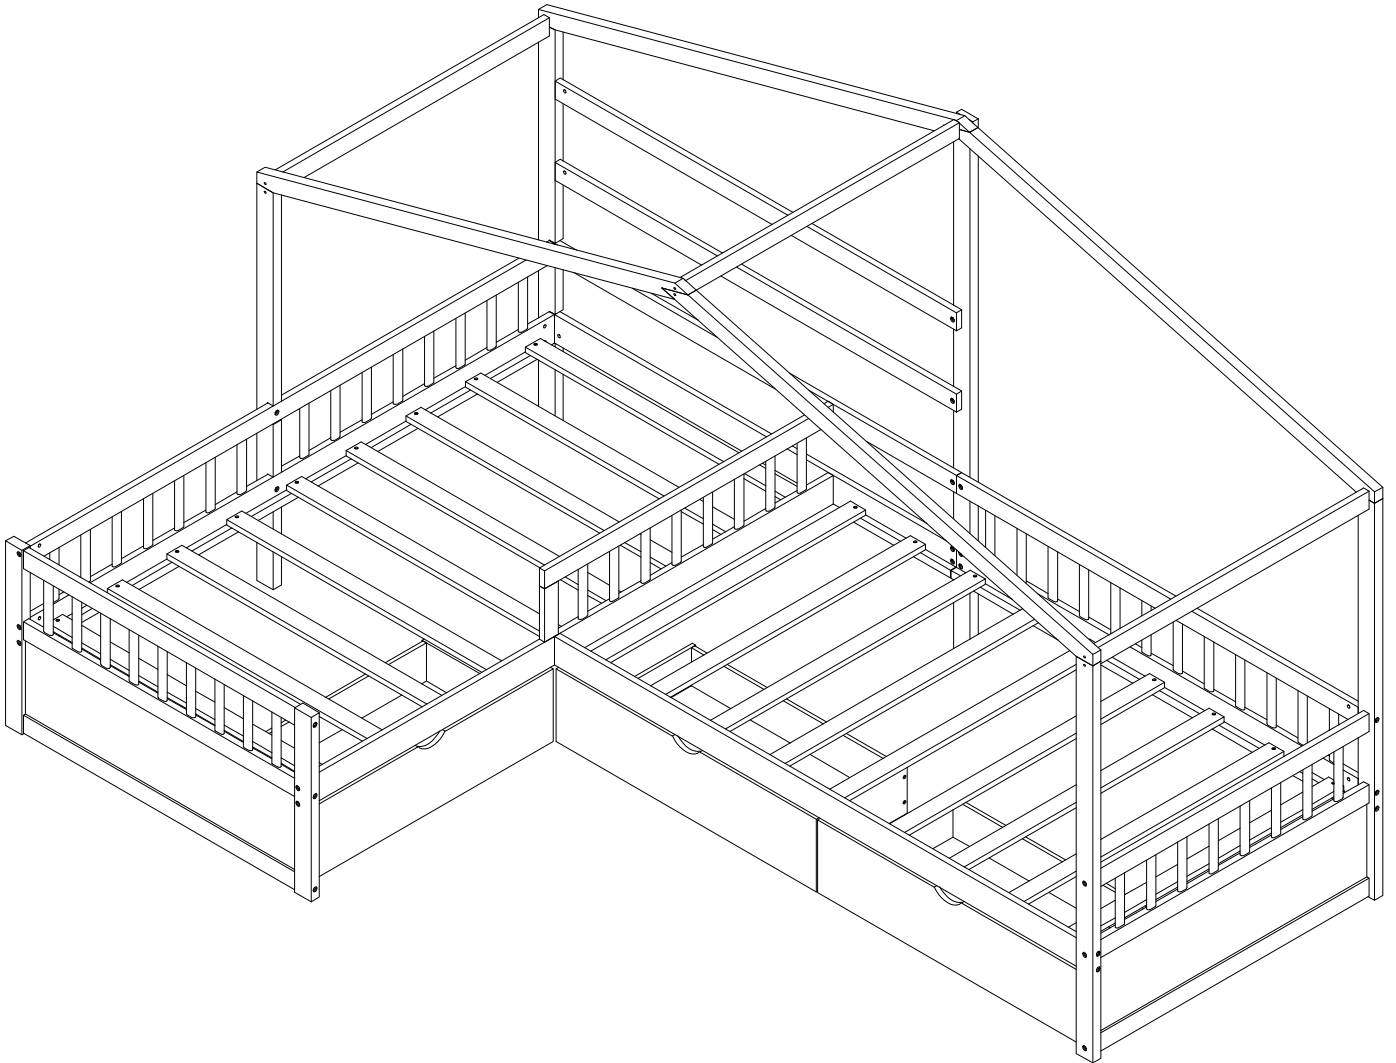


ASSEMBLY INSTRUCTION

SKU CODE: (WF309249-WF309250)

This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team



If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

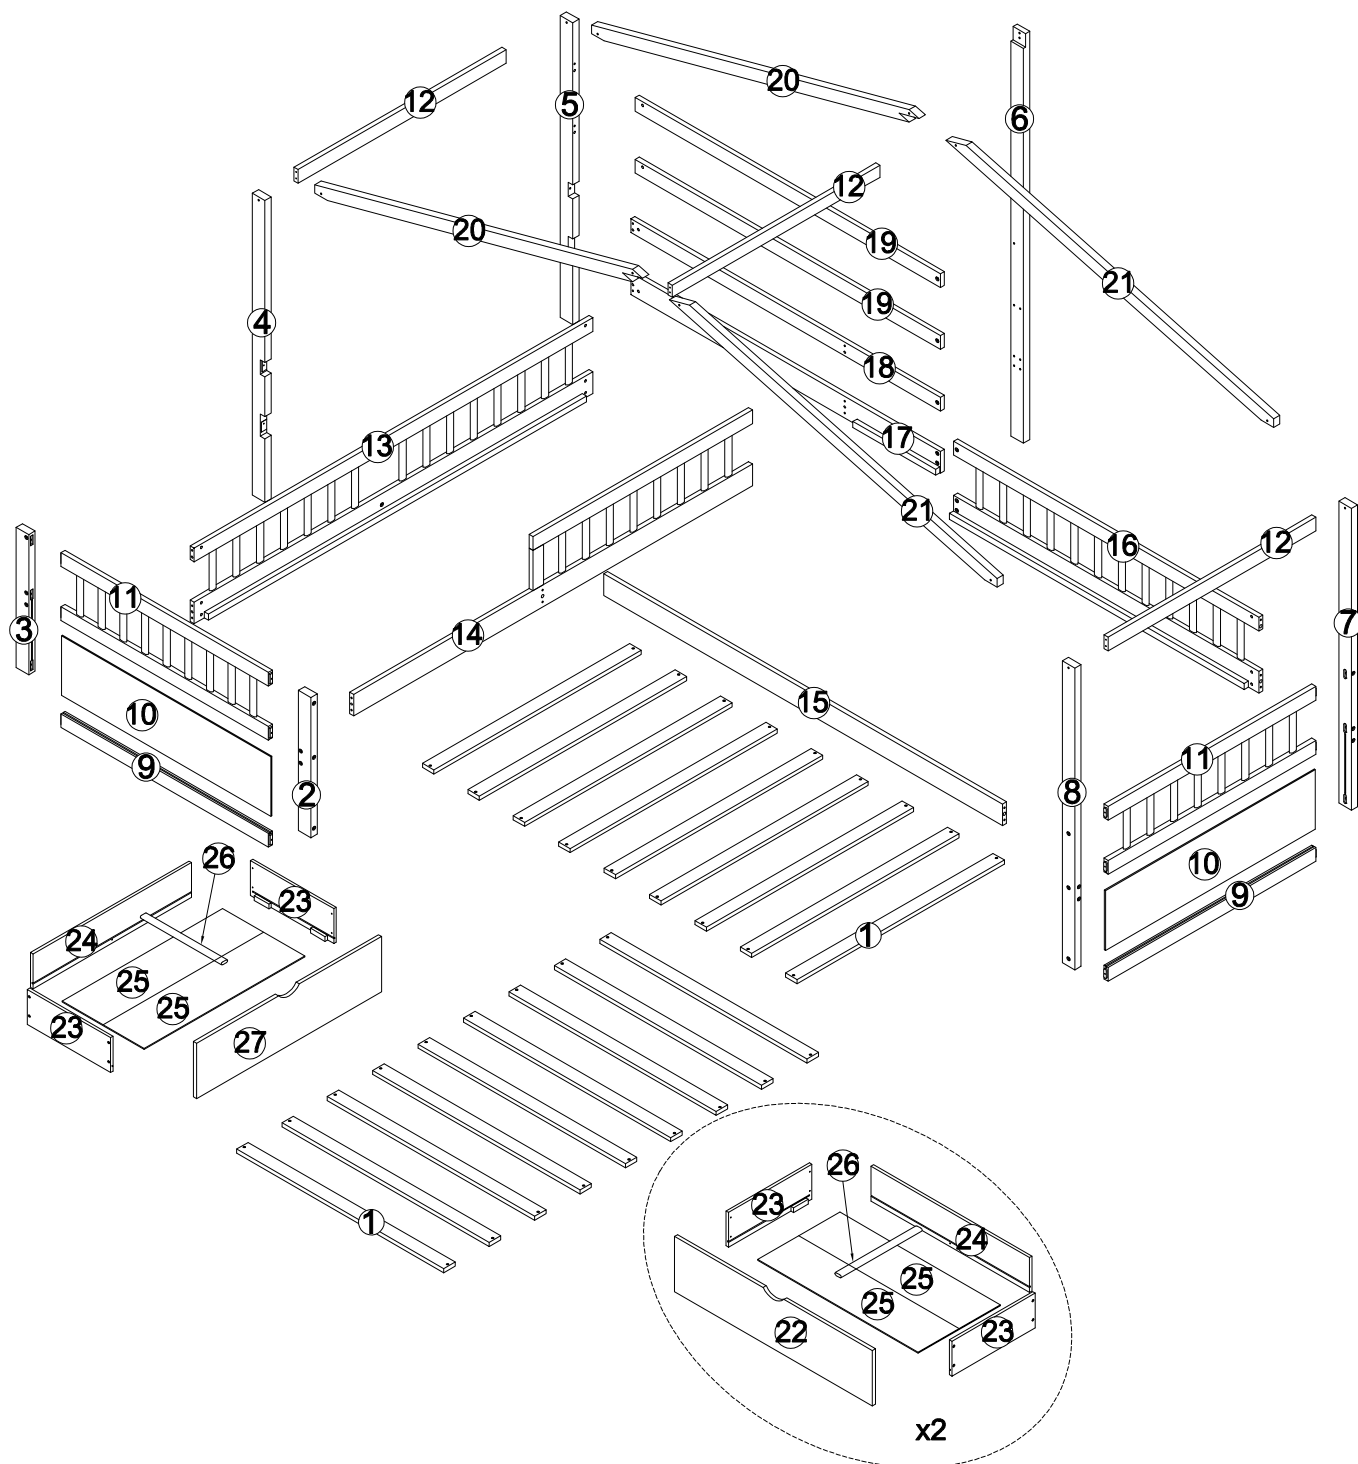
SAFETY WARNINGS AND GENERAL NOTES:

1. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
2. Keep these instructions for future reference.
3. We recommend assembling your bed on the shipping carton to protect your floor or carpet.
4. Be certain all staples are out of the box before beginning assembly on the shipping carton.











5.Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC.) dealers











ASSEMBLY INSTRUCTION










Part List (Box 1-WF309249)

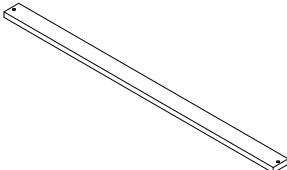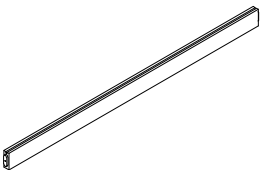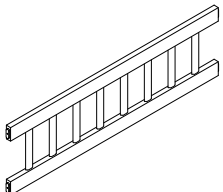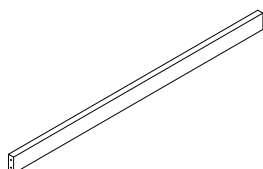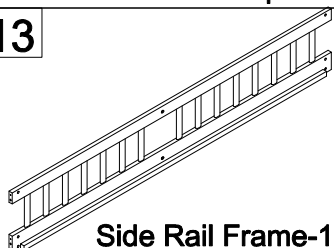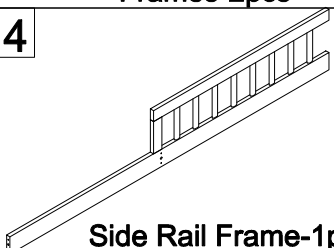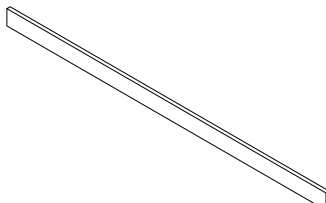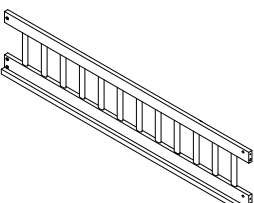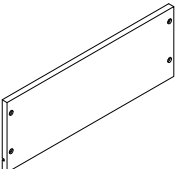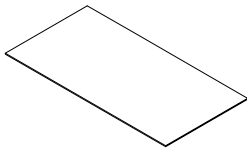
1  Slats-18pcs	9  Wood Bars-2pcs	11  Frames-2pcs
12  Roof Top Bars-3pcs	13  Side Rail Frame-1pc	14  Side Rail Frame-1pc
15  Side Rail-1pc	16  Side Rail Frame-1pc	23  Drawer-Side Panes-6pcs
25  Drawer-Bottom Panes-6pcs		

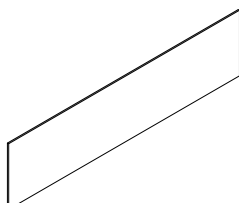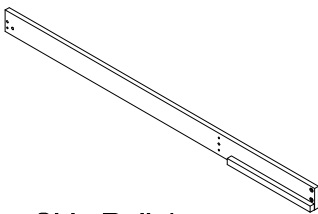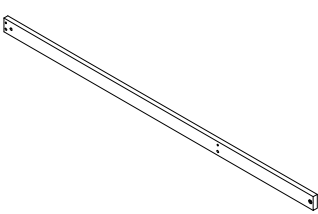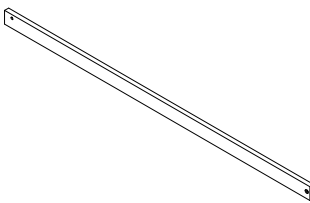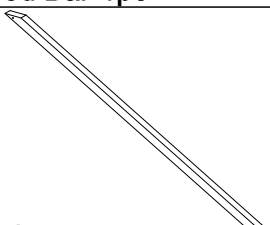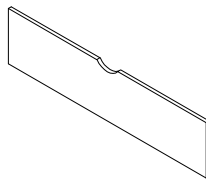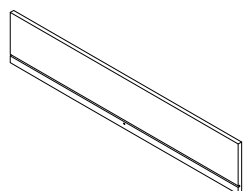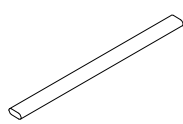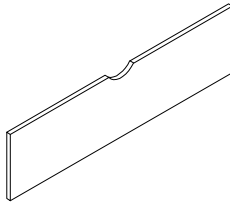Part List & Hardware List (Box 2-WF309250)

2		3		4	
	Leg-1pc		Leg-1pc		Leg-1pc
5		6		7	
	Leg-1pc		Leg-1pc		Leg-1pc
8		10		17	
	Leg-1pc		Panels-2pcs		Side Rail-1pc
18		19		20	
	Wood Bar-1pc		Wood Bars-2pcs		Roof Top Bars-2pcs
21		22		24	
	Roof Top Bars-2pcs		Drawer-Front Panes-2pcs		Drawer-Back Panes-3pcs
26		27			
	Drawer-Sup Bottom Panes-3pcs		Drawer-Front Pane-1pc		

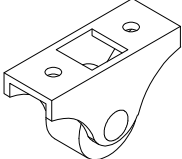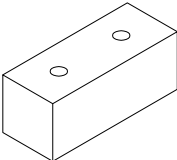Hardware List (Box 2-WF309250)

A  Screws 1/4"x80mm 6pcs	B  Screws 1/4"x70mm 18pcs	C  Ø10 x 40 mm Wood dowel 13pcs
D  Ø1/4" x 80 mm Hex-Head bolts 7pcs	E  Ø1/4" x 100 mm Hex-Head bolts 7pcs	F  Ø1/4" x 13 mm Horizontal-Hole bolts 22pcs
G  Ø1/4" x 15 mm Canopy head though 8pcs	H  Ø1/4" x 35mm Hex-Head bolts 8pcs	K  Ø1/4" x 70 mm Hex-Head bolts 8pcs
L  Screws 1/4"x50mm 2pcs	M  M4 x 30 mm Wood Screws 73pcs	N  Wheels 12pcs (H=28mm)
O  M4 x15 mm Wood Screws 24pcs	P  Stop Drawer-5pcs	Q  Allen Key 1pc



Assembly Tools Required (Not Included)

STEP 1: Following below illustration:

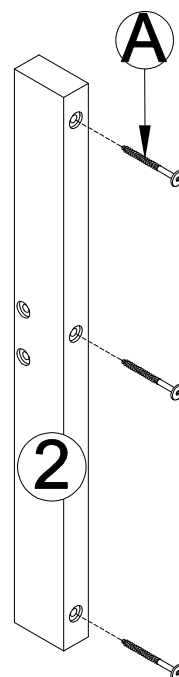
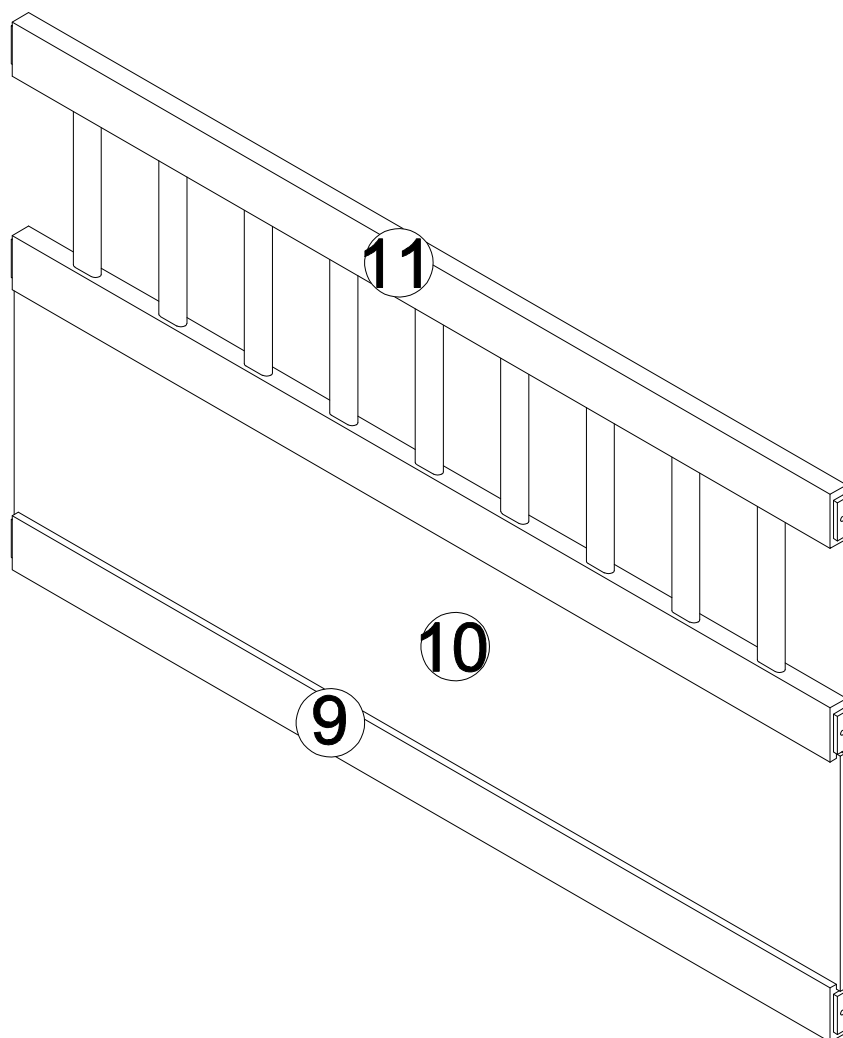
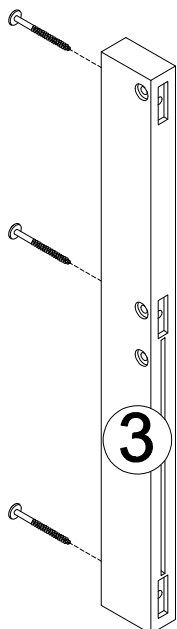
-Using hardward #A to Connect 2,3 Legs With Wood Bar 9,Panel 10 and Frame 11

-Look at detail view for more detail

A



6pcs



STEP 2: Following below illustration:

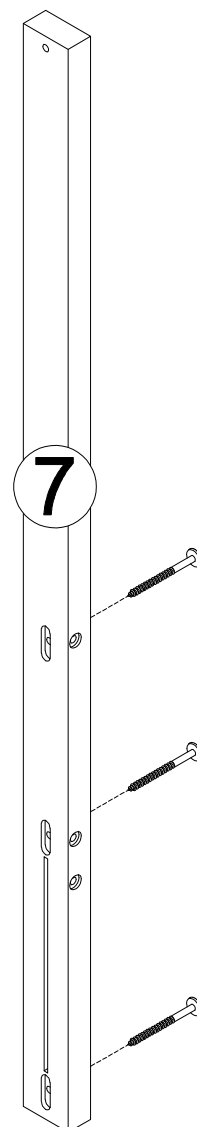
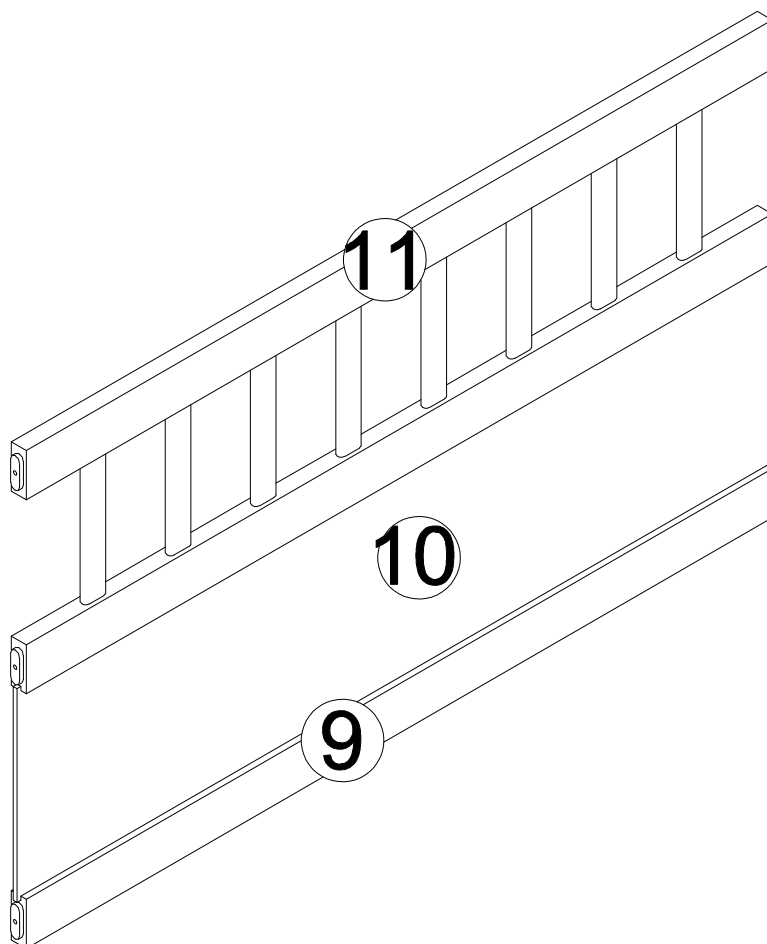
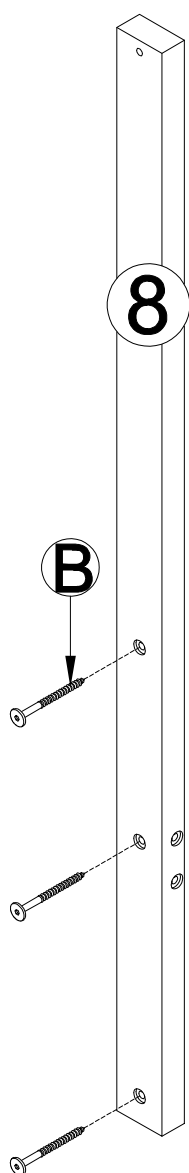
-Using hardward #B to Connect 7,8 Legs With Wood Bar 9,Panel 10 and Frame 11

-Look at detail view for more detail

B




6pcs




STEP 3: Following below illustration:


-Using hardware #D,#E,#F,#G,#H and Dowel C to Connect 5,6 Legs With Wood Bar 17,19(x2) and Side Rail 17
-Look at detail view for more detail

F	D	C
4pcs	2pcs	2pcs
E	H	G
2pcs	5pcs	5pcs

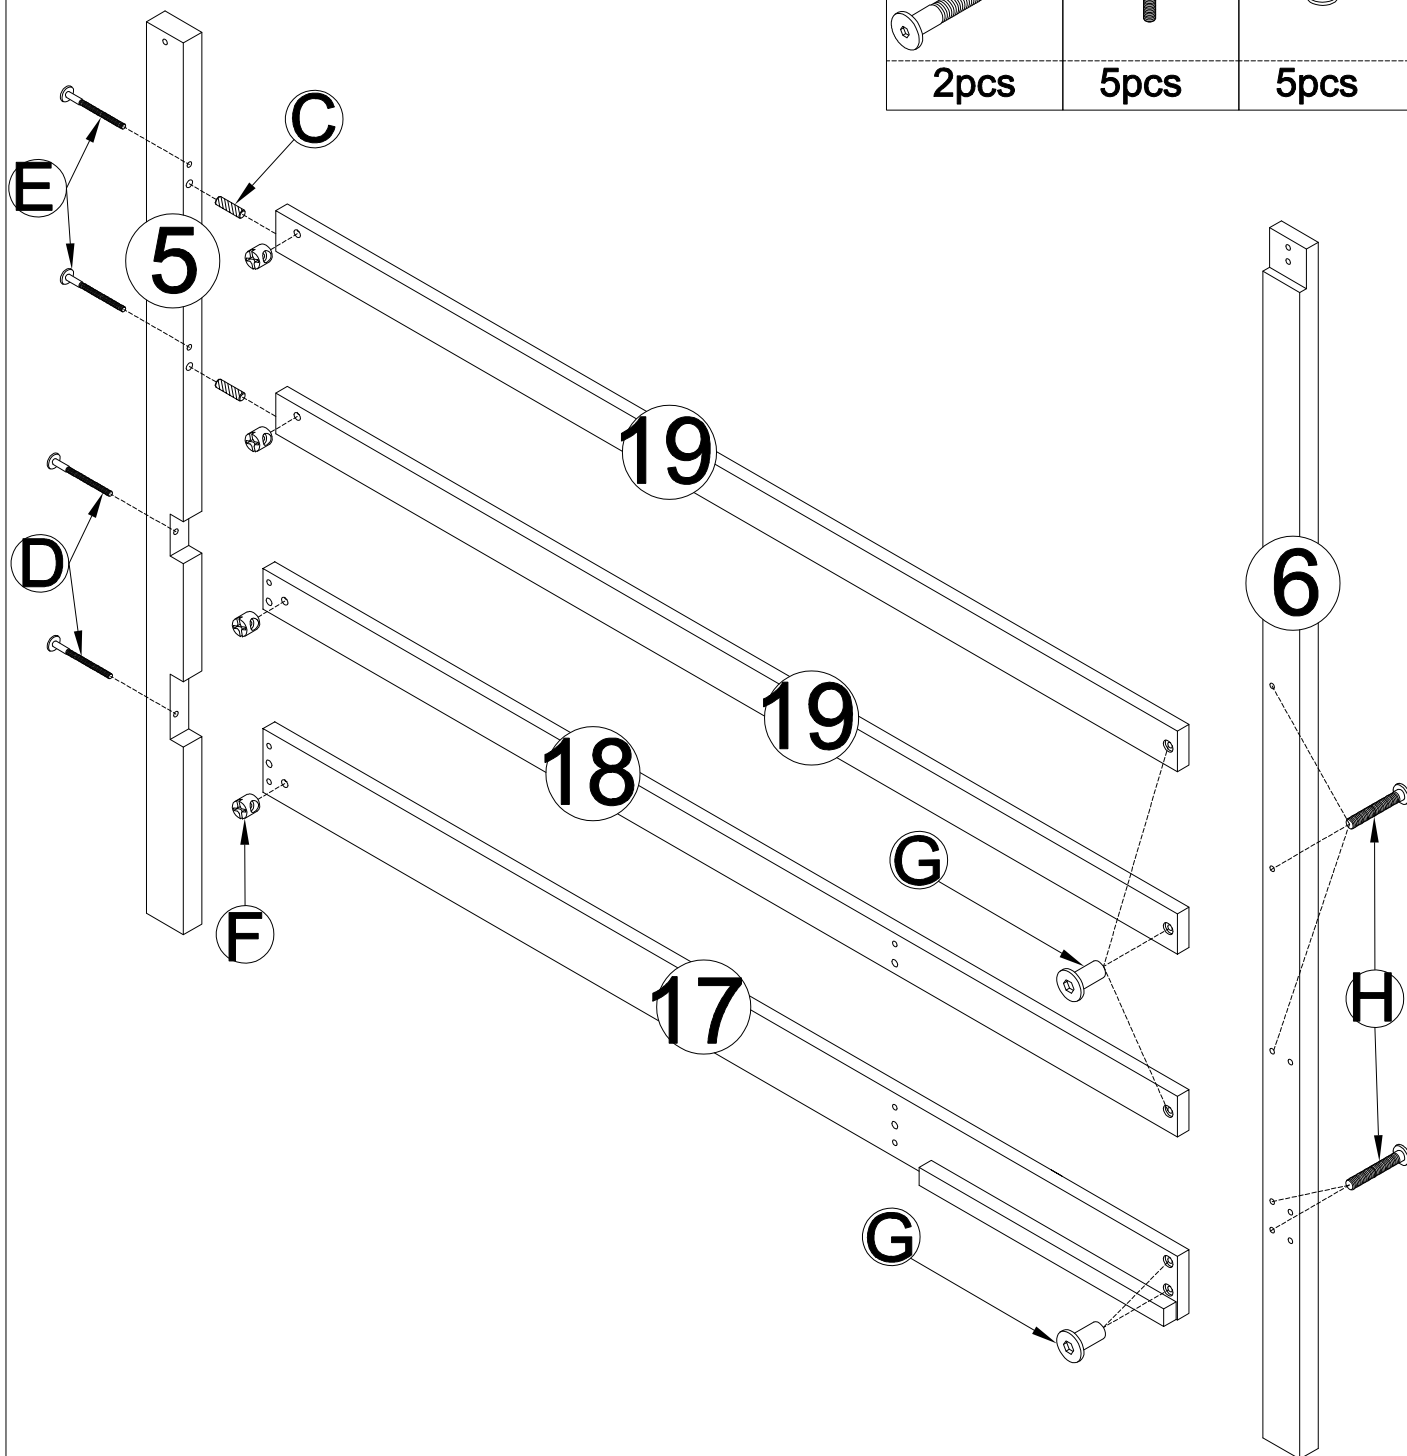

STEP 4: Following below illustration:

P	M
	
5pcs	10pcs


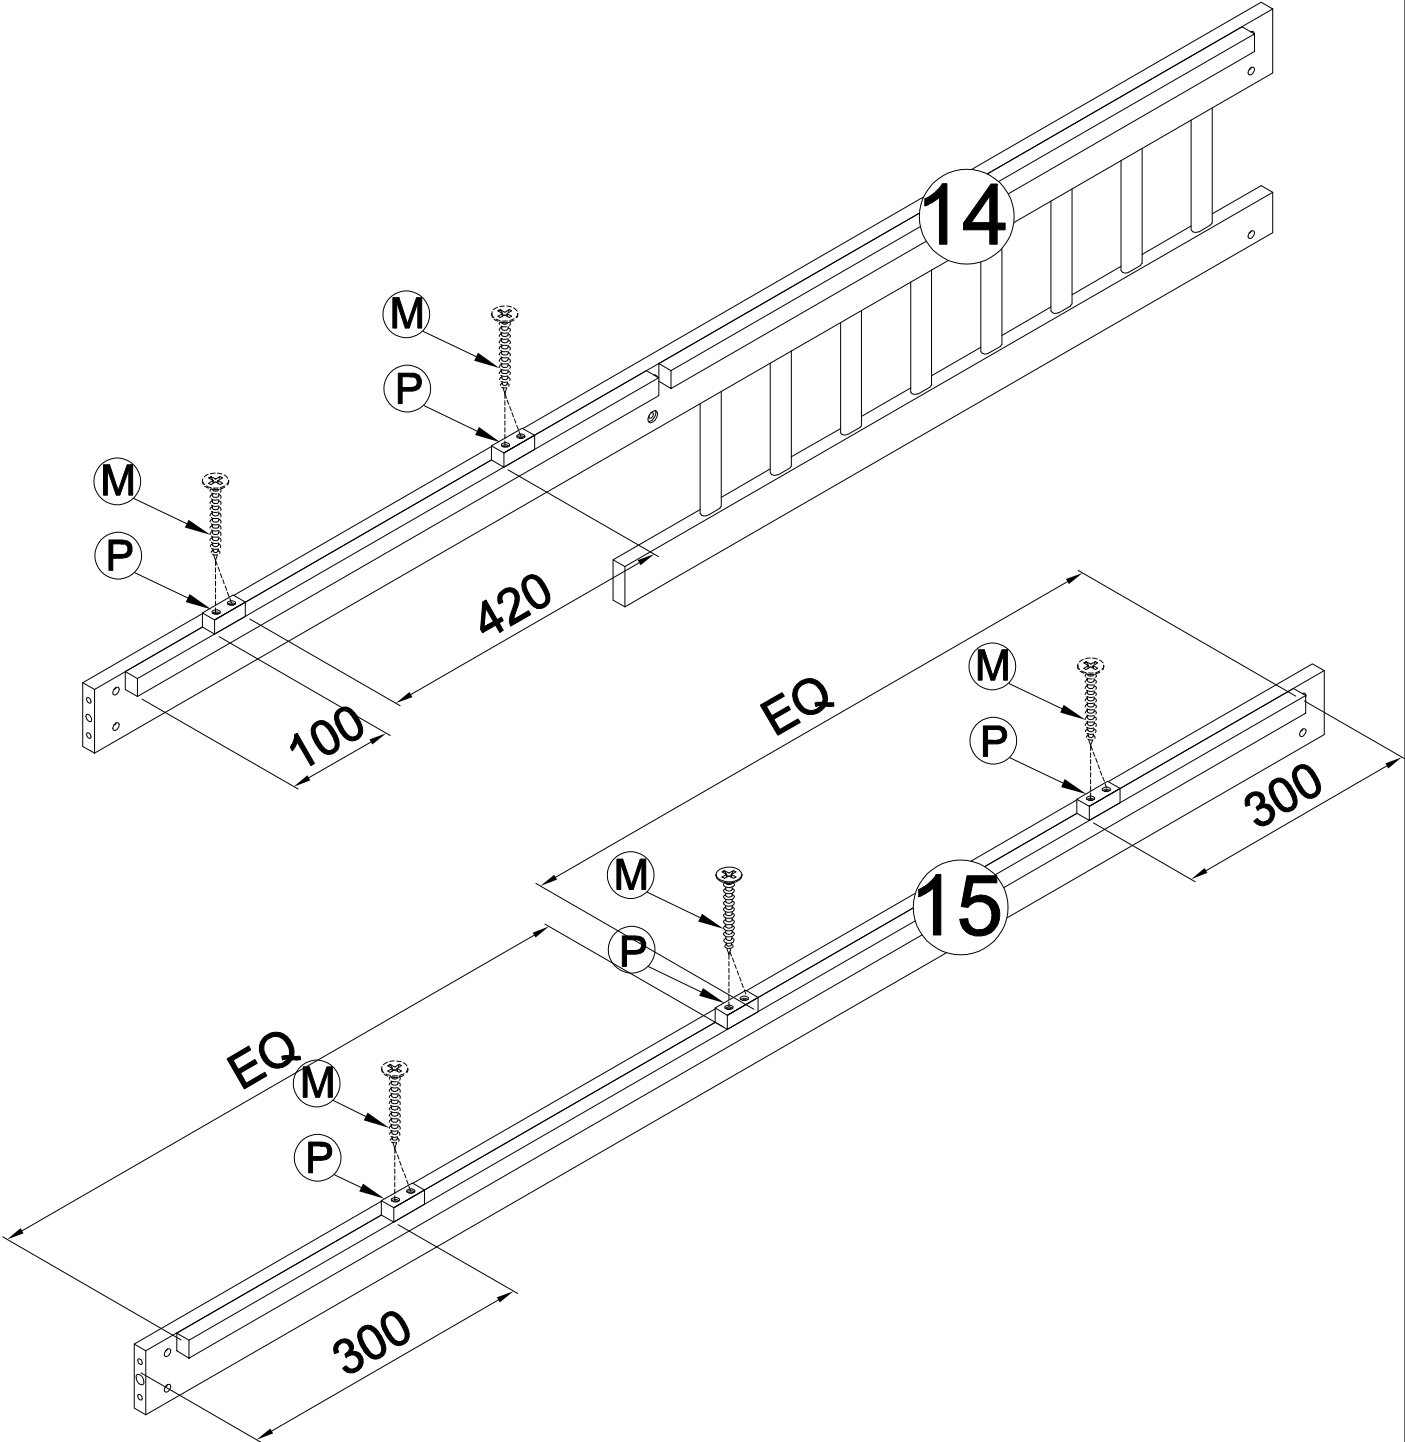



STEP 5: Following below illustration:

-Using hardware #D,#F,#K and Dowel C to Connect Frames(completed on step 1,step 3)

With Side Rail Frames 13,14

-Look at detail view for more detail


F 	D 	C 
11pcs	5pcs	7pcs
		K 
		6pcs

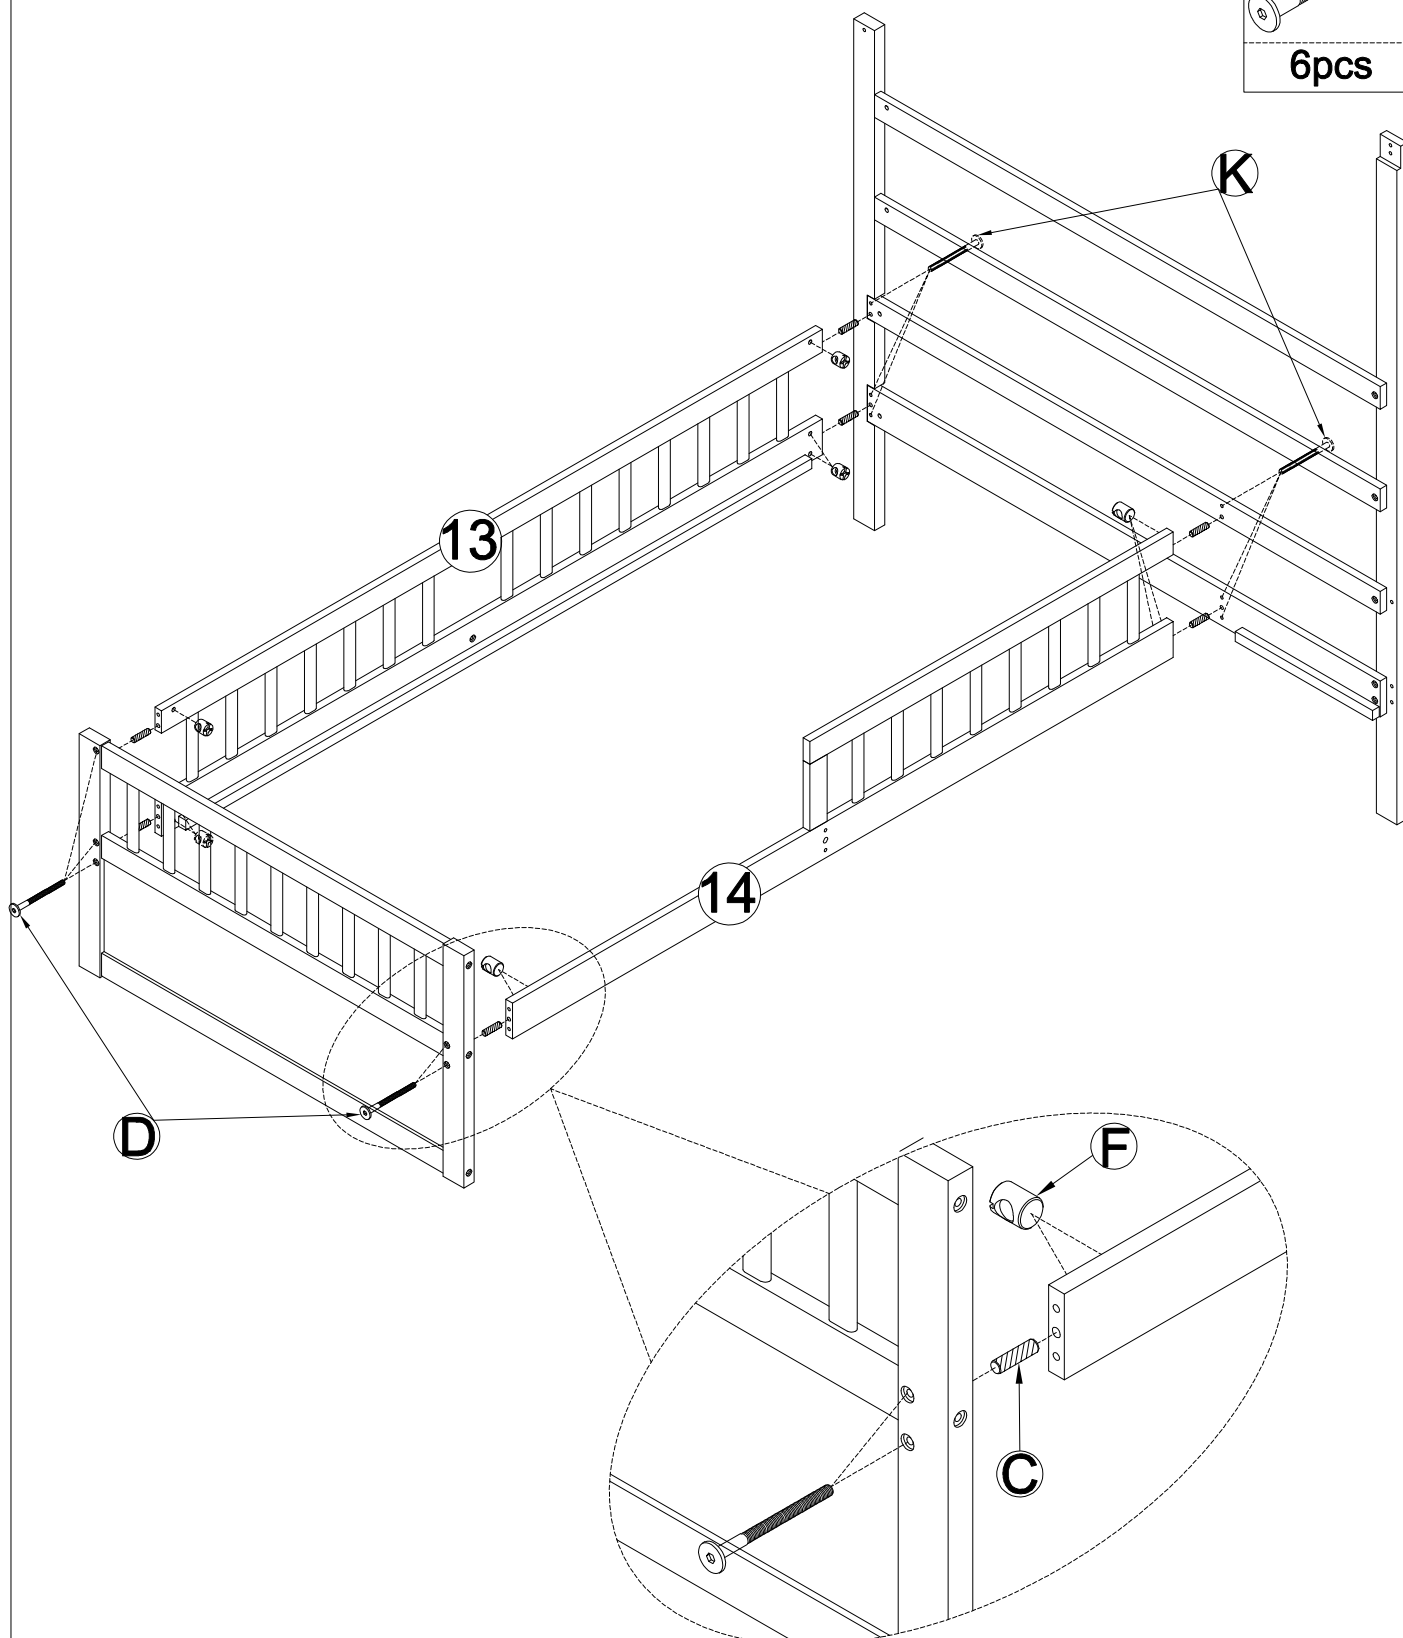


STEP 6: Following below illustration:

- Using hardware #L to Connect Frames(completed on step 5) With Leg 4
- Look at detail view for more detail

L



2pcs

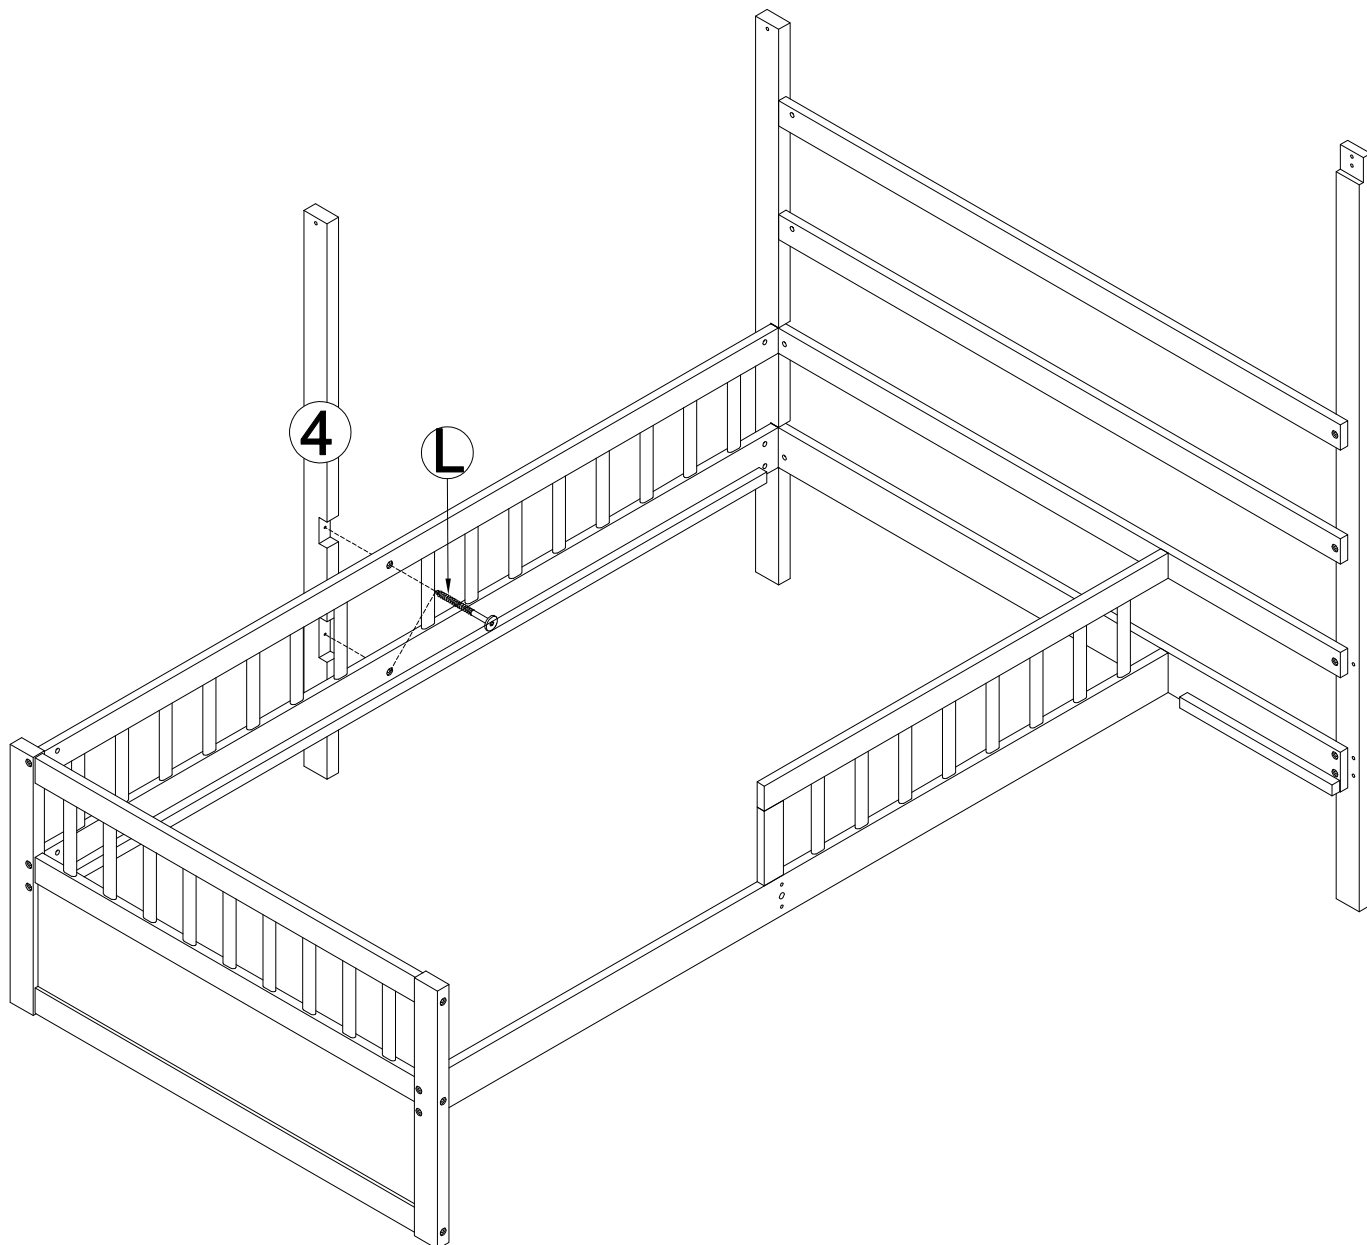


STEP 7: Following below illustration:

-Using hardware #F,#G,#H,#K and Dowel C to Connect Frames(completed on step 6)

With Side Rails 15,16

-Look at detail view for more detail

F		H		G	
2pcs		3pcs		3pcs	
		K		C	
		2pcs		1pc	

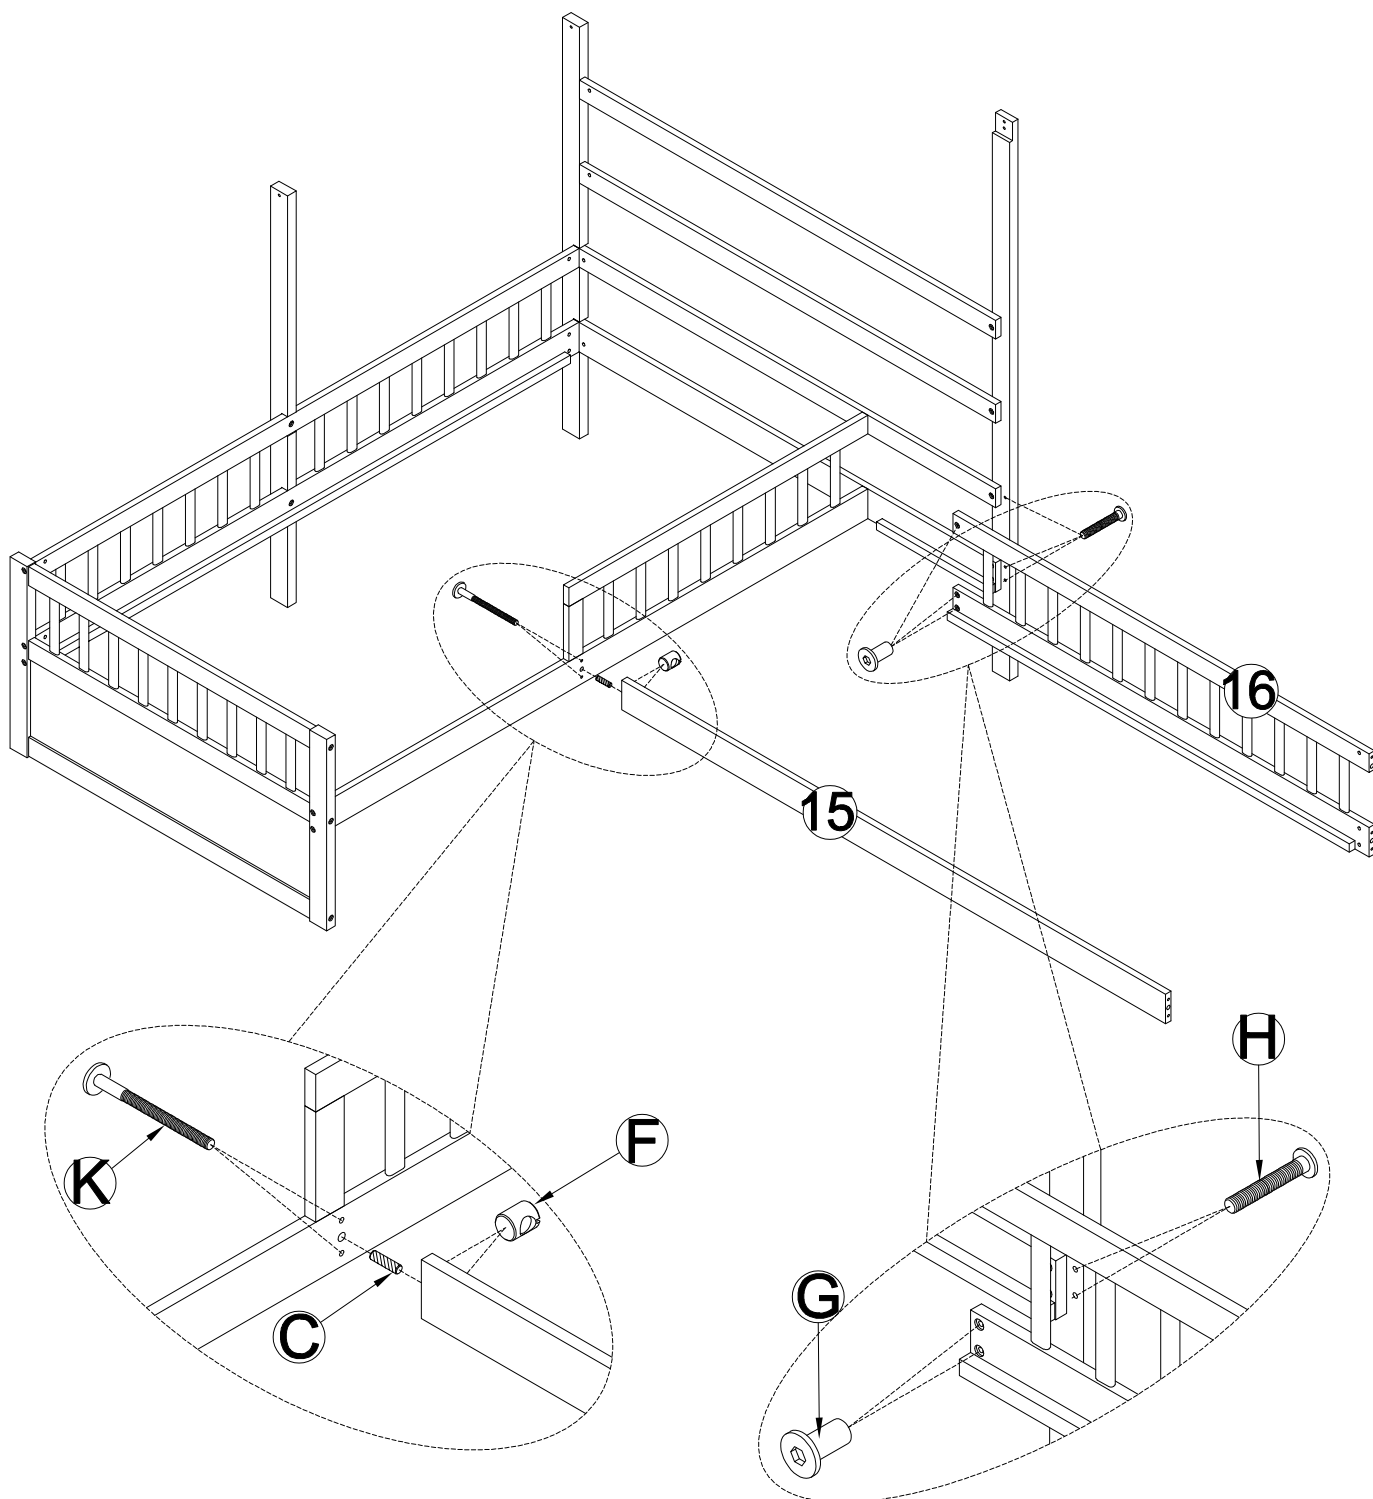



STEP 8: Following below illustration:

-Using hardware #E,#F and Dowel C to Connect Frames(completed on step 7)


With Frames(completed on step 2)

-Look at detail view for more detail


F  5pcs	C  3pcs
E  5pcs	

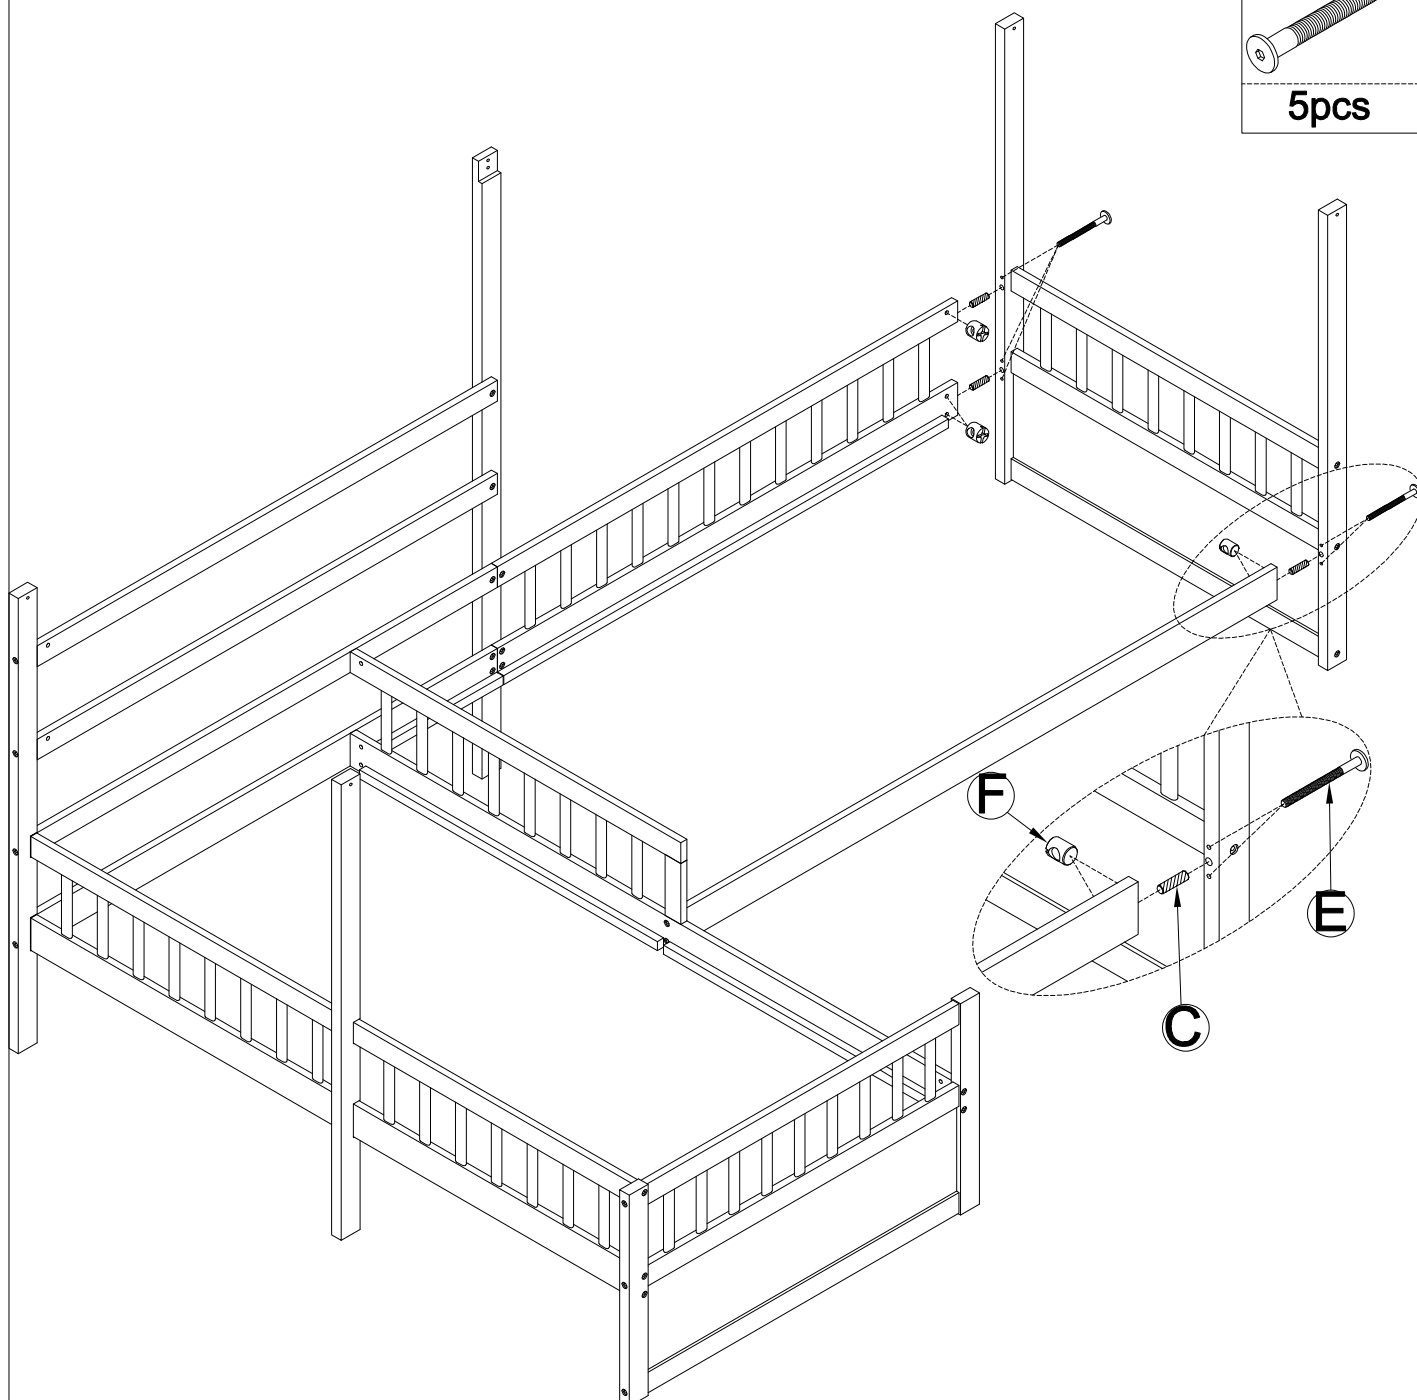

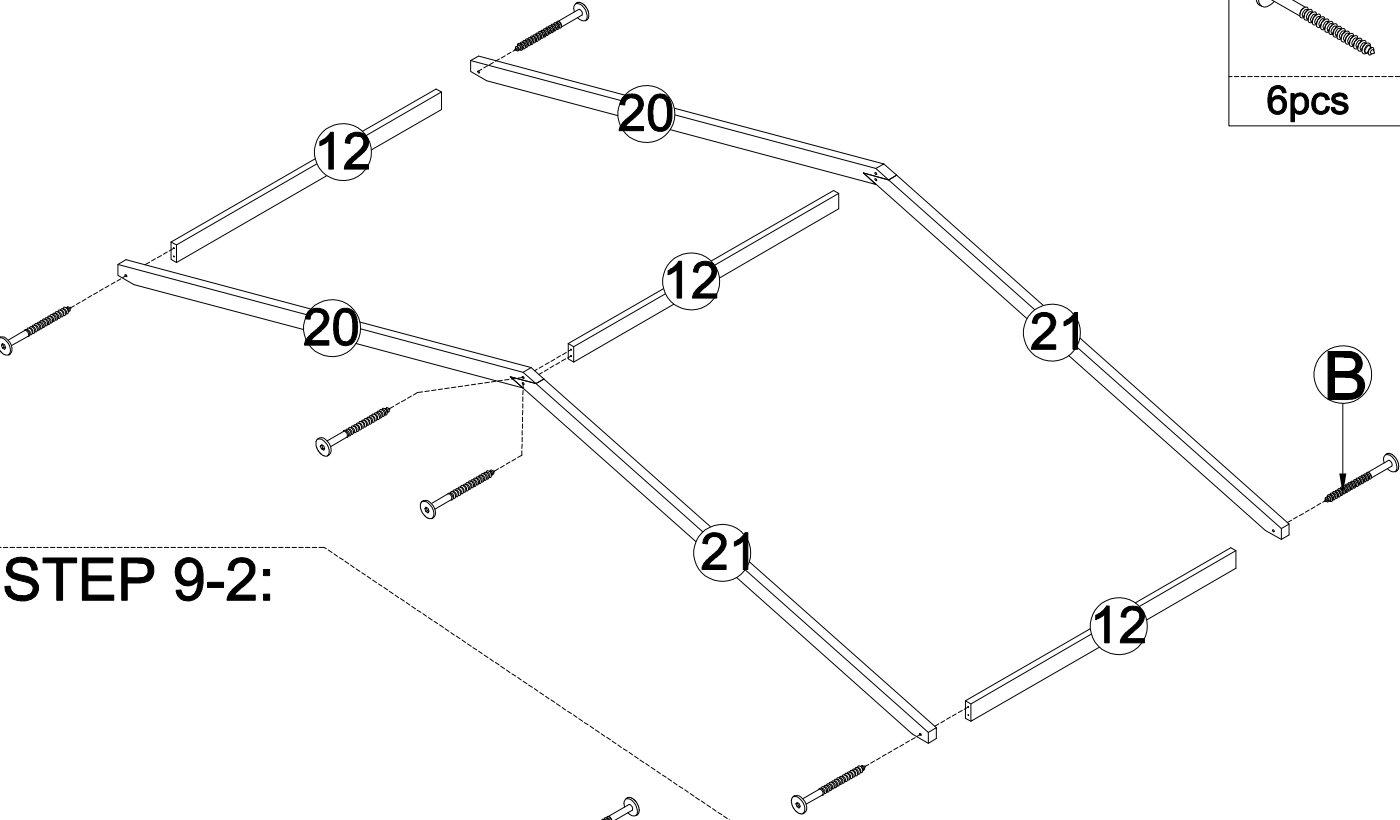STEP 9-1:



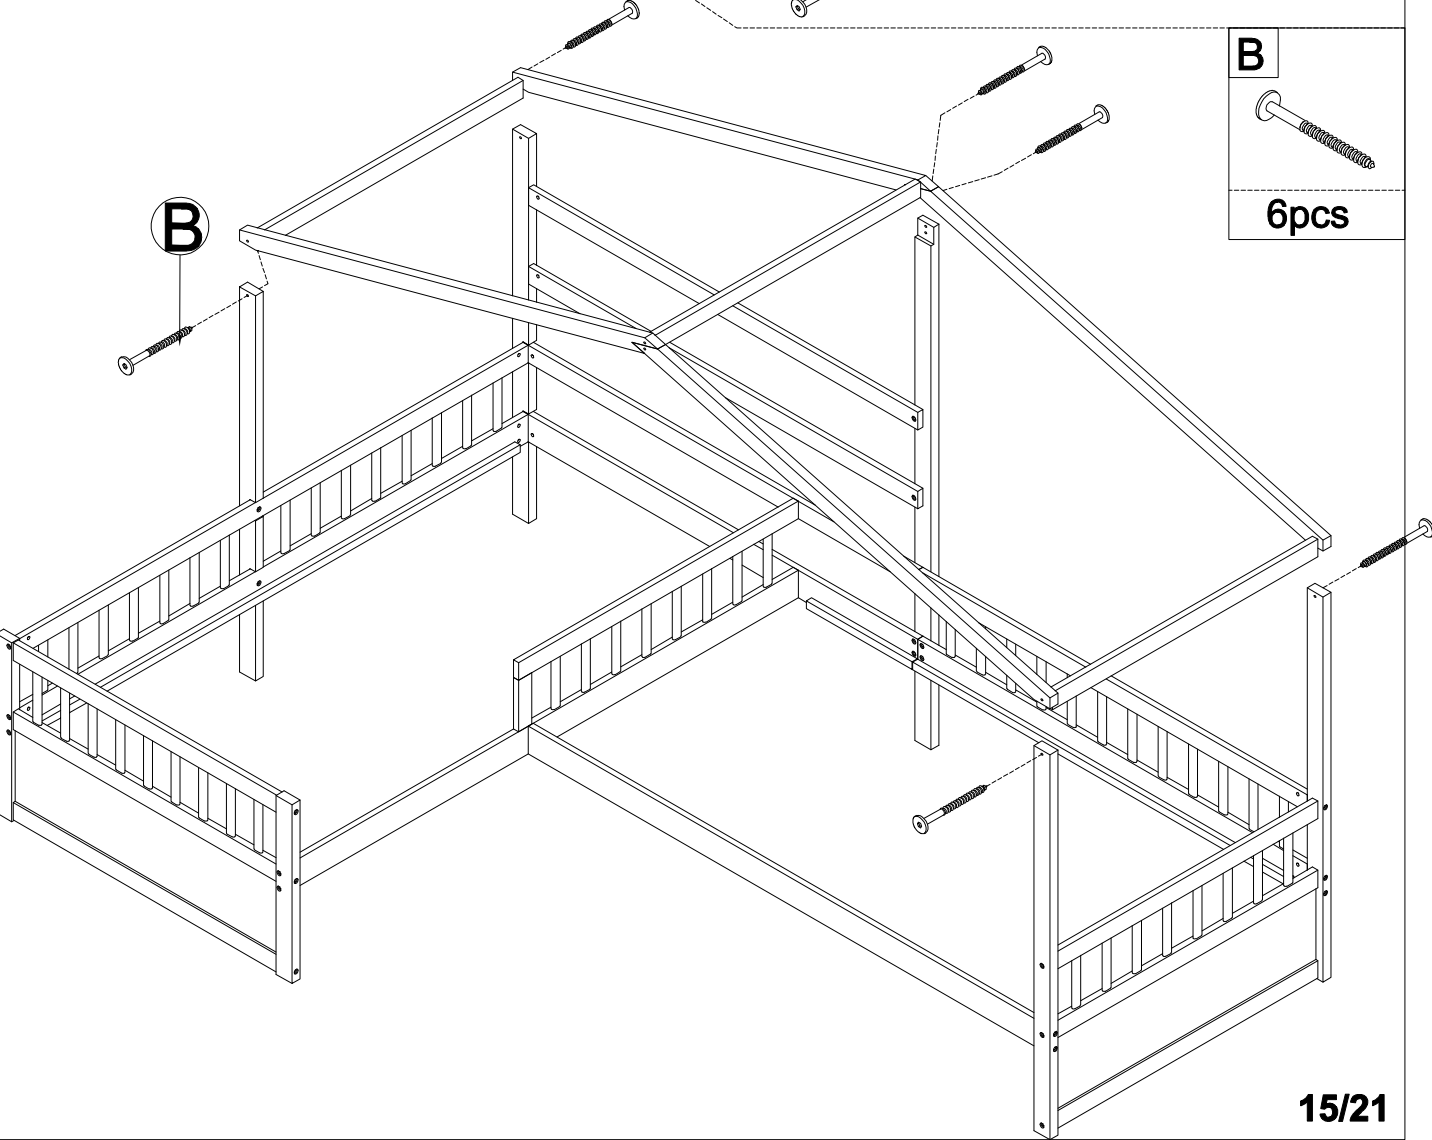STEP 9-2:





STEP 10: Following below illustration:

-Screw slats 1(x18) with Side Rail 13,14,15,16 by using hardward #M.

M



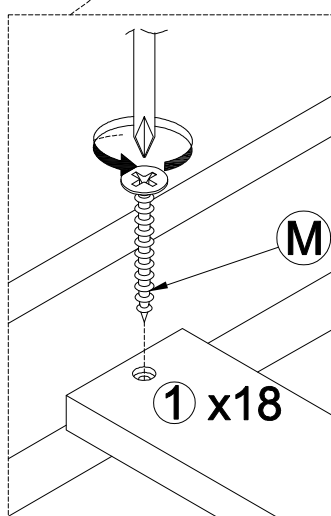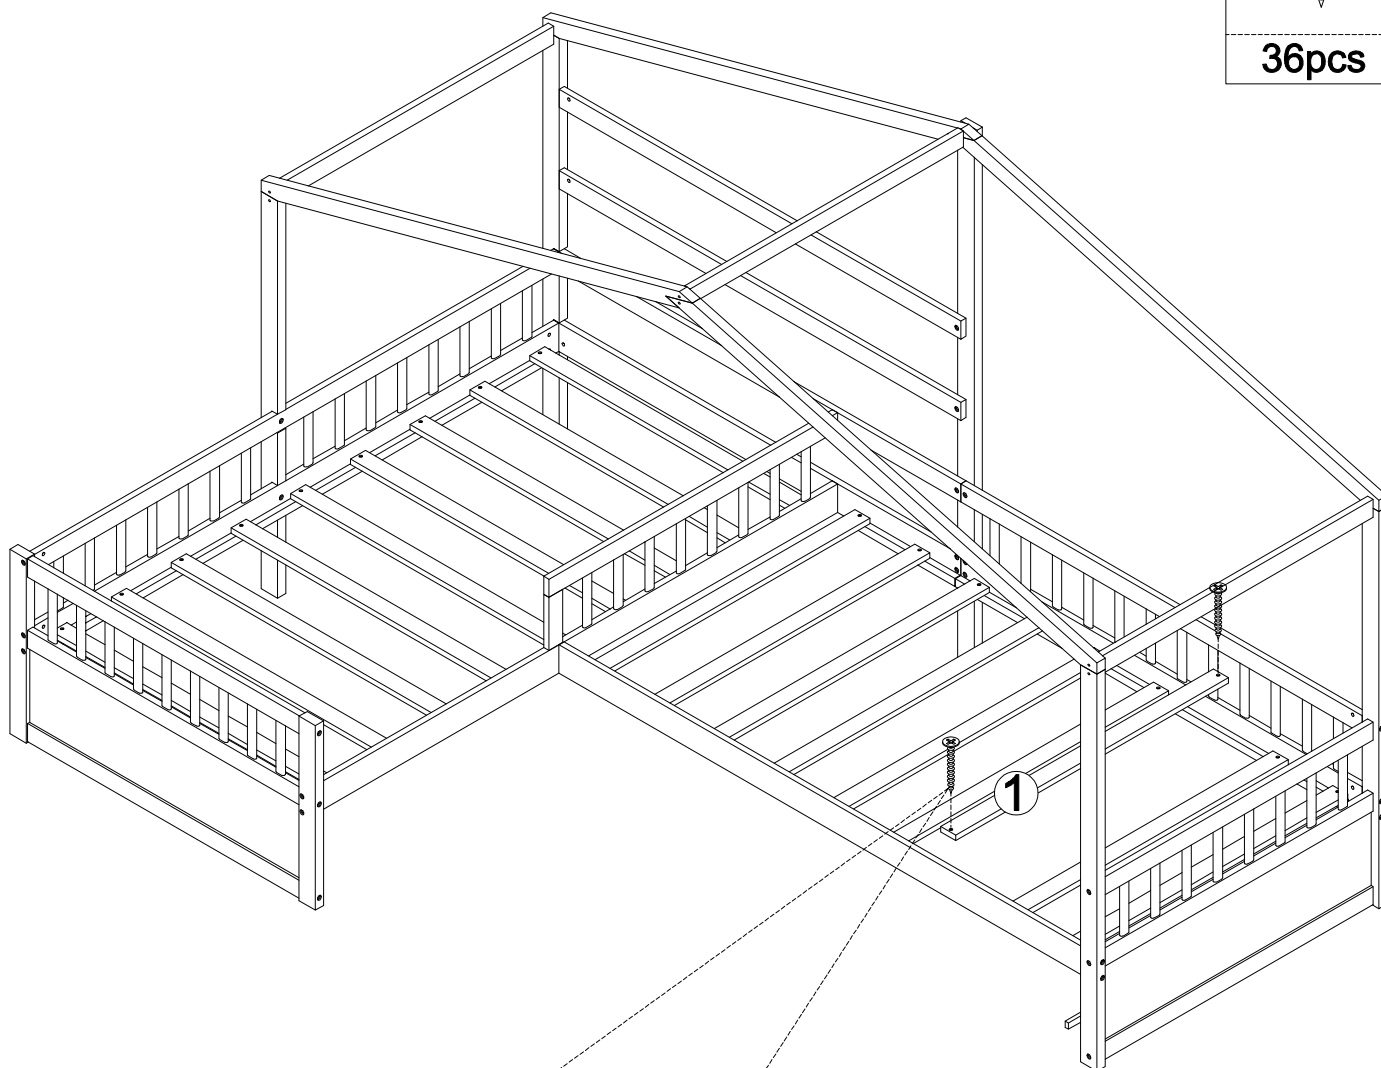36pcs




STEP 11-1:


M



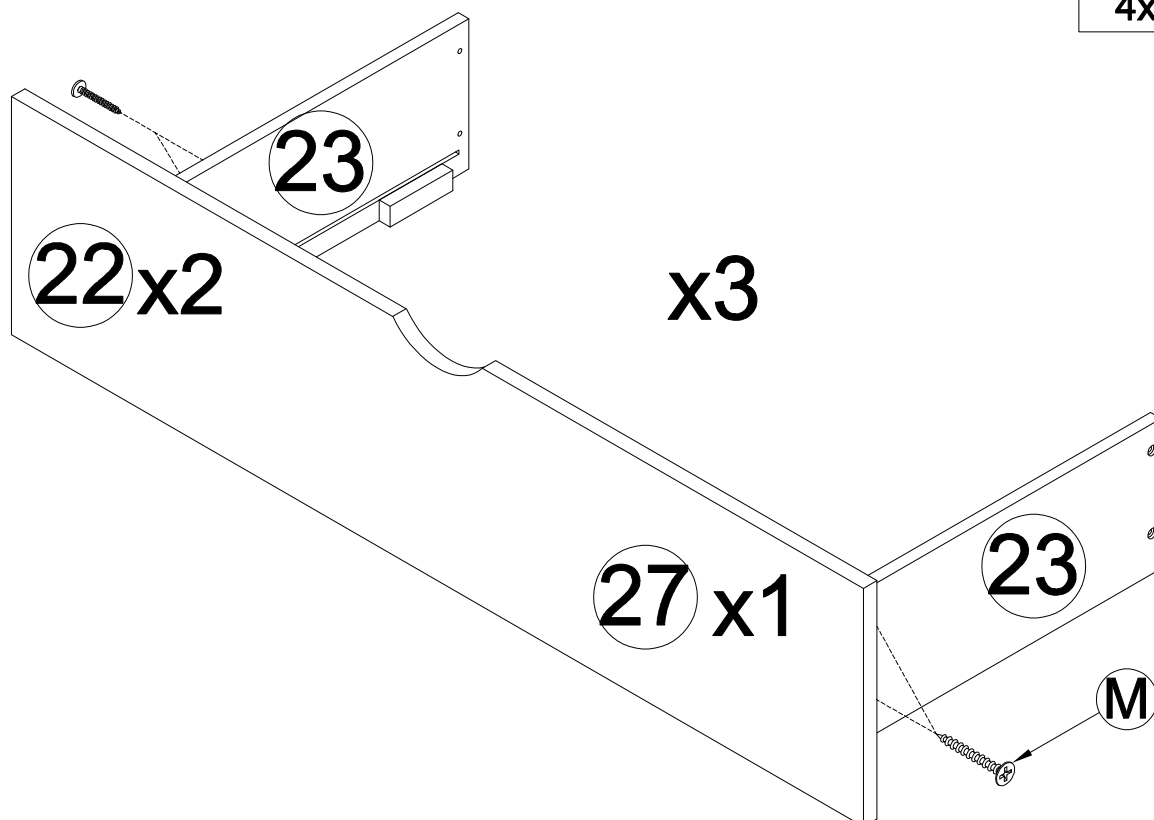
4x3pcs



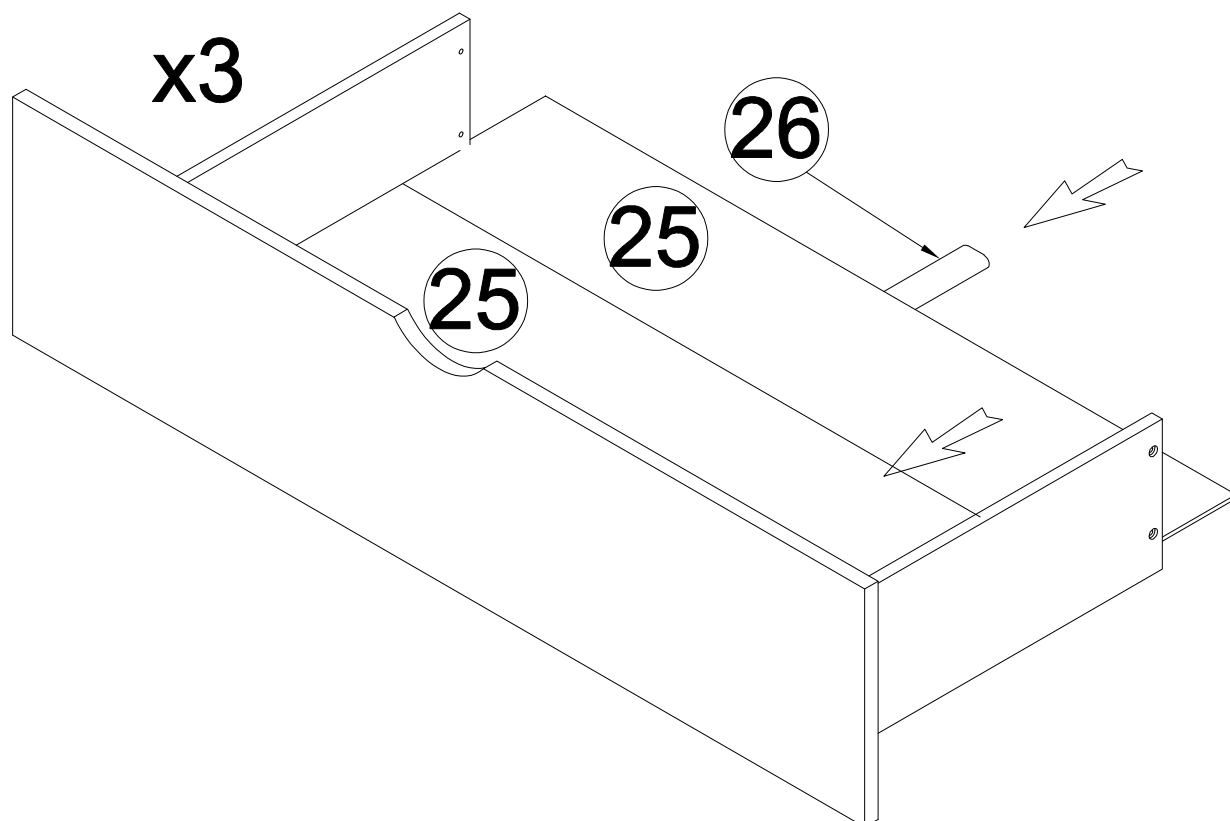
STEP 11-2:



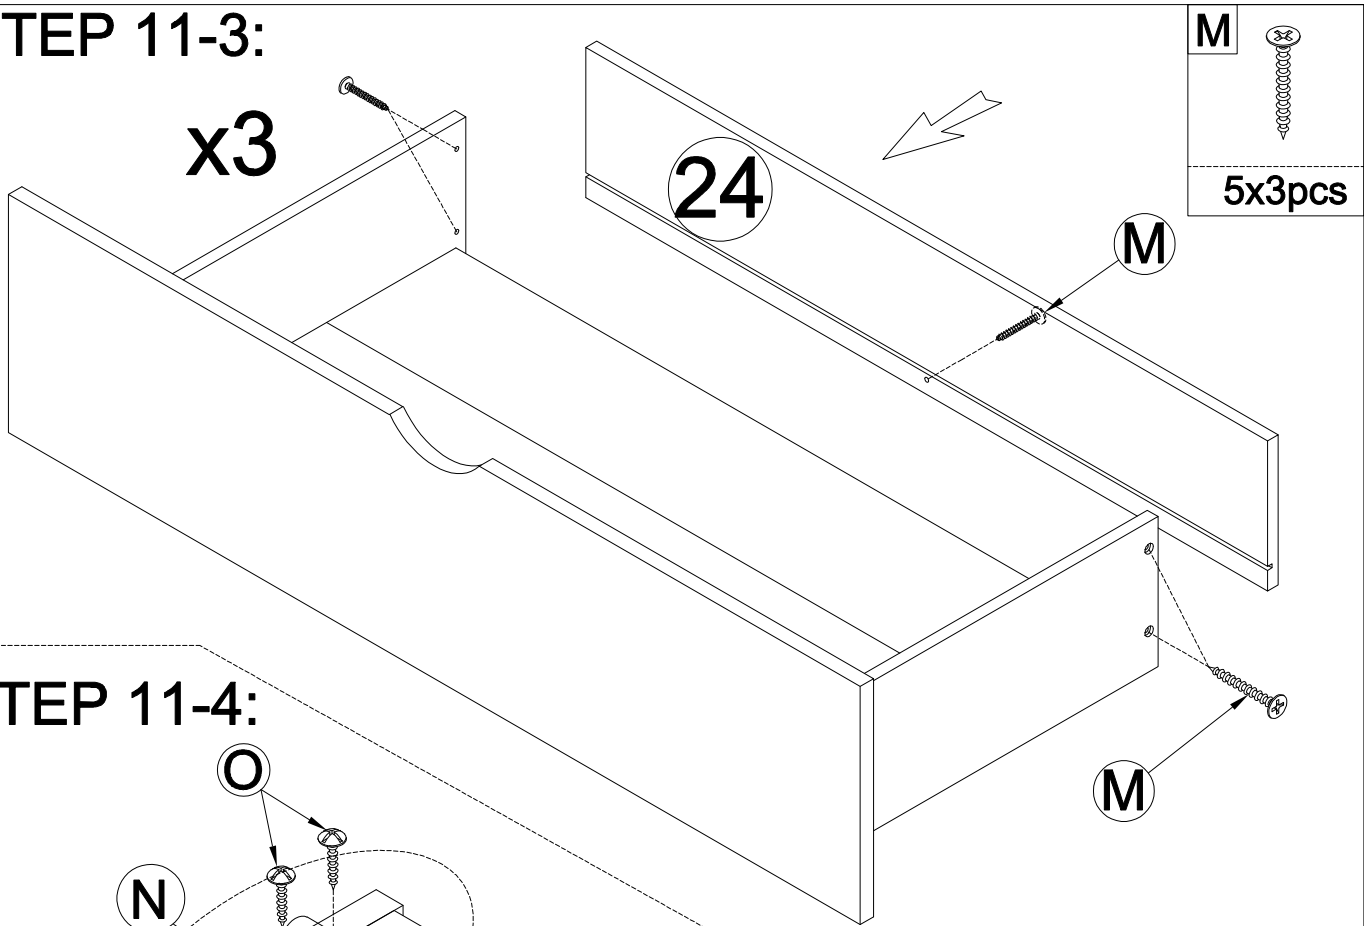
STEP 11-3:



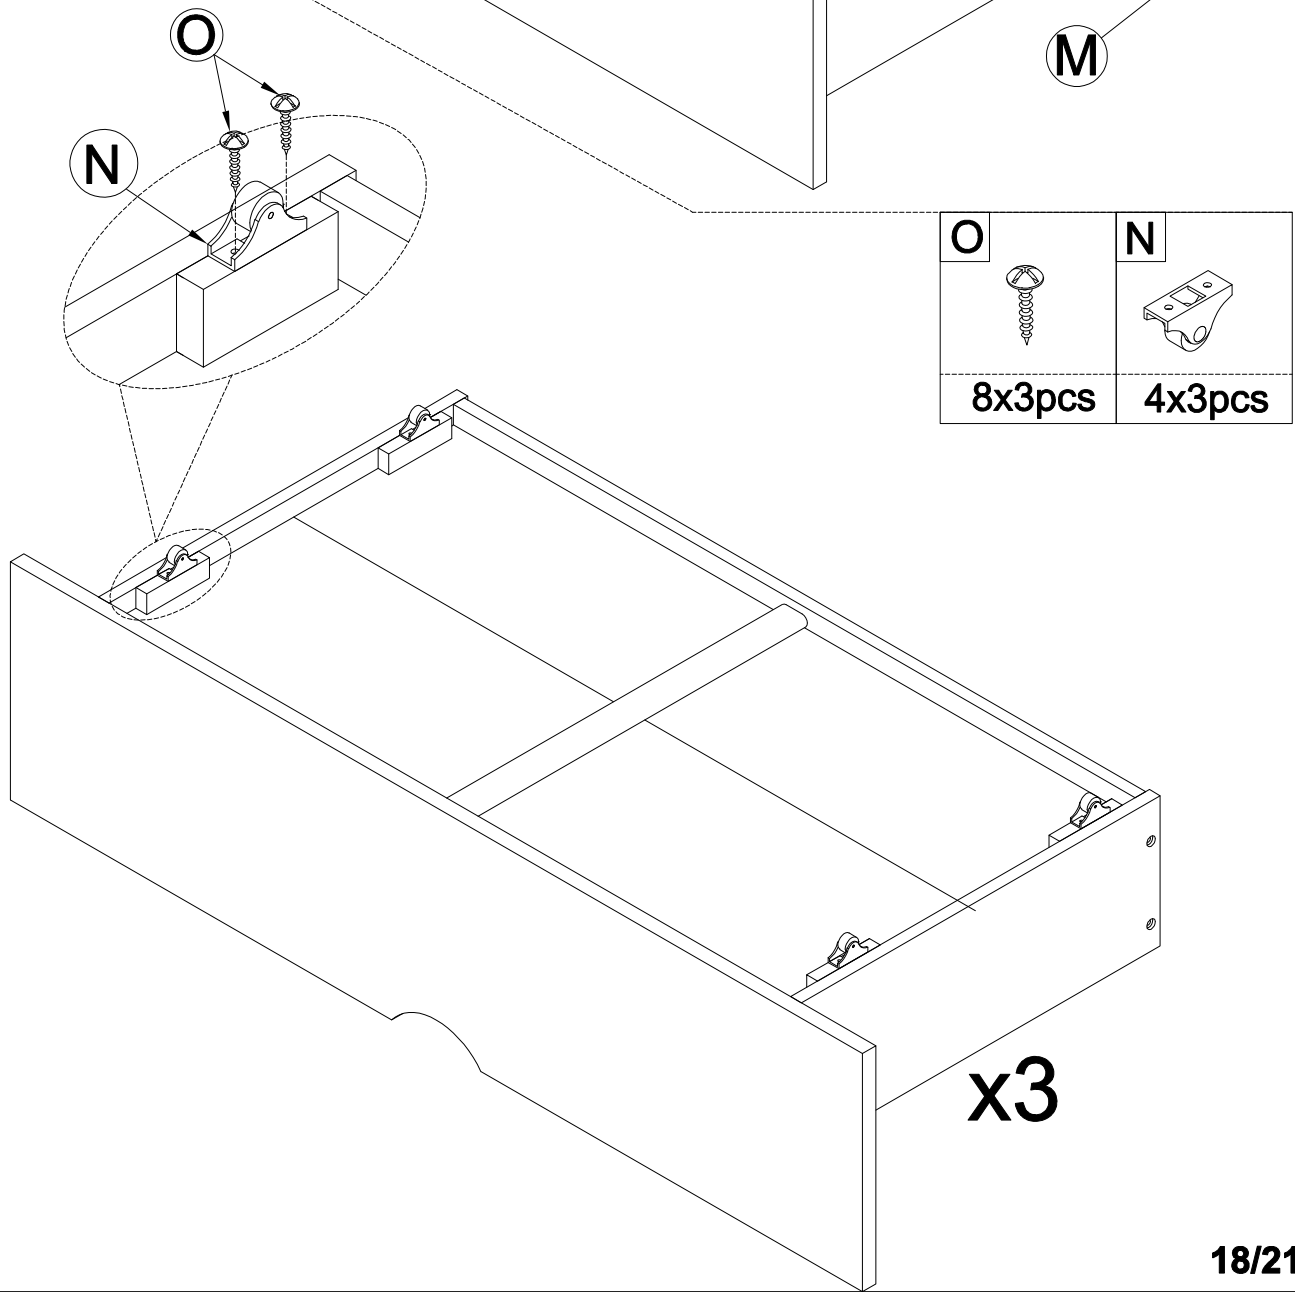
STEP 11-4:



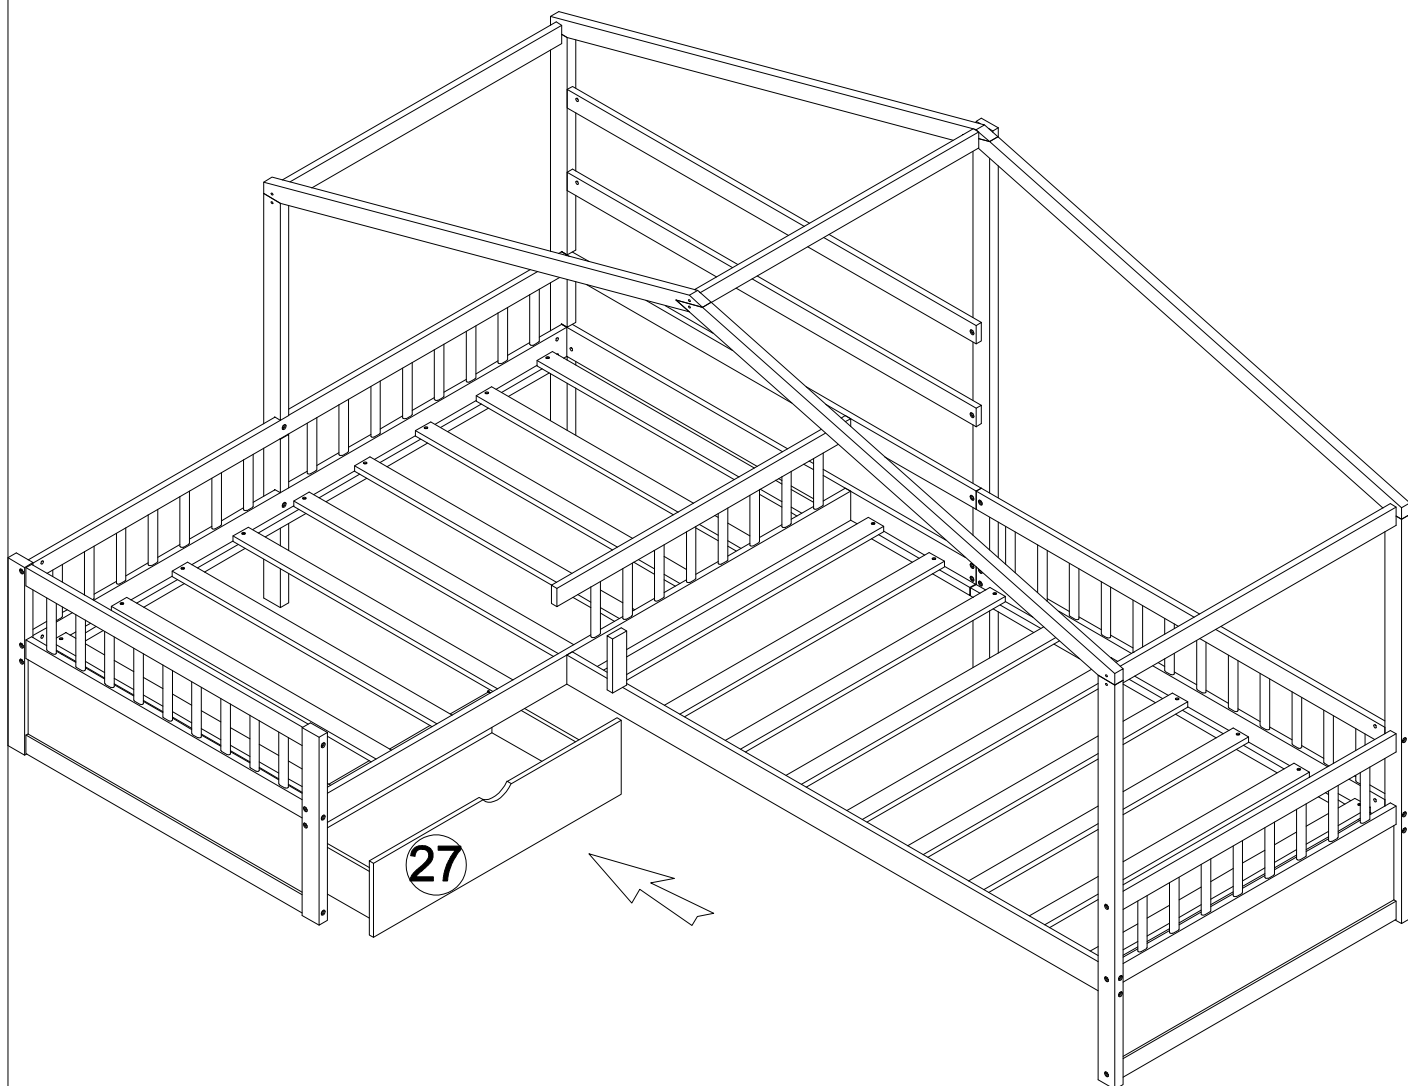STEP 12: Push 1 Drawer on right place



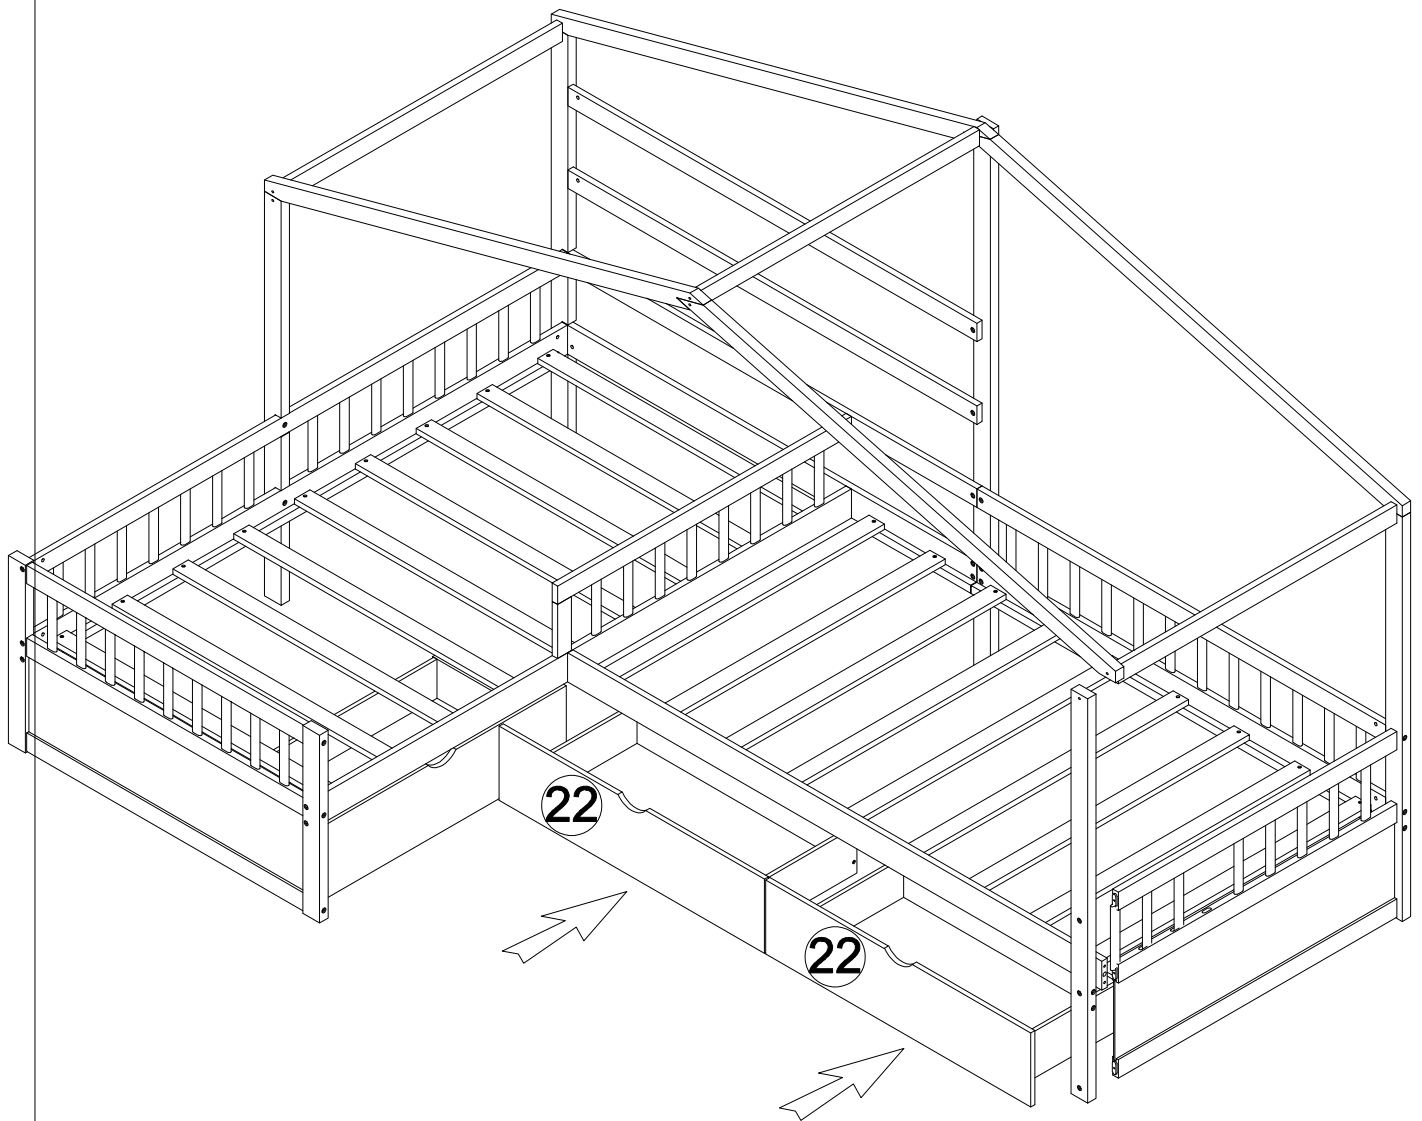STEP 13: Push 2 Drawers on right place



CONGRARULATION. YOU HAVE COMPLETED THE BED

