

REPAIR INSTRUCTIONS

1. Cut old strapping off. Save old attachments if possible.
2. Measure across frame from hole to hole; subtract two inches, and then cut strap.
3. Punch or drill a 1/8 in. hole in either end of strap. See Fig. 1.
4. Trim both sides of strap. See Fig. 1.
5. Snap button through frame on one side.
6. Heat straps in boiling water to allow strap to stretch.
7. Push button through frame on one side.
8. While holding the vinyl with one hand, snap button through other frame.
9. Vinyl will contract as it cools.
10. If frame has slots where straps are to go, you can drill a 3/16 in. hole in the center of the slots, and use a plastic snap button or duplicate old strap by trimming its edges. See Fig. 2.

Fig. 1

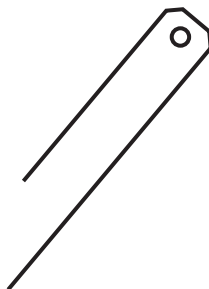


Fig. 2



Printed in China


Garden Treasures® is a registered trademark of LF, LLC. All Rights Reserved.



Garden Treasures® es una marca registrada de LF, LLC. Todos los derechos reservados

ARTÍCULO #0740175 CORREA DE 3,05 M X 4,45 CM KIT DE REPARACIÓN

MODELO #63011

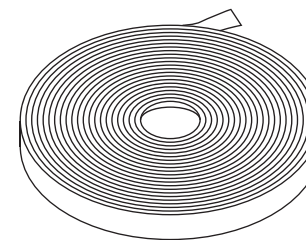

PREPARACIÓN

Revise cuidadosamente los muebles en los que planea volver a colocar correas. Intente duplicar el proceso que usó el fabricante originalmente. Es importante recordar que el vinilo 100% virgin se estira al calentarse. Se puede volver a colocar correas en la mayoría de los muebles con estructuras huecas usando el botón a presión plástico. Este botón se adapta a un orificio de 0,48 cm. En los muebles que no los tienen, taladre orificios a intervalos de 3,50 cm.

INSTRUCCIÓN DE REPARACIÓN

1. Corte las correas antiguas. De ser posible, guarde los accesorios antiguos.
2. Mida la estructura a lo largo, de orificio a orificio, reste 5,08 cm y luego corte la correa.
3. Perfore, con un punzón o un taladro, un orificio de 0,31 cm en cada extremo de correa. Consulte la Fig. 1.
4. Recorte ambos lados de la correa. Consulte la Fig. 1.
5. Cierre a presión el botón a través del orificio de cada extremo de la correa.
6. Caliente las correas en agua hirviendo para que se estiren.
7. Presione el botón hasta que pase por la estructura en un lado.
8. Sostenga el vinilo con una mano mientras cierra a presión el botón a través la otra estructura.
9. El vinilo se contraerá a medida que se enfría.
10. Si la estructura tiene ranuras en las que deben ir las correas, puede taladrar un orificio de 0,48 cm en el centro de las ranuras y usar un botón a presión plástico o duplicar la correa antigua recortando sus bordes. Consulte la Fig. 2.

Fig. 1

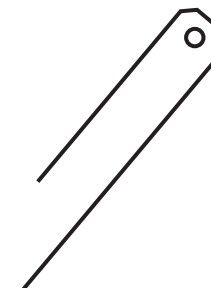


Fig. 2



Impreso en China


Garden Treasures® es una marca registrada de LF, LLC. Todos los derechos reservados.





Garden Treasures® is a registered trademark of LF, LLC. All Rights Reserved.

ITEM #0740175
10 FT. x 1.75 IN. STRAP
REPAIR KIT
MODEL #63011

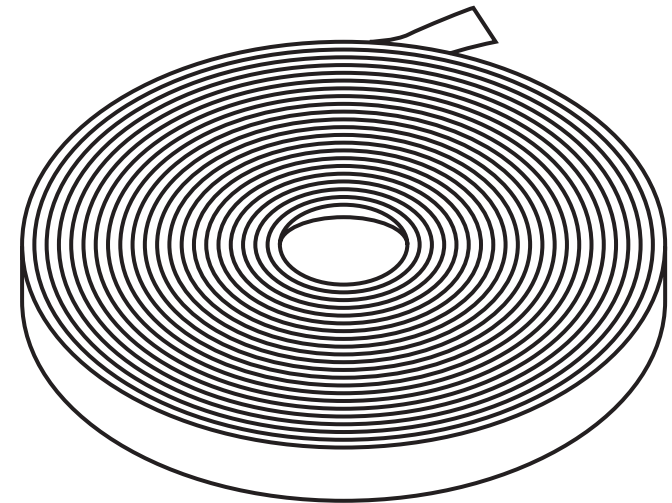

PREPARATION

Look carefully at the furniture that you are about to restrap. Try to duplicate the process the manufacturer originally used. It is important to remember that 100% virgin vinyl will stretch when heated. Most hollow frame furniture can be restrapped by using the plastic snap button. This button fits a 3/16 in. hole. If the furniture does not have holes, drill holes at 1 3/8-in intervals.