


INSTRUCTION GUIDE

RETRO MASTER FLASH

Oatey


- 1** Trim the opening of the Retro Master Flash roof flashing to meet your pipe diameter, as necessary.

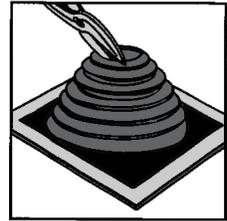


- 2** Wrap the Retro Master Flash roof flashing around the pipe. Install all snap rivets to seal the flange.




- 3** Press the Retro Master Flash down, bending it to conform to the roof profile or roof irregularities. A blunt tool will help press the flashing into tight roof angles.

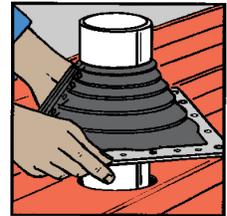


- 4** Apply a non-petroleum based sealant between the base and the roof.

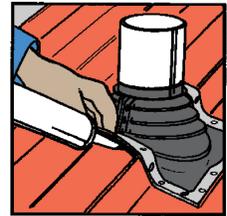

- 5** Use fasteners to complete the sealing. For UPC installation, fastener spacing may not exceed 1-1/2 in. (38 mm).

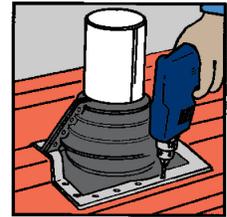

- 6** Install the supplied cable tie at the uppermost part of the Retro Master Flash roof flashing and apply sealant to any gaps.

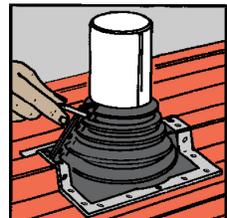

©2022 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found www.Oatey.com.