

Pictorial Guide for Shower Room SF-3636 Front Frame Installation

This is a picture guide to go along with the video instruction

In this presentation you will learn how to install the SF- 3636 Front Frame

- **Components Page 3-4**
- **Tracks Characters Page 6-8**
- **Track to Panel Installation Page 9-26**
- **2nd Track to Panel Installation Page 27-28**
- **Assembled Front Frame Page 29**

Please call 317-802-9363 (Toll-free 1-877-358-7458 if you have any questions. Thank you for purchasing our product, and good luck!

SF-3636 Front Frame Components:

1. Left and right glass panels with stiles attached
2. Top and bottom tracks
3. 4 top and 4 bottom rollers
4. 4 panel clips and screws
5. 8 7/8" screws



Hardware details



4-panel clips



4-3/8" clip screws




8-3/8" frame mounting screws

Track Cross Sections

Top Track

Bottom Track

Top and Bottom tracks are indential
but the way they are placed

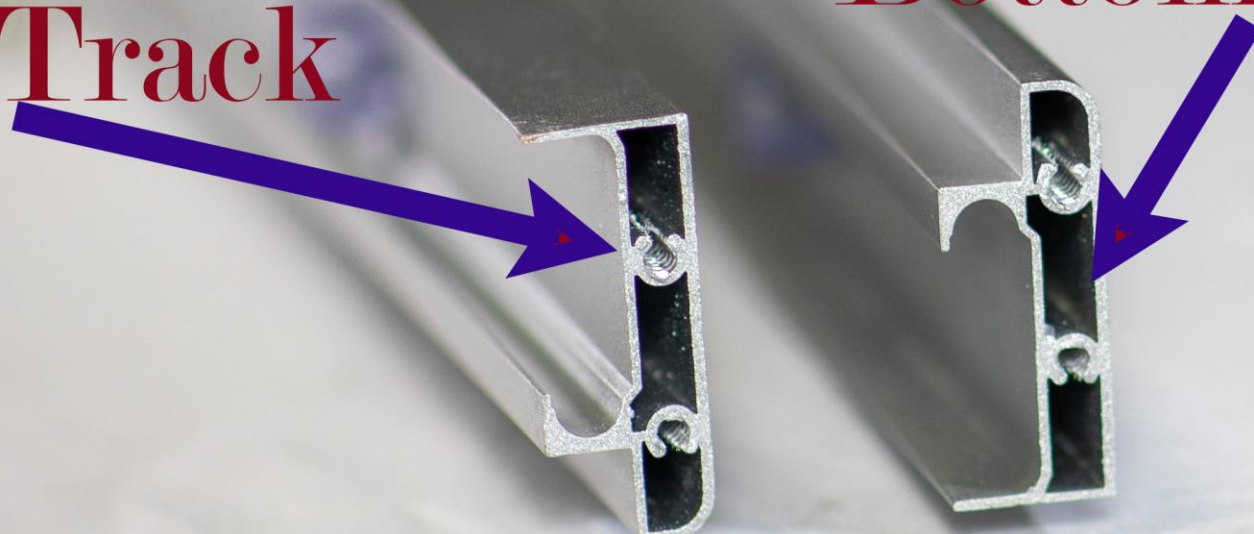

Top Track Uses Rollers with Screws



Screw Hole

Roller Groove

Use screws to adjust door height

Top Track uses Rollers with Springs

Roller Groove

Screw Holes


Springs push rollers upward





Pre-drill all screw holes in the track
with a 7/8" screw

Attach bottom track to panel stile

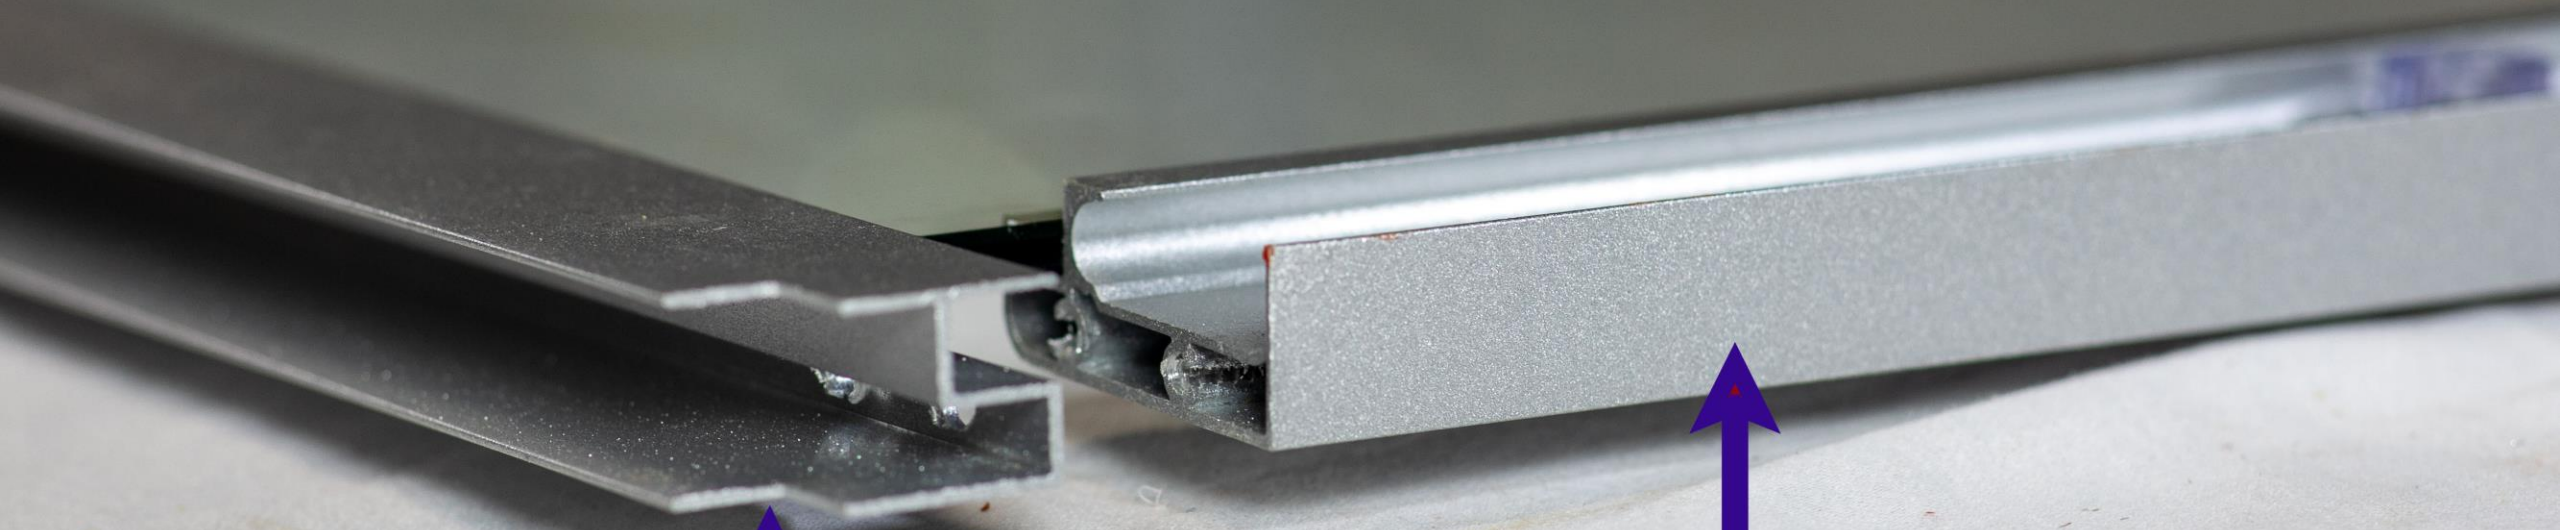

Bottom stiles has a
small corner cutout

Bottom Track

Track Ledge →

← Track


Panel Glass

← Stile


Let panel glass fit onto the ledge on the track




Use 7/8" screw and go through pre-drilled hole on the stile

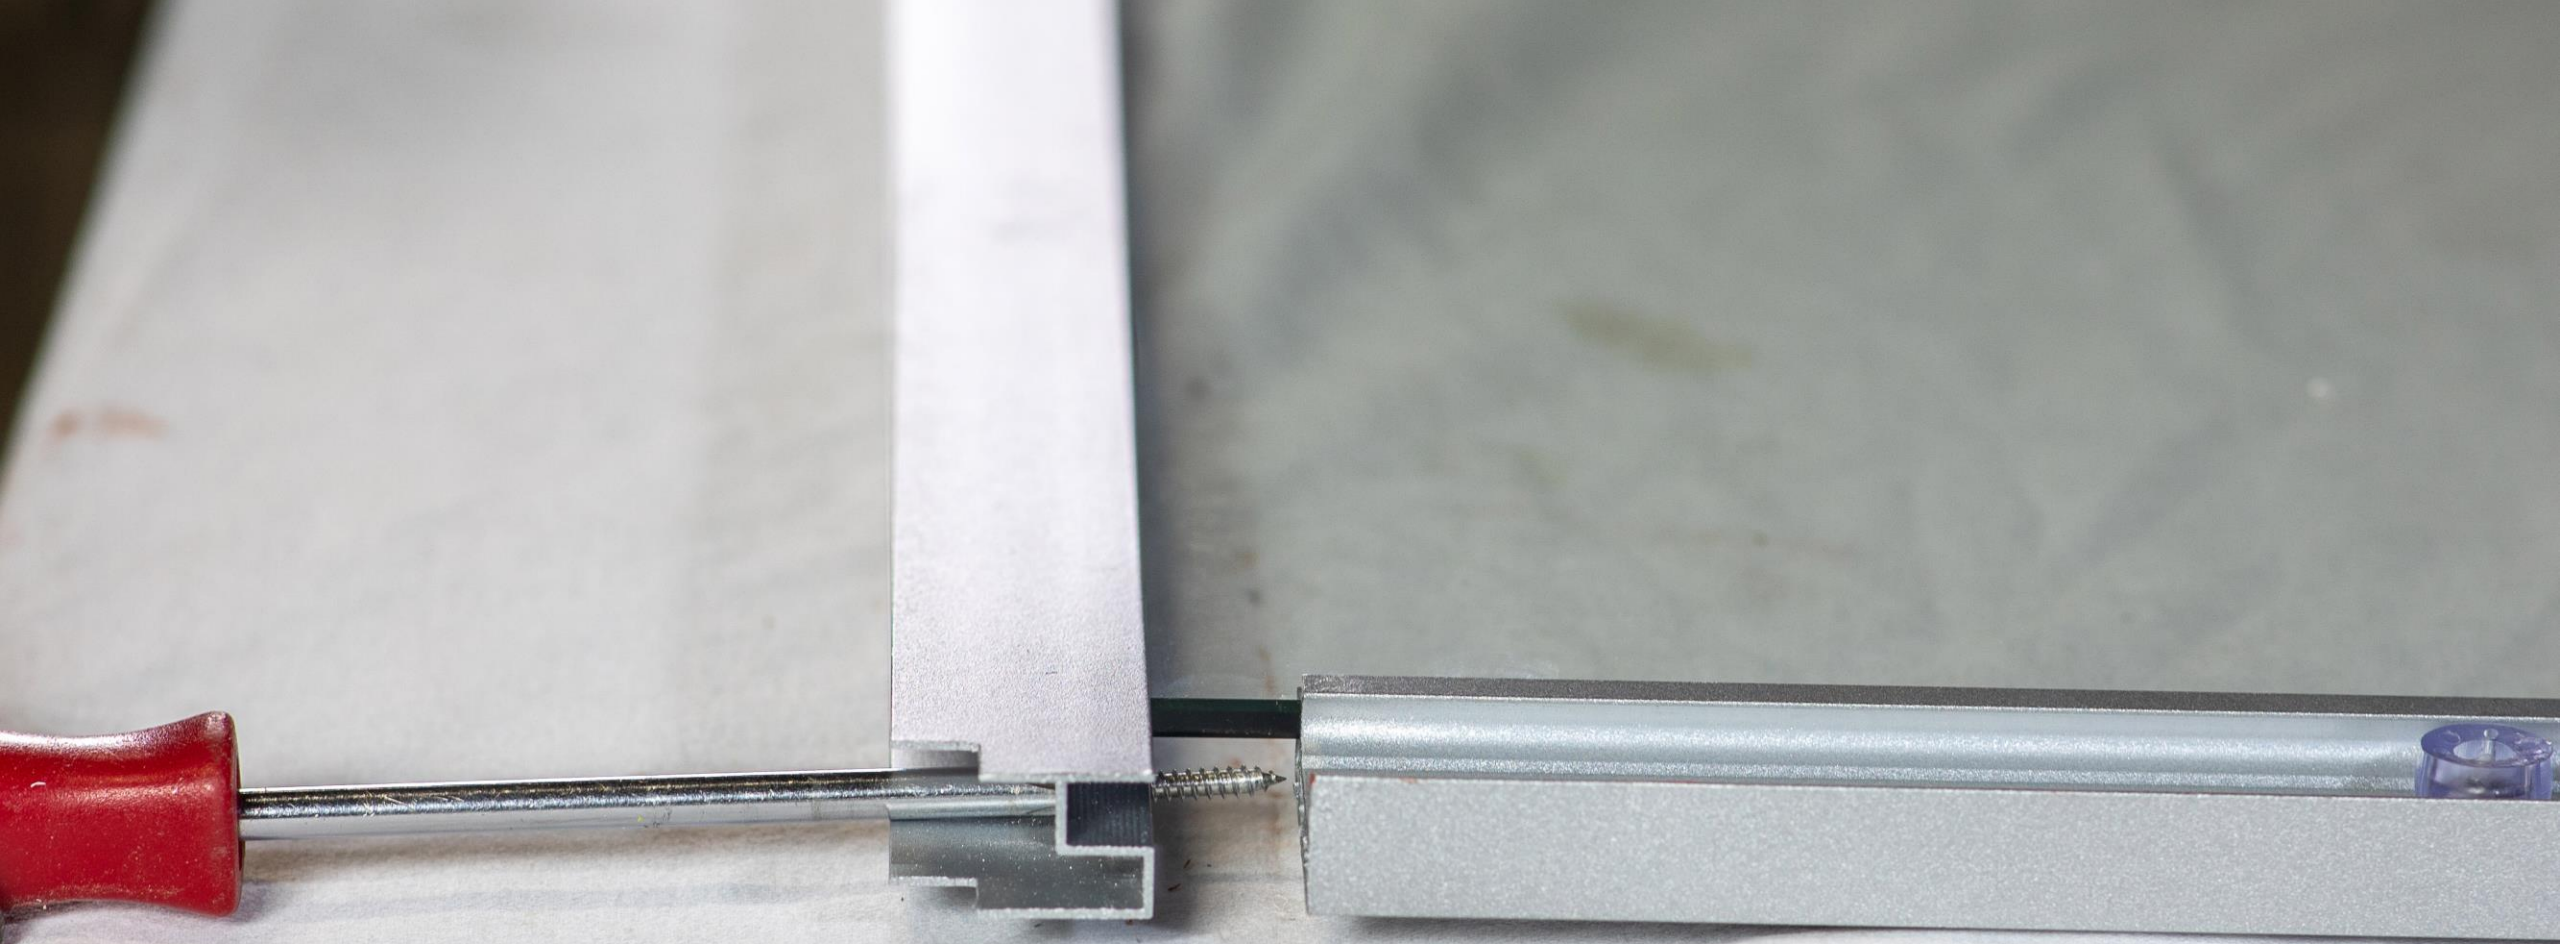

Align up the screw with a screw
hole in the track

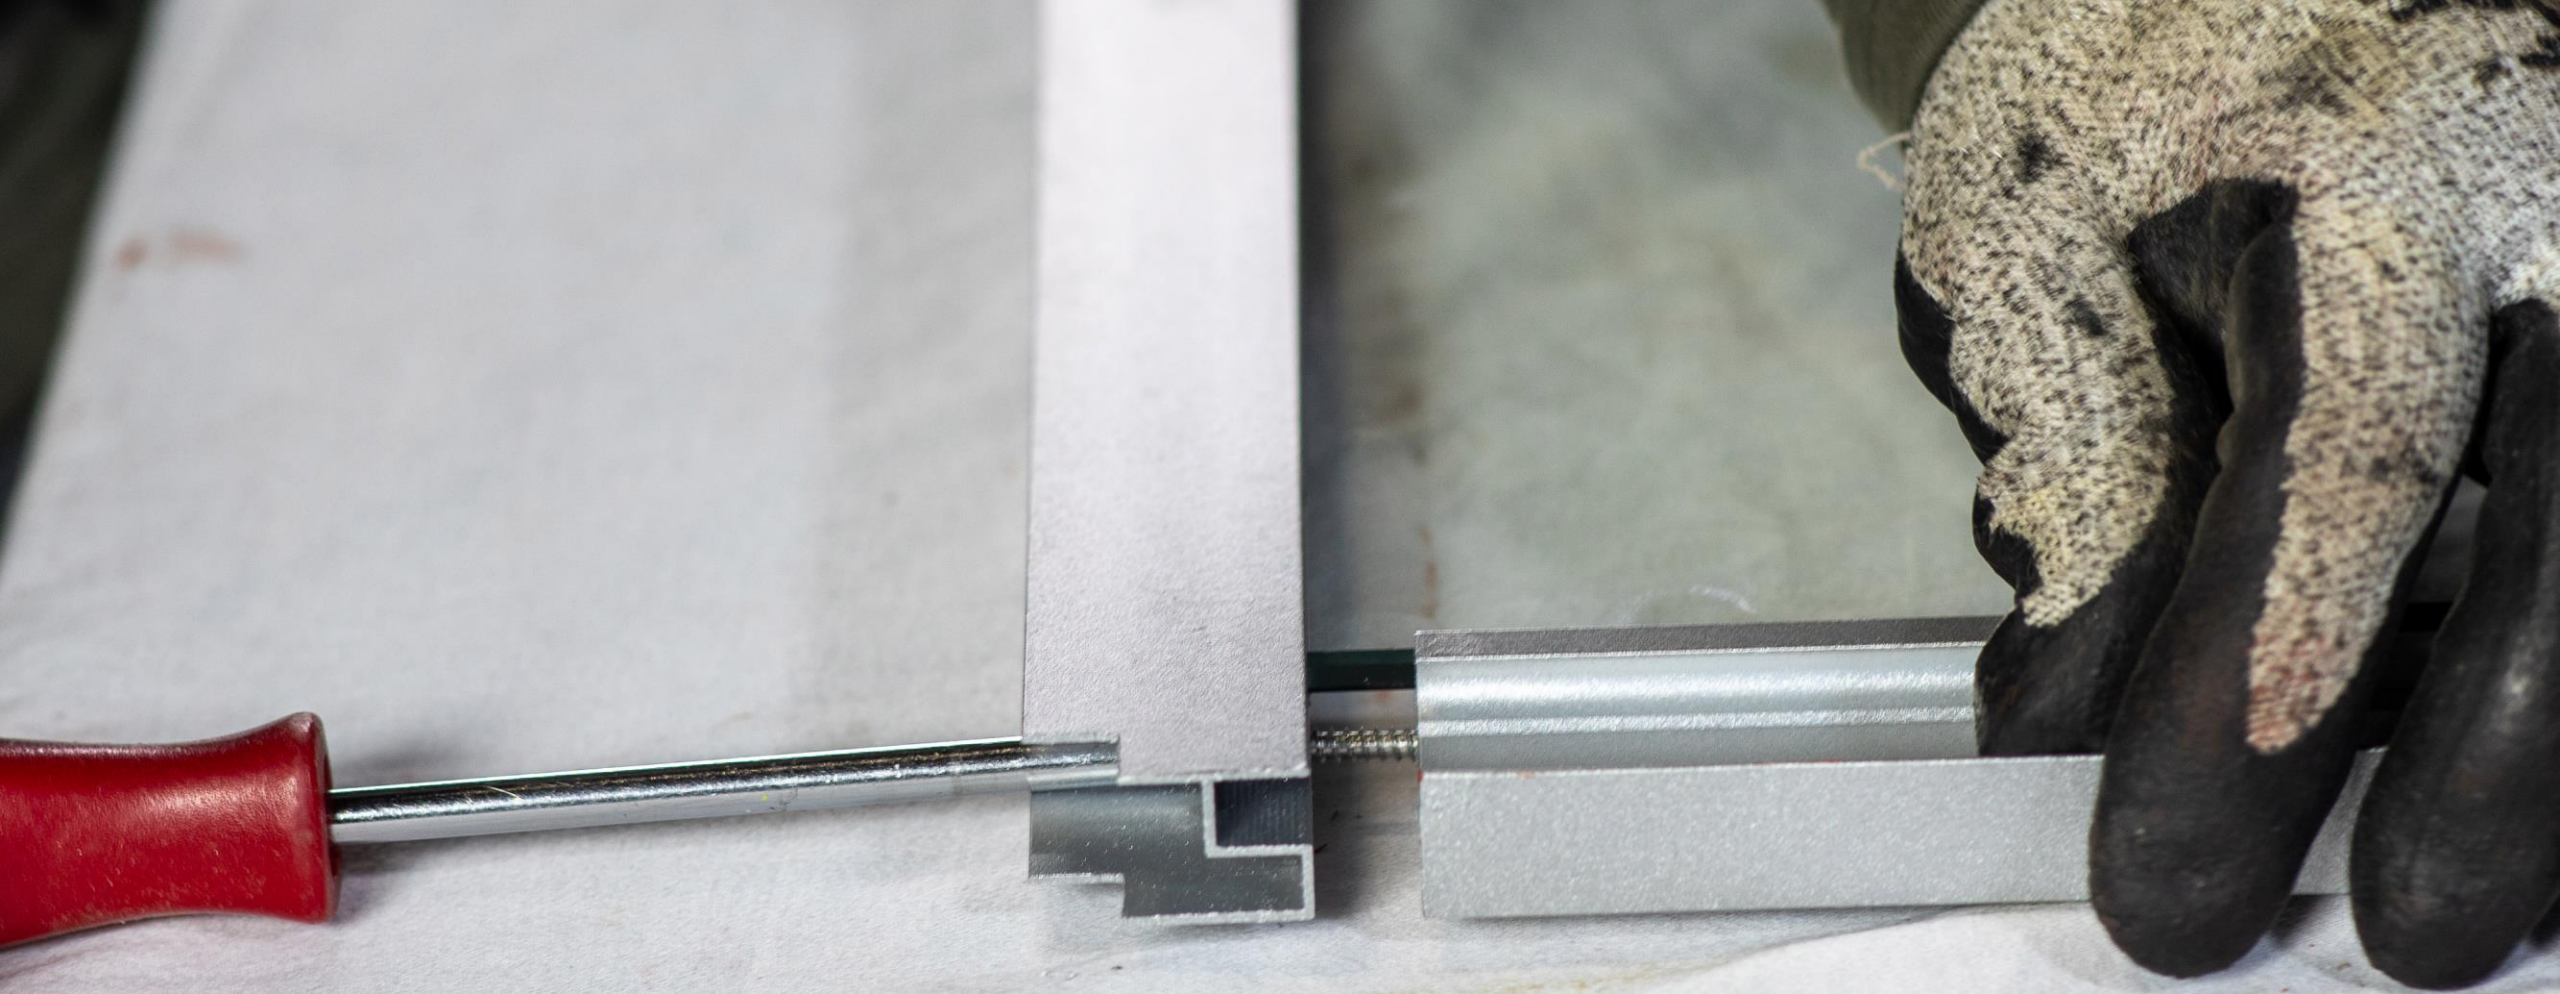

Make a couple of turns
to set the screw in place

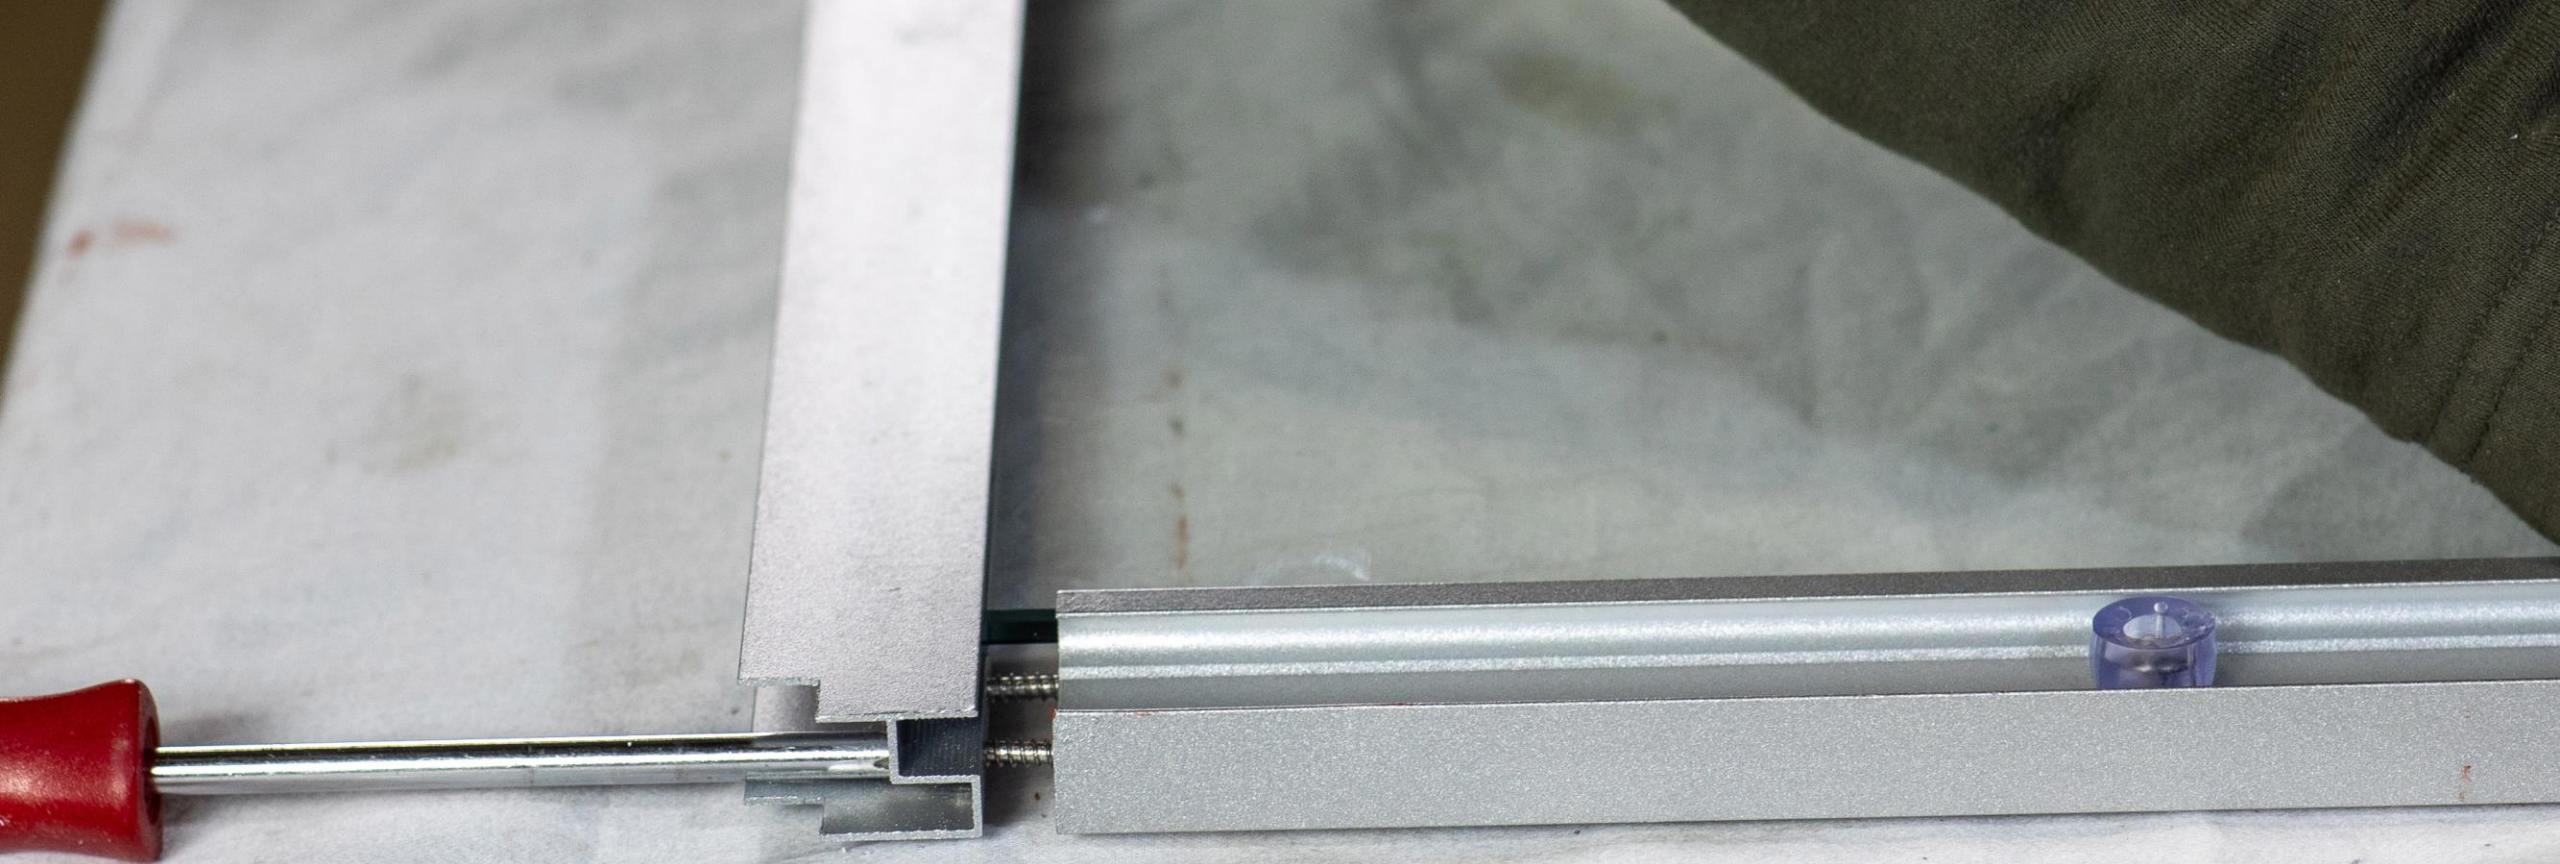

Set both screws in place
with a few turns


Make sure it is tight



Tighten both screws alternatively

Install Panel Clip

Pre-drilled hole
on track

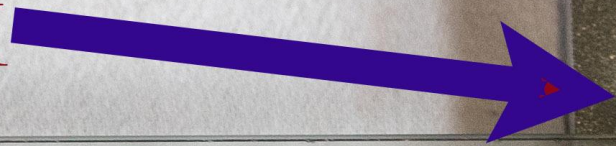


If the glass panel is not tightly butted
against the track, use rubber mallet
tap the top of stile



Note: this illustration uses
a different model

Put panel clip on the
ledge and against
the glass panel

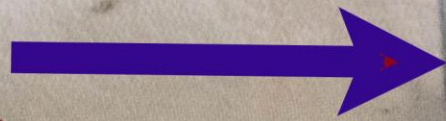


Install the clip
with 3/8" screw



Panel clip
installed



Now let's install top track to stile

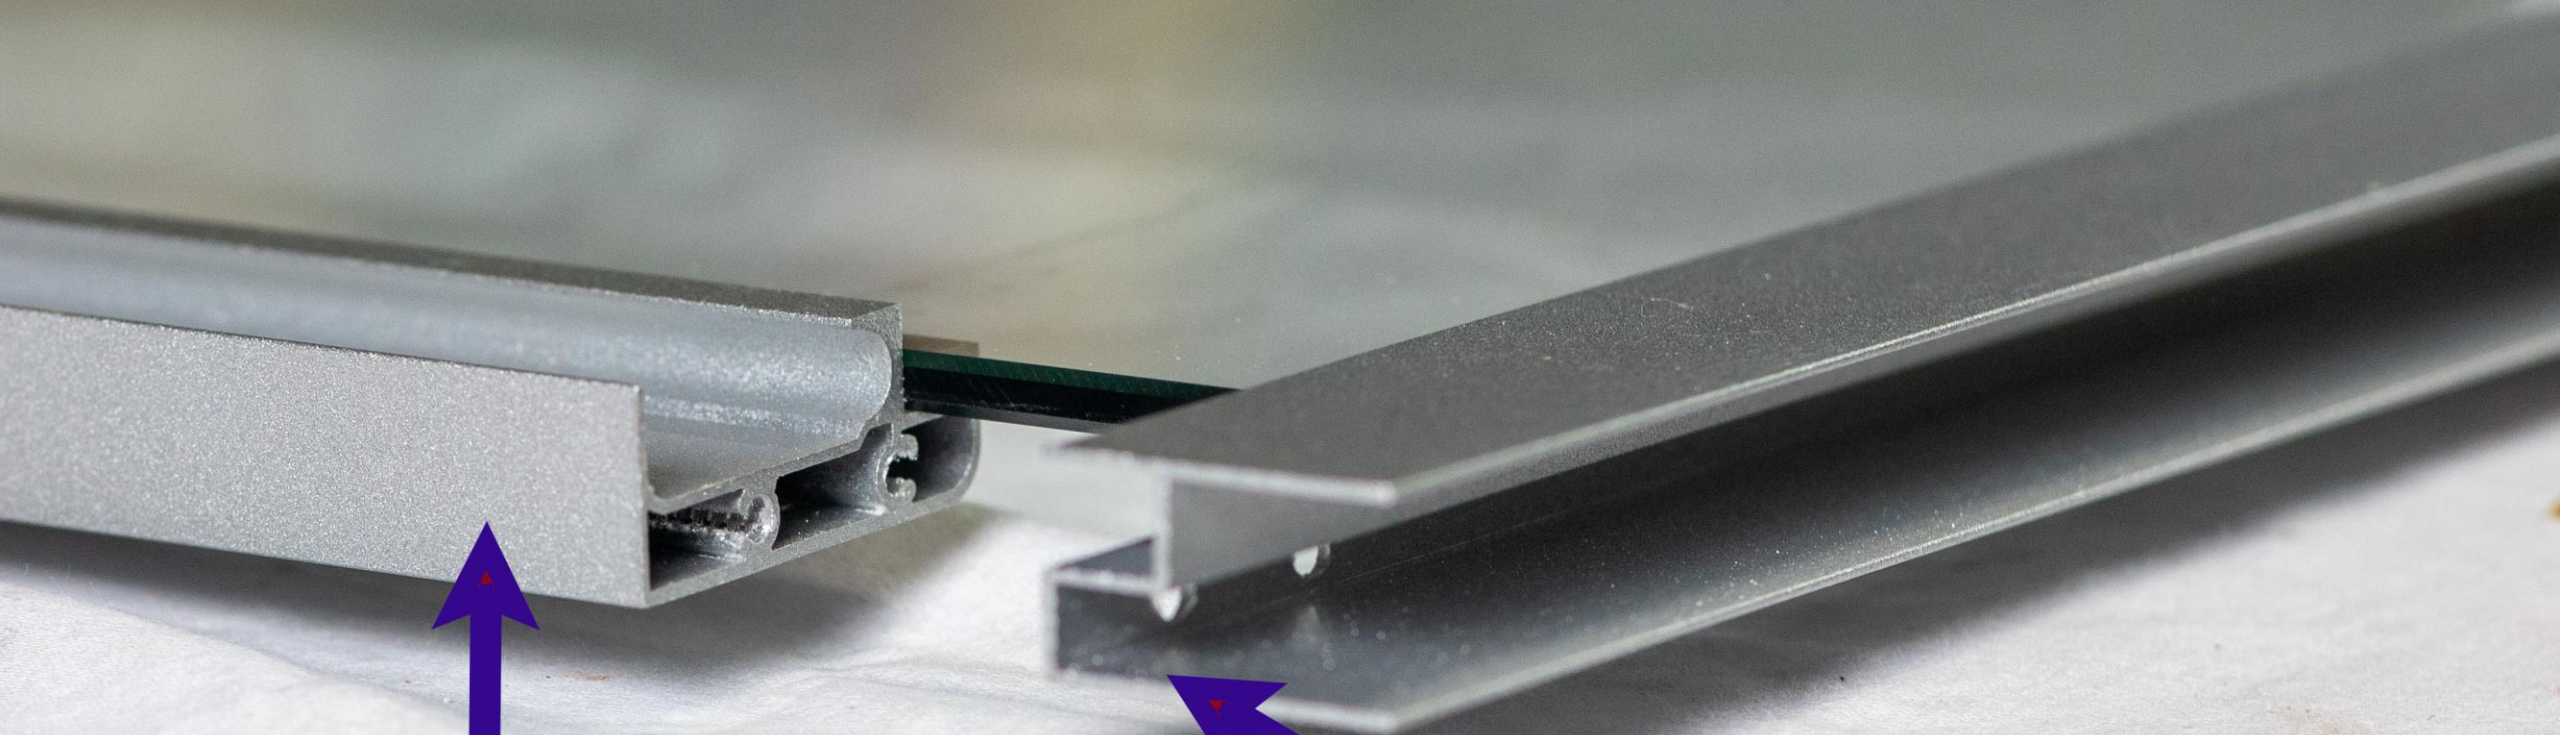

Top Track


Top track has
no corner cutout



Use 7/8" to attach
Same as for the bottom track



Set both screws in place
with a few turns

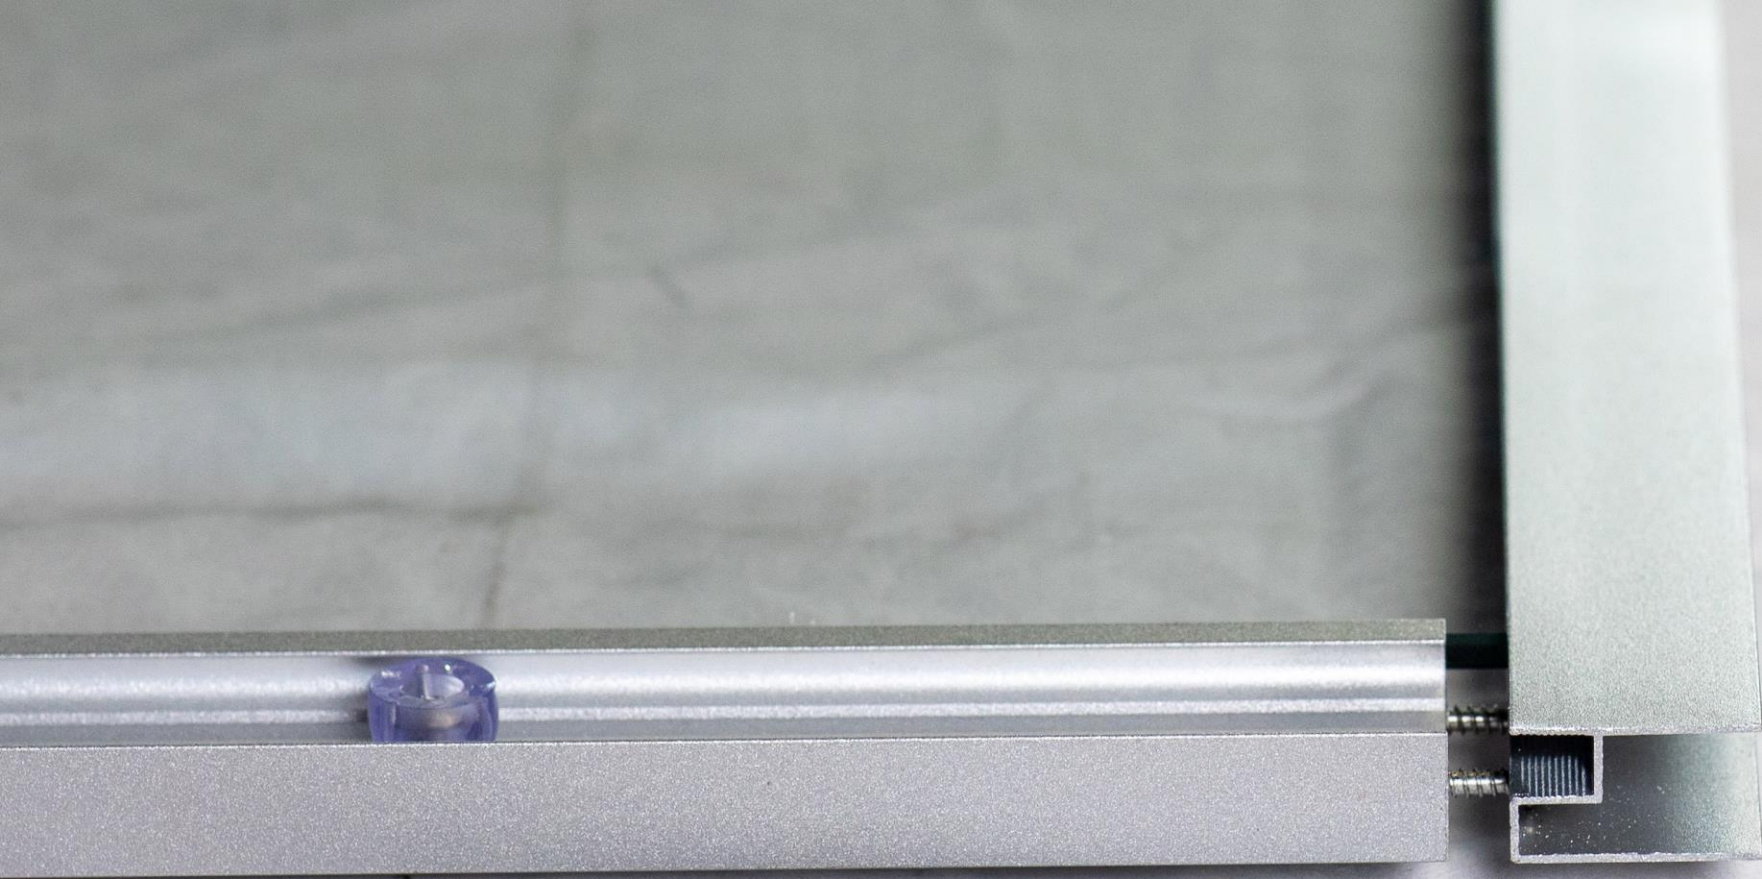


Tighten up both screws alternatively
A power screw driver is handy




Make sure that connection is tight

Install the
Panel Clip

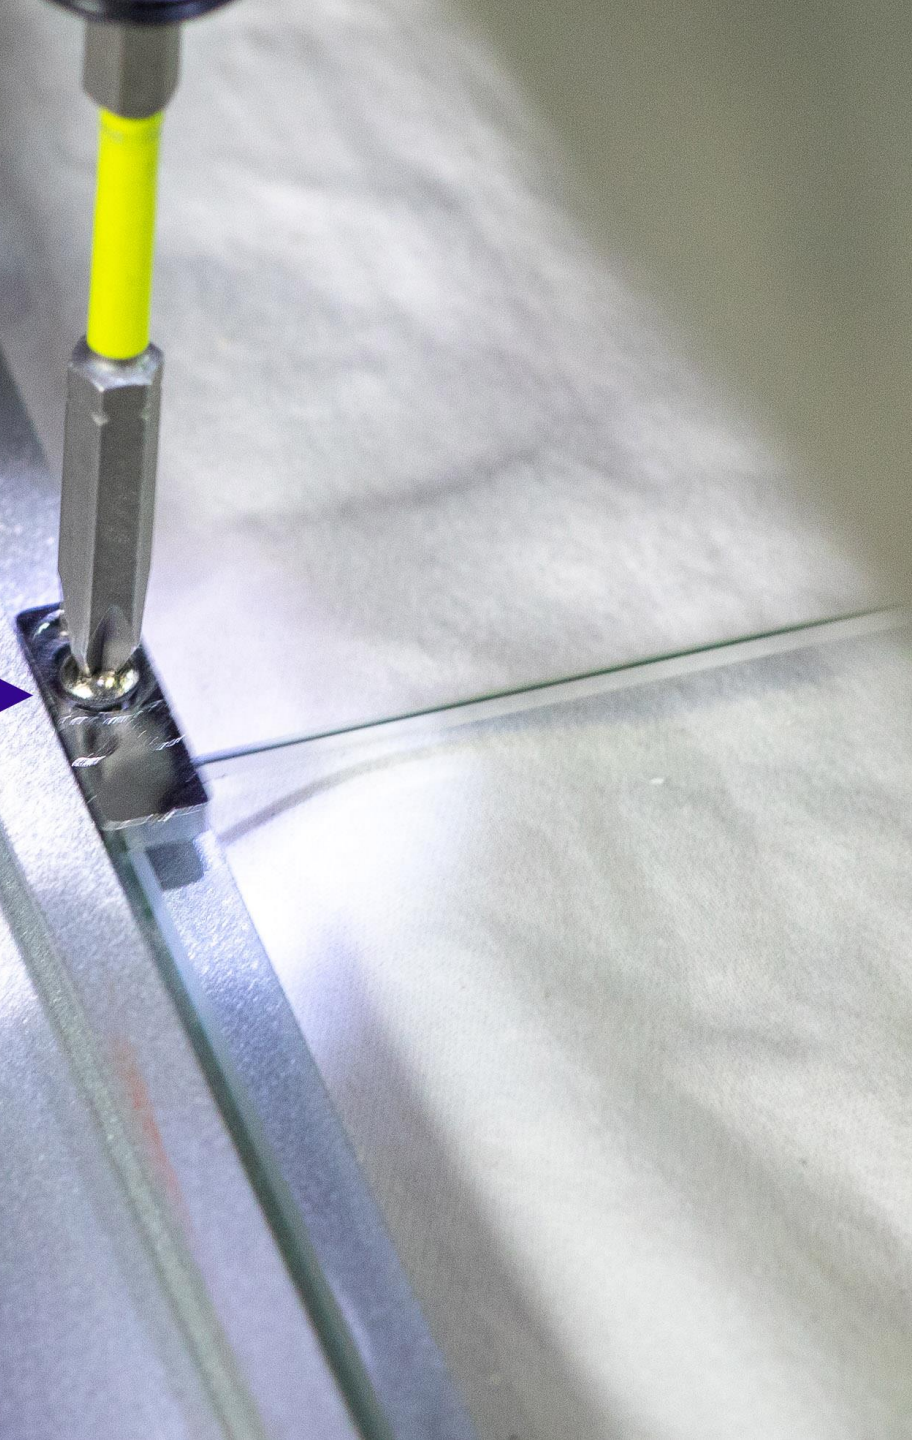

Now let's install the other panel
We recommend stand
up the panel on a box


Panel to be
Installed

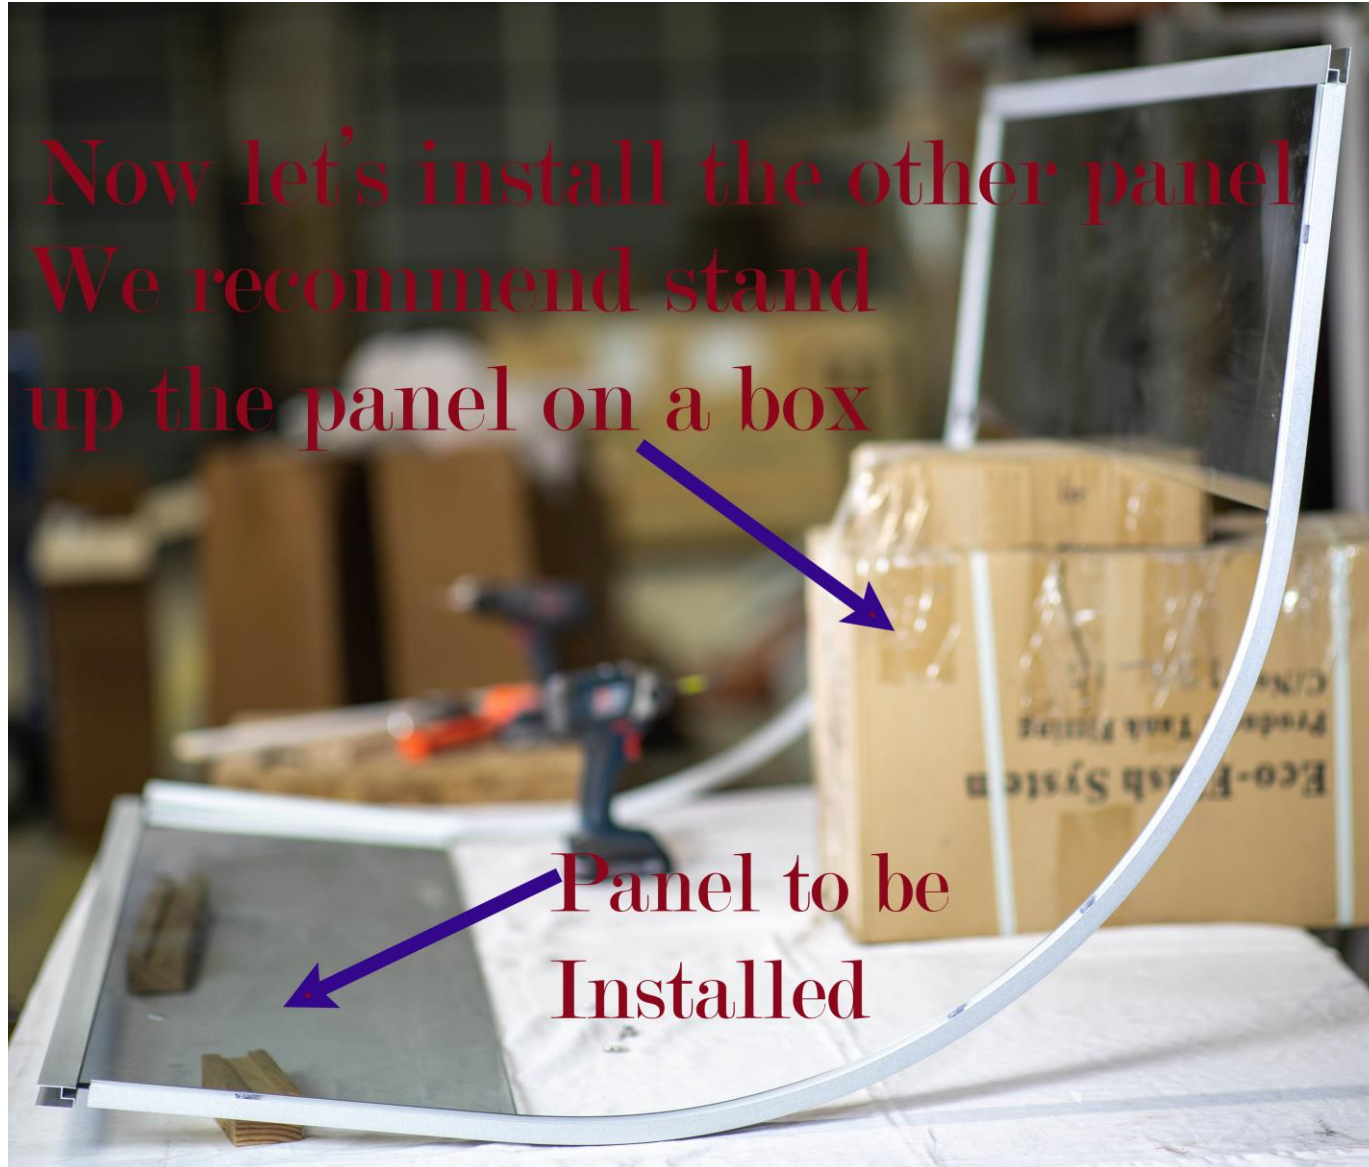

You may put a wood
block to align the panel
with track →



Repeat the same procedure
to attach the track to stile

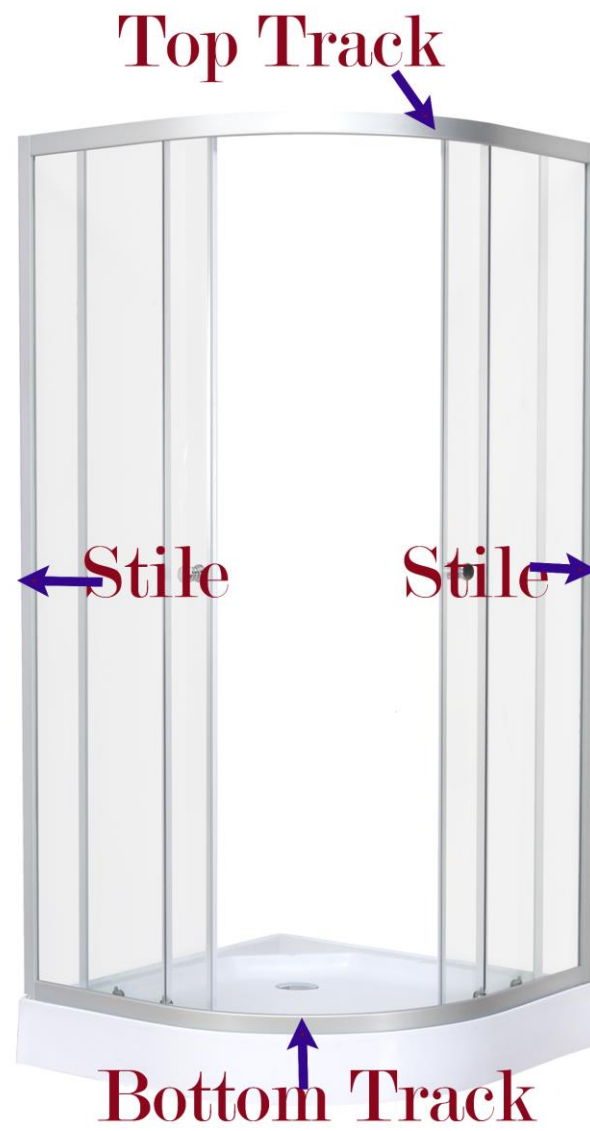

Top Track

Stile

Stile

Bottom Track