










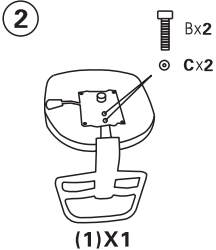
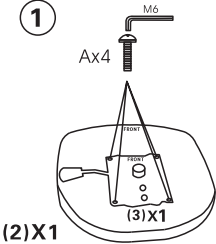


<b>(1)X1</b>	<b>(2)X1</b>
	
<b>(3)X1</b>	<b>(4)X1</b>
	
<b>(5)X1</b>	<b>(6)X 5</b>
	
<b>Ax4</b>  M6x18MM	<b>Bx2</b>  M10x25MM
<b>Cx2</b> 	<b>Dx1</b>  M6
<b>Ex1</b>  M10	



Please do not tighten the screws until all the screws are lined with holes. Try to tighten all the screws loosely initially and then tightly a little bit more. Do not over tighten a single screw as it will cause other screws hardly to be tightened. Tighten all the screws firmly in the end.

