# 9601,9611 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

### **CAUTION**

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor.

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

#### **GENERAL**

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustration.


### ASSEMBLY AND INSTALLATION

- 1. Connect the stems (15) (14)(13) (depending on desired height). Attach them to the nipple on the top of the socket cup (16), then thread the stem into the swivel (11).
- 2. Thread two mounting screws (5) through the mounting bar (7) and secure with the hex nut (9).
- 3. Attach the mounting bar (7) with box screw (10) to the outlet box (1).
- 4. Pull out the outlet wire and ground wire from the outlet box

Make wire connections with wire nut (6).

- --Ribbed wire (w/o marking) or white wire from light to White wire (2) from power source.
- --Smooth wire (w marking) or black wire from light to Black wire (3) from power source.
- --Attach the ground wire (4) to mounting bar (7) with a ground screw (8).
- 5. Attach the fixture canopy to the outlet box (1), secure it with the ball nut (12).
- 6. Remove the socket sleeve (19) from the socket (17). Place the glass shade (18) over the socket (17) then secure.
- 7. Install bulbs: (bulbs not include)

(Don't exceed the maximum capacity recommended on the sockets).

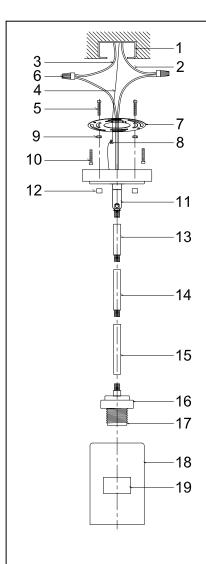

- 1.OUTLET BOX 2.WHITE WIRE
- 3.BLACK WIRE
- **4.GROUND WIRE**
- 5.MOUNTING SCREW
- **6.WIRE NUT**
- 7.MOUNTING BAR
- 8.GROUND SCREW
- 9.HEX NUT
- 10.BOX SCREW
- 11.SWIVEL
- 12.BALL NUT
- 13.STEM
- 14.STEM
- 15.STEM
- 16.SOCKET CUP
- 17.SOCKET
- 18.GLASS SHADE
- 19.SOCKET SLEEVE

## INSTALLATION IS NOW COMPLETED