

**Fastening the first board and last board:** Secure the first board along the house or at the outside of the deck. By face fastening with the appropriate screw for the deck material at each joist.



1. On the outside edge of your installed starter board, simply place EDGECLIP™ onto the joist allowing the "legs" of the clip to snugly grasp the joist and hold the clip in place.




At the same time, slide the metal gusset into to the groove of the deck board.

***NO NEED TO PRE-SET SCREW INTO JOIST.***

The clip will now stand firmly in place.



2. Place EDGECLIP™ at every joist along the length of the board.

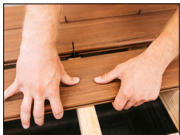

3. You are now ready to slide your next board up against the EDGECLIPS between the two boards.



4. Holding the new board tightly in place, screw down all of the clips between the boards.

Use the yellow **Never-Miss™ Guide** (shown here) included, to perfectly engage the driver bit with the screw head for fastest installation.



5. Follow the same process for each deck board.