

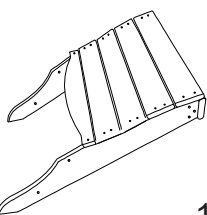





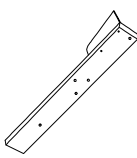

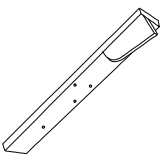


<p>A</p>  <p>1pc</p>	<p>B</p>  <p>1pc</p>	<p>C</p>  <p>1pc</p>	<p>D</p>  <p>1pc</p>
<p>E</p>  <p>1pc</p>	<p>F</p>  <p>1pc</p>	<p>G</p>  <p>1pc</p>	<p>H</p>  <p>1pc</p>
<p>I</p>  <p>M6X50mm 14pcs</p>	<p>J</p>  <p>M6X80mm 2pcs</p>	<p>K</p>  <p>5mm 1pc</p>	


NOTE:

UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.


DO NOT TIGHTEN ANY BOLTS UNTIL ALL BOLTS HAVE BEEN STARTED!

TIGHT ALL THE BOLTS TO 60% FIRST THEN TIGHT TO 100%.

1

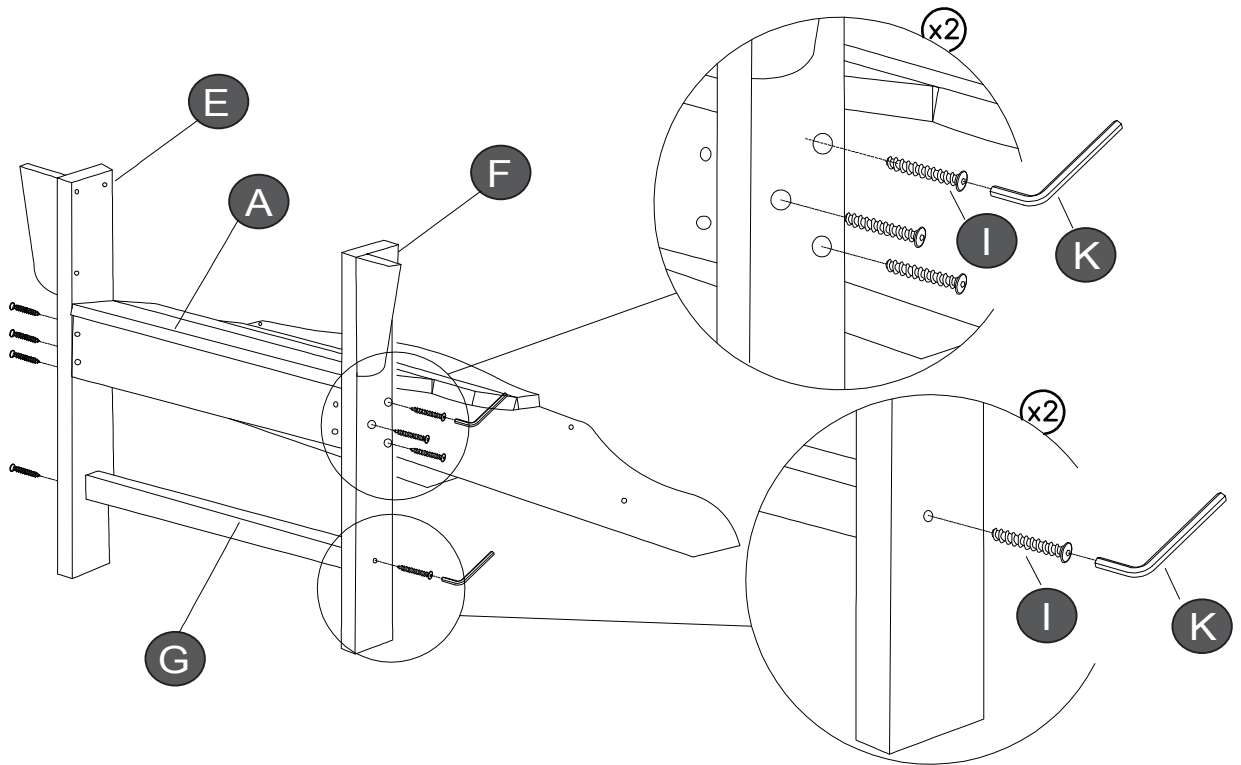


2

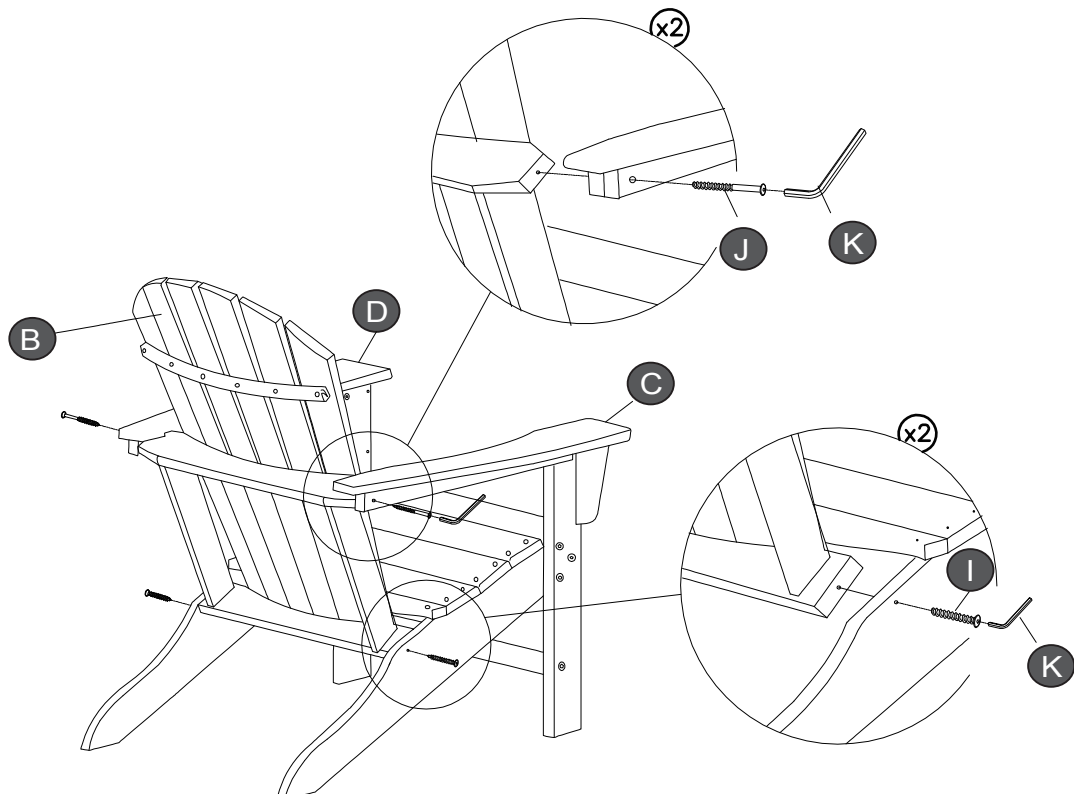


I:2pcs
J:2pcs

3

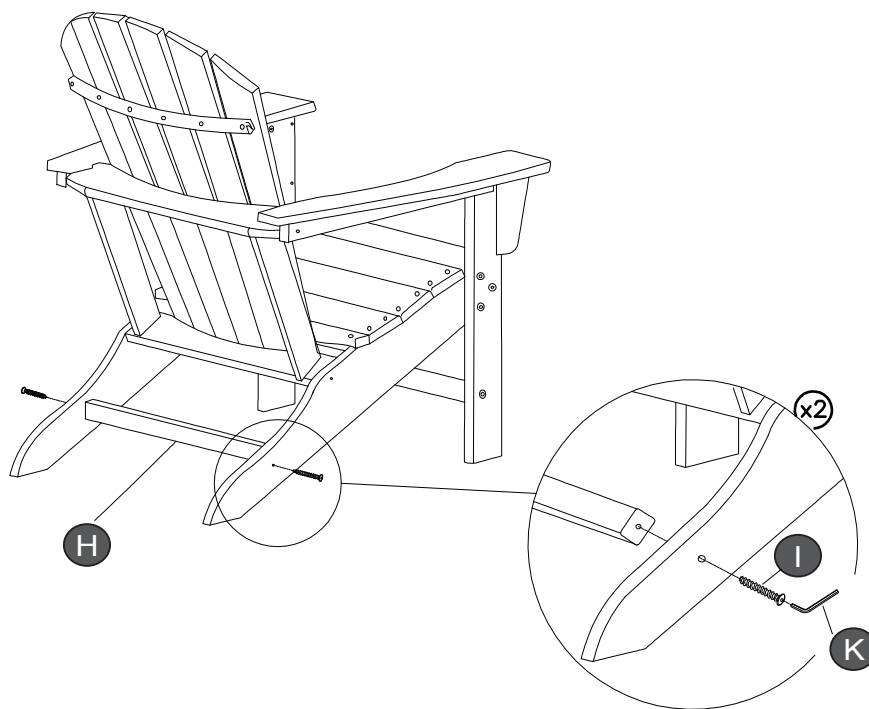

I:2pcs

4

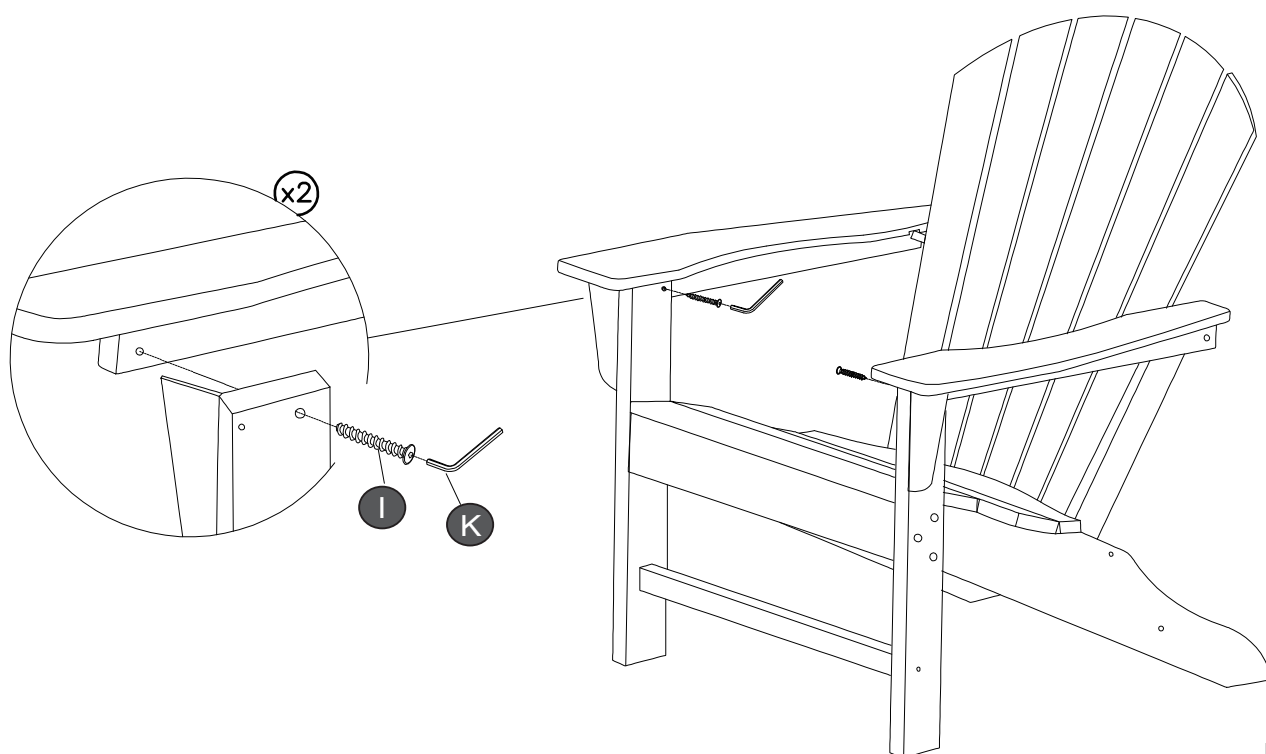

I:2pcs