


# ASSEMBLY INSTRUCTIONS


ITEM NO. WF310107 - DINING CHAIR

If you have any questions, please feel free to contact us.  
Email: [lowes.team@qualfurn.net](mailto:lowes.team@qualfurn.net)

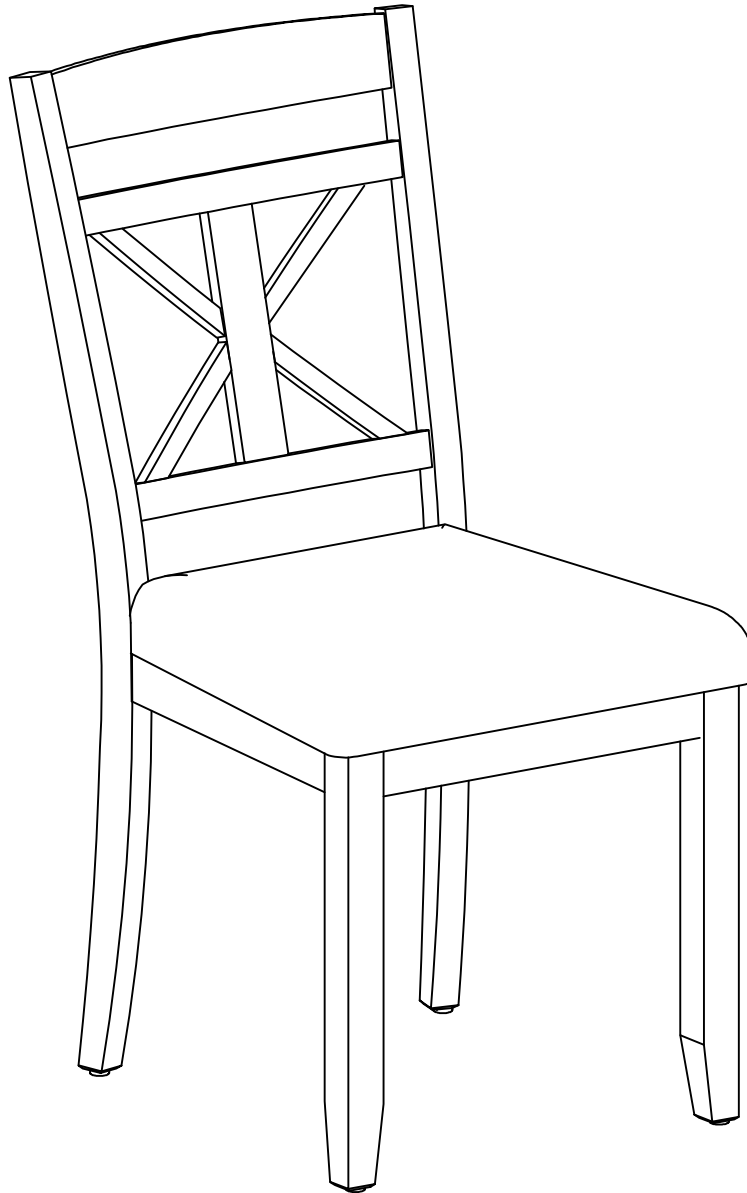

## IMPORTANT NOTE:


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURF ACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE TOU BEGIN, KINDLKY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

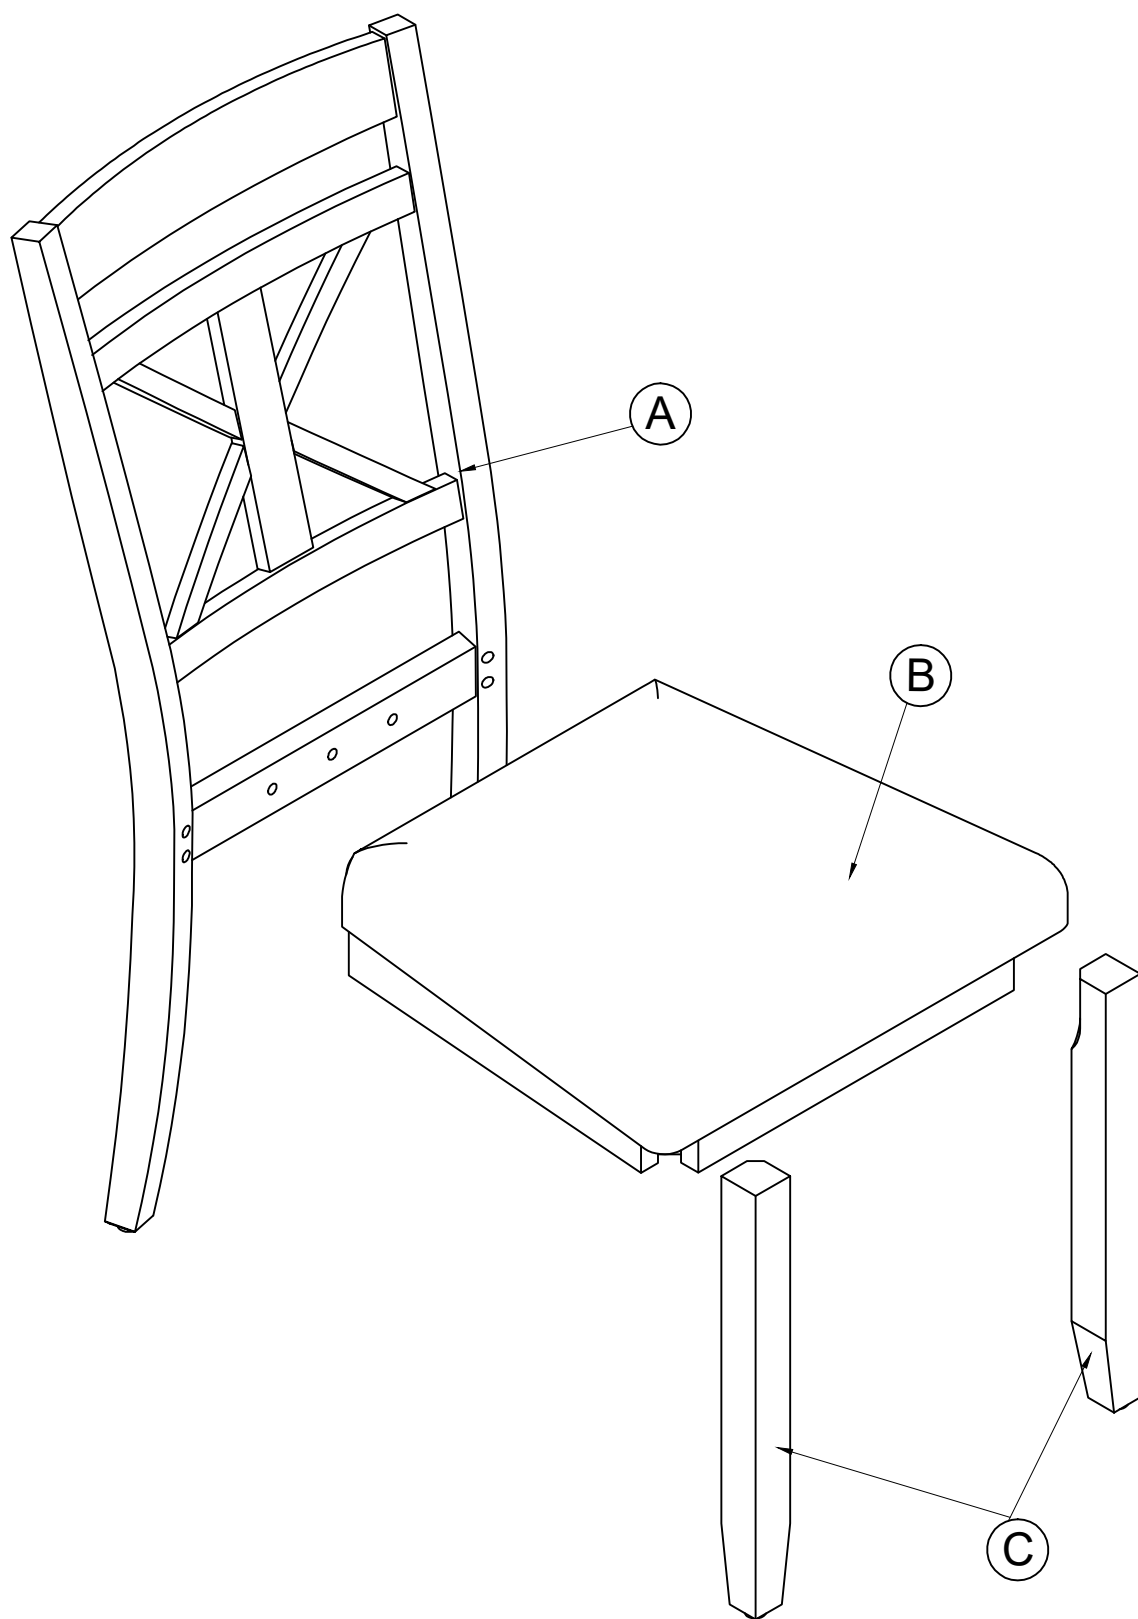

## Part List For One


## Hardware List For One

A

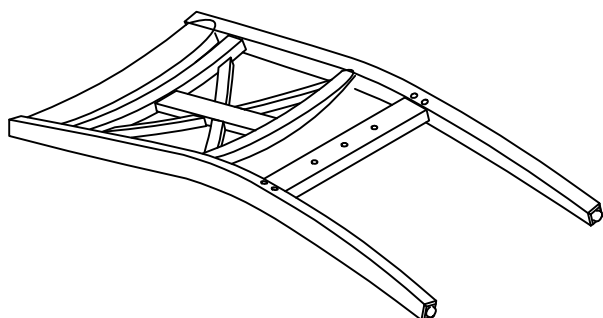

CHAIR BACK (1 PC)


1



Ø 1/4" x 38mm

BOLT ( 2 pcs)


2



Ø 1/4" x 60mm


BOLT ( 4 pcs)

B

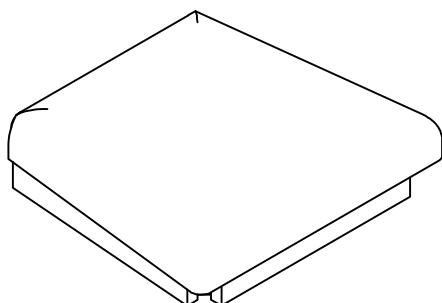

CUSHION SEAT (1 PC)

3



Ø 1/4" x 80mm

BOLT ( 4 pcs)


4



Ø 1/4" x 13mm

FLAT WASHER ( 10 pcs)

C

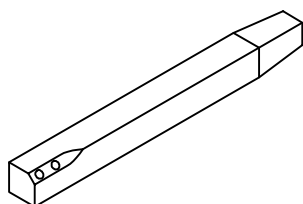

FRONT LEGS (2PCS)


5



Ø 1/4" x 19mm

LOCK WASHER ( 10 pcs)


6




4mm

ALLEN KEY ( 1 pc)


STEP 1:

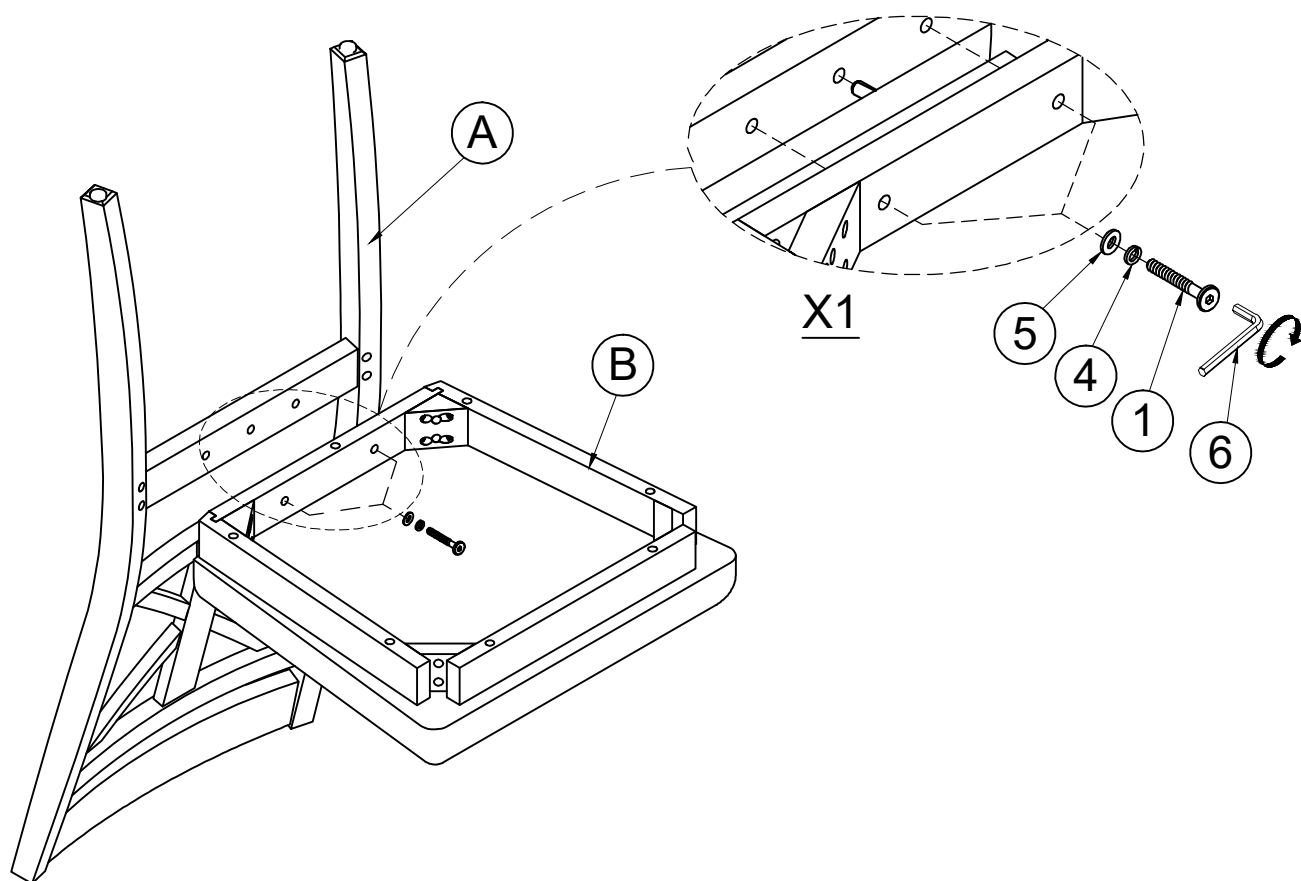

STEP 2:

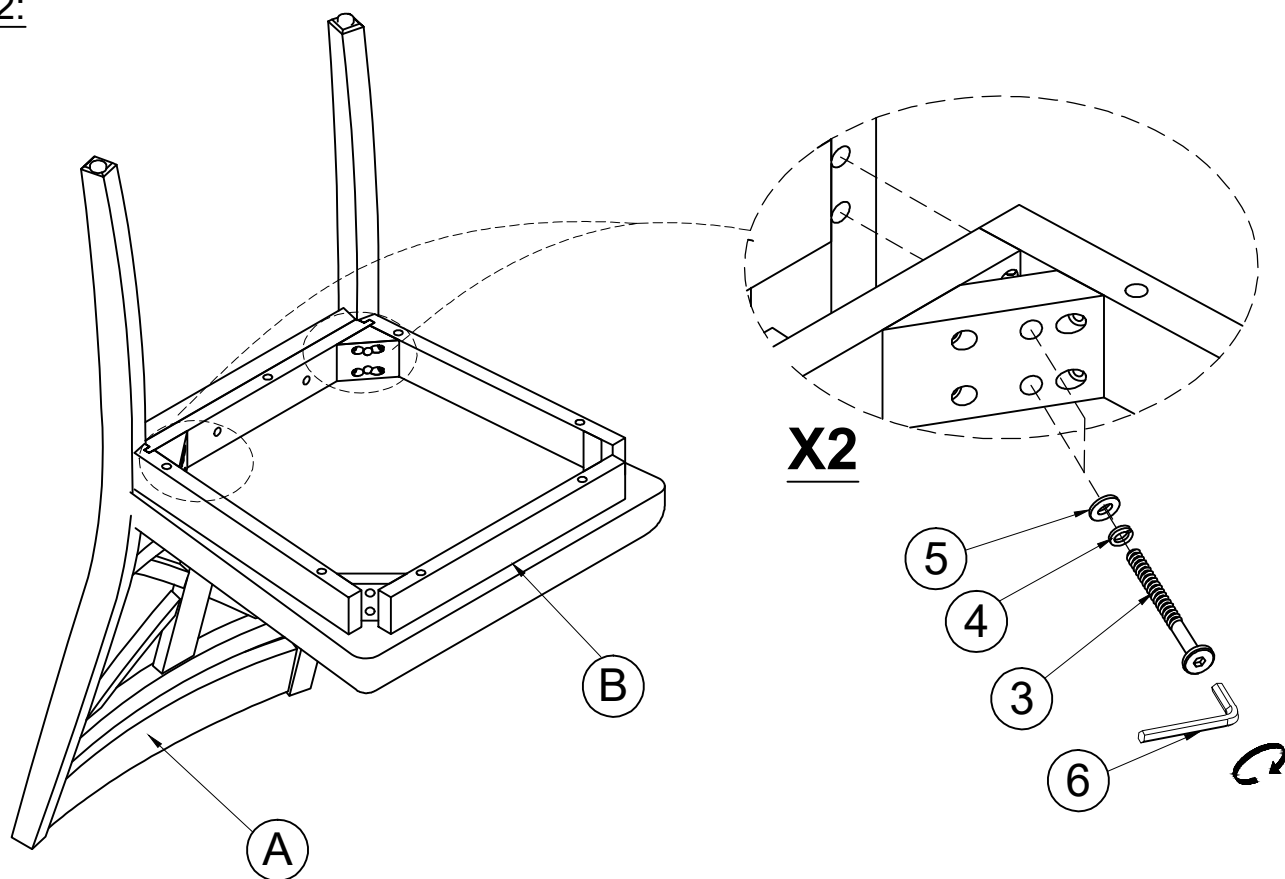

STEP 3:

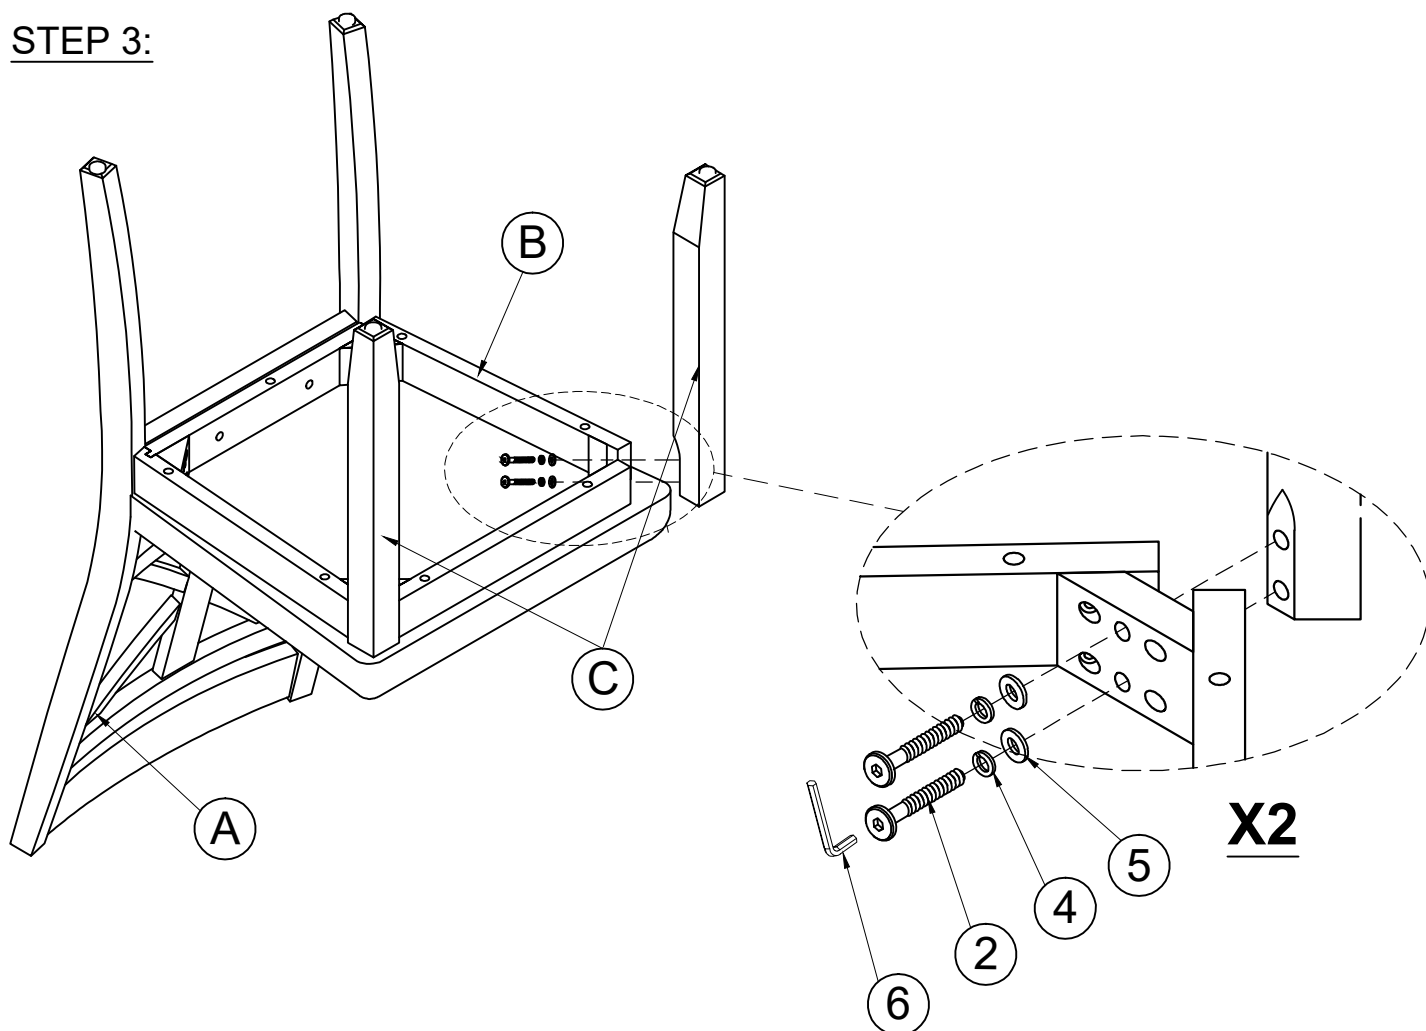

COMPLETE:

