ASSEMBLY INSTRUCTIONS BATH VANITY-CABINET



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.


Detail View - CABINET 11).)


Identifying the Hardware-Identify the hardware using the illustrations below.


Part List - WF306247		
Side Panel (L) - 1pc	Side Panel (R) - 1pc	
3	4	
Drawer Fake - 1pc	Rear Panel Top -1pc	
Rear Panel Bottom -1pc	Frame Mid - 1pc	
7	8	
Frame Bottom- 1pc	Foot Cabinet - 4pcs	
9	10	
Drawer Face - 1pc	Drawer Rear - 2pcs	
Drawer side(L) - 1pc	Drawer Side(R) - 1pc	
13	14	
Mid Drawer Side(L) - 1pc	Mid Drawer Side(R) - 1pc	
Mid Drawer - 1pc	Drawer Bottom - 1pc	


Hardware List - WF306247


Α	В	С
		<u> </u>
ø6x35mm	ø14.5x12mm	ø13x1/4"x28mm
Three in one bolts (14pcs)	Three in one lock (14pcs)	Hex-Head bolts (4pcs)
D	E	F
(a)=2000000000000000000000000000000000000		
ø13x1/4"x38mm	ø1/4"x16x1mm	ø300x35mm
Hex-Head bolts (8pcs)	Washer (12pcs)	Slide rails (2pcs)
G	H	I
	(†) 20000000>	
	ø6xø3x12mm	
ø298x18mm		
Slide rails (2pcs)	Flat head screw (12pcs)	Handle (6pcs)
J	K	
ø5/32"x15mm	ø5/32"x25mm	ø8xø4x32mm
Handle screw (4pcs)	Handle screw (2pcs)	Round head screw (16pcs)
M	N	0
Ø8x30mm		
Wood dowel (14pcs)	4mm Allen key (1pc)	Anti fall hardware (1set)
, (1 (poo)	,c., (1pc)	,

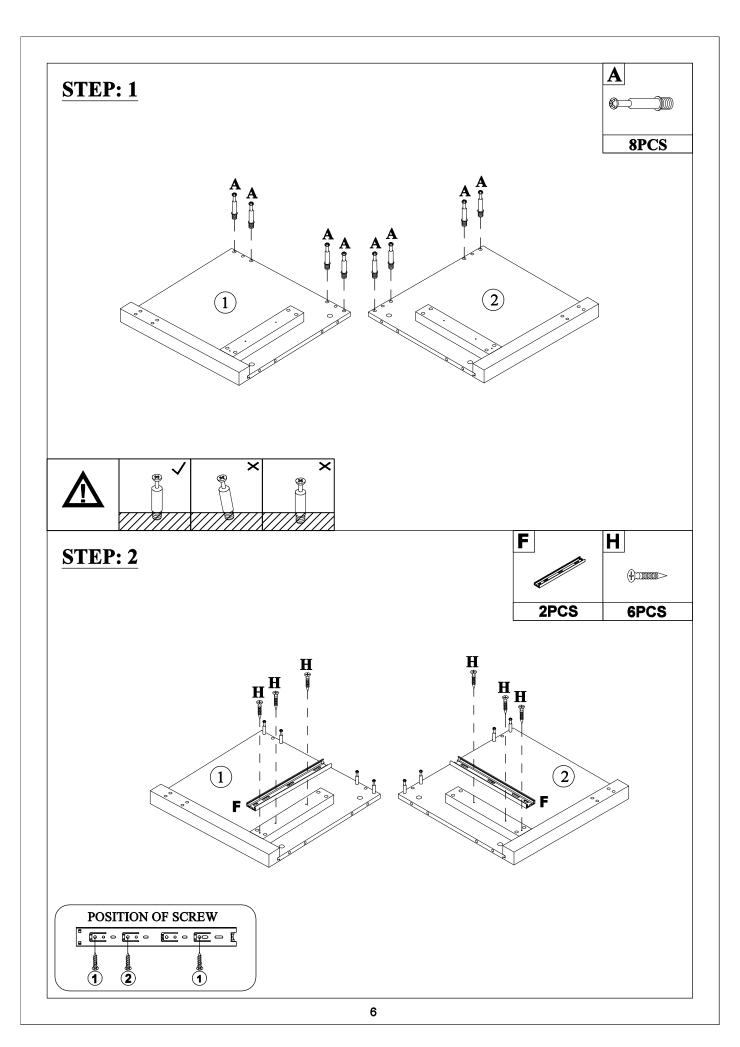


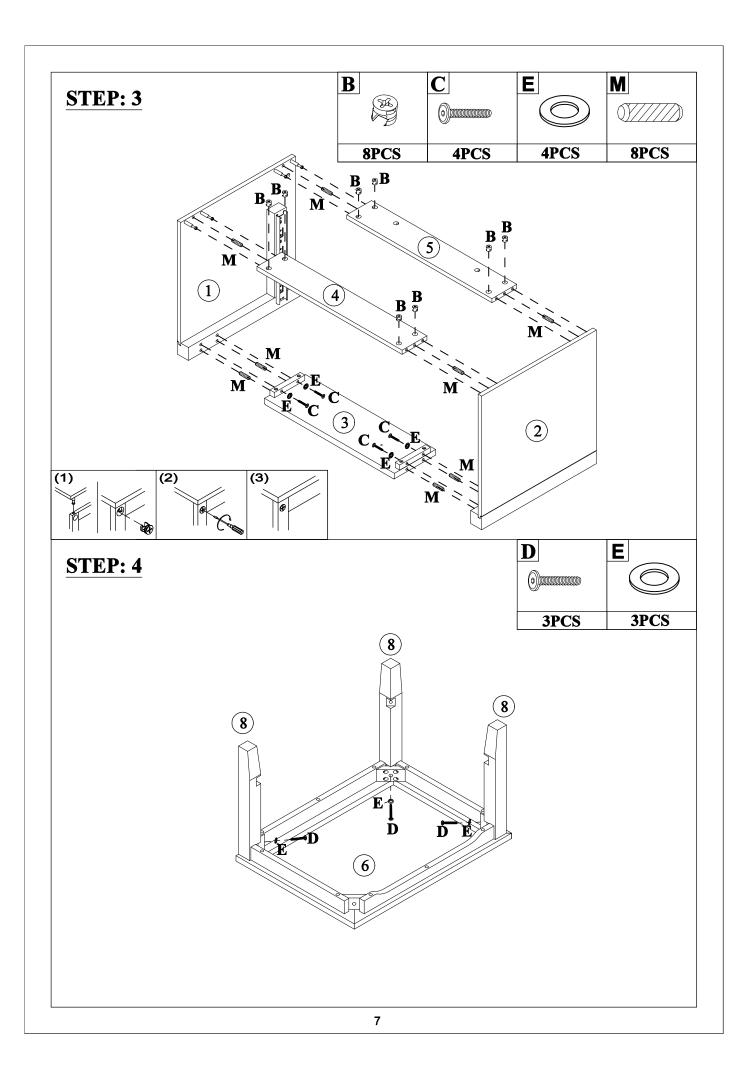


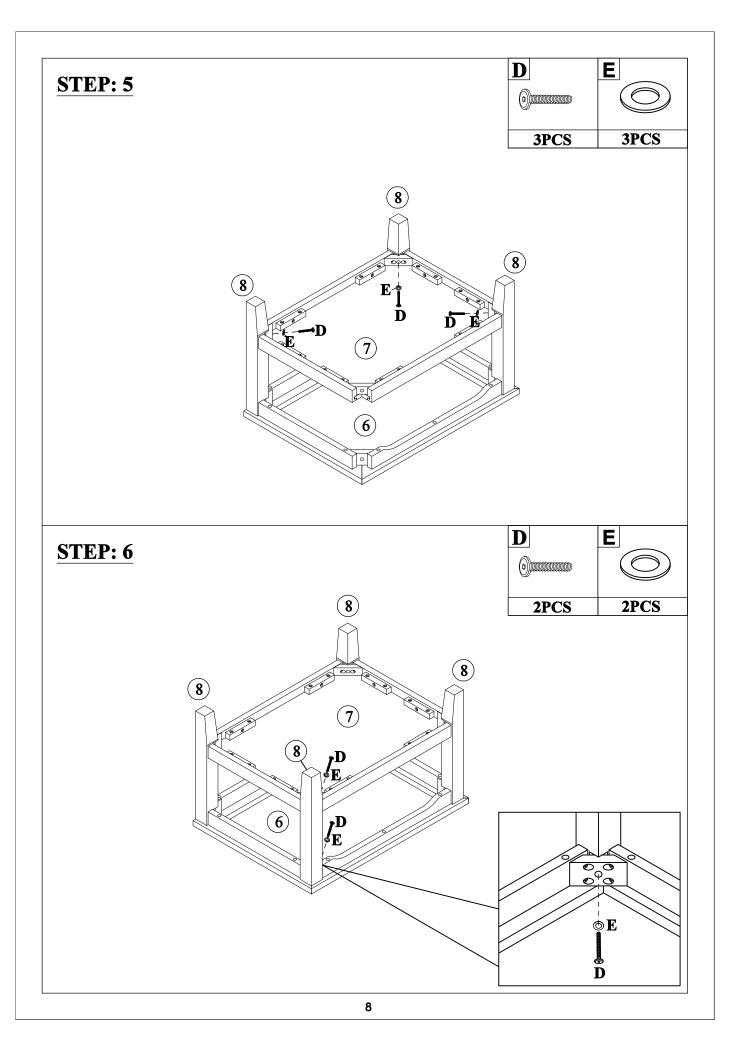

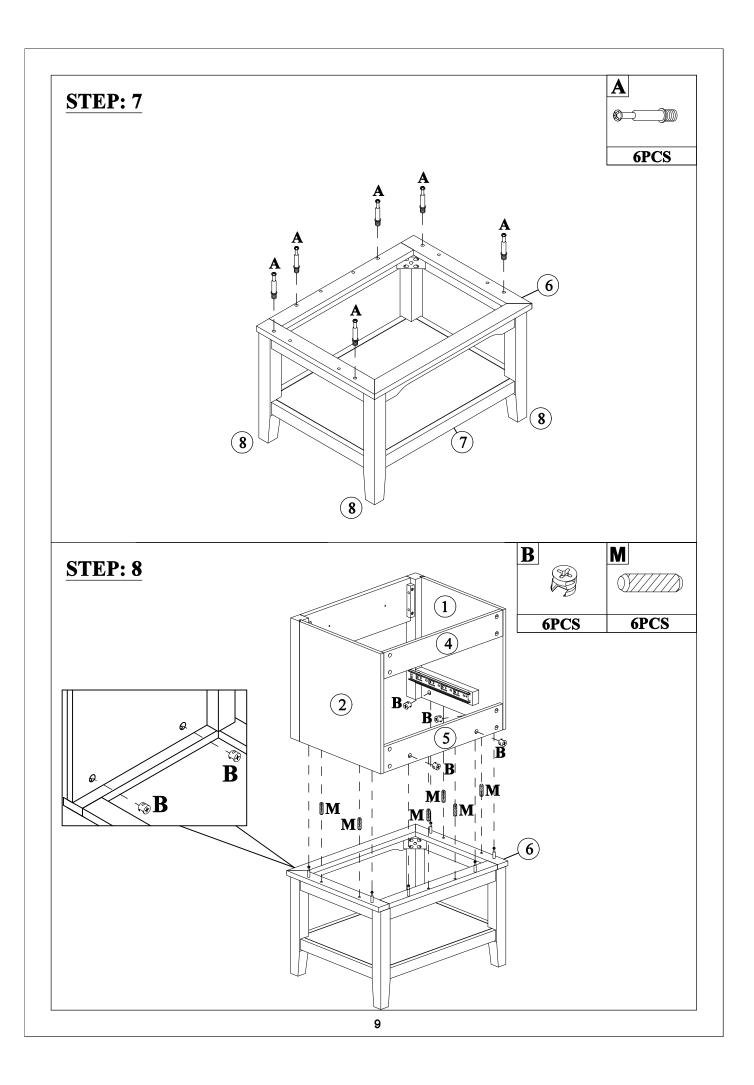

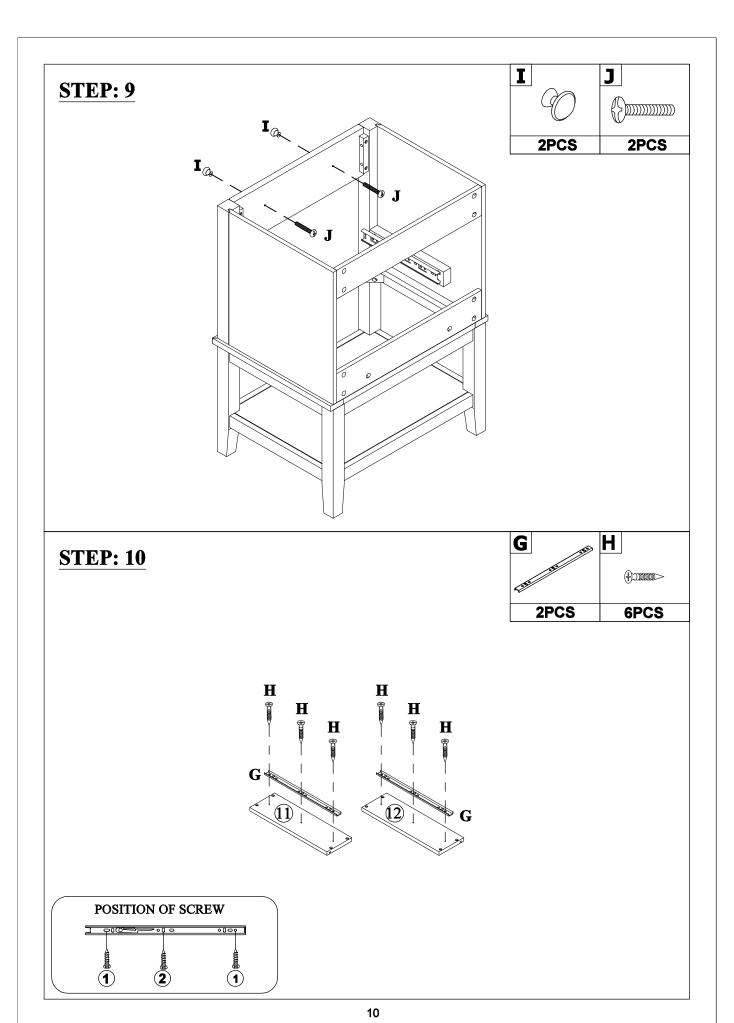

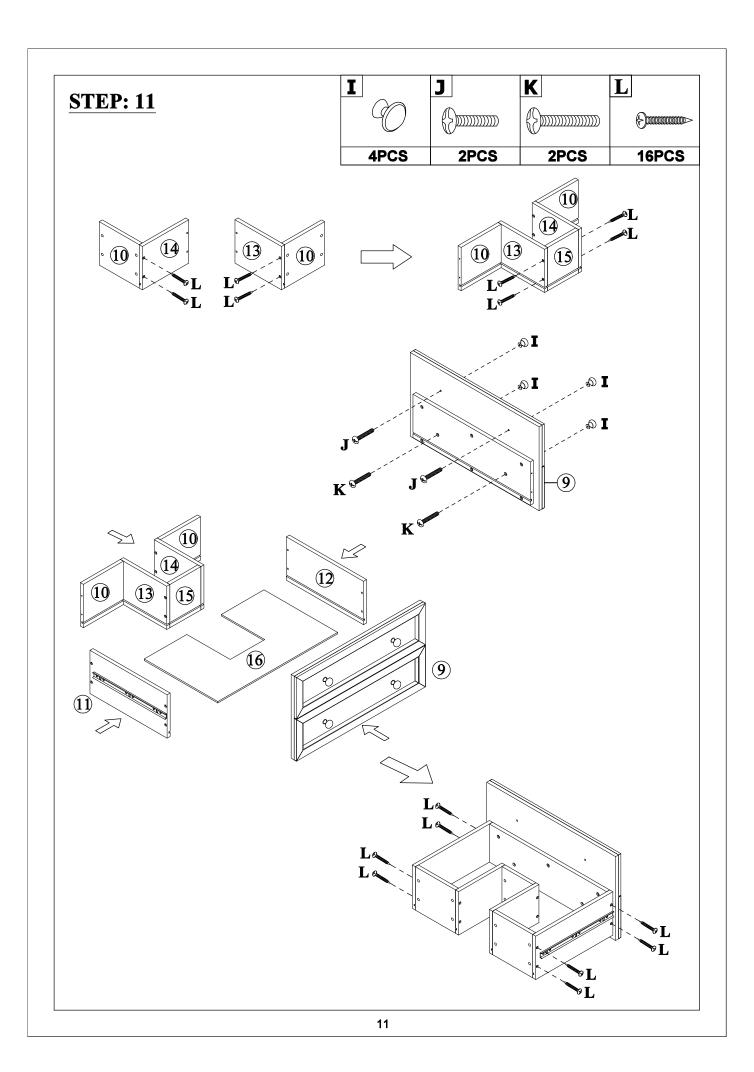

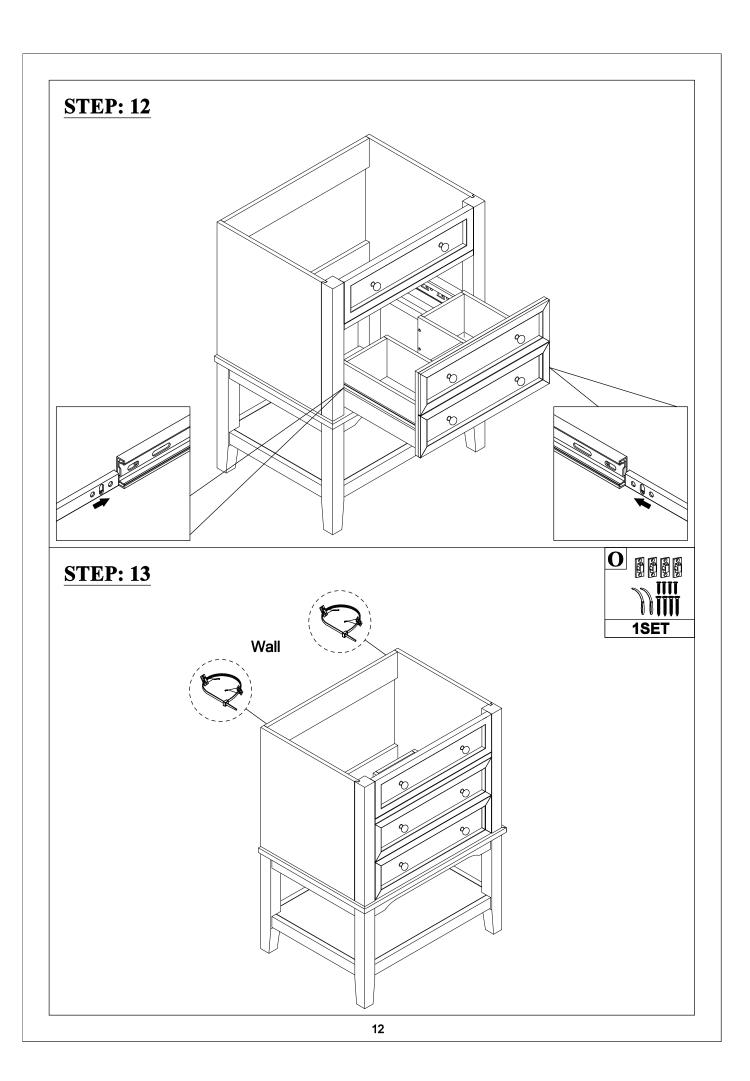



Install the sink on the cabinet with glue. Let stand for 24 hours




STEP: 15






HINGE ADJUSTMENTS

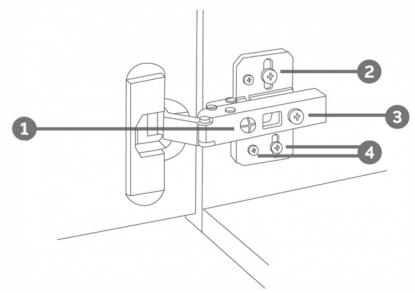

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

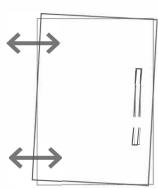

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

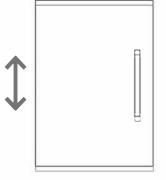

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

