

J3M033

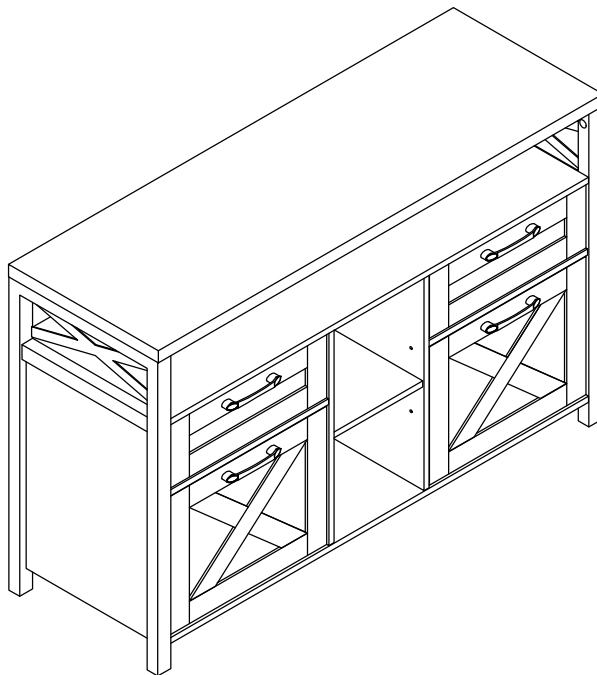


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

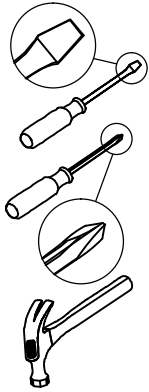

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

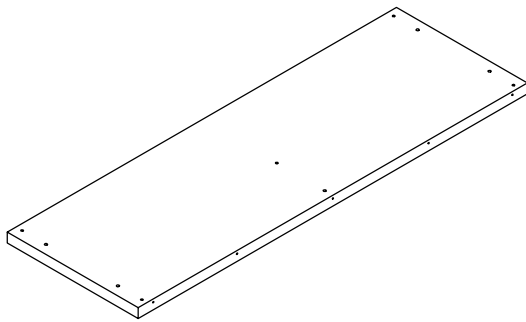


①

TOP PANEL




②

PARTITION PANEL

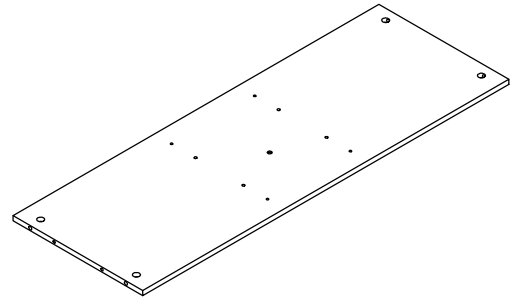


③

FIXED SHELF

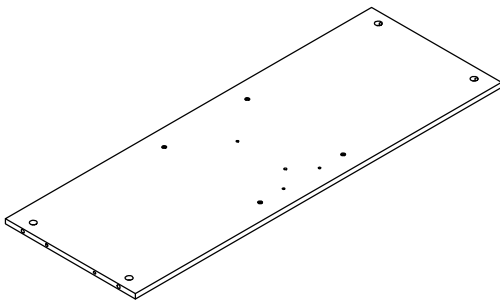


④

BOTTOM

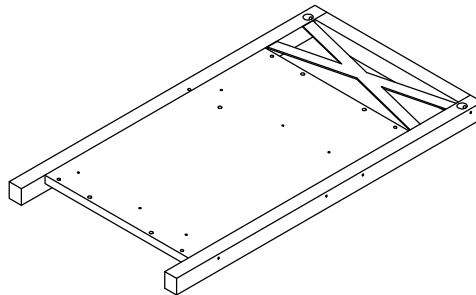


⑤

LEFT SIDE PANEL

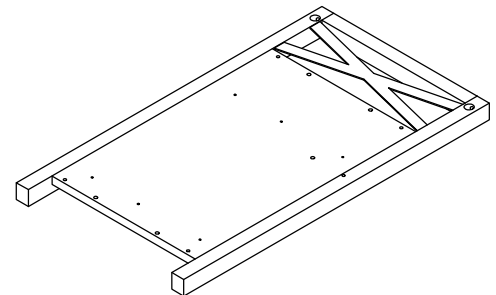


⑥

RIGHT SIDE PANEL

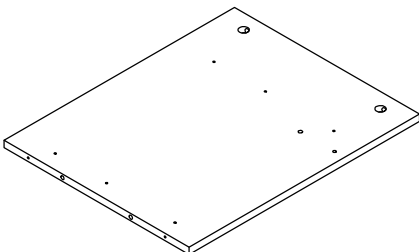


⑦

LOWER LEFT SIDE PARTITION

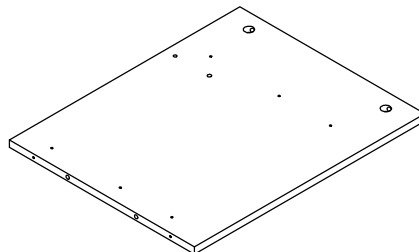

⑧

LOWER RIGHT SIDE PARTITION

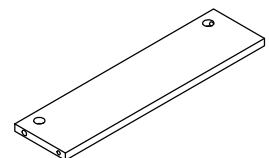


⑨

FRONT SLAT
Qty:2


Board Identification

Not actual size

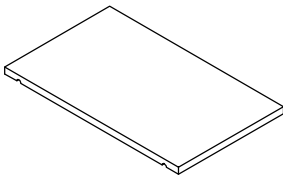


⑩

SHELF PANEL




⑪

LEG




⑫

LEG

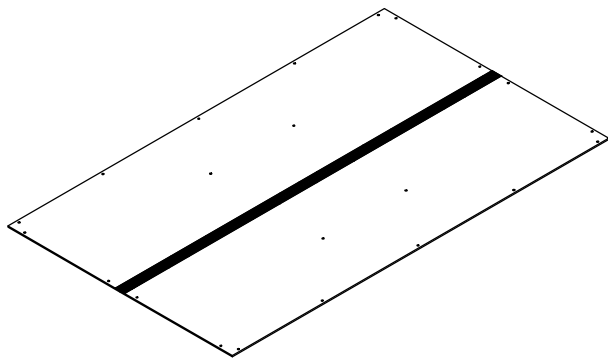


⑬

BACK PANEL

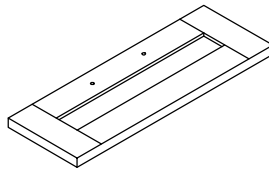


⑭

DRAWER FRONT PANEL
Qty:2

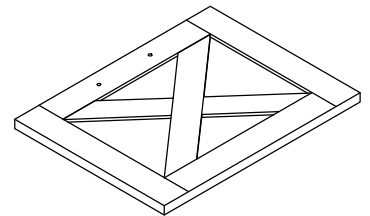


⑮

DRAWER FRONT PANEL
Qty:2

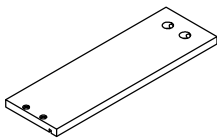


⑯

DRAWER LEFT SIDE PANEL
Qty:2

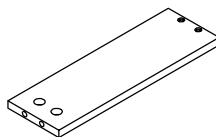

⑰

DRAWER RIGHT SIDE PANEL
Qty:2

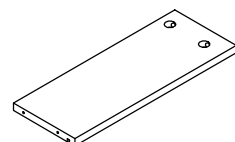


⑱

DRAWER LEFT SIDE PANEL
Qty:2


Board Identification

Not actual size

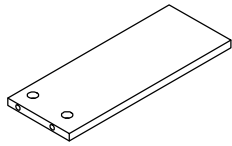


19

DRAWER RIGHT SIDE PANEL
Qty:2

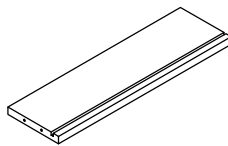


20

DRAWER BACK PANEL
Qty:2

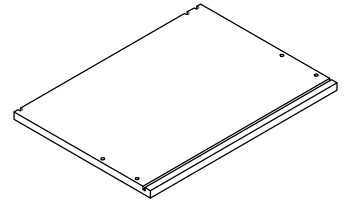


21

DRAWER BACK PANEL
Qty:2

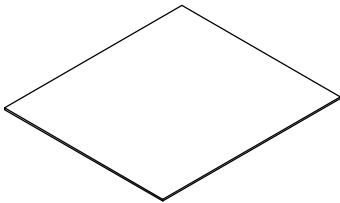

22

DRAWER BOTTOM PANEL
Qty:2

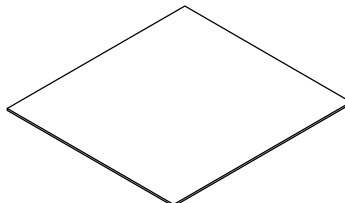


23


DRAWER BOTTOM PANEL
Qty:2

Board Identification


Not actual size

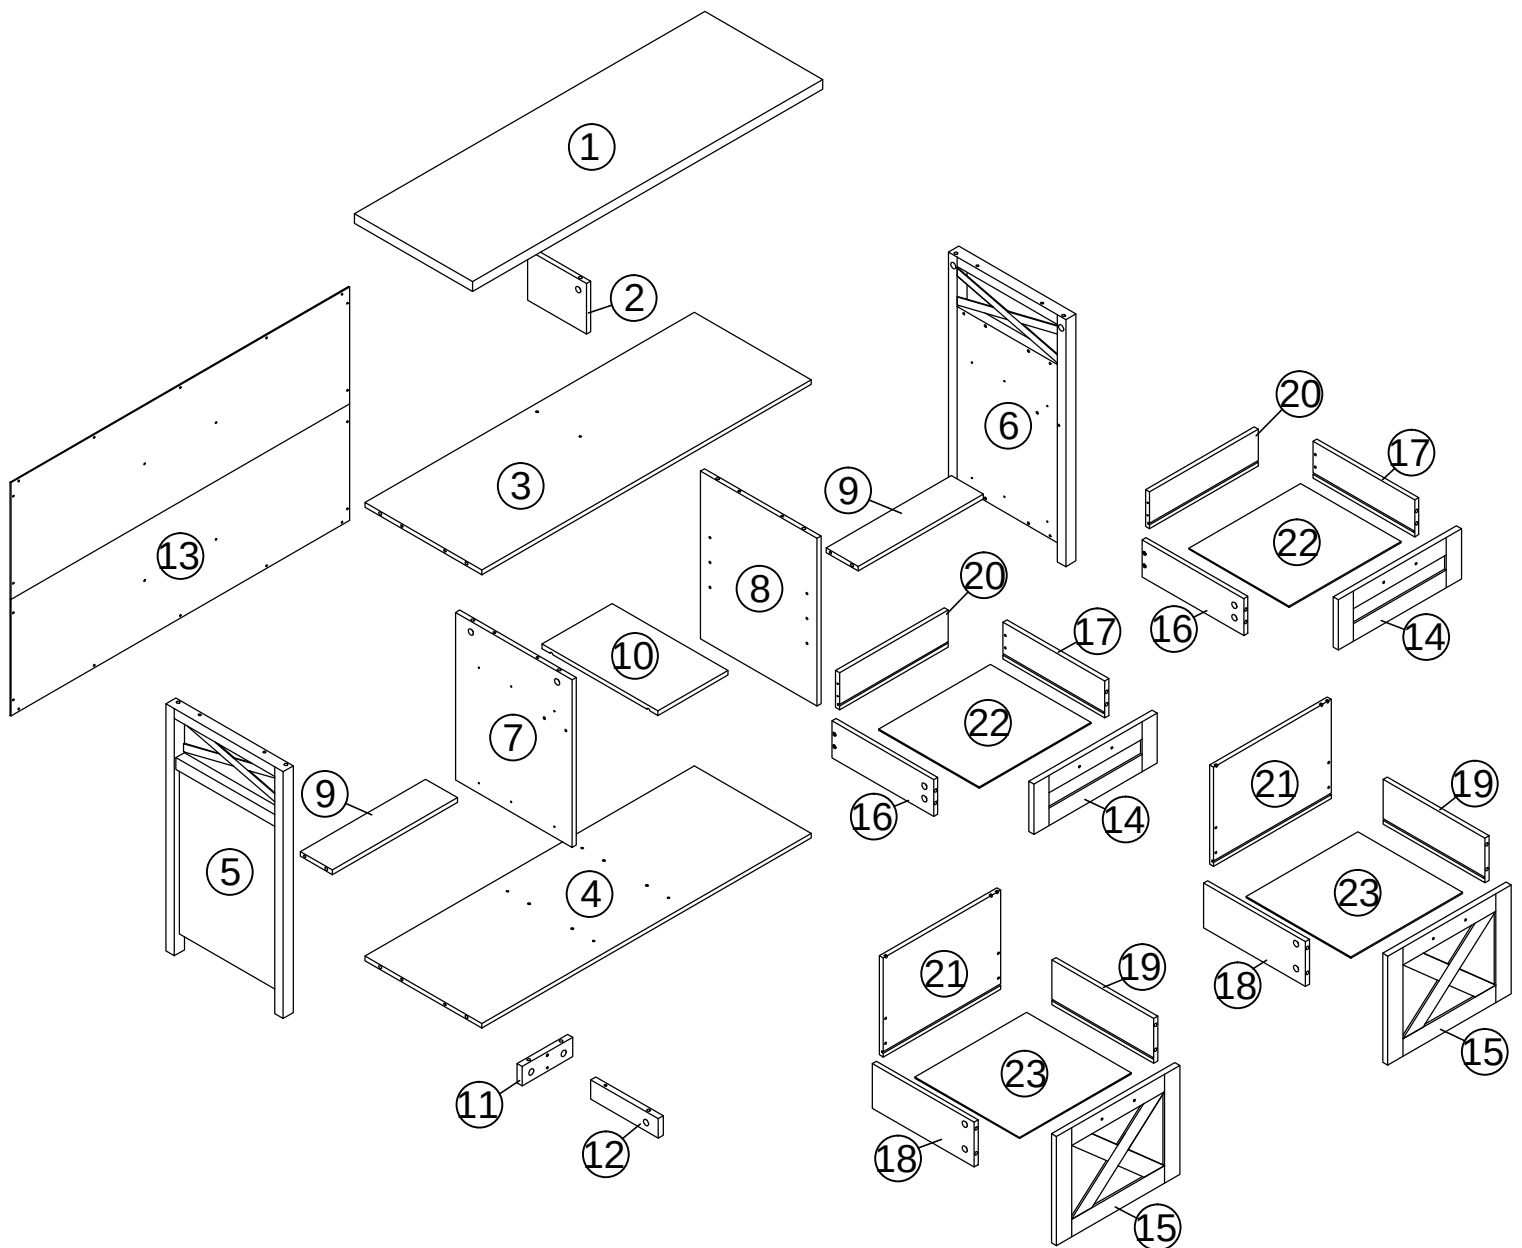


Part List

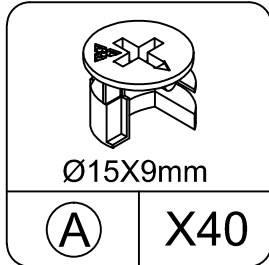


CAM LOCK
spare: 3

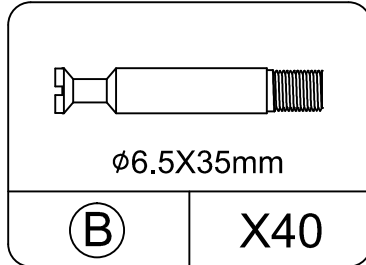


CAM BOLT
spare: 3

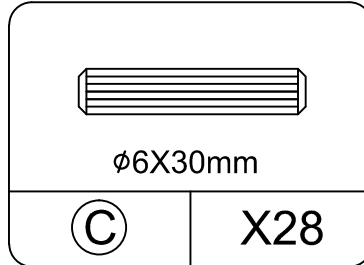


WOOD DOWEL
spare: 3

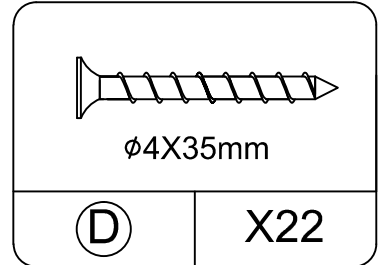


SCREW
spare: 2

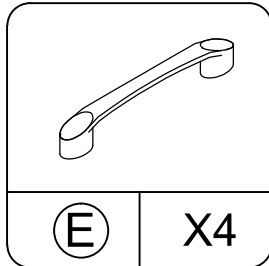


HANDLE

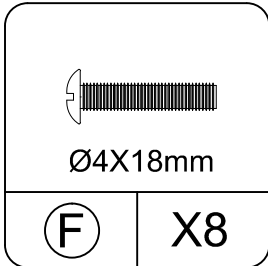


SCREW
spare: 1

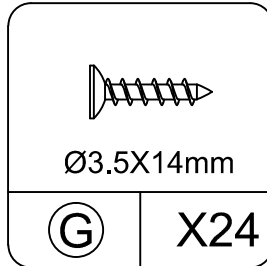


SCREW
spare: 3

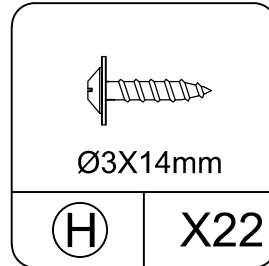


SCREW
spare: 3

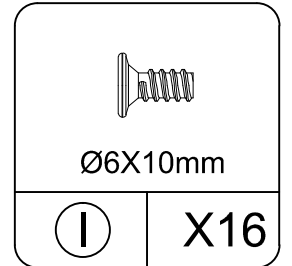


SCREW
spare: 2

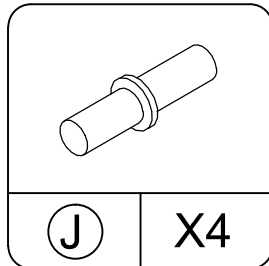


SHELF SUPPORT

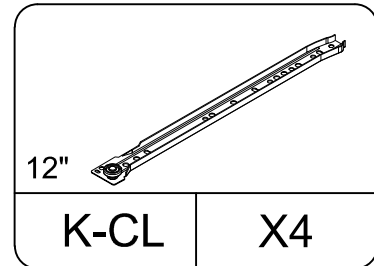


LEFT CABINET MEMBER

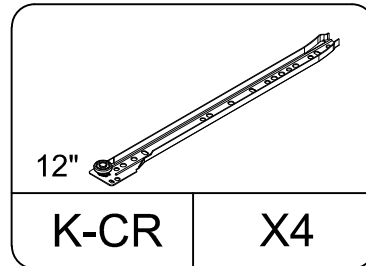



RIGHT CABINET MEMBER

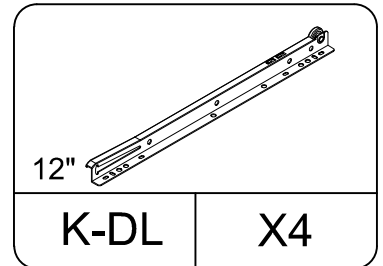

LEFT DRAWER RUNNER

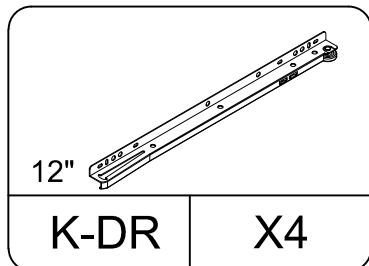

RIGHT DRAWER RUNNER

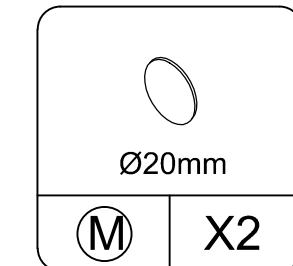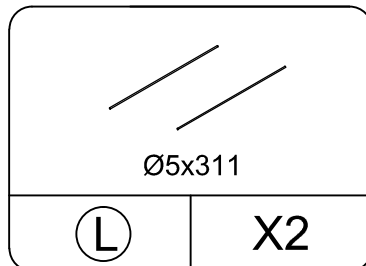


SCAM LOCK COVER


Part List

Cam Lock Fastening System










Insert the cam bolt into the hole first, then insert the cam lock and lock it.

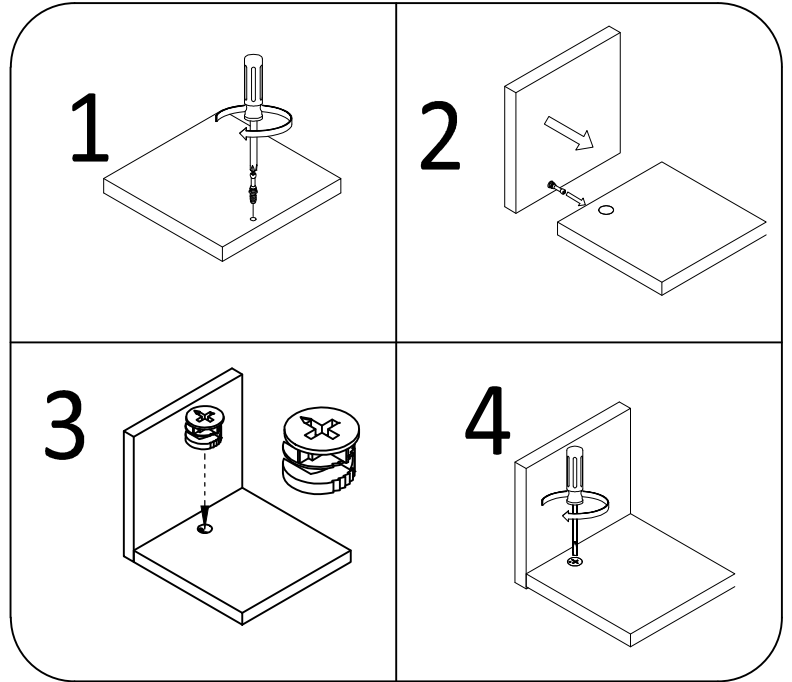


STEP1

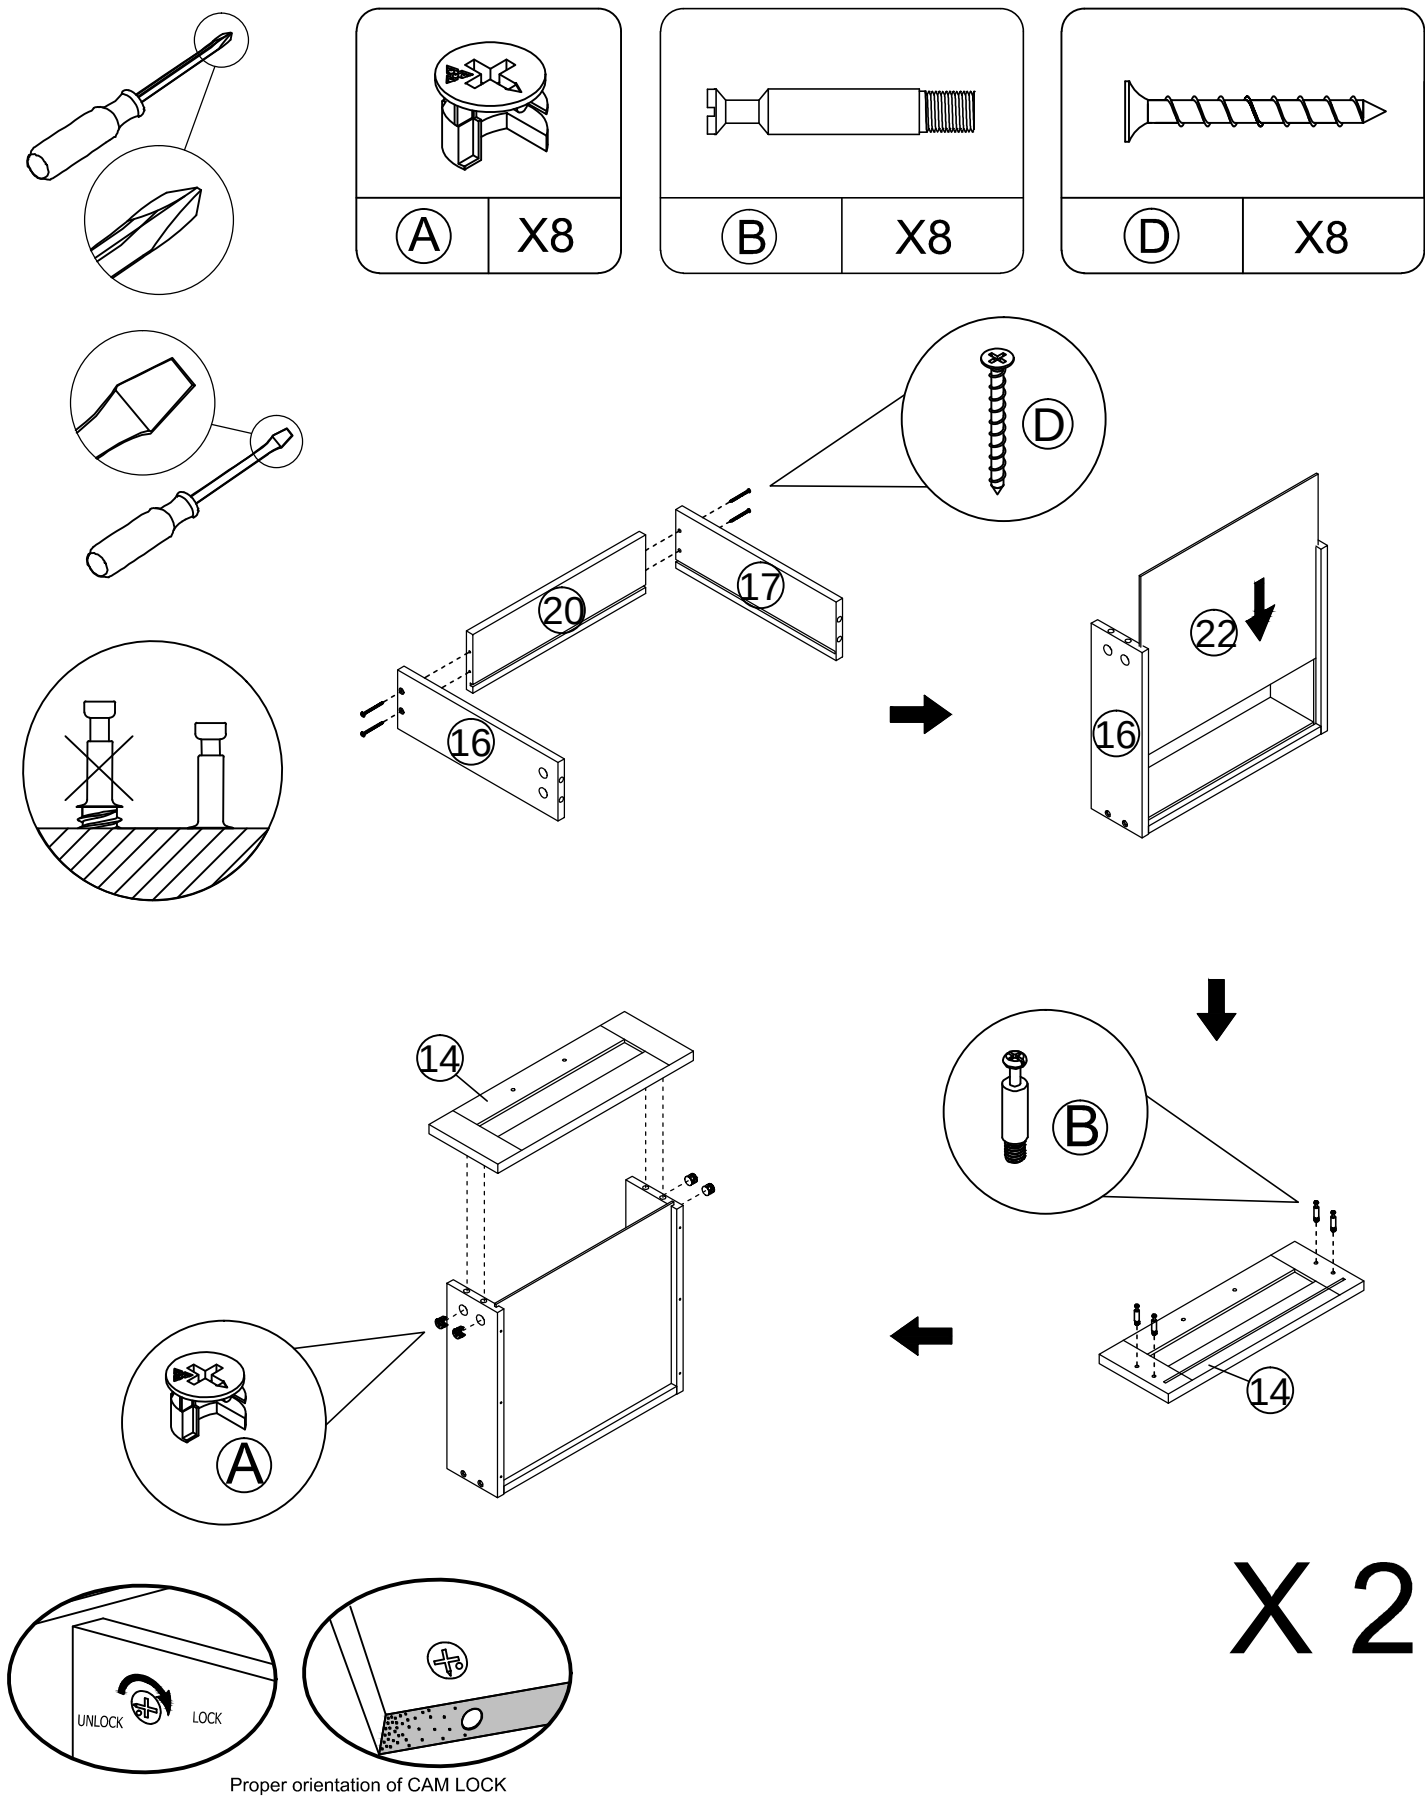

STEP2

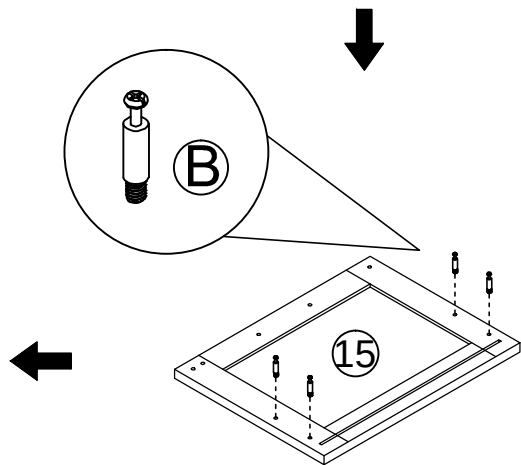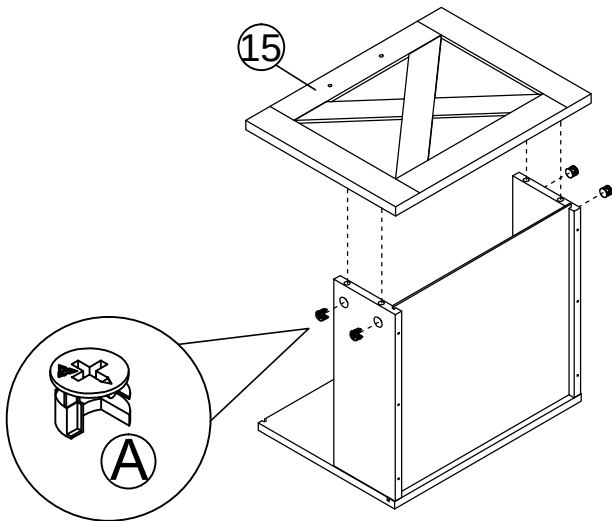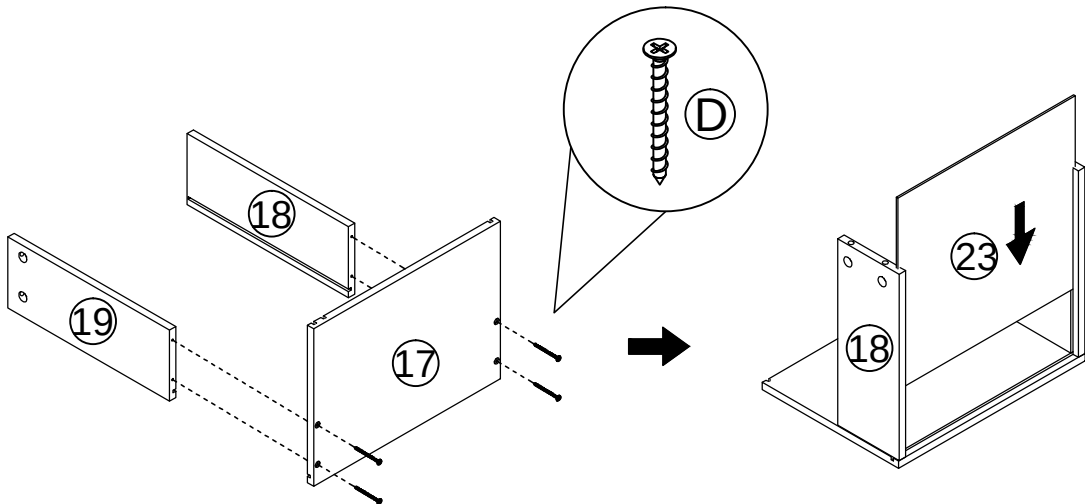
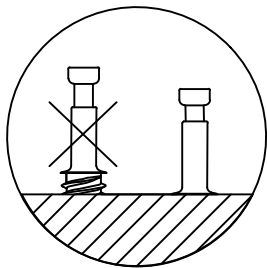
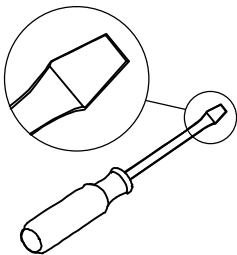
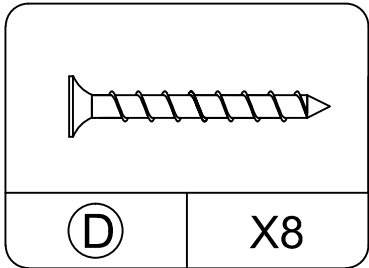
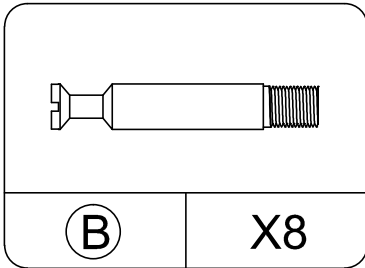
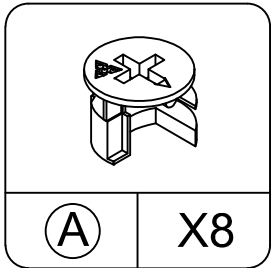
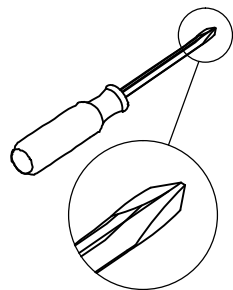


X 2







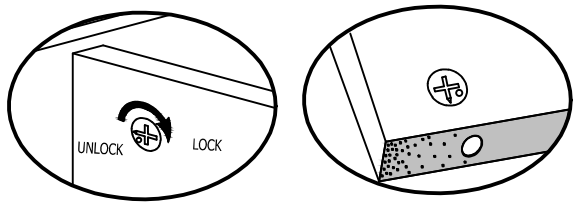


Proper orientation of CAM LOCK















STEP3

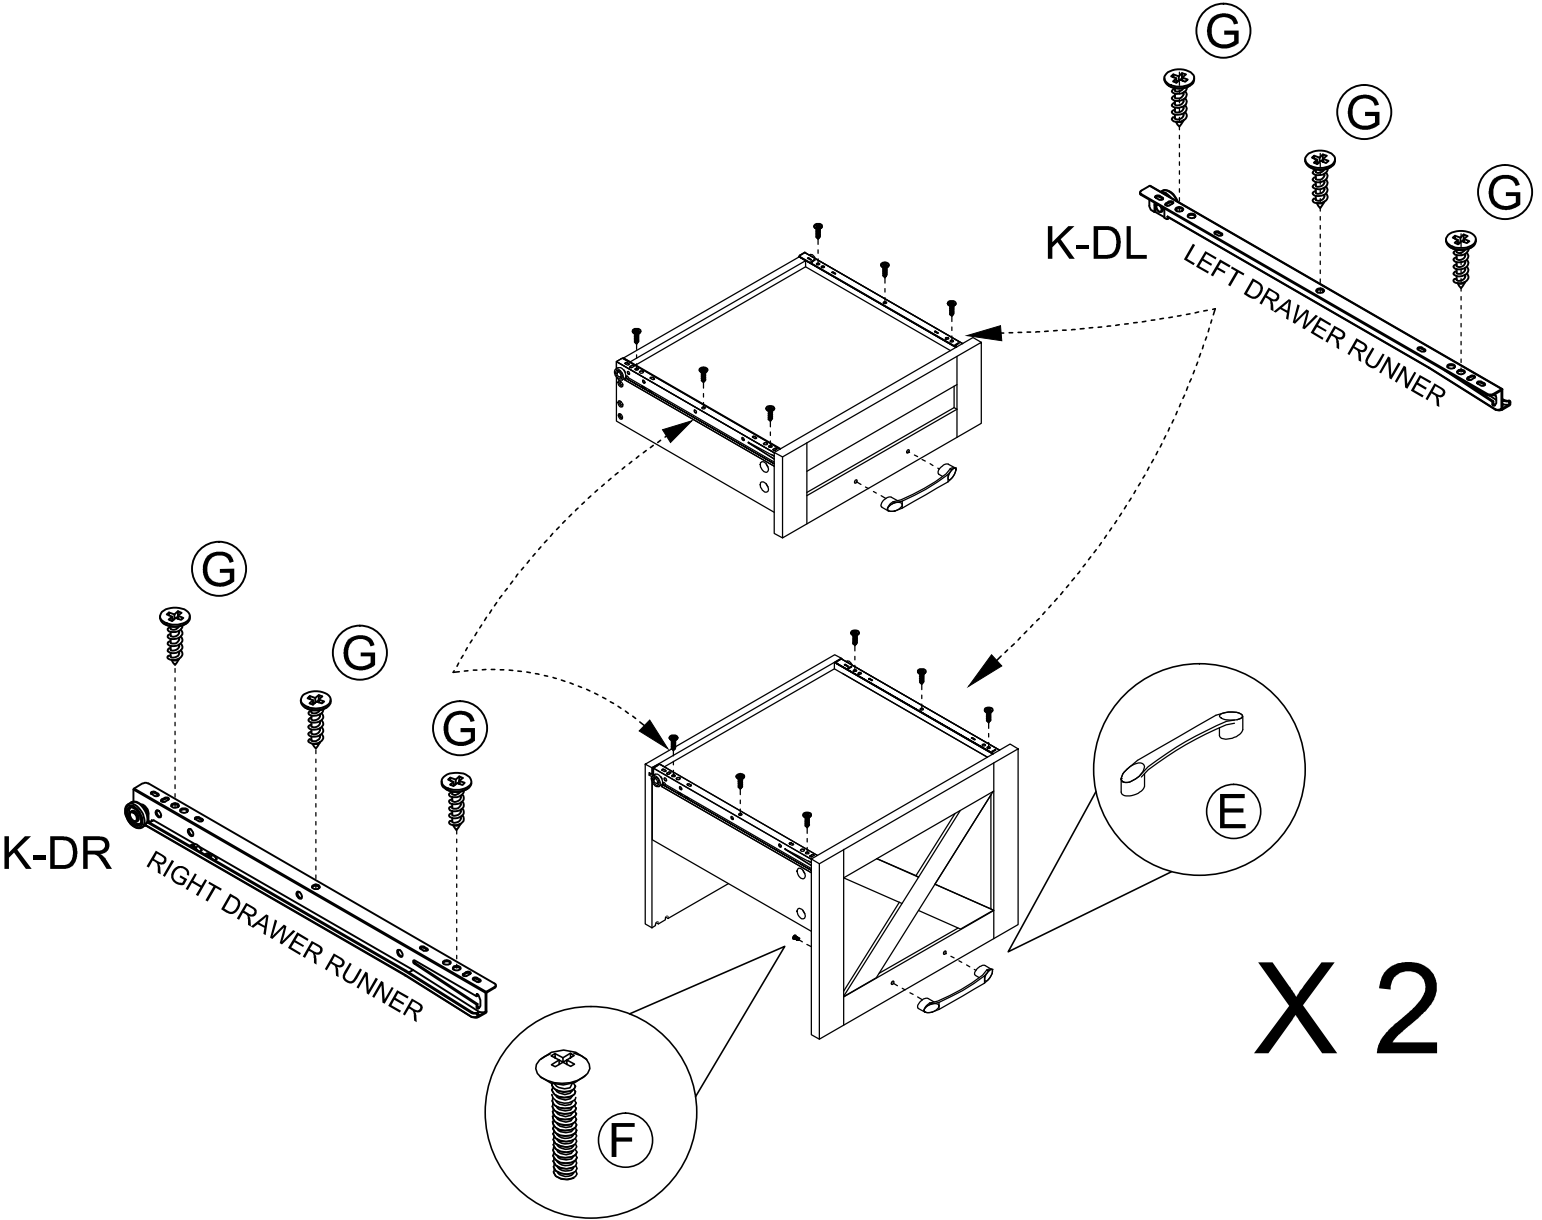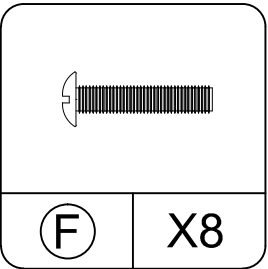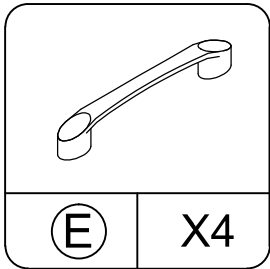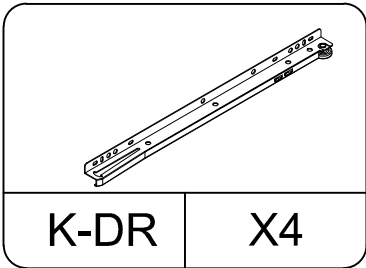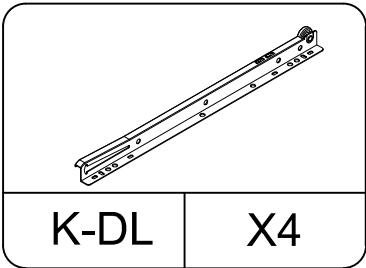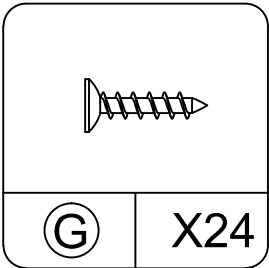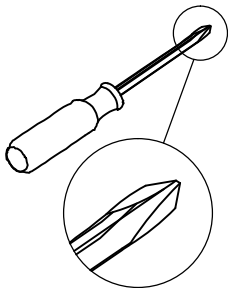

STEP4


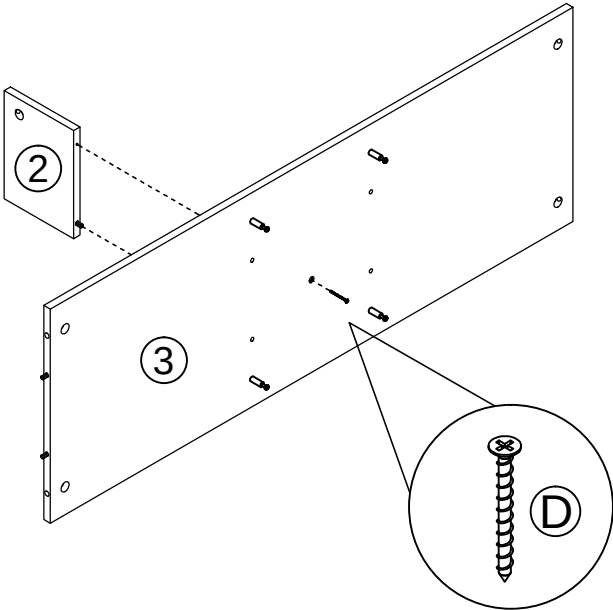
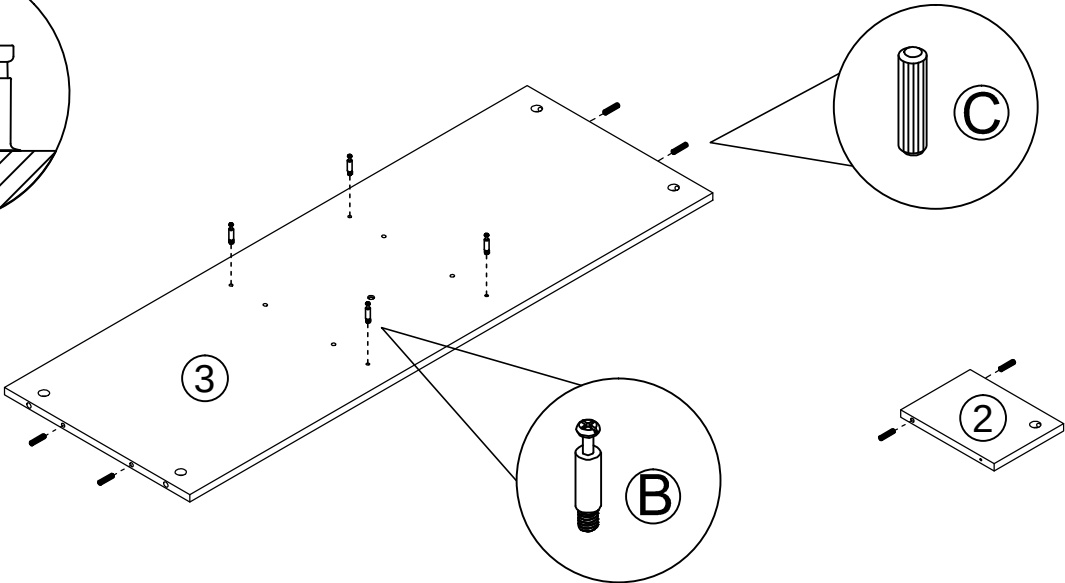
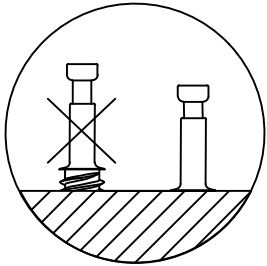
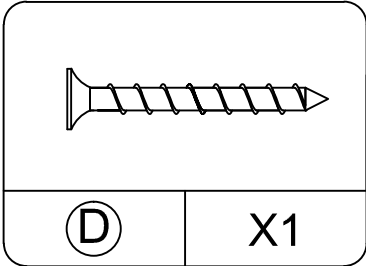
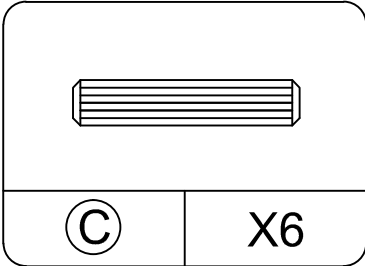
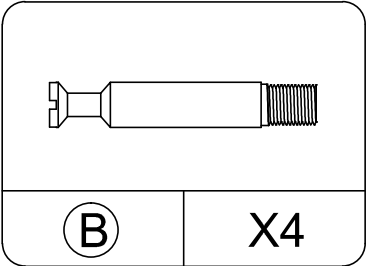
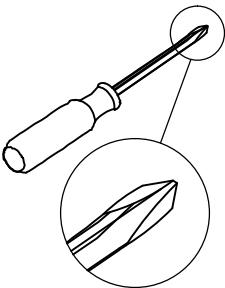


STEP5

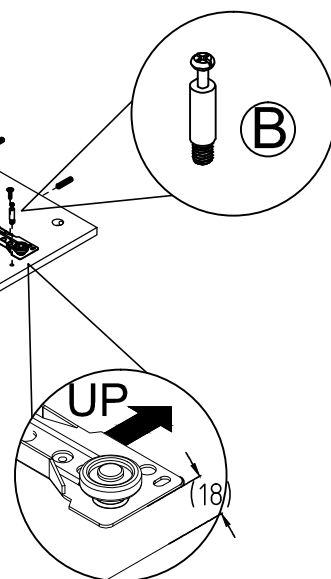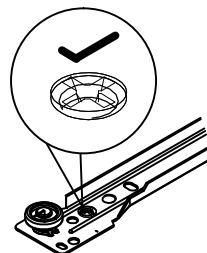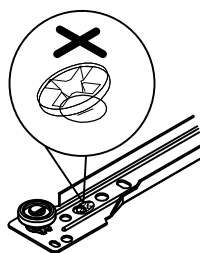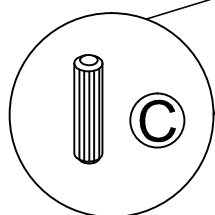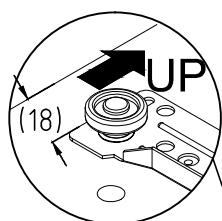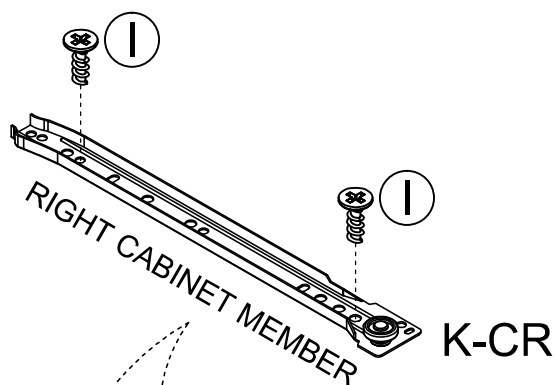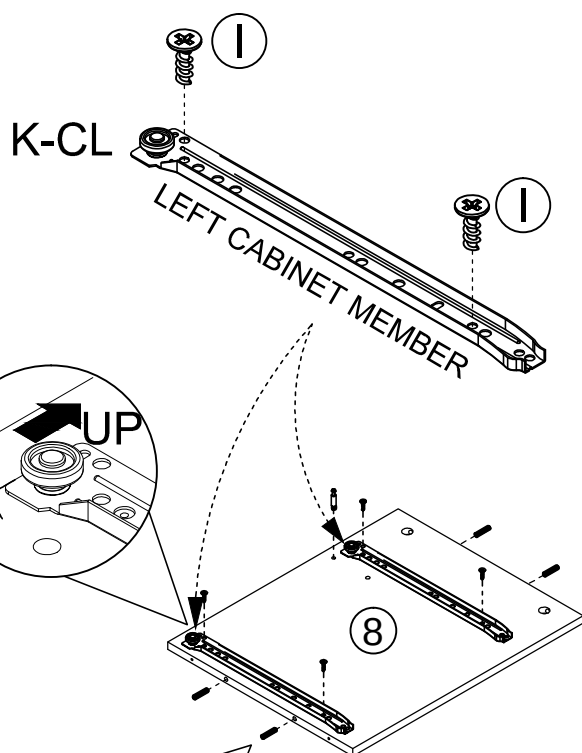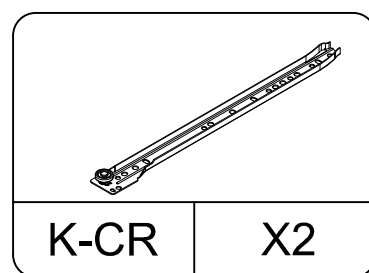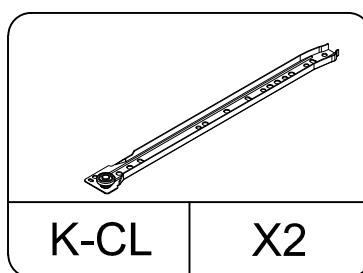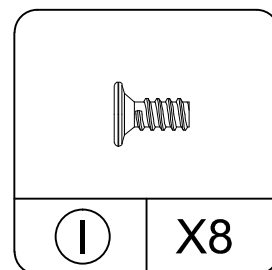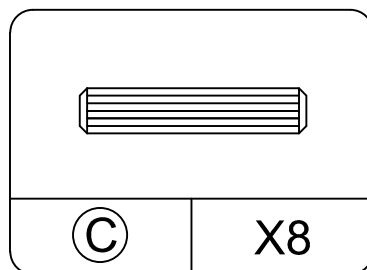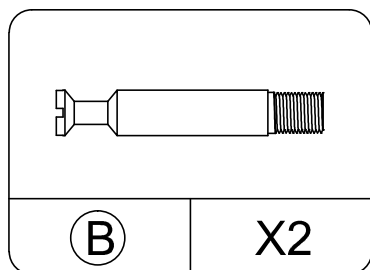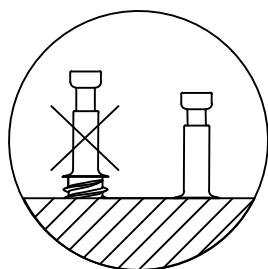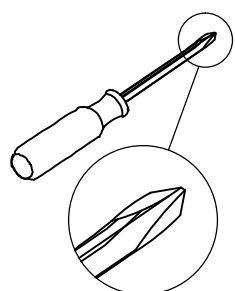





Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP6

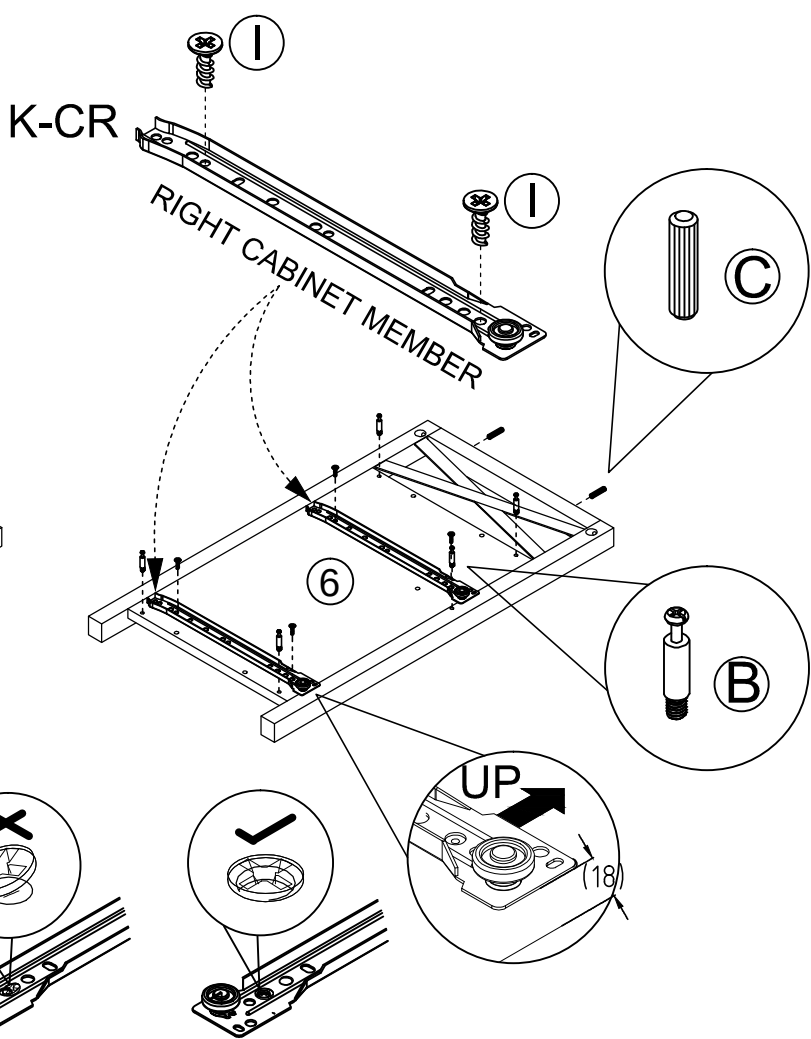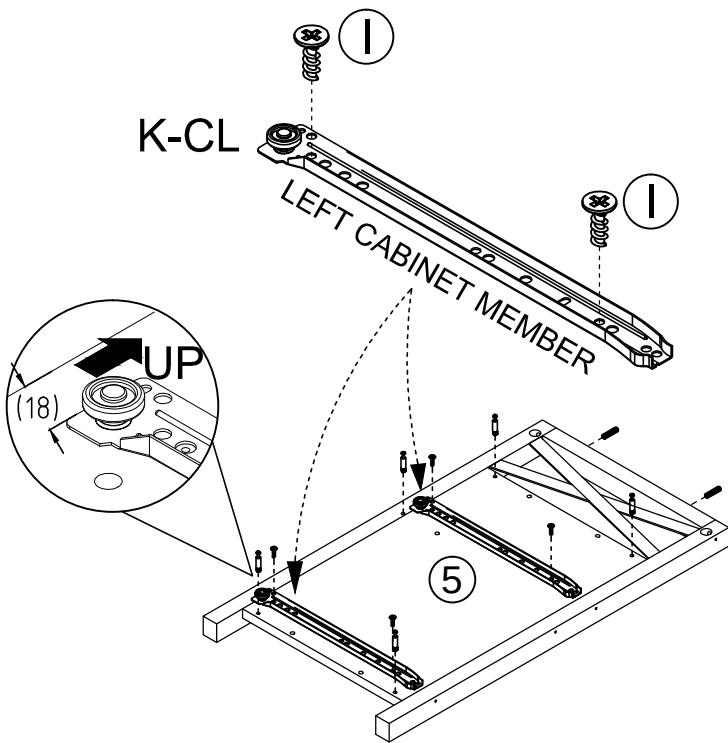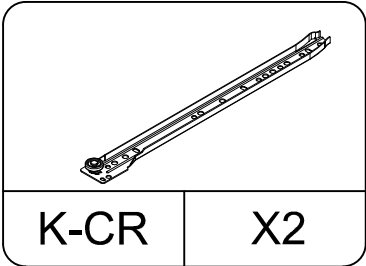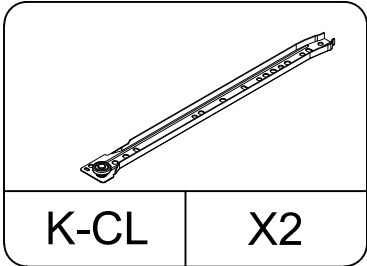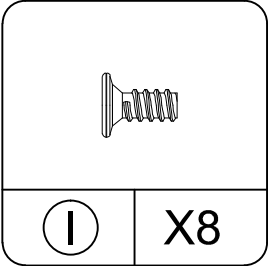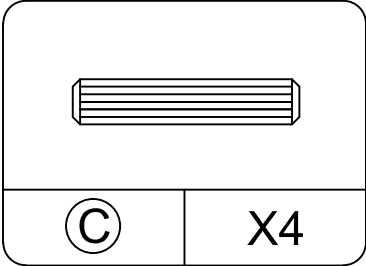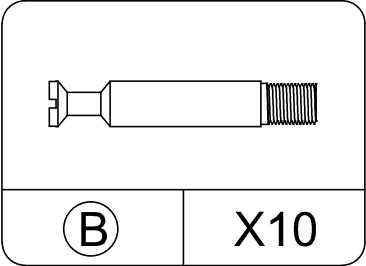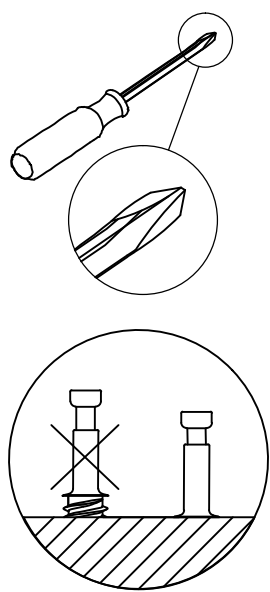


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP7







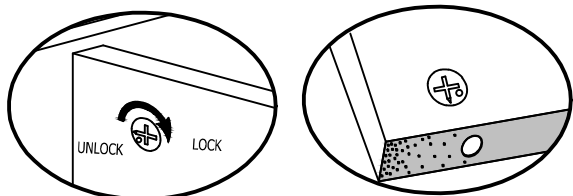
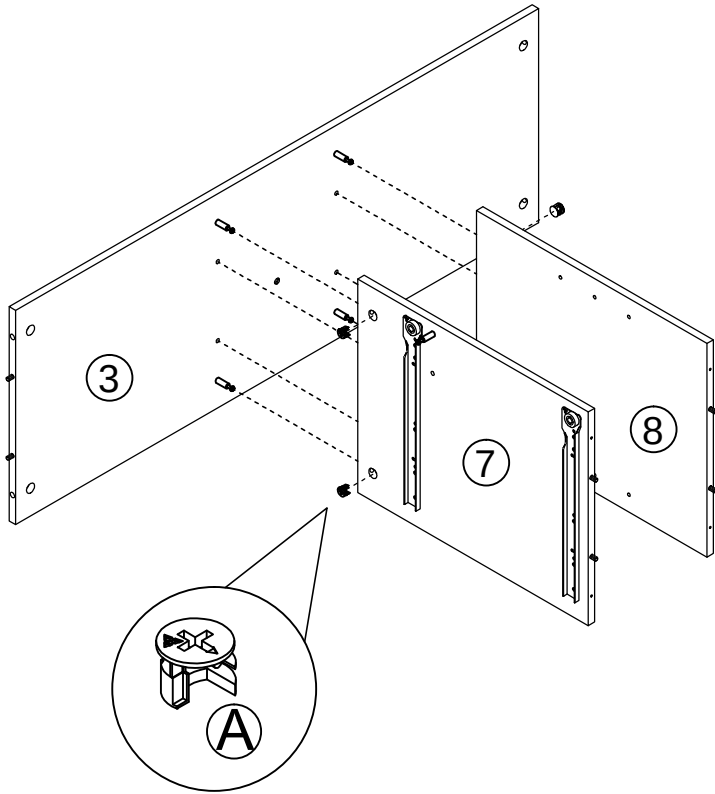
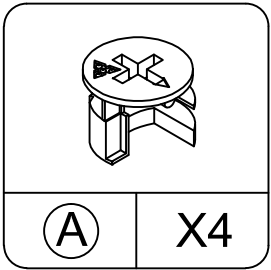
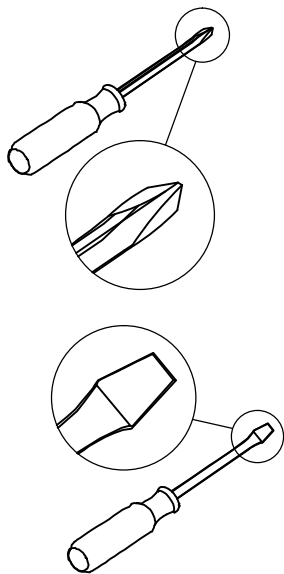


Proper orientation of CAM LOCK

STEP8





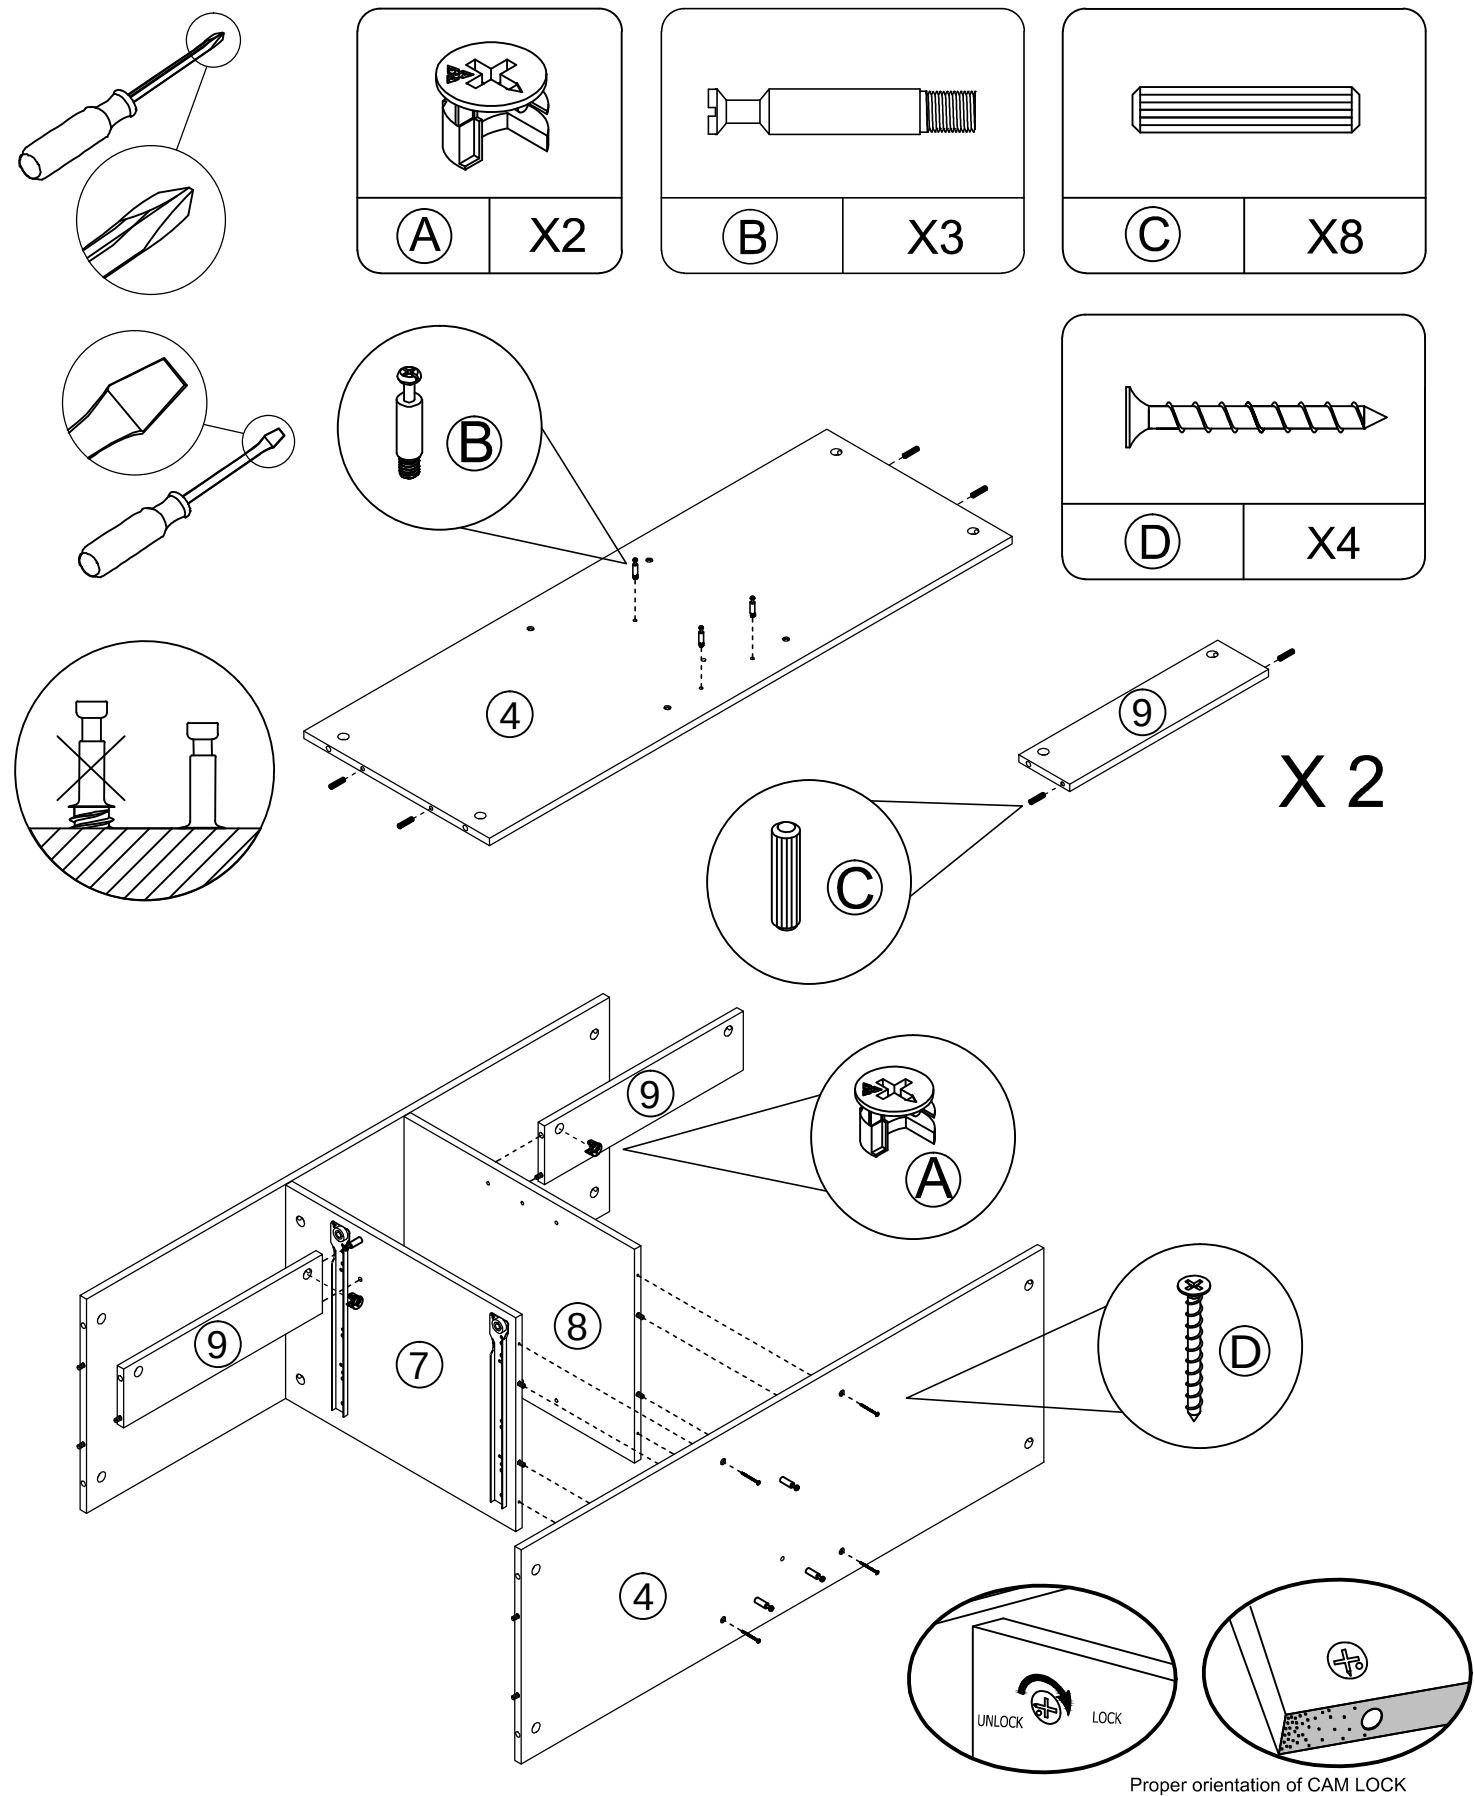


STEP9

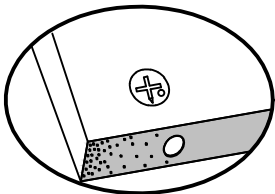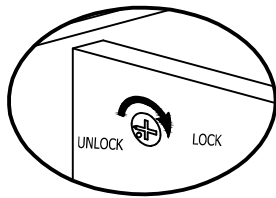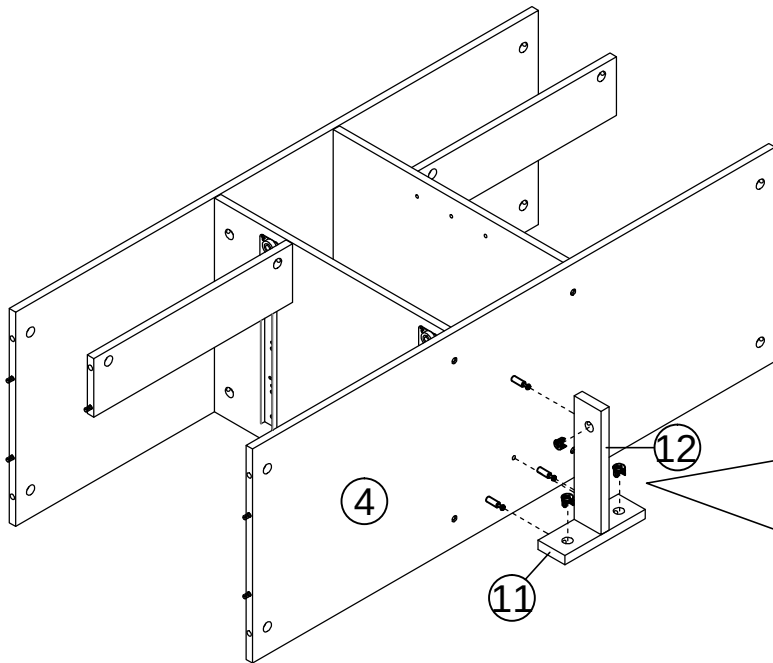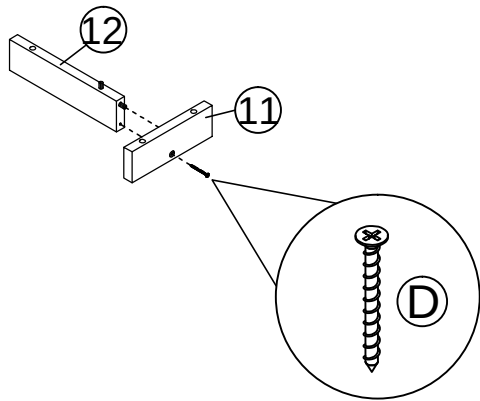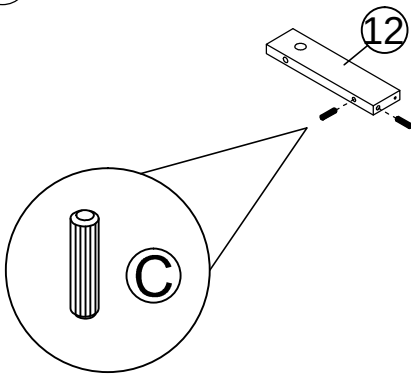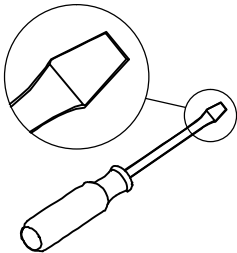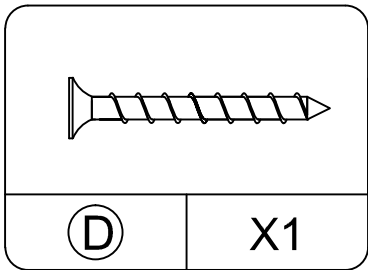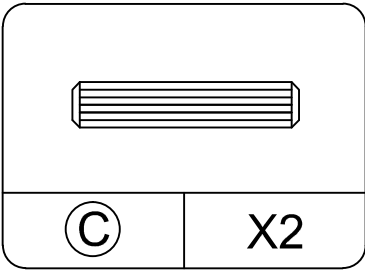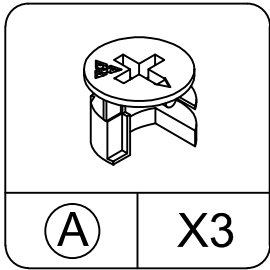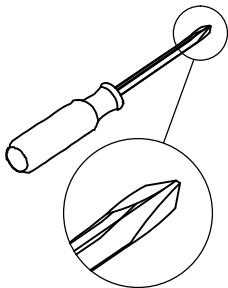


Proper orientation of CAM LOCK

STEP10

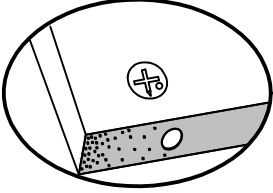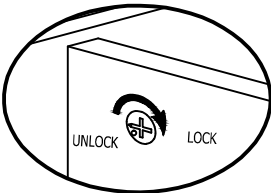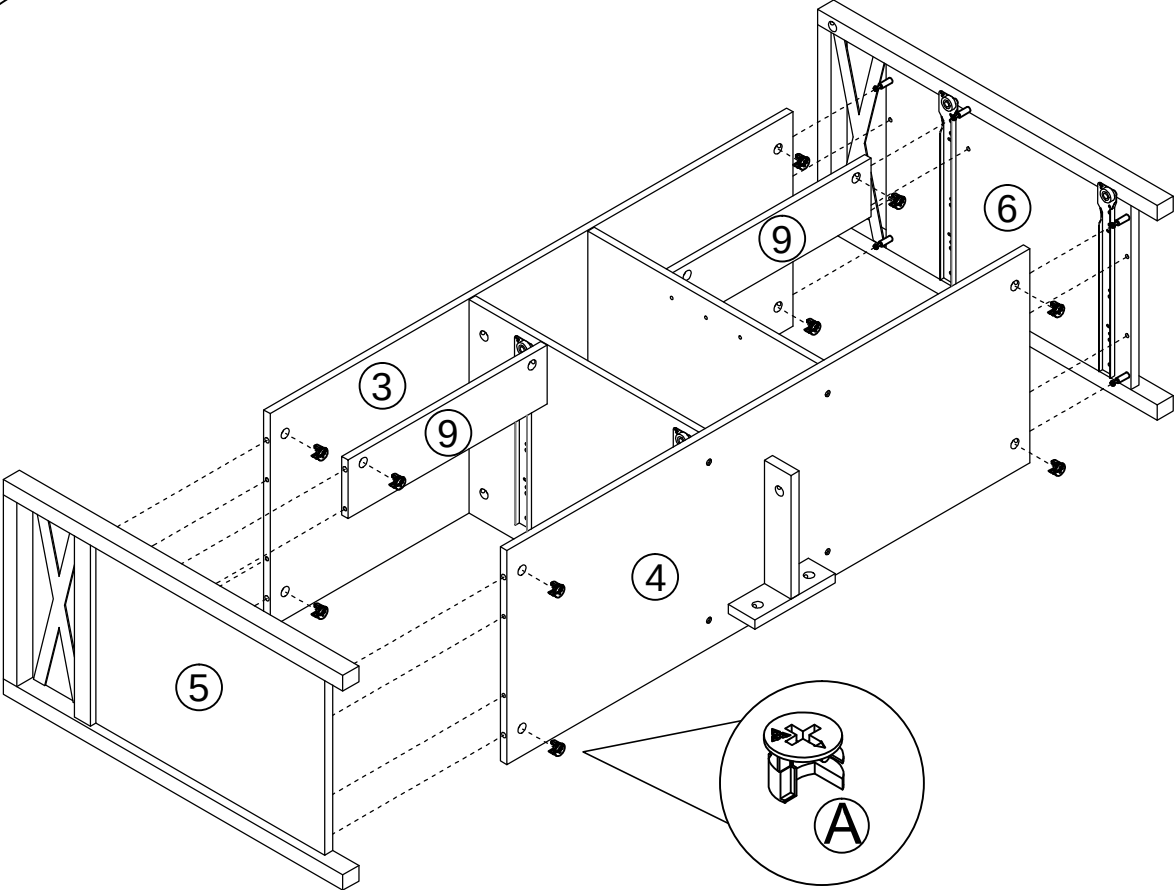
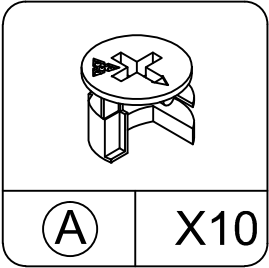
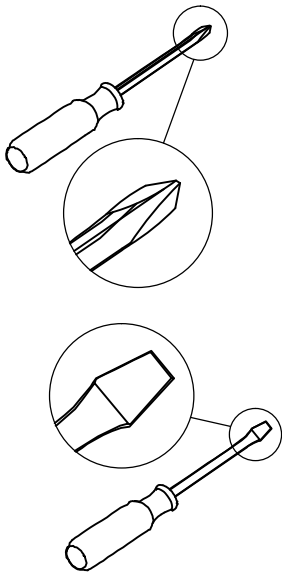


Proper orientation of CAM LOCK

STEP11

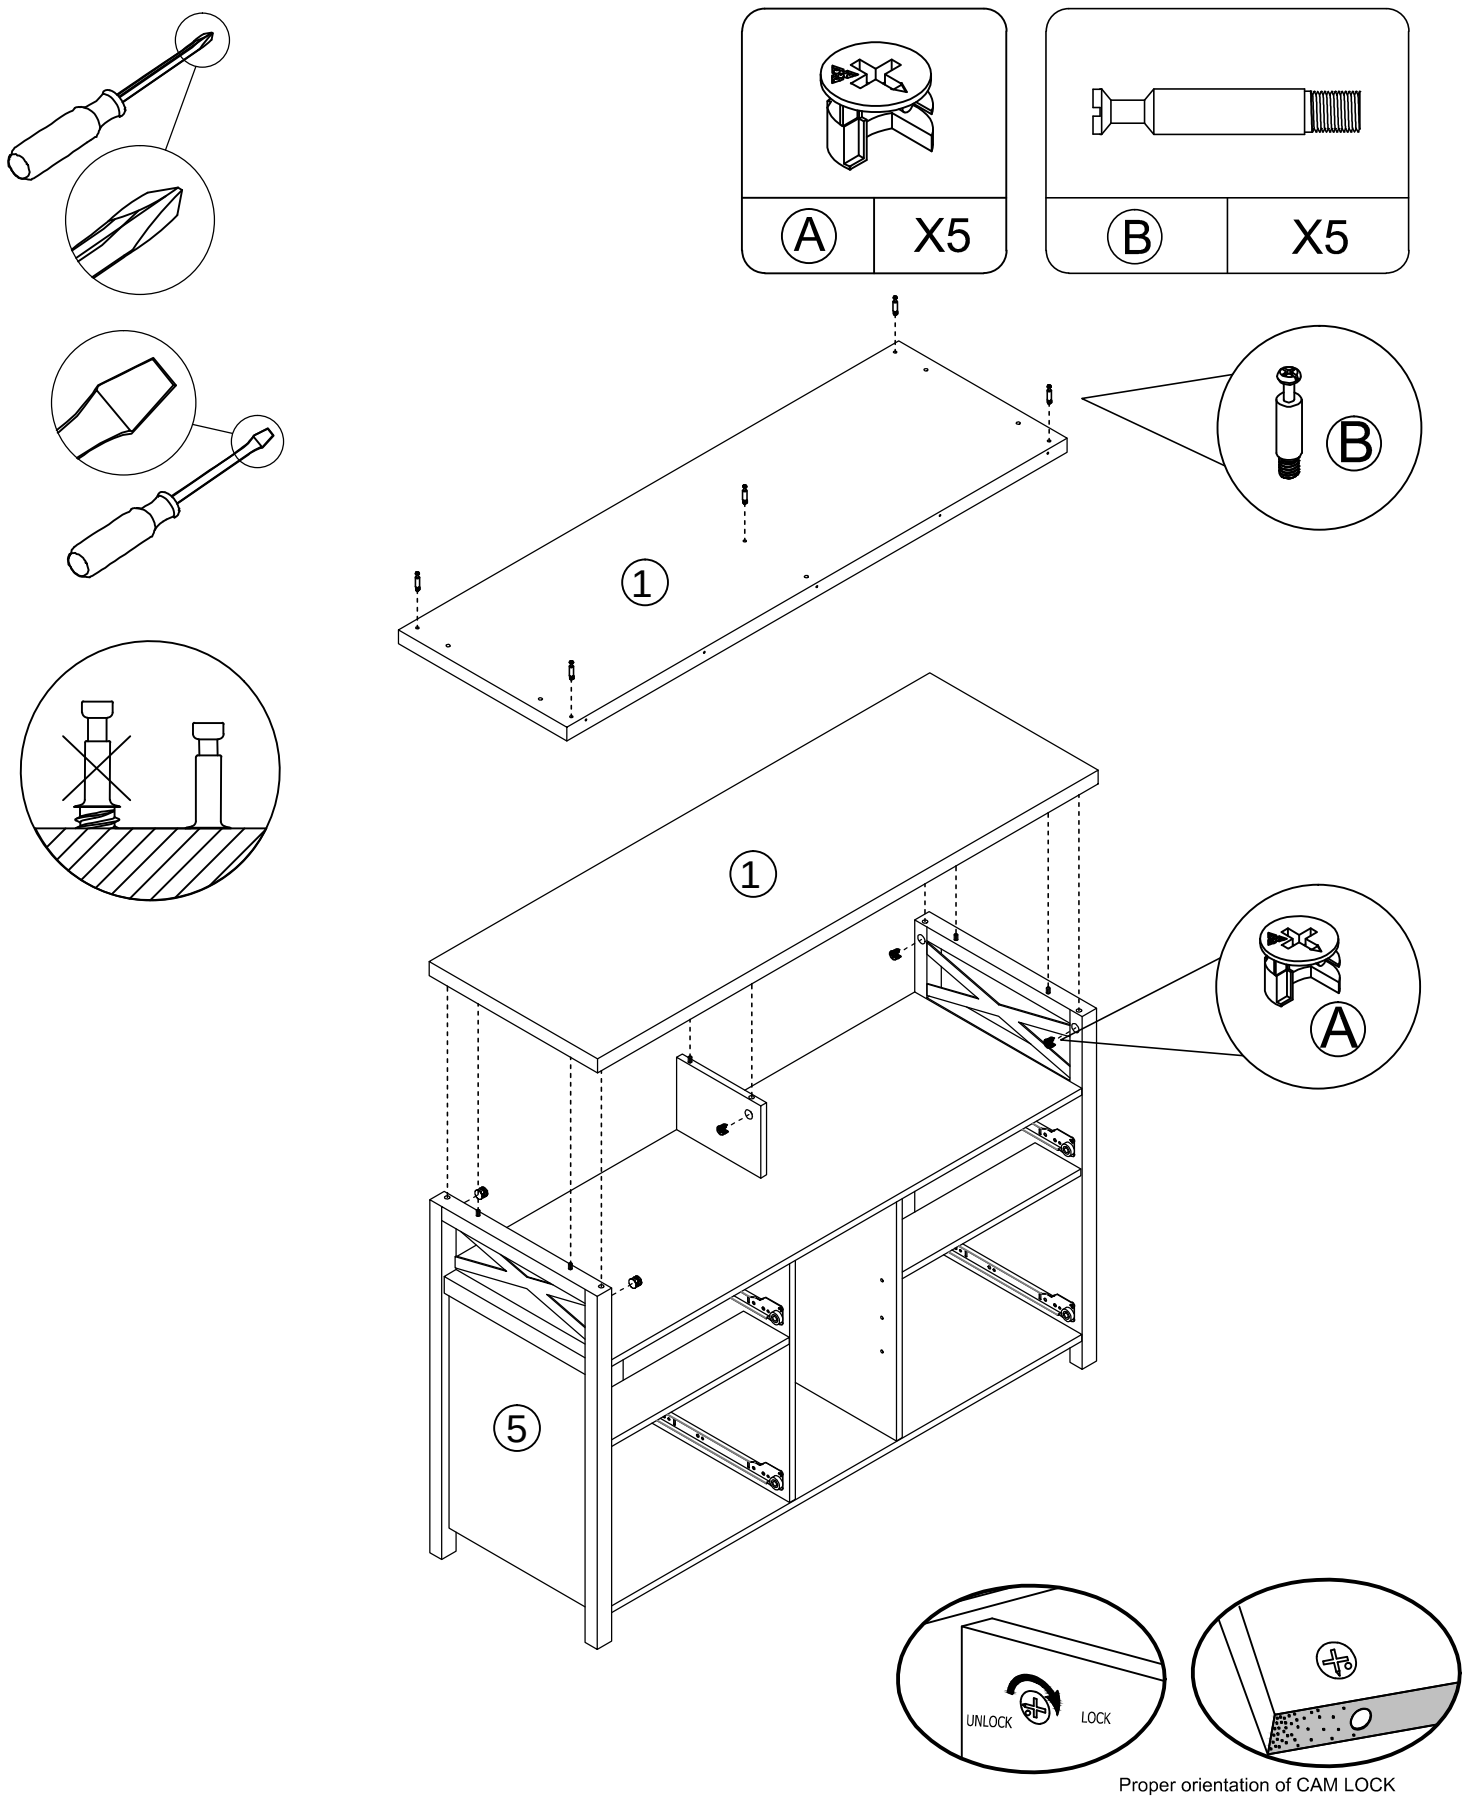


STEP12

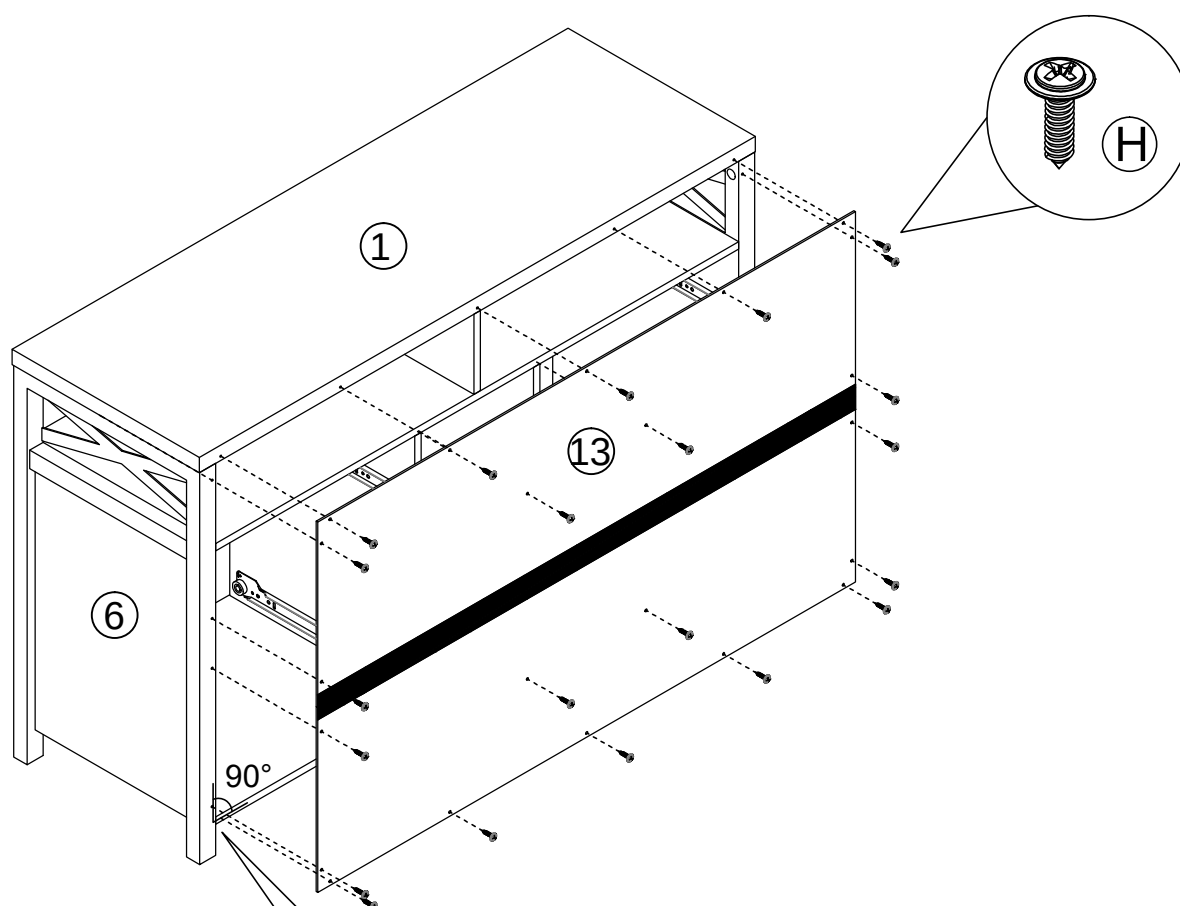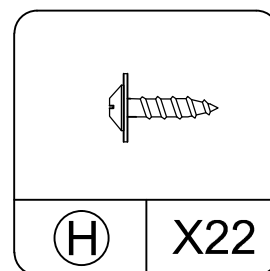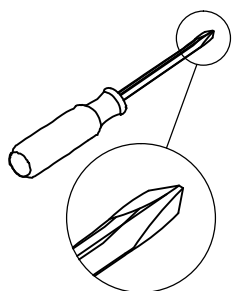

Before attaching the back panel, be sure that the unit is at 90°
Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°
Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

STEP13

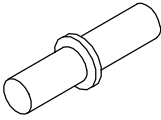

J X4



Ø5x311
L X2



M X2

