
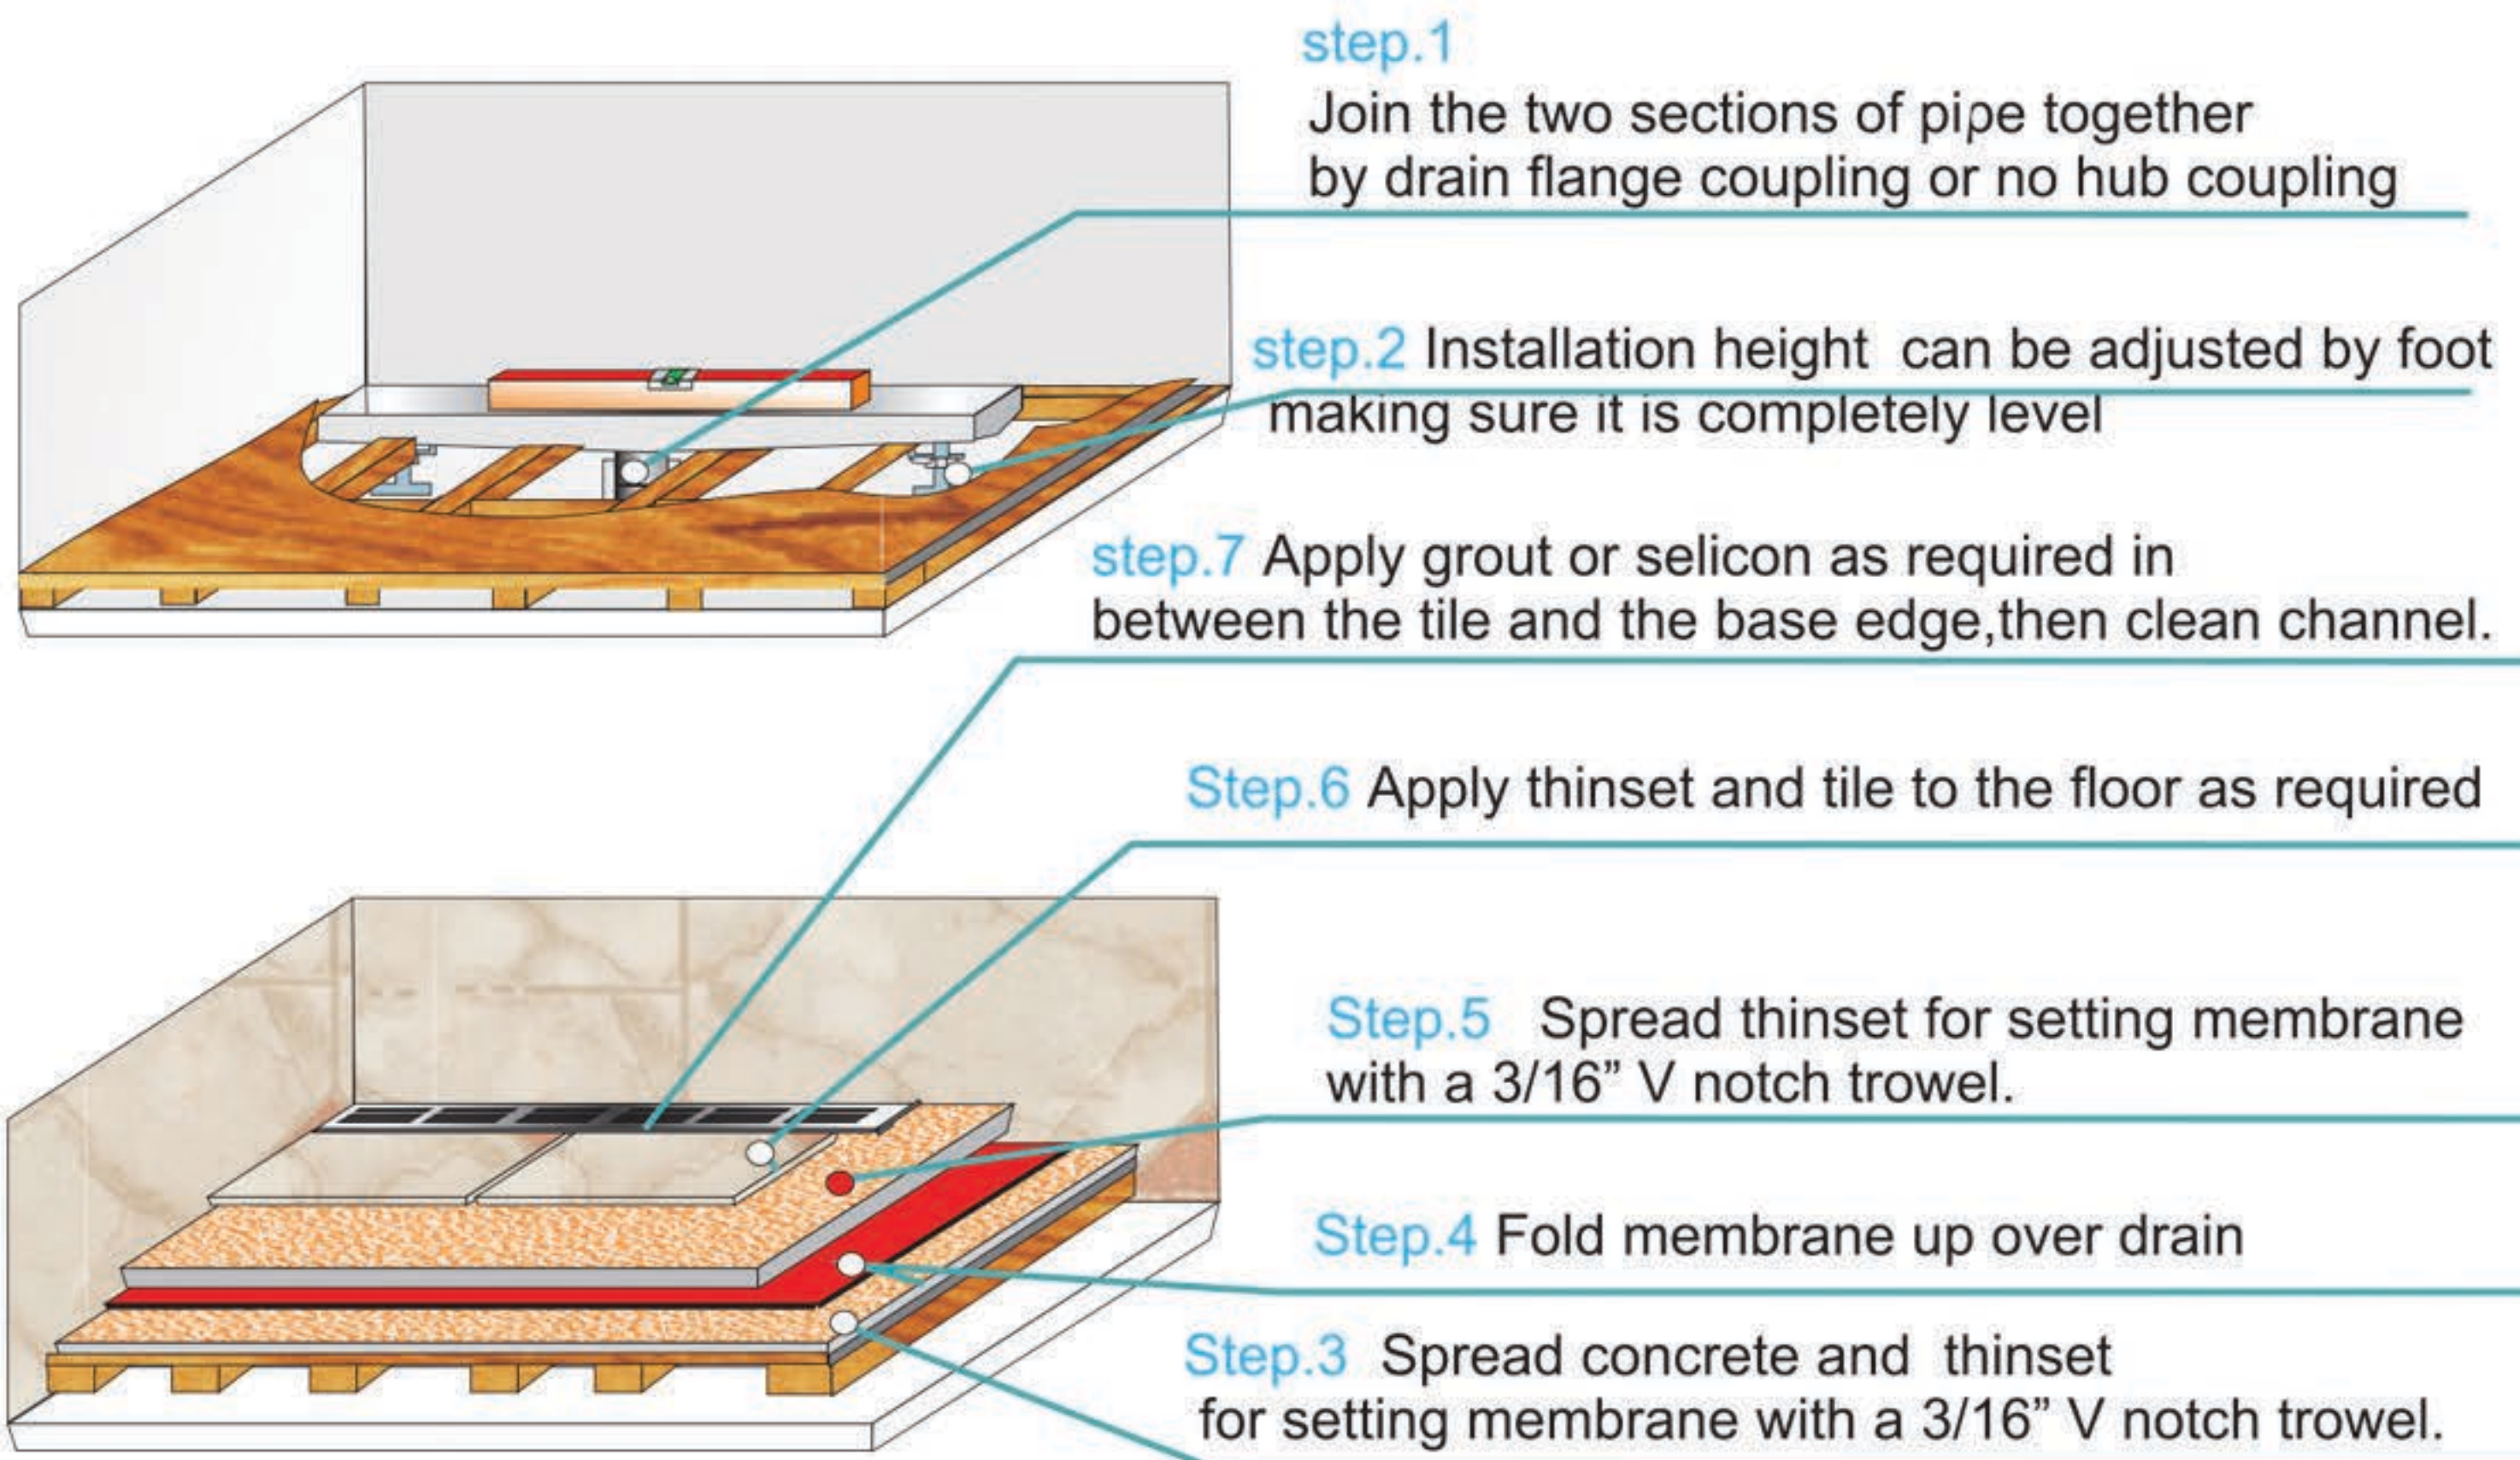


Linear Drain Installation

For Wood Slab

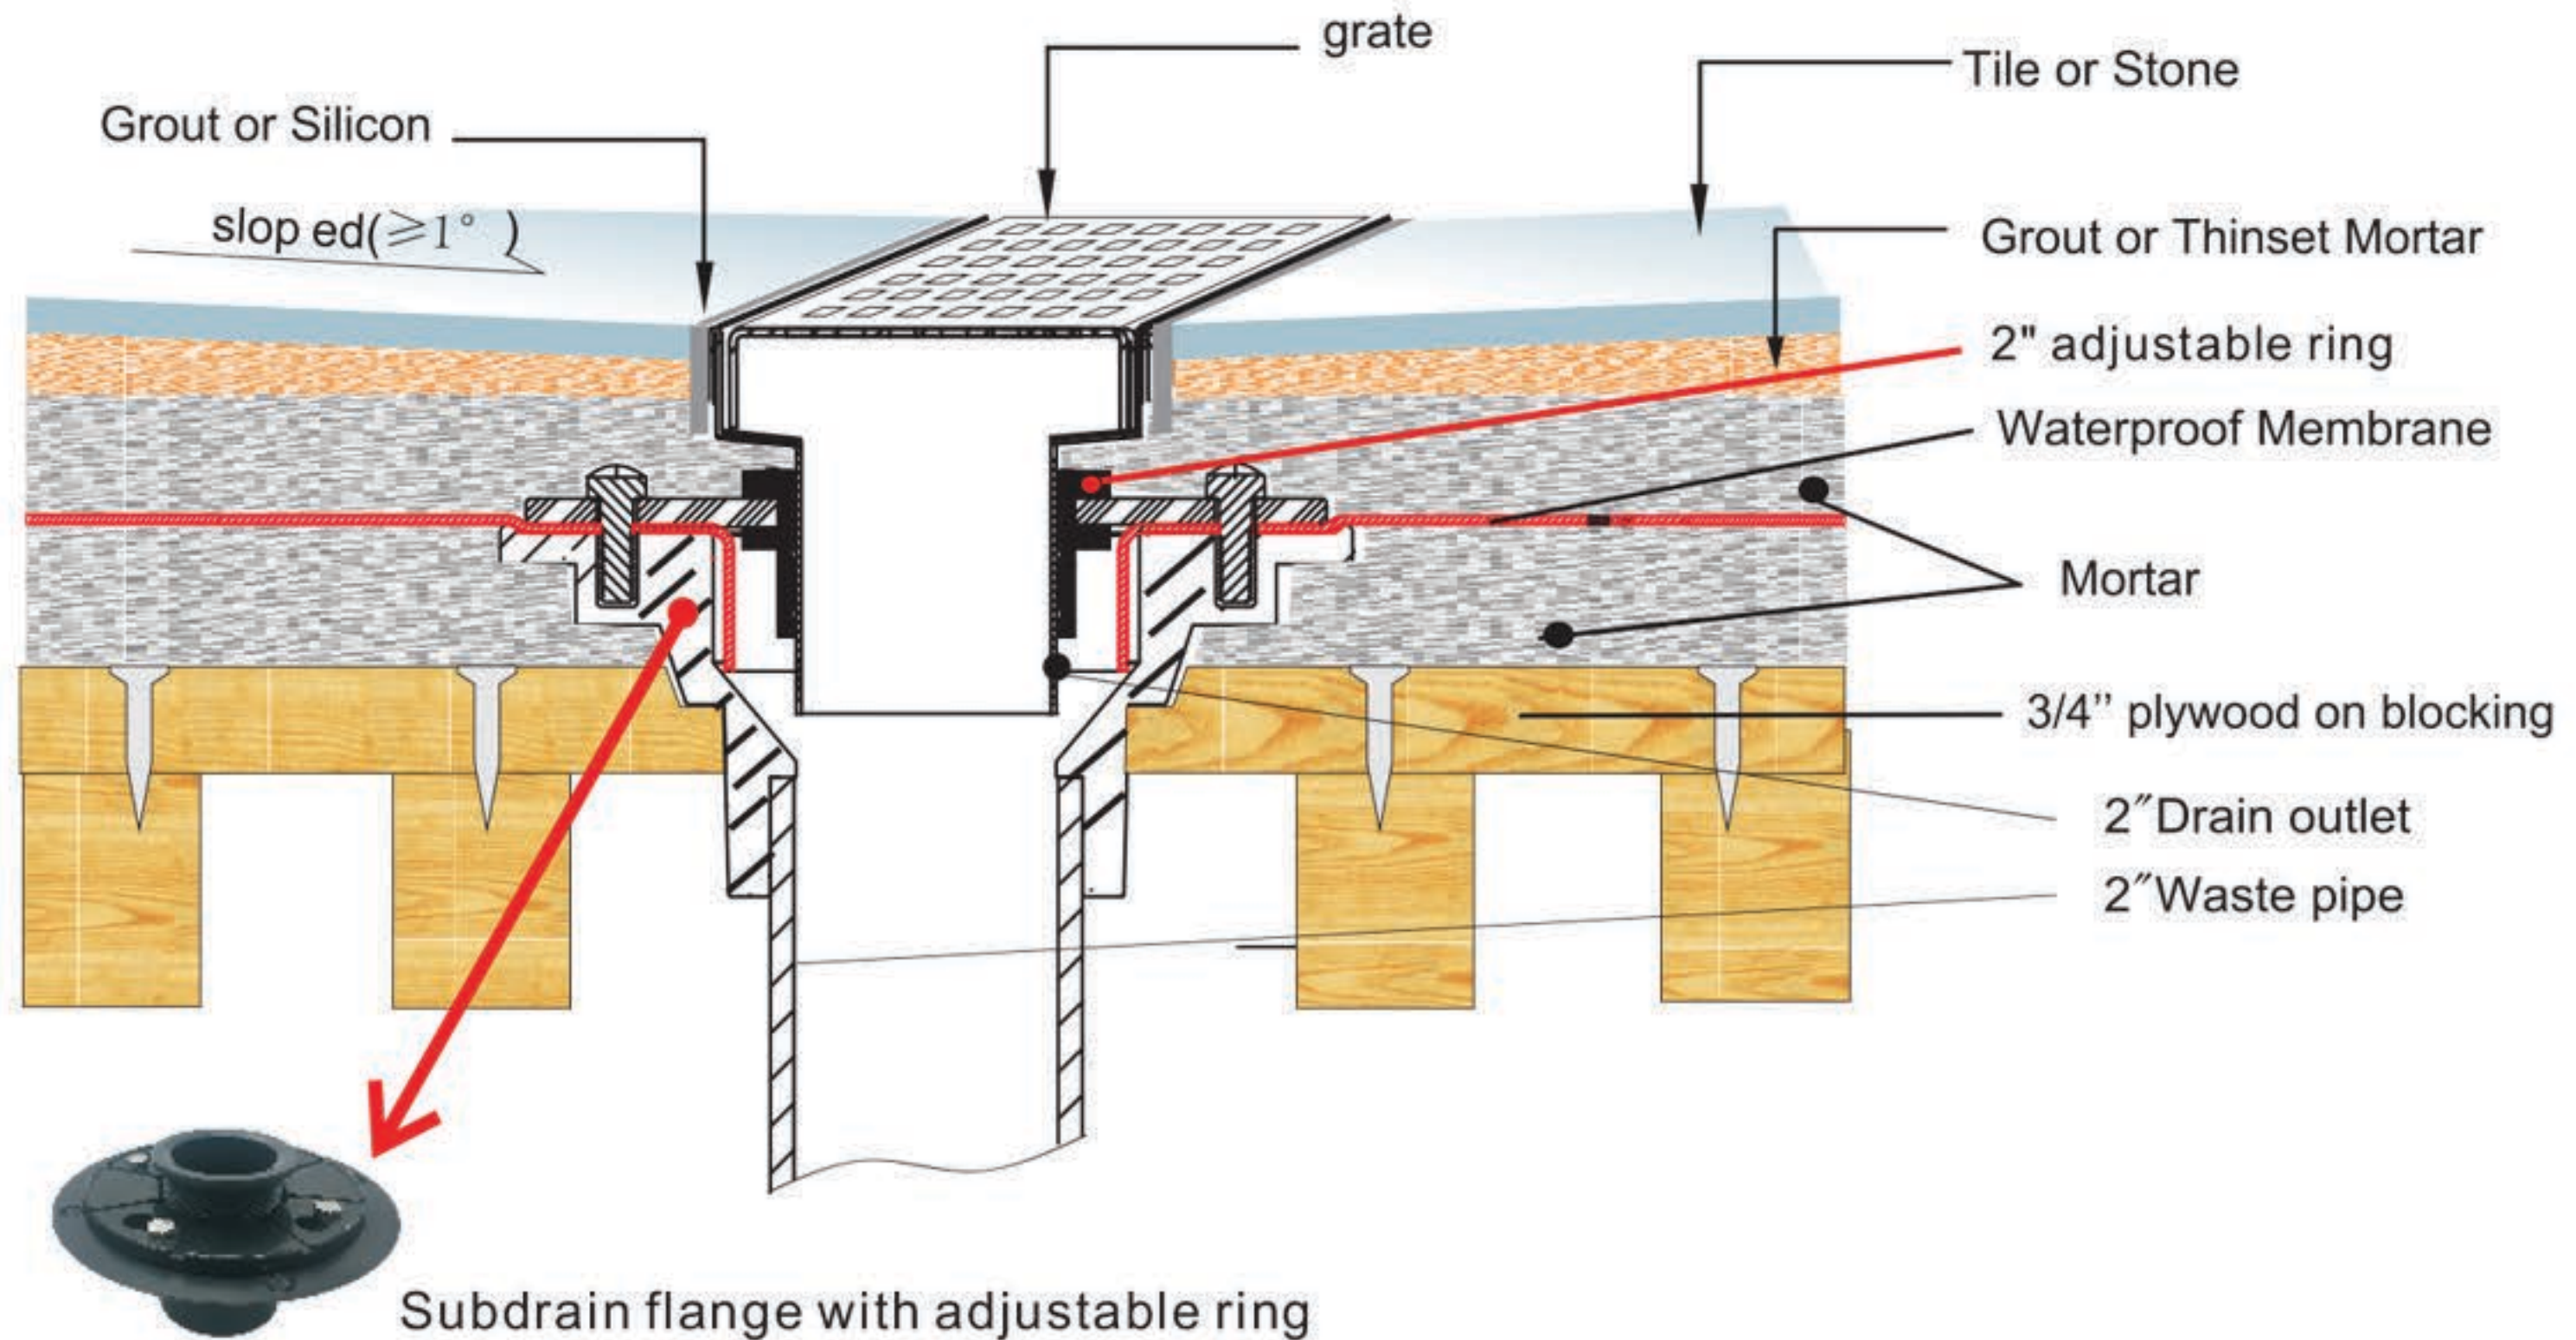

NOTE:

Follow local plumbing code,
use listed subdrain flange meeting ASME A 112.18.2