

Vertical Standard

#5141843

#5141844

#5141845

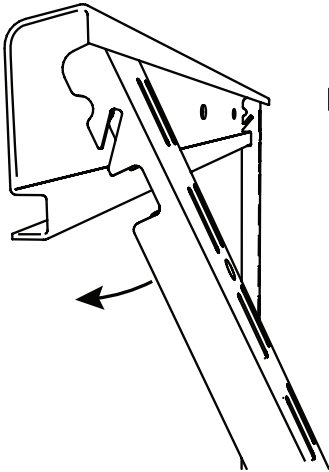


Fig. 1

1. Install Vertical Standards

The top rail is installed to support vertical standards. Install standards by hooking the top into the rail at an angle with the standard bottom away from wall and then let standard fall parallel with the wall to engage into the rail. **Fig. 1**

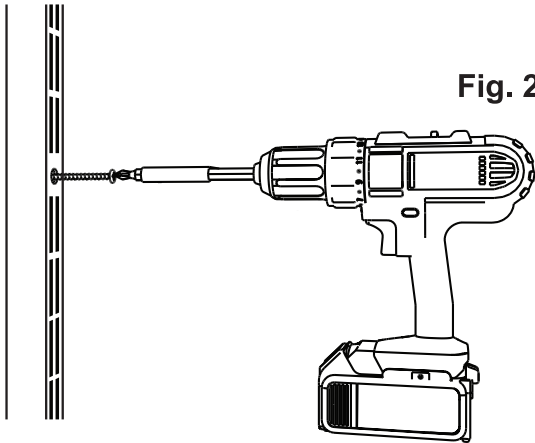


Fig. 2

2. Secure Vertical Standards

Standard must be screwed to the wall in addition from hanging on the top rail. Screw to studs or use anchors that are applicable to drywall or masonry. **Fig. 2**

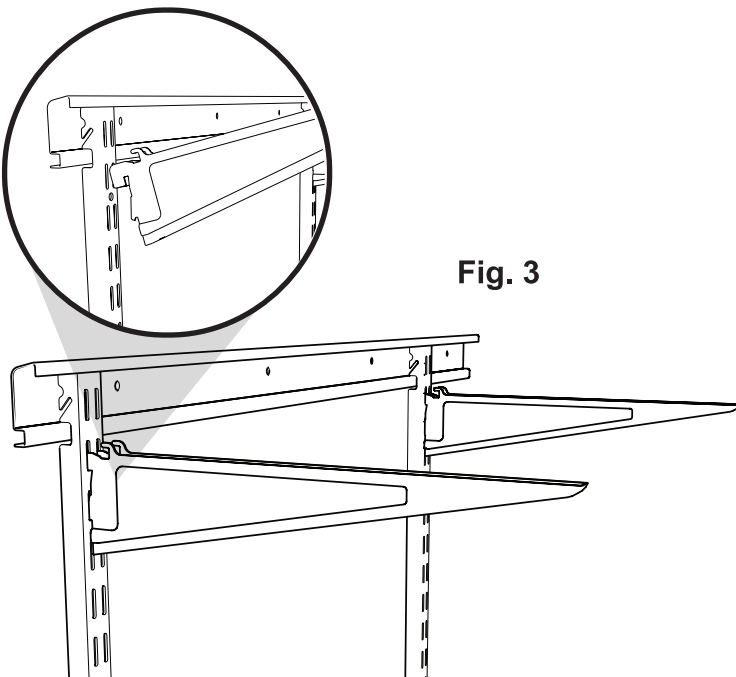


Fig. 3

3. Install Brackets

Brackets can be installed into standards at desired heights to support shelves.

Insert bracket into rectangular holes with the front raised, then drop front of bracket and tap downward to secure. **Fig. 3**