
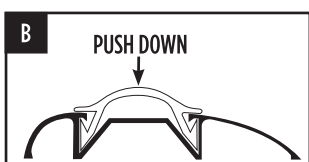


Tools Required:

Herramientas Requeridas:

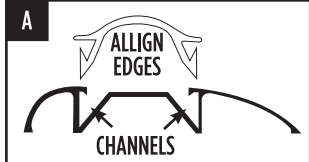

INSTRUCTIONS:

1. Measure length of channel on threshold.
2. Cut replacement seal to length with scissors.
3. Starting at one end of threshold align edges of seal with channels, see Illustration A.
4. Press seal down firmly with thumb until seal edges are fully seated into channels, see Illustration B. Continue down the length of the threshold.

Tip: To ease intallation, wet seal with soap and water mixture prior to installing.

INSTRUCCIONES:

1. Mida el largo del canal en el umbral.
2. Corte el sello de reemplazo al largo con tijeras.
3. Comenzando en un extremo del umbral alinee los extremos del sello con los canales, consulte la Ilustración A.
4. Presione el sello hacia abajo firmemente con el pulgar hasta que los bordes del sello estén completamente asentados en los canales, consulte la Ilustración B. Continúe hacia todo el largo del umbral.

Consejo práctico:

Para facilitar la instalación moje el sello con una mezcla de agua y jabón antes de instalar.



QUESTIONS? | PREGUNTAS?

800.654.8454

MDBUILDINGPRODUCTS.COM

