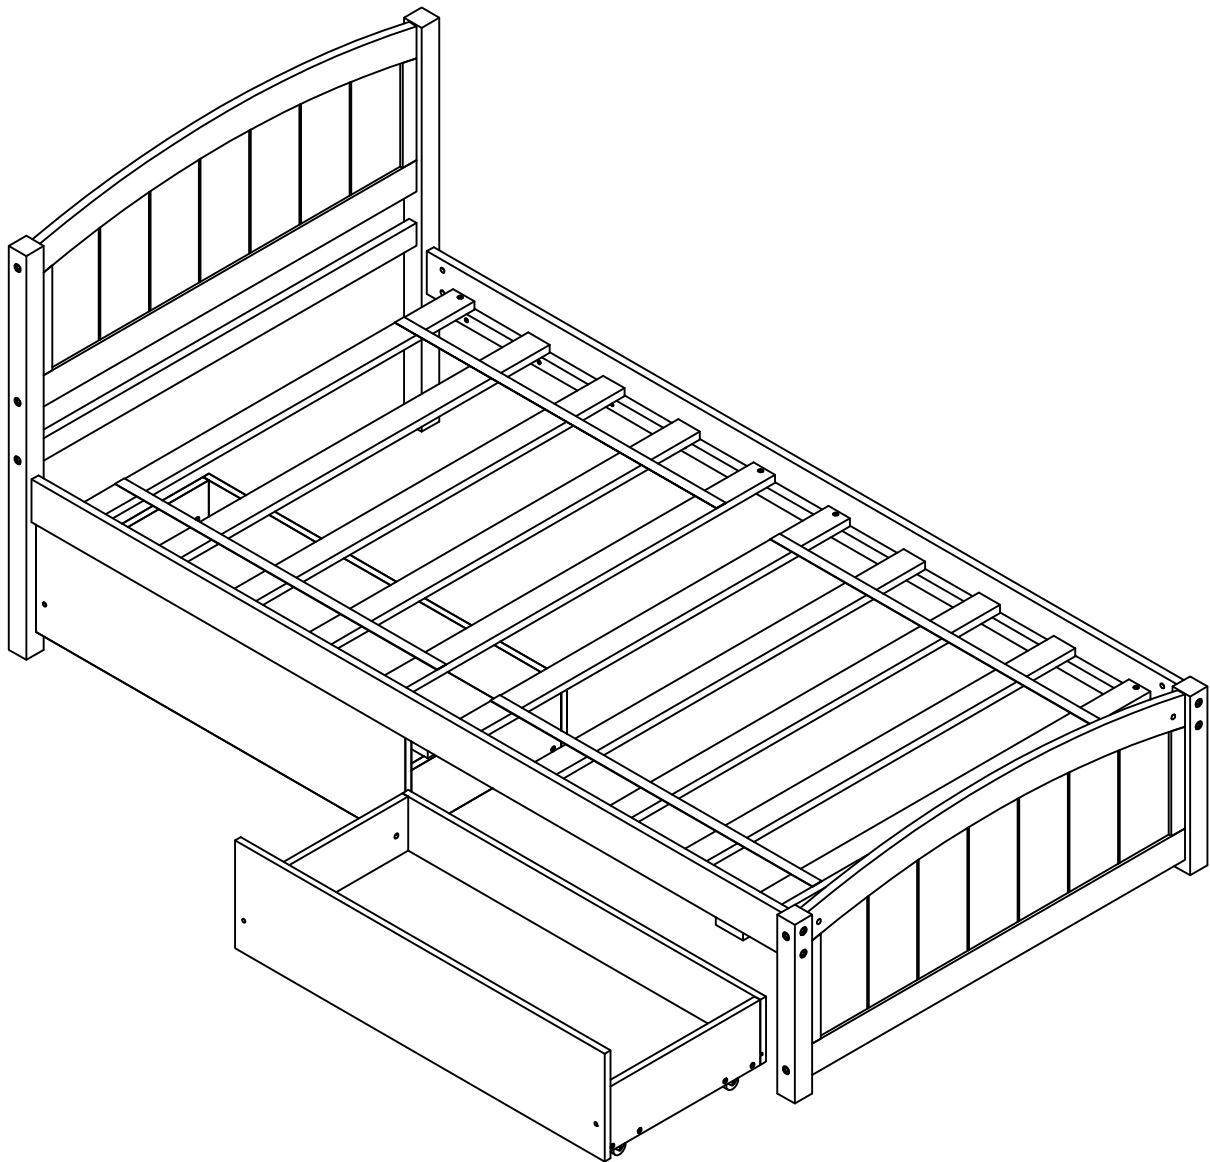


ASSEMBLY INSTRUCTIONS


TWIN BED WITH DRAWER

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net












WF194280






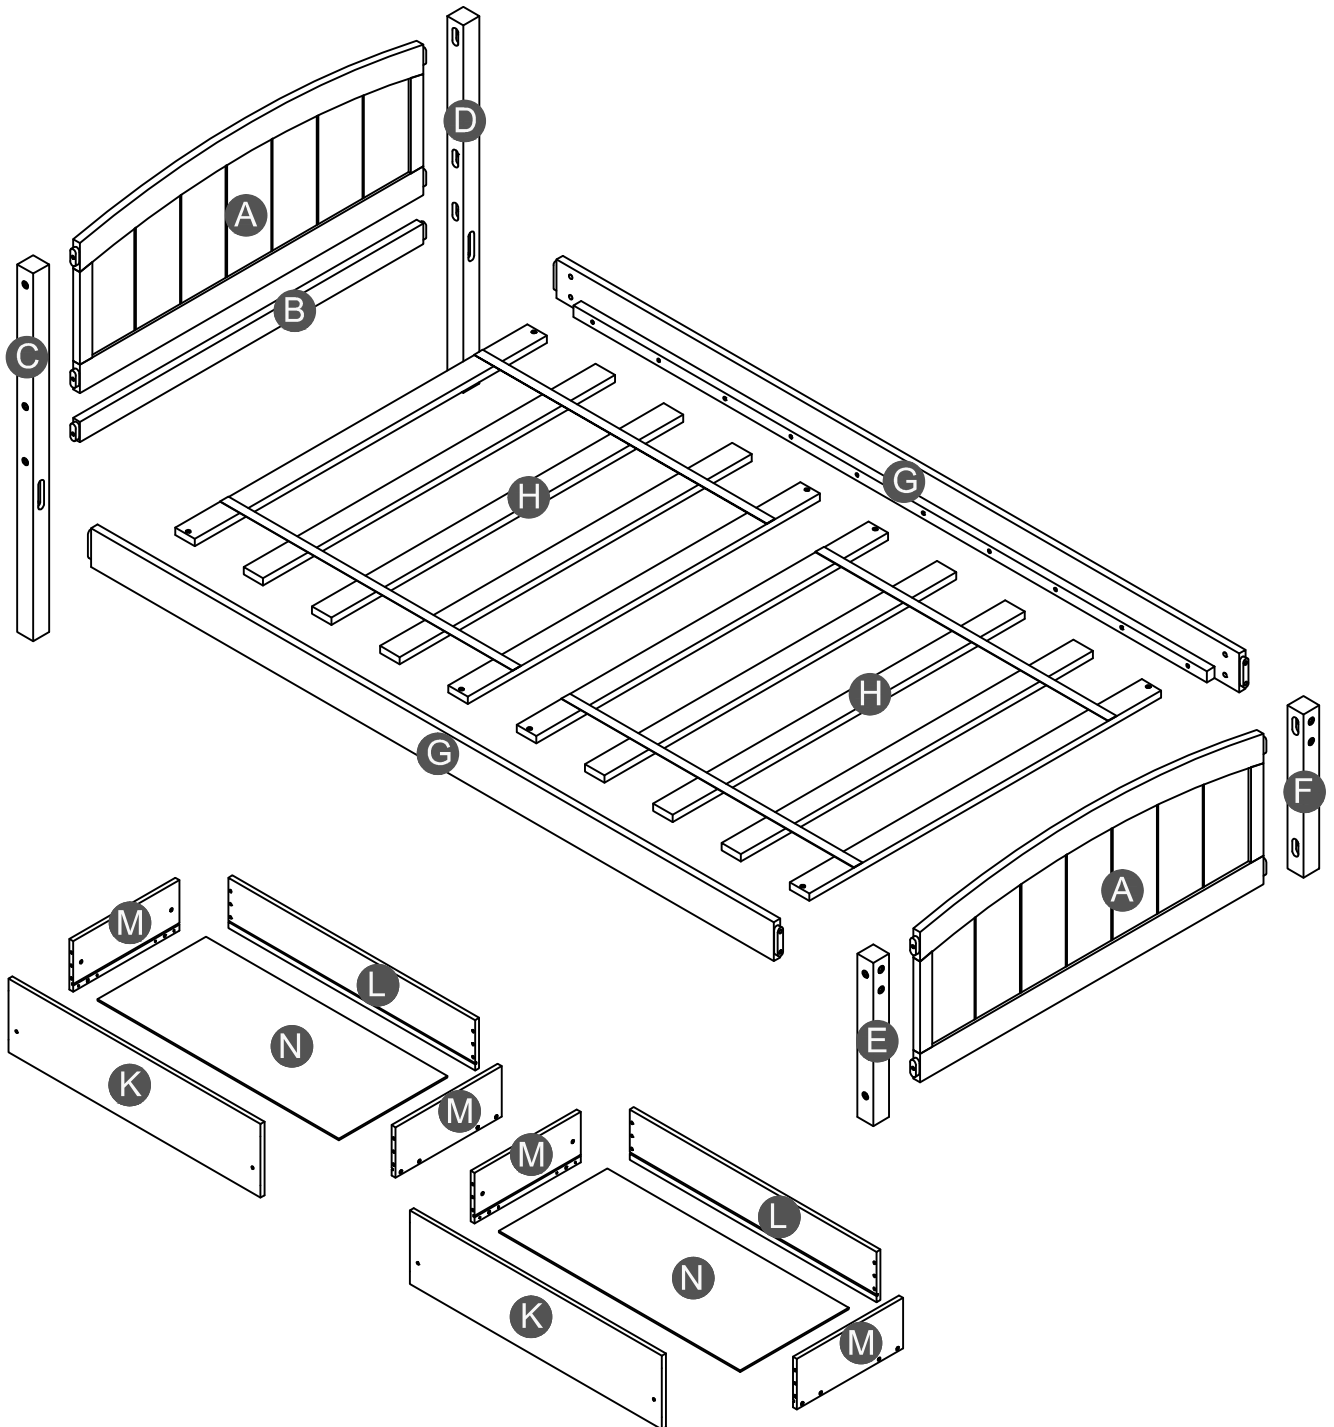
Detail View





Part List

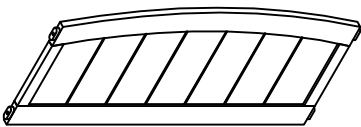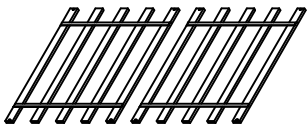A  Headboard & Footboard - 2pcs	B  Headboard horizontal bar -1pc	C  Leg headboard(Left) - 1pc
D  Leg headboard(Right) - 1pc	E  Leg footboard(Right) - 1pc	F  Leg footboard(Left) - 1pc
G  Side rail - 2pcs	H  Slat - (10pcs)	K  Drawer front - 2pcs
L  Drawer back - 2pcs	M  Drawer (Left / Right)- 4pcs	N  Drawer bottom - 2pcs

Hardware List


1  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(26pcs)
4  (1/4")4.5*58mm Allen key (1pc)	5  Ø4*30mm Wood screws (30pcs)	6  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
7  100*54*20 mm Wheels (8pcs)	8  70*35*19 mm Wood support drawer (3pcs)	9  Ø8*30mm Wood dowel (16pcs)
10  Ø10*20mm Wood dowel (8pcs)		

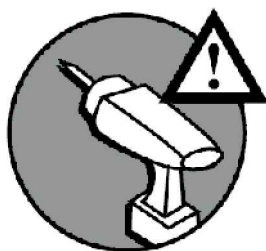ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

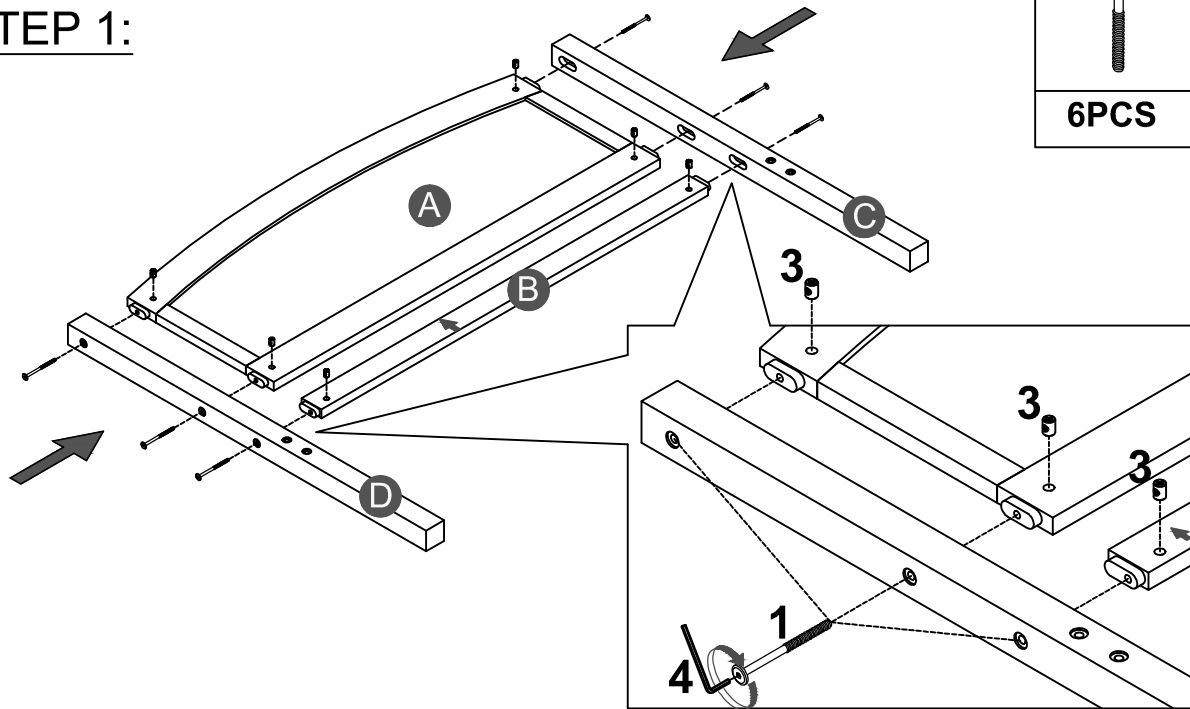STEP 1:




1		3	
6PCS		6PCS	

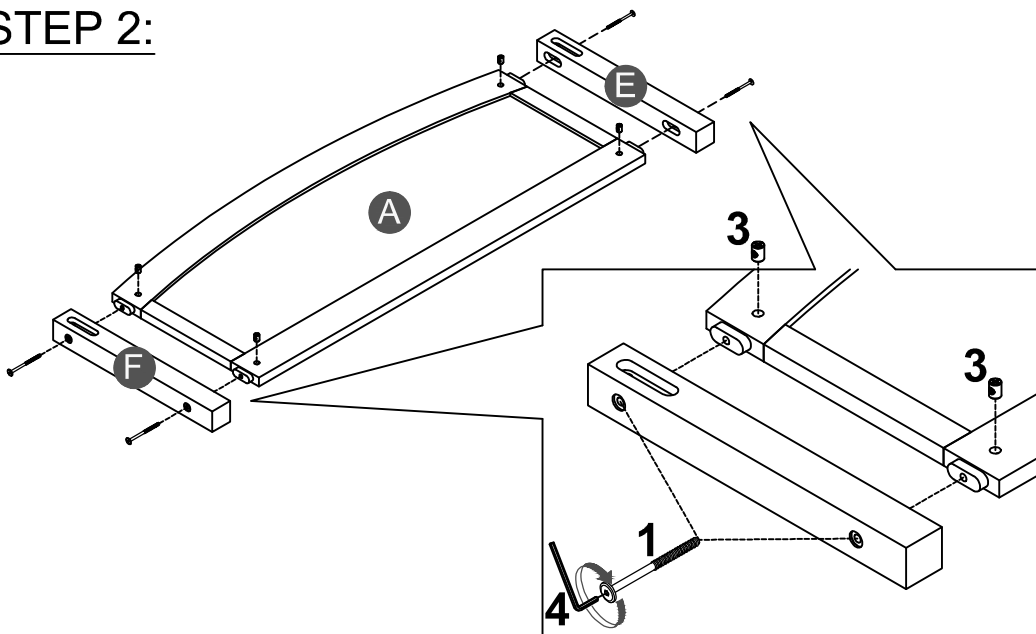STEP 2:



1		3	
4PCS		4PCS	

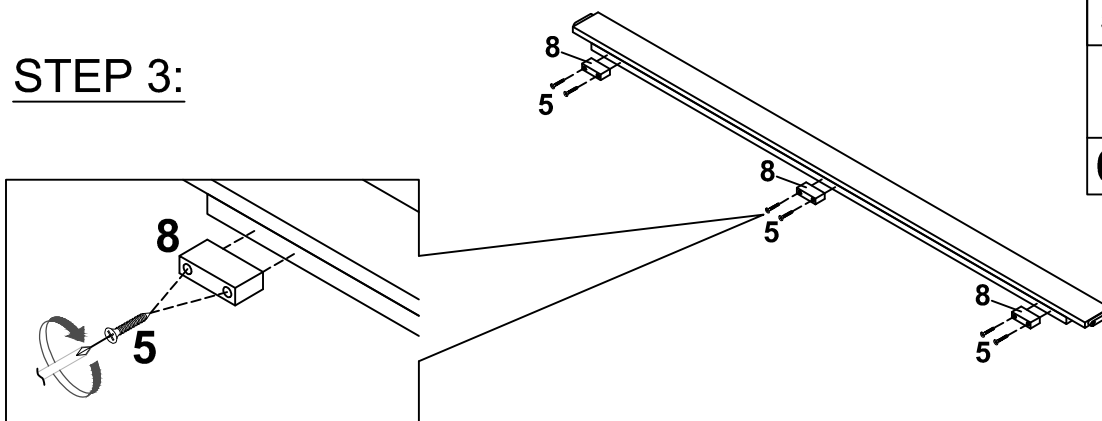
STEP 3:



5		8	
6PCS		3PCS	

Wood support drawer (8) with side rail(front) by using screw (5).

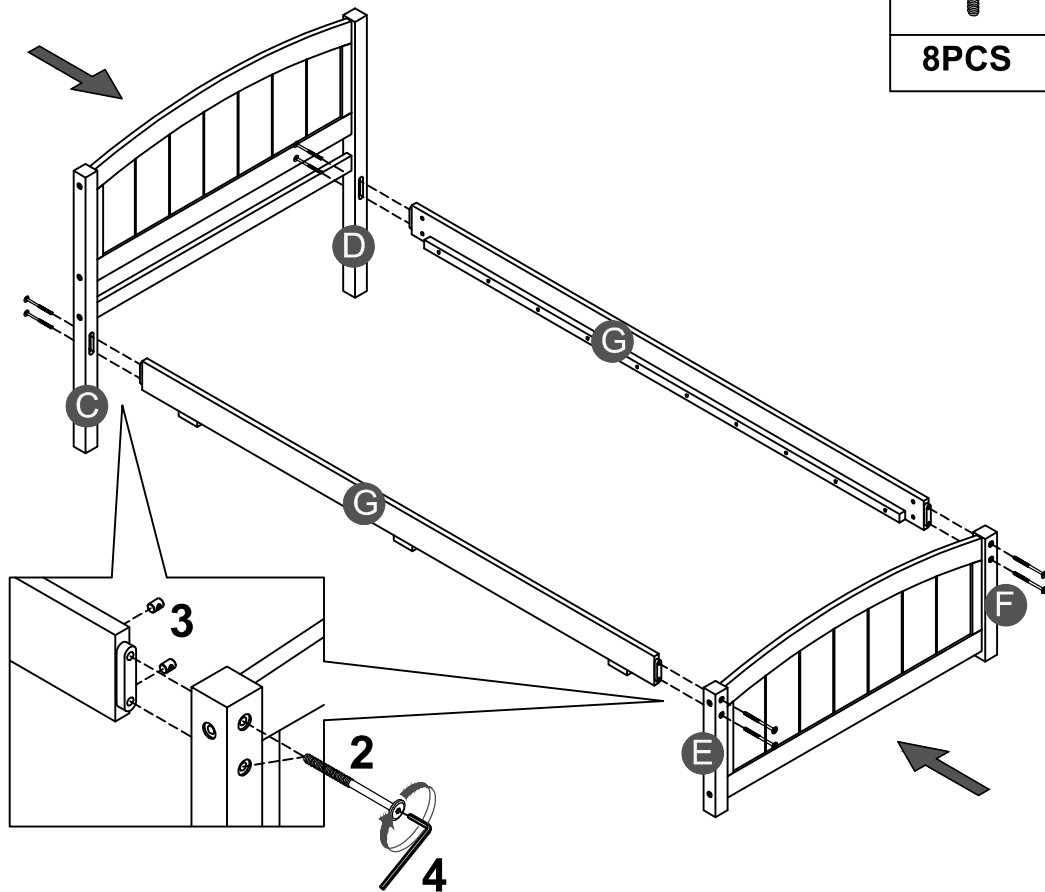STEP 4:



2



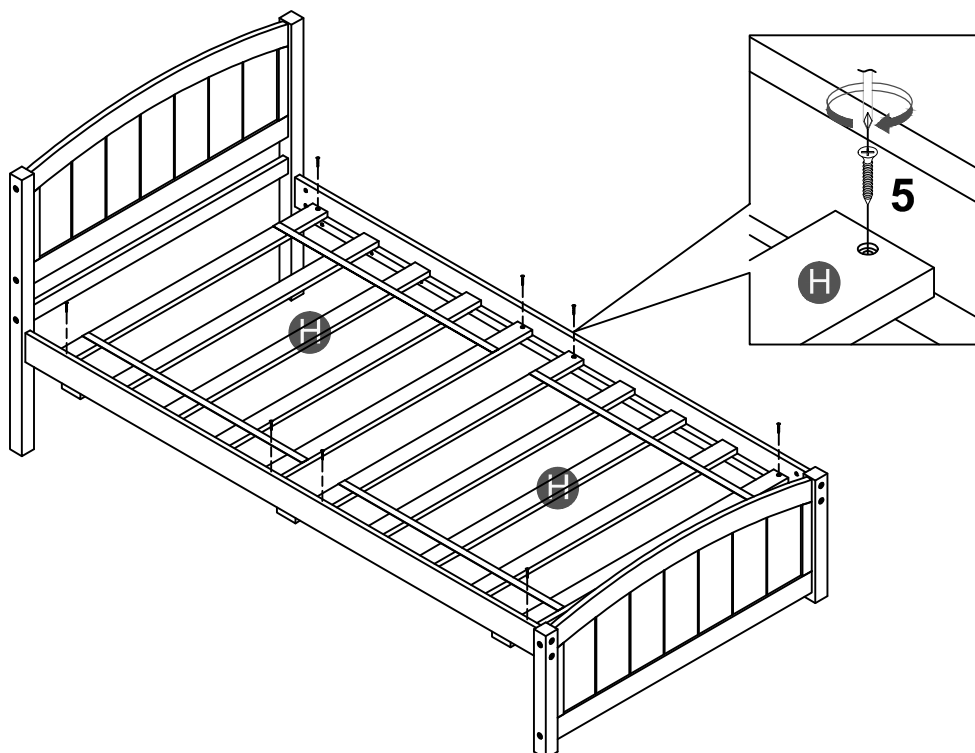
8PCS

3



8PCS

STEP 5:




5




8PCS

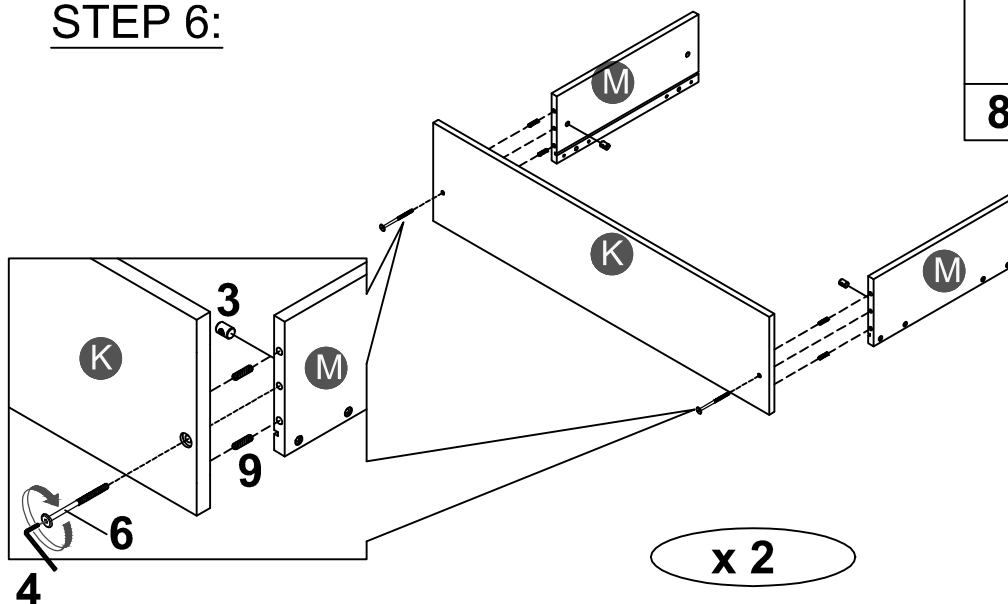STEP 6:




9		3		6	
	8PCS		4PCS		4PCS

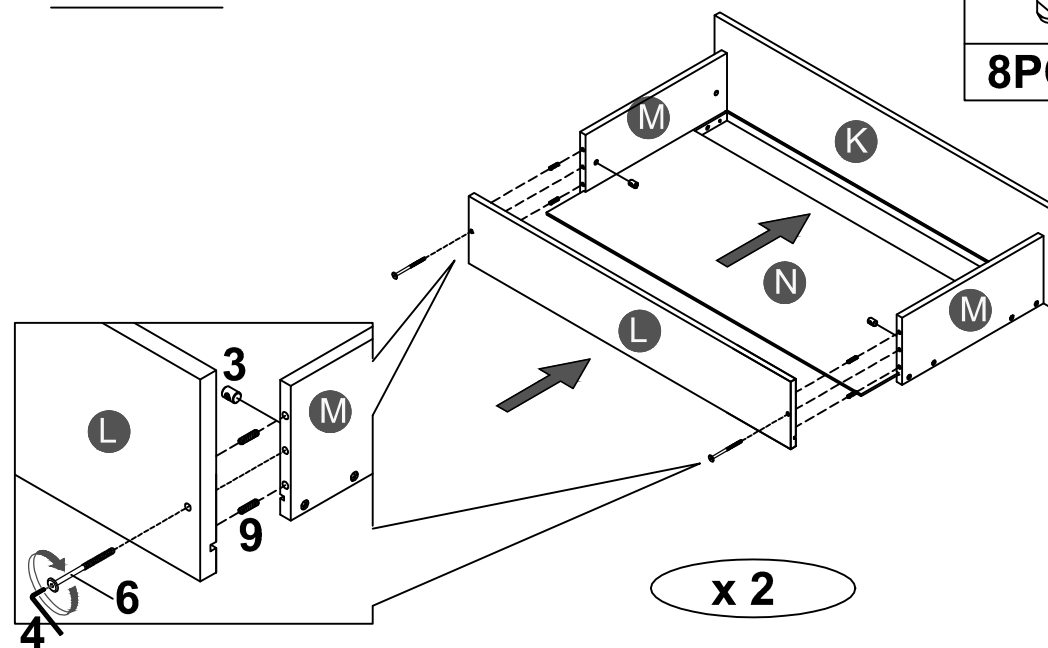STEP 7:




9		3		6	
	8PCS		4PCS		4PCS

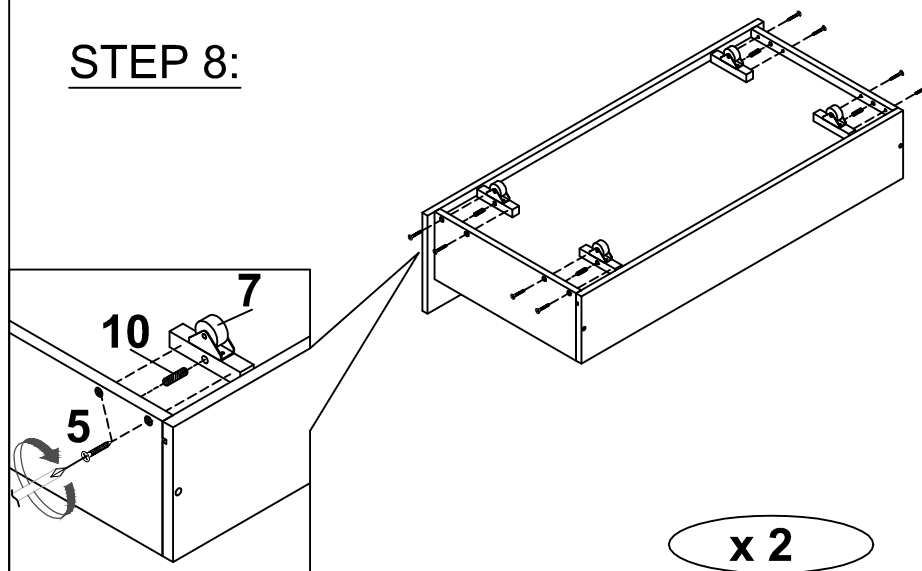
STEP 8:



10		5		7	
	8PCS		16PCS		8PCS

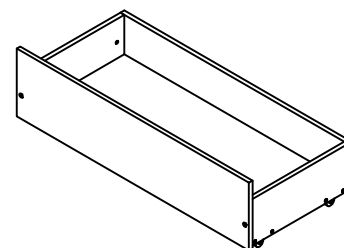

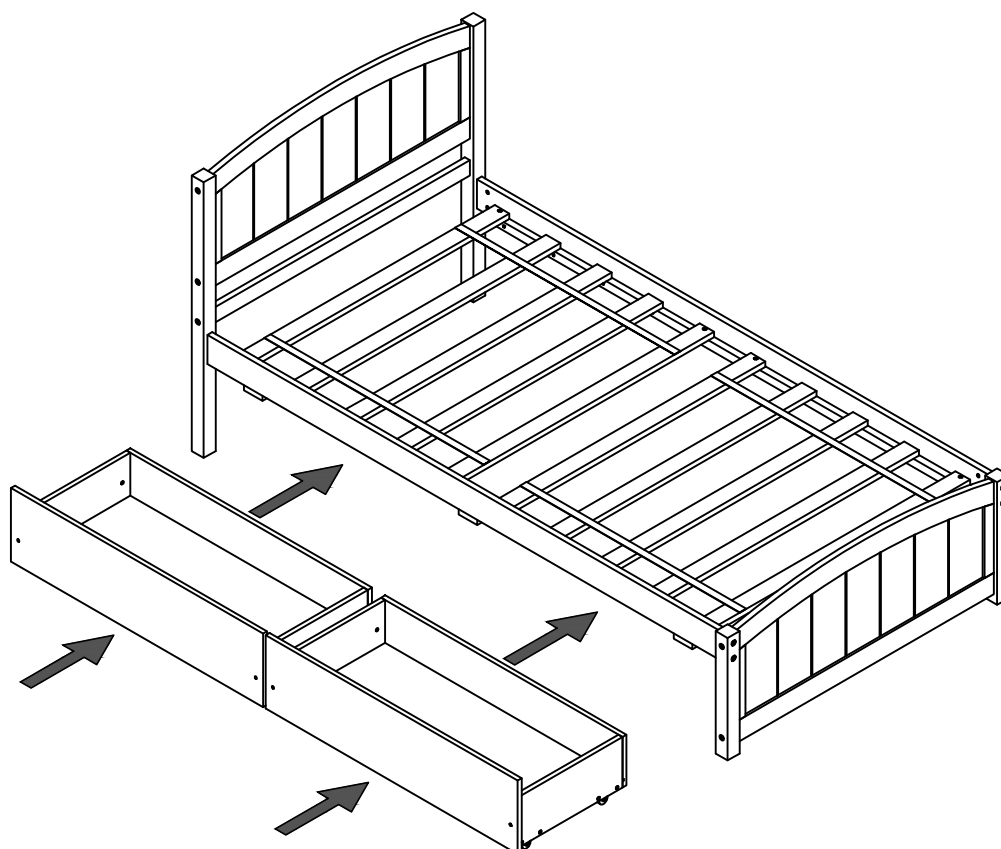STEP 9:



Push Drawer under the bottom of Twin Bed.

