


GLASSWAREHOUSE


GENERAL INSTALLATION INSTRUCTIONS FOR THE LEANING MIRROR (MODEL NO. SF-ARC-48X83)

PREPARING THE MIRROR

1. Decide the angle for leaning the mirror to the wall you prefer but not more than 25 degrees.

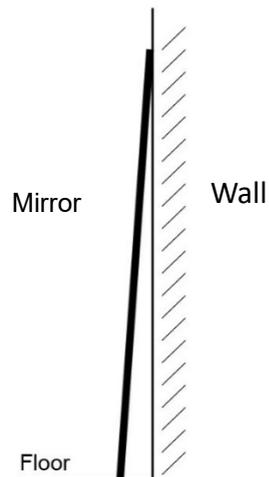


2. There's a Safety Lock Plate at the top of the back of mirror. Mark the location of the hole which for fixing this safety lock.

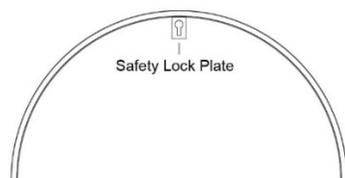


PREPARING THE WALL

3. Determine which fixing method you will need and use the correct included fixings for either Gypsum wallboard, concrete wall, or solid wood wall.
 - Gypsum wallboard or concrete wall: Drill holes using a 1/4-inch frill bit. Use masonry bit for concrete walls. With a hammer, gently tap each anchor into the holes until flush with the wall surface.
 - Solid wood walls: Drill holes using a 1/8-inch wood drill bit. Anchors are not necessary.

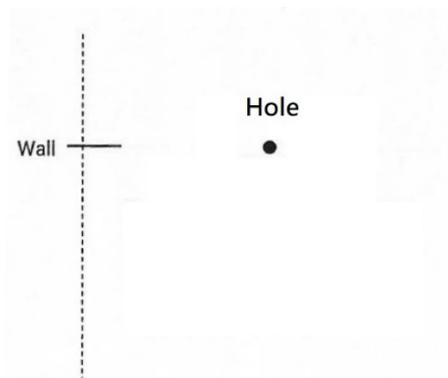

LEANING THE MIRROR

4. Install a screw into each anchor (if installing in wallboard or concrete) until the head of the screw is approximately 1/4-inch away from the wall.
5. Test the screws by pulling outward and downward to ensure they are secure installed. The screws and anchors must remain firmly in place to ensure a safe installation.
6. Adjust the safety Lock Plate to fit the screw by bending. **WARNING: DO NOT OVER-BEND.**

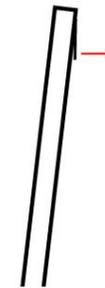

7. Hang the mirror on the screws using the Safety Lock Plate.

