

INSTALLATION INSTRUCTIONS:

PVC WAINSCOT WALL PANEL KITS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow adhesive, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- construction adhesive
- power drill or hammer
- finishing nails or screws
- paintable latex caulk
- 100% acrylic paint
- level or chalk line

IMPORTANT INFO


- It is highly recommended that you paint or finish your panel before you install it.
- Recommended use of 100% acrylic latex paint for PVC products.
- Clean the installation surface and back of the moulding of any debris with a clean cloth.
- PVC is subject to expansion and contraction. Always allow the kit components to acclimate in the room where they'll be installed for 48 hours prior to installation.

STEP BY STEP INSTRUCTIONS *(components vary by kit)*


1. Install the baseboard with construction adhesive and/or finishing nails. Make sure the gap on the baseboard is upright and facing the wall so the wainscot panels can slide into it.
2. Each wainscot center panel will have a reveal that slides into the baseboard gap and locks the panel(s) in place.
3. Glue and/or nail the panels in place.
4. For designs that require two center panels to achieve the overall height, stack the second panel on top of the first panel with the second panel's reveal able to accommodate the gap in the chair rail that will lock the entire system in place.
5. Install the chair rail with the gap facing the wall and locking the panels in place.
6. Finish with caulking and paint.

EXAMPLE DIAGRAM:

Beadboard Kits

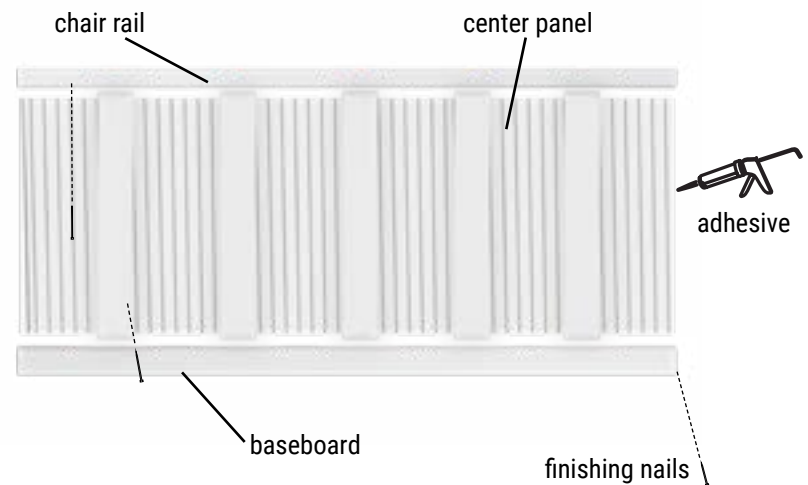

Wainscot Kits

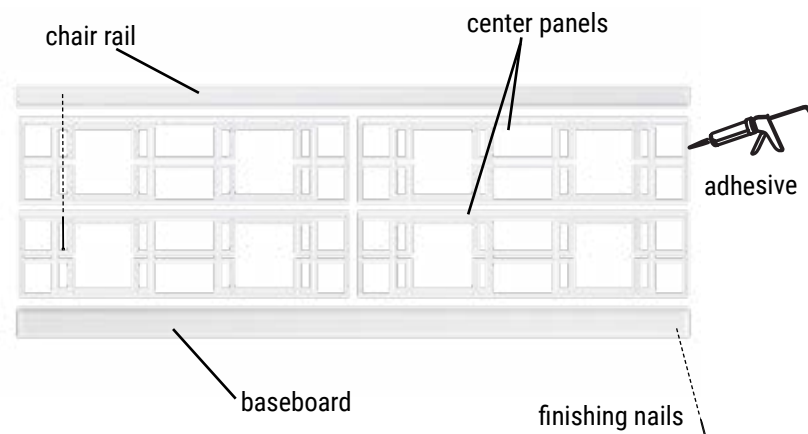

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork
www.ekenamillwork.com