



Assembly Instruction

2301Q/F

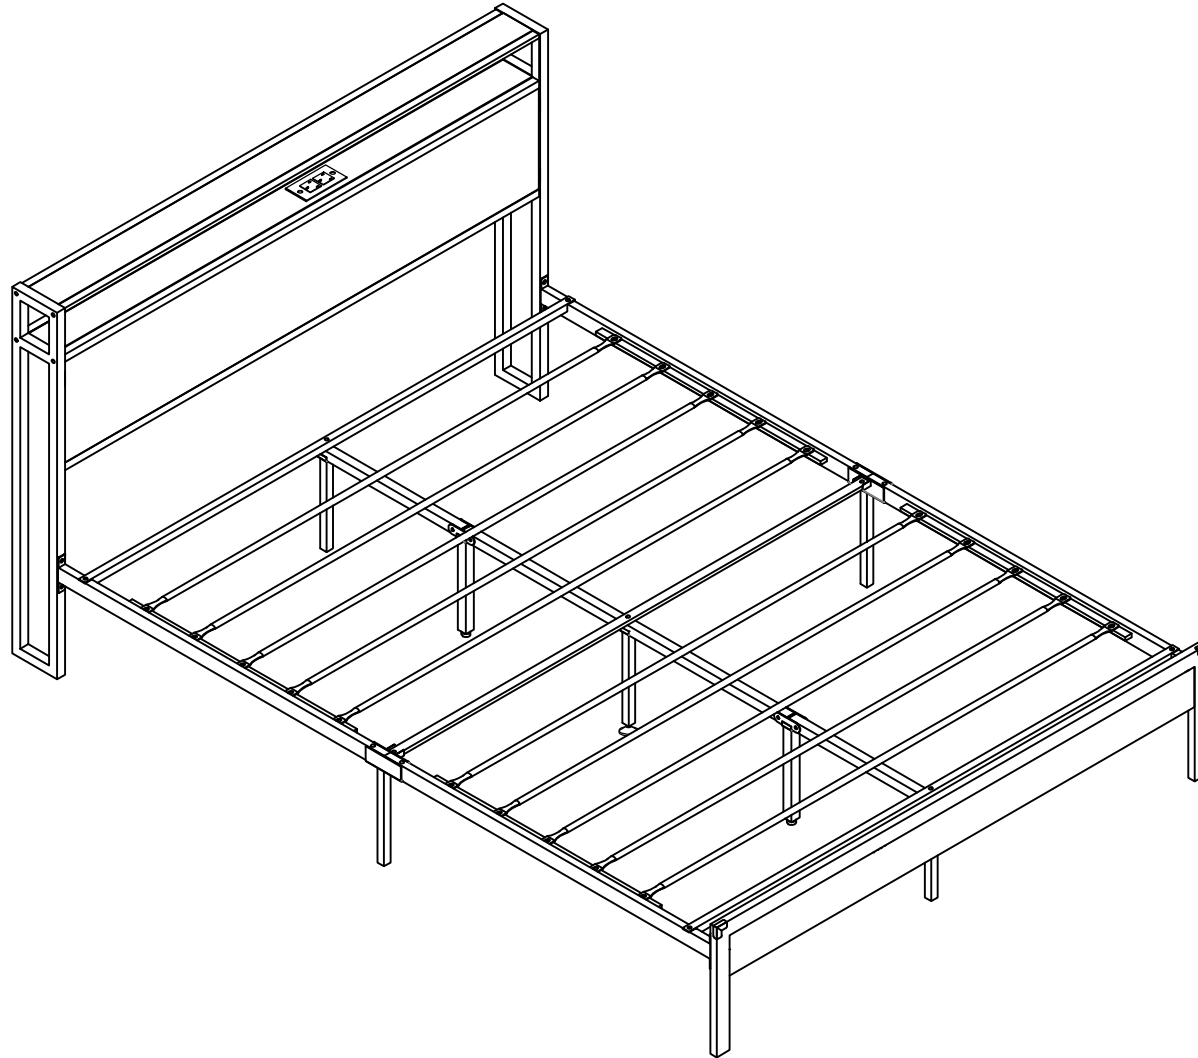

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Assembly Instruction

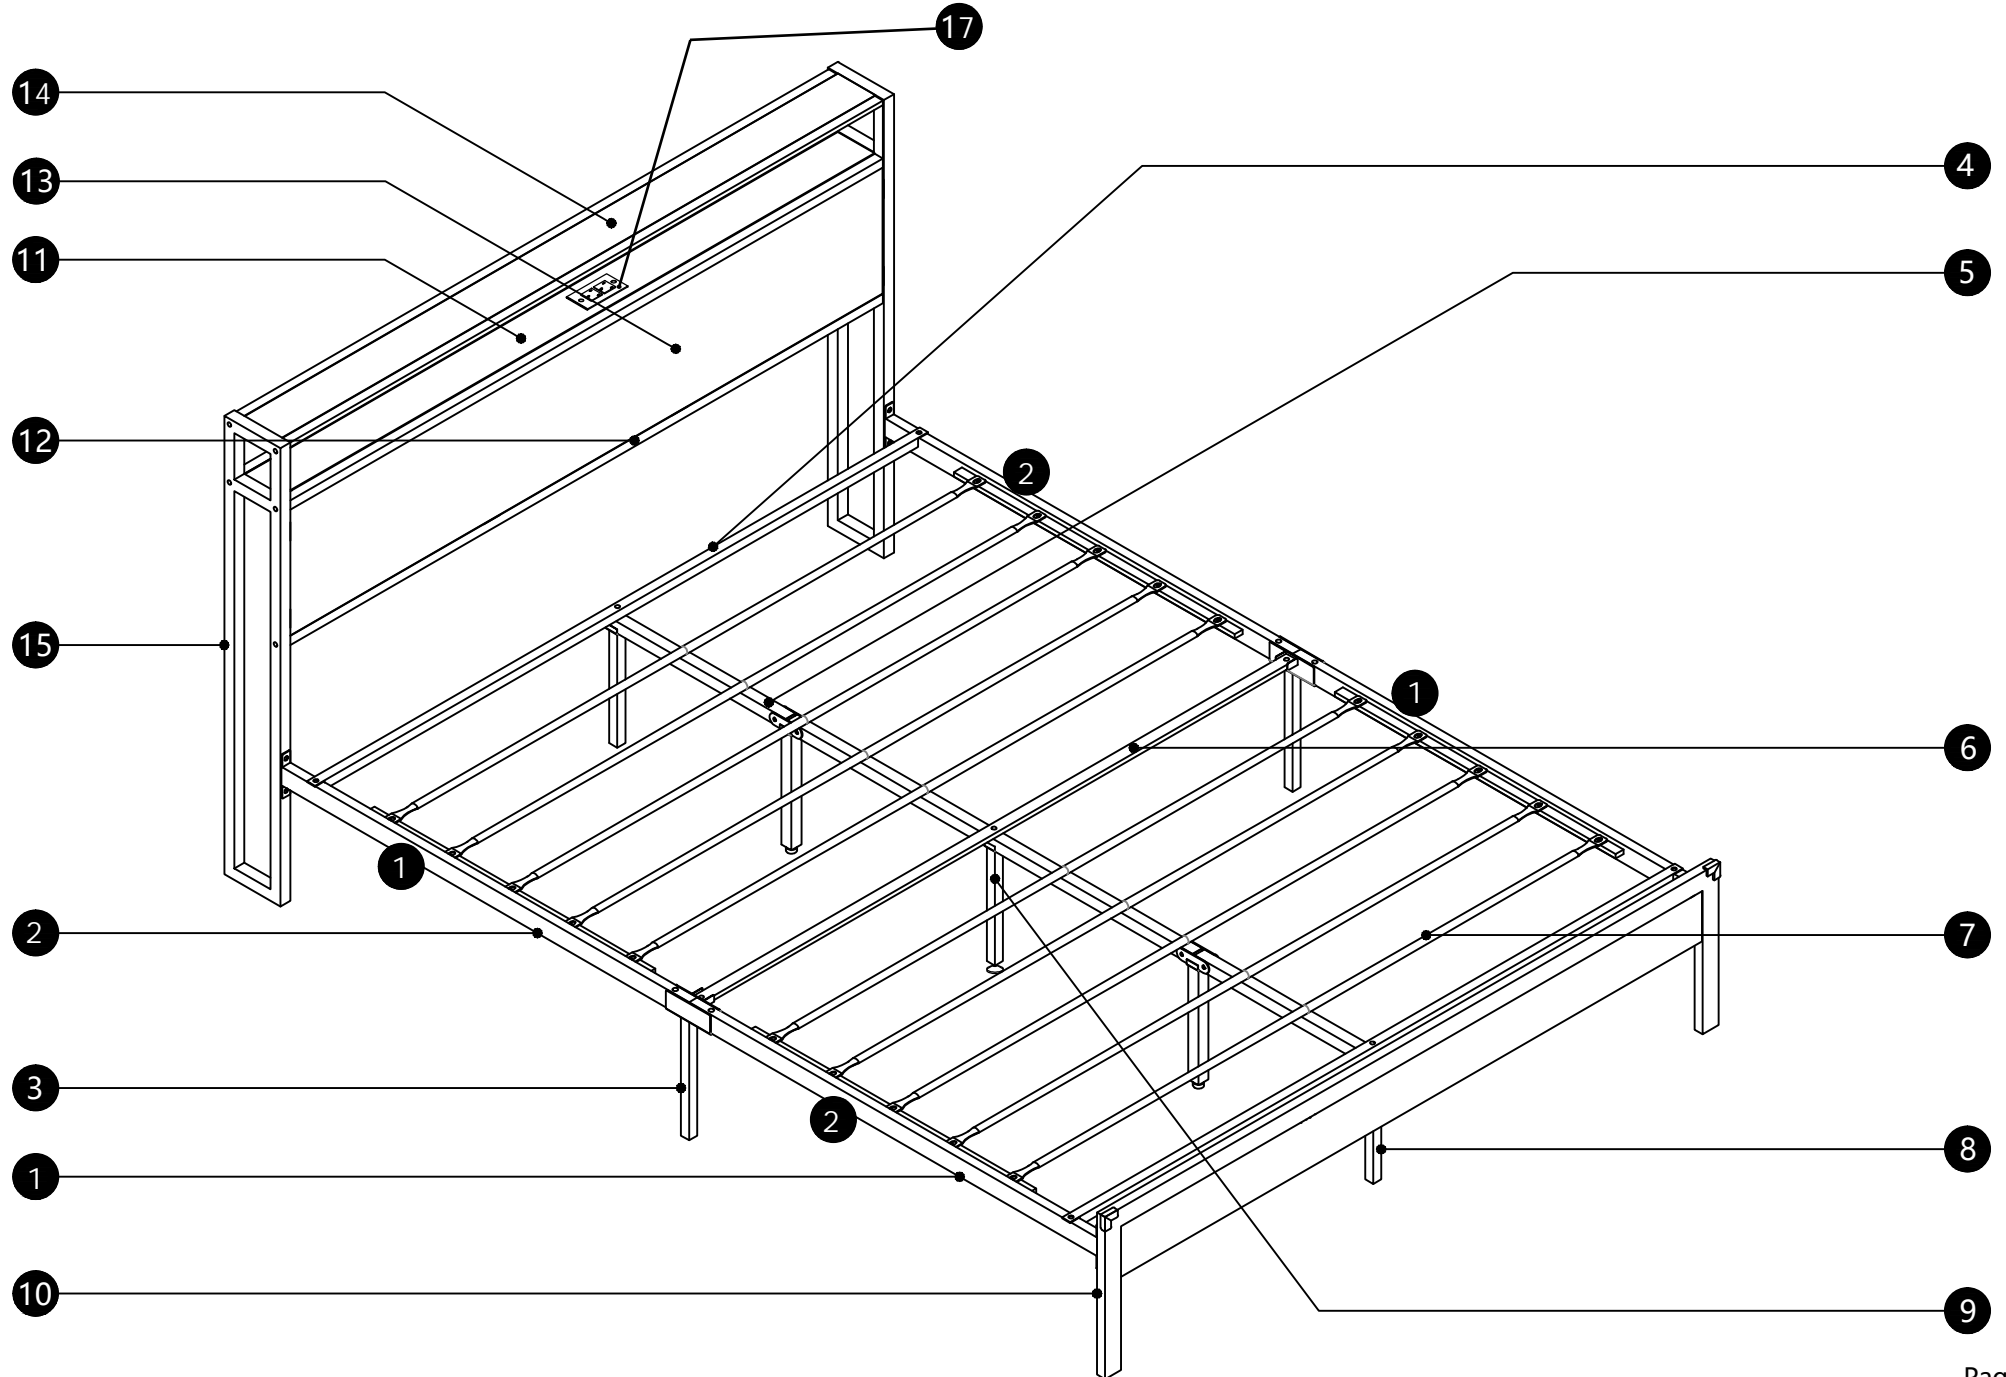


Assembly Instruction

Hardware arts



M6*15

A 20PCS



M6*45

B 10PCS



M6*10

C 6PCS



M8*20

D 14PCS




M8*55

E 7PCS




M4*16

F 2PCS



4#


G 1PC




5#

H 1PC

Part list

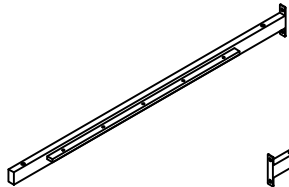


1 2PCS

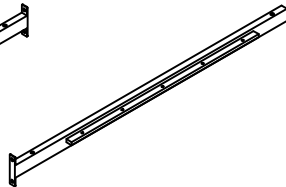


2 2PCS




3 2PCS

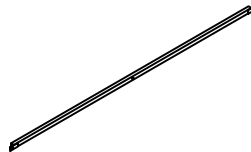


4 2PCS

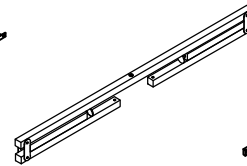

5 1 PC

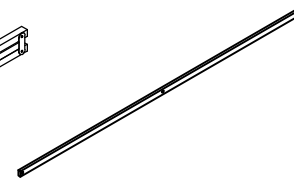

6 1PC

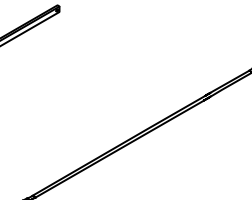


7 10PCS




8 2PCS




9 1PC

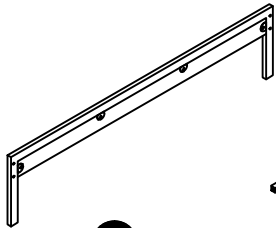


10 1PC

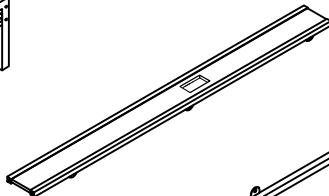


11 1PC

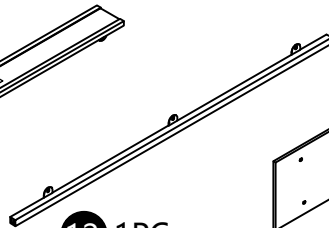

12 1PC

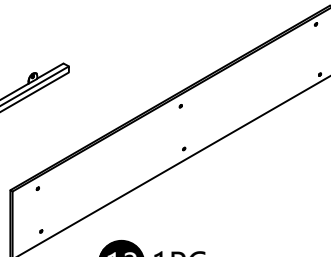

13 1PC

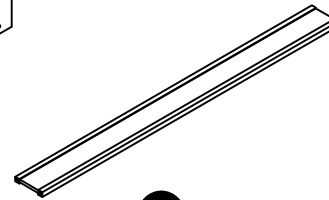

14 1PC



15 2PCS



Crash pads





16 2PCS




17 1PC



Assembly Instruction


Step:1

 M6*45	B X 6PCS	 4#	G X 1PC
 M4*16	F X 2PCS	 5#	H X 1PC

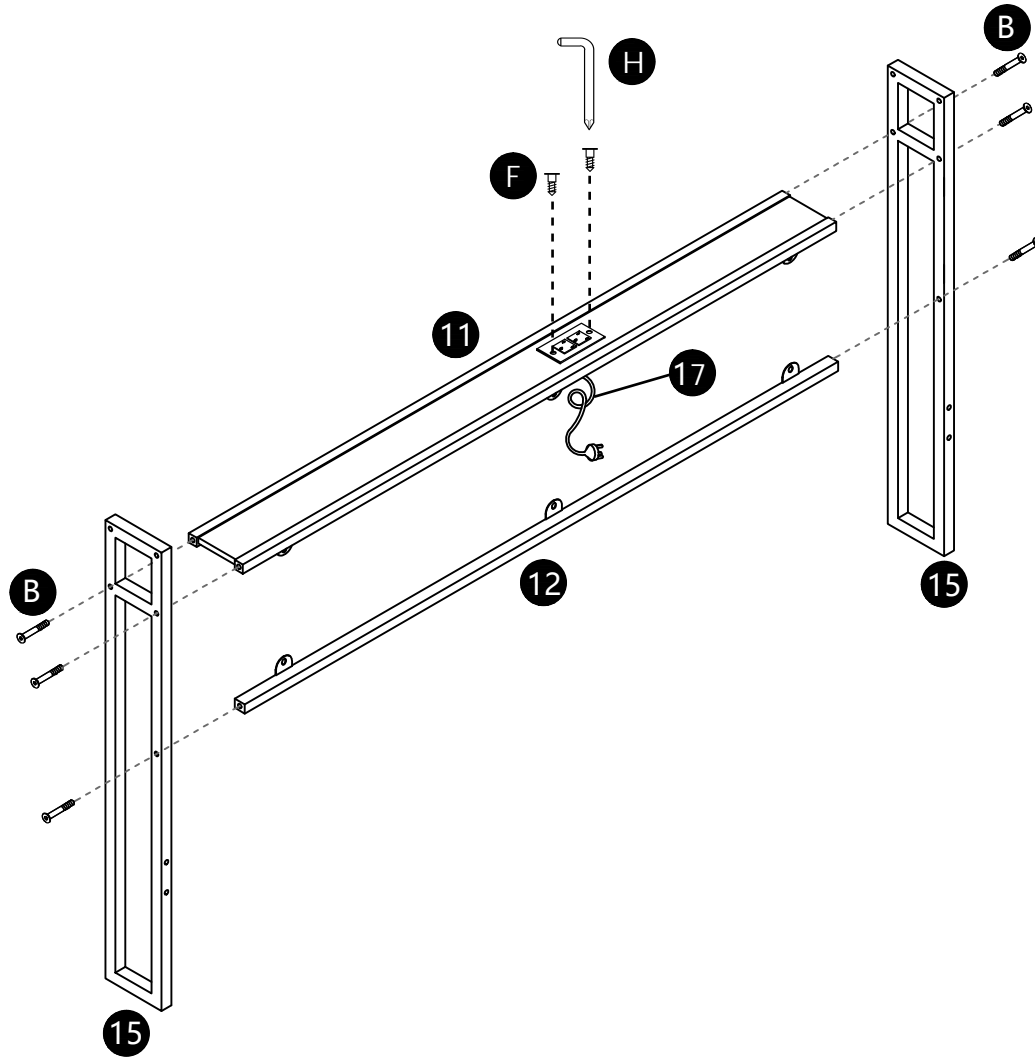



Step:2

 M6*10	C X 6PCS	 4#	H X 1PC
--	-----------------	---	----------------

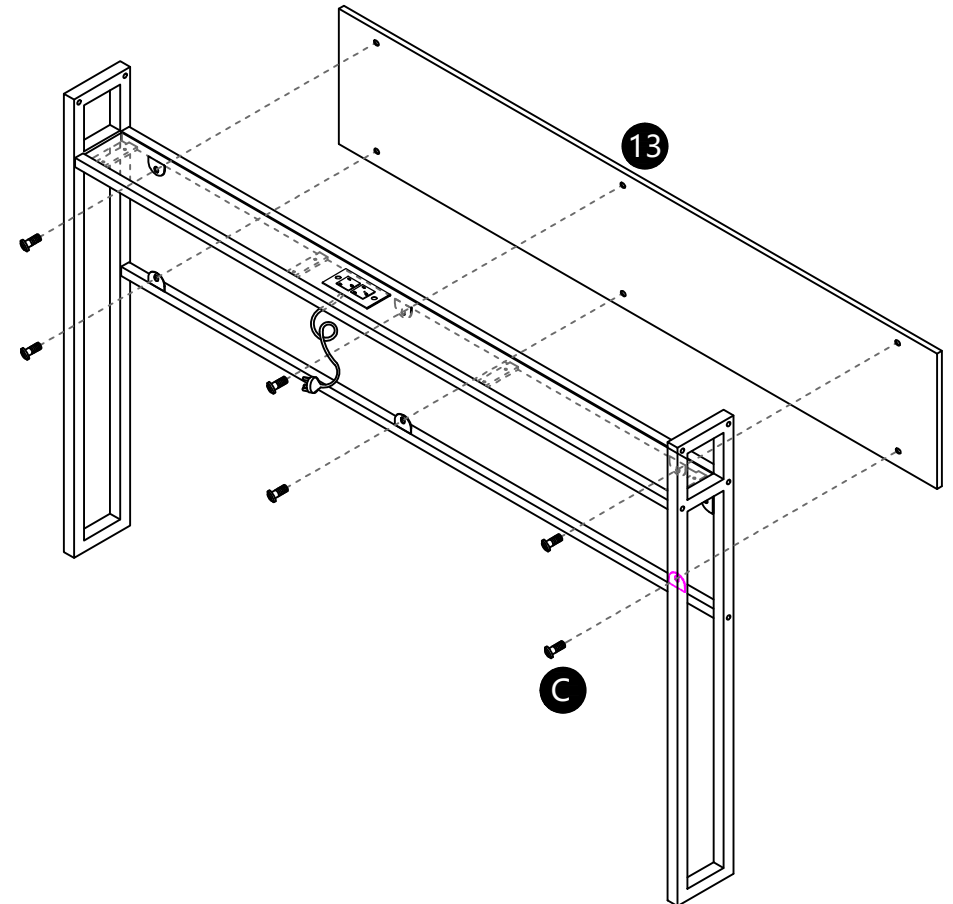


Assembly Instruction


Step:3

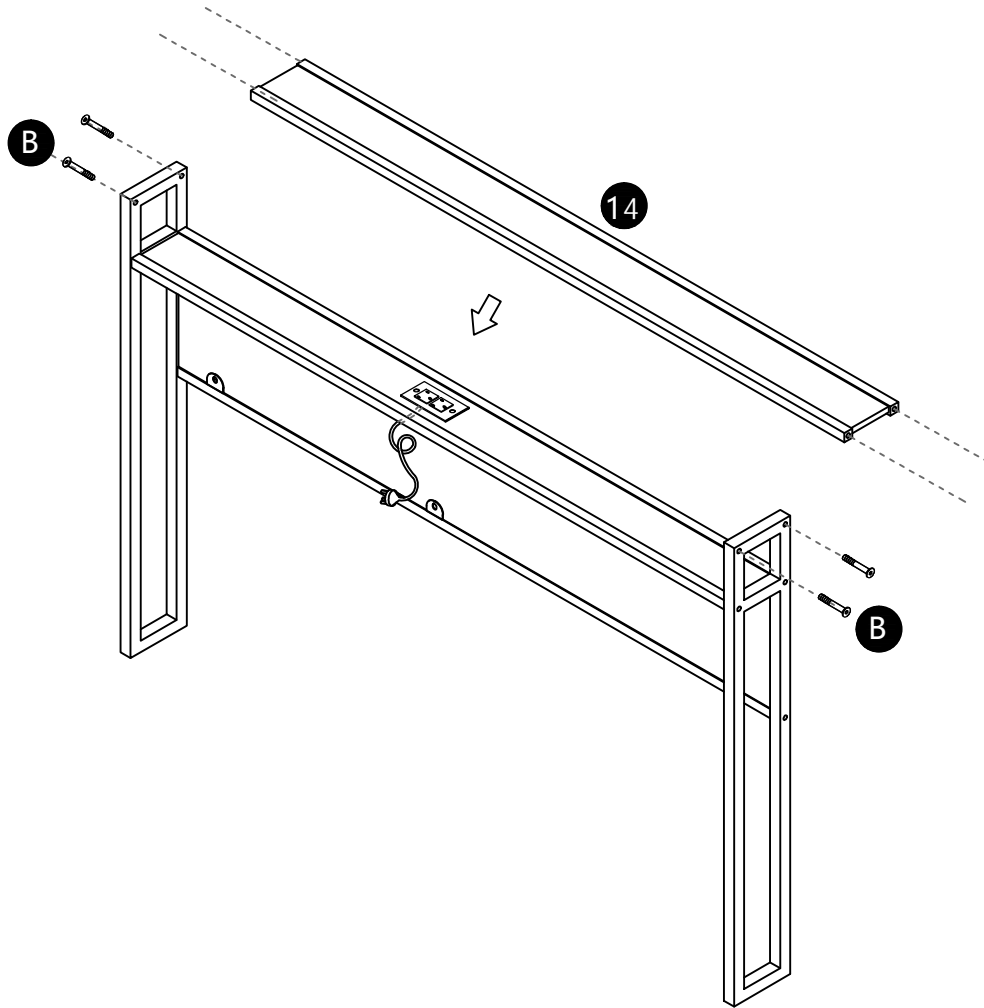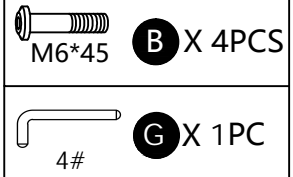

Step:4

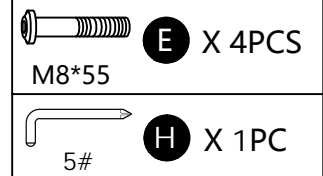

Please pay attention to the direction arrow in the illustration to avoid reverse installation

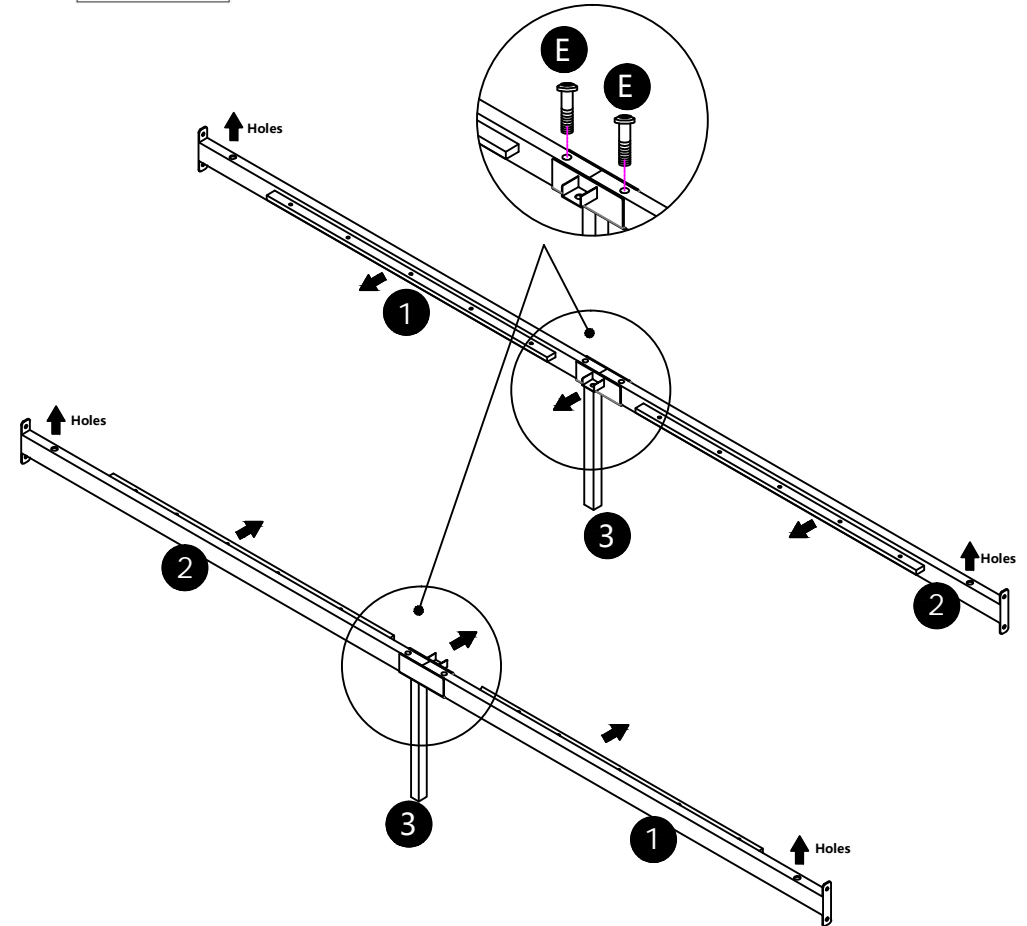


Assembly Instruction


Step:5



D X 8PCS



G X 1PC

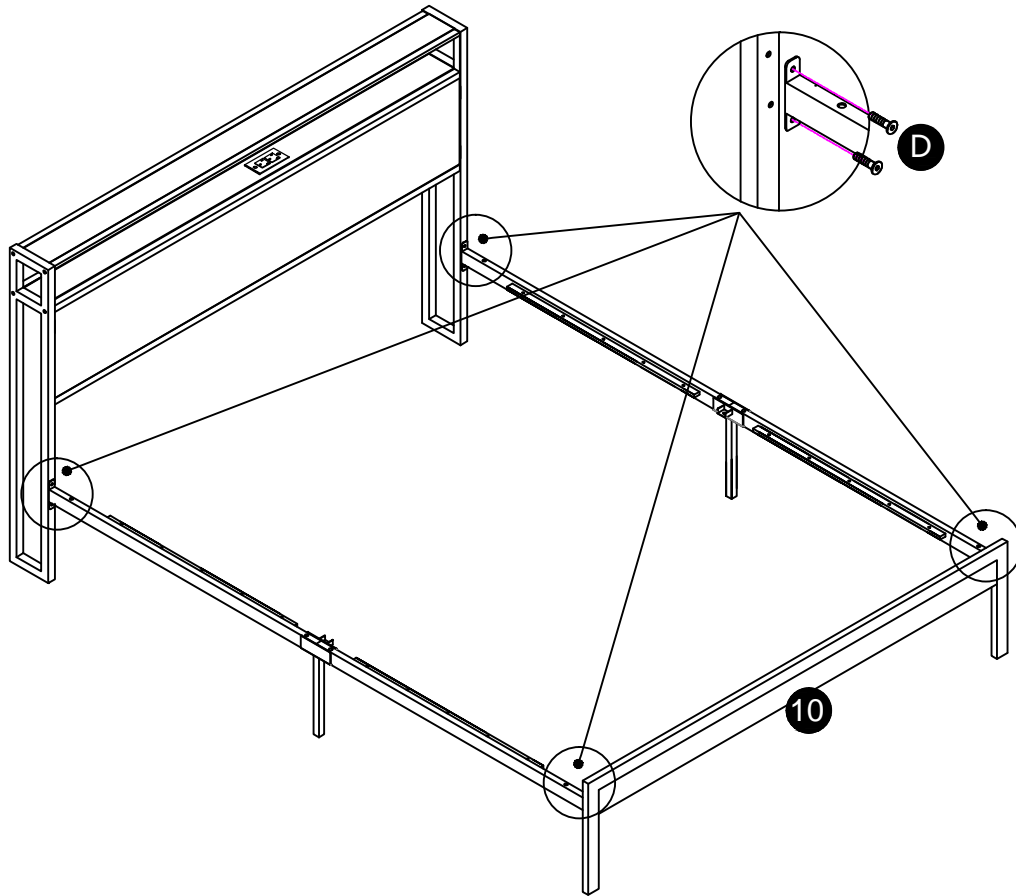


Step:6



D X 6PCS





G X 1PC


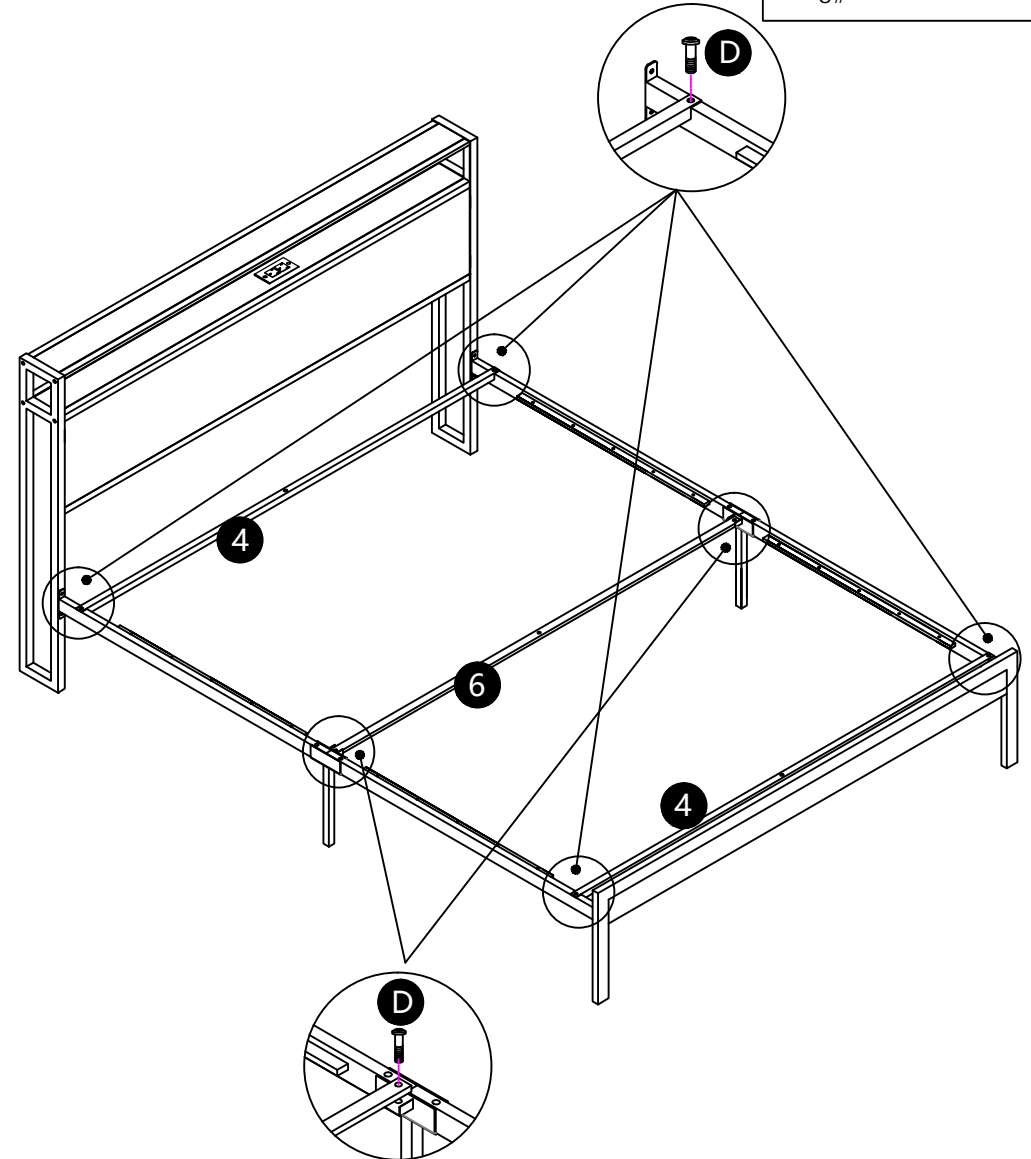


Assembly Instruction

Step:7

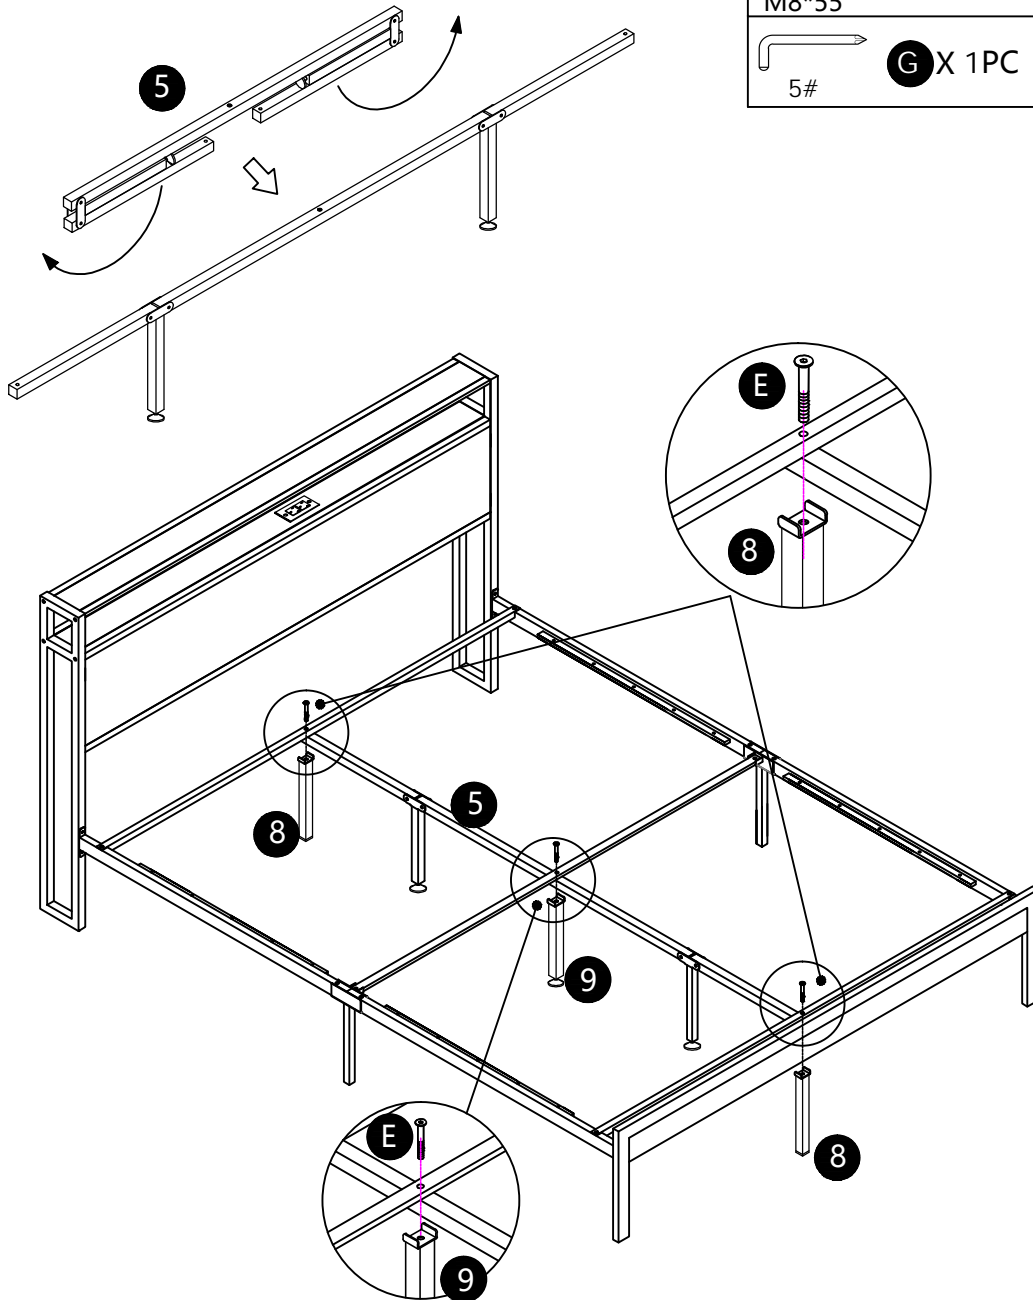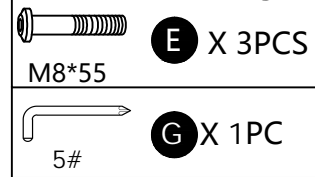


Step:8

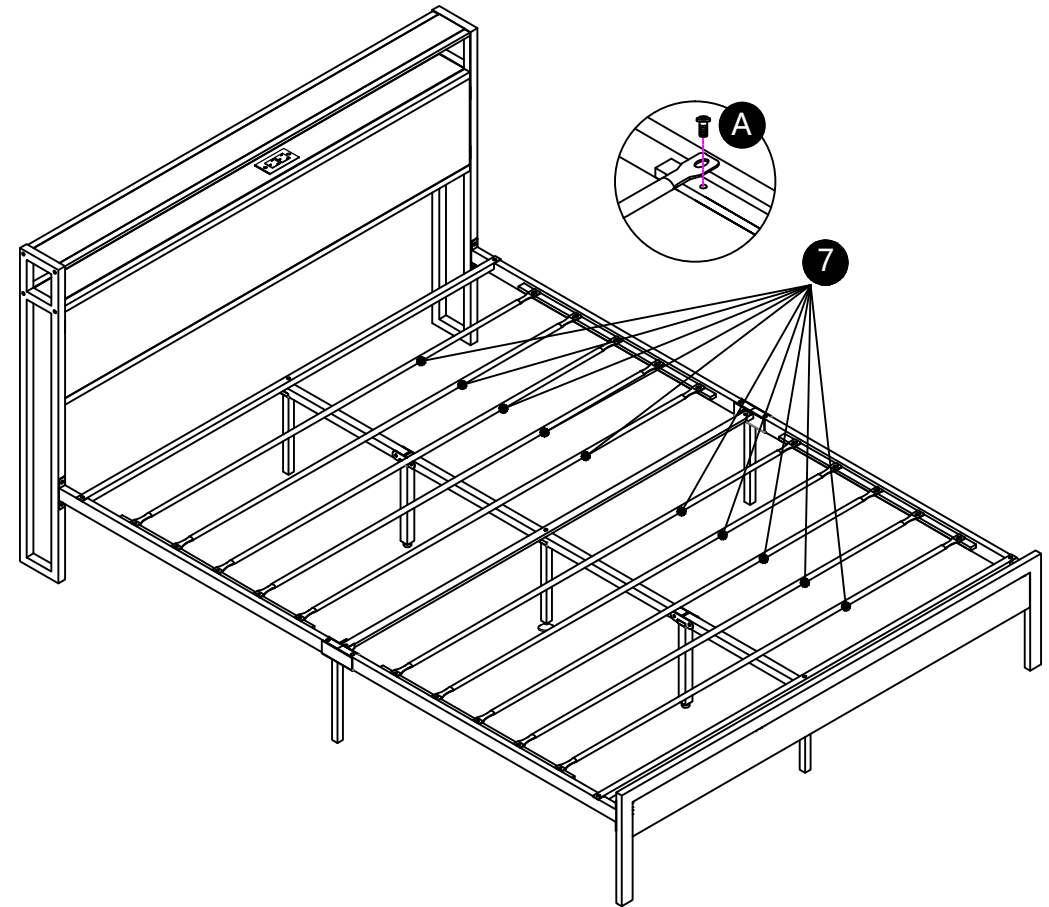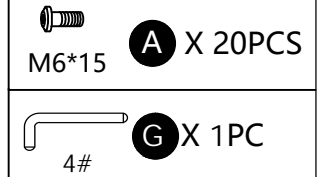


Assembly Instruction

There is a small sealing pocket in the package. There are two pieces of double-sided adhesive tape and two crash pads in the sealing pocket. As shown in the figure below.

Crash pads



16 2PCS

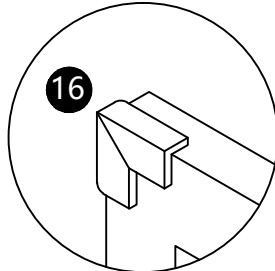

Please tear off the surface anti sticking sheet and stick the anti-collision cushion on it

