


# ASSEMBLY INSTRUCTIONS


## FULL BED WITH 2 DRAWERS BOOKCASE HEADBOARD

If you have any  
questions, please  
feel free to  
contact us.  
Email: [lowesteam@  
animalife.com](mailto:lowesteam@animalife.com)

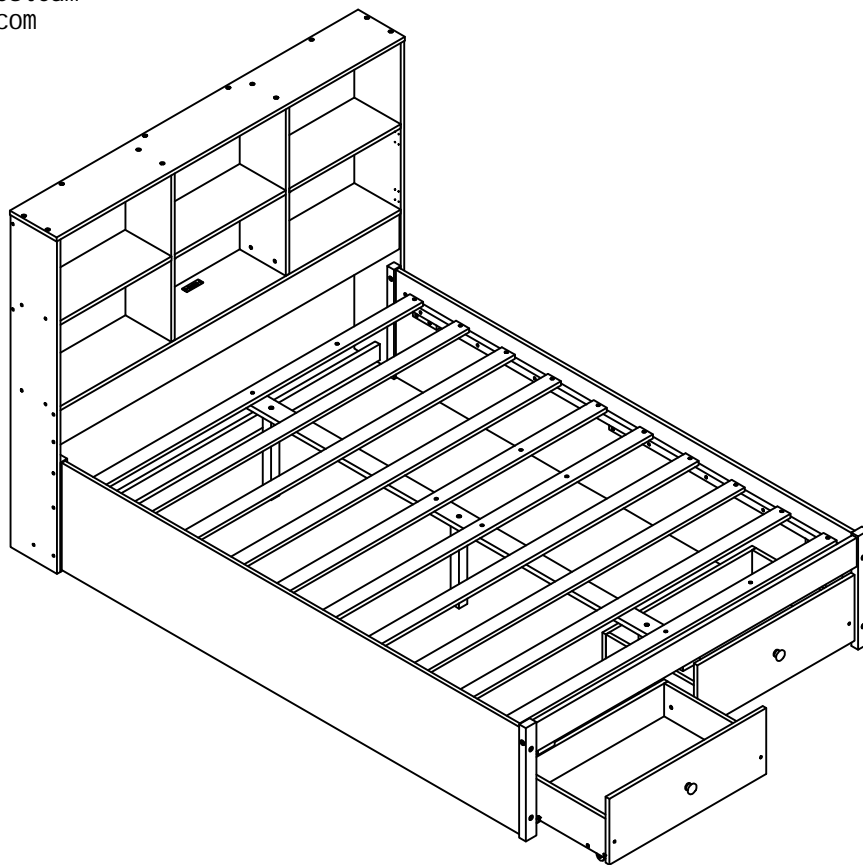














**WF310890/WF310891**
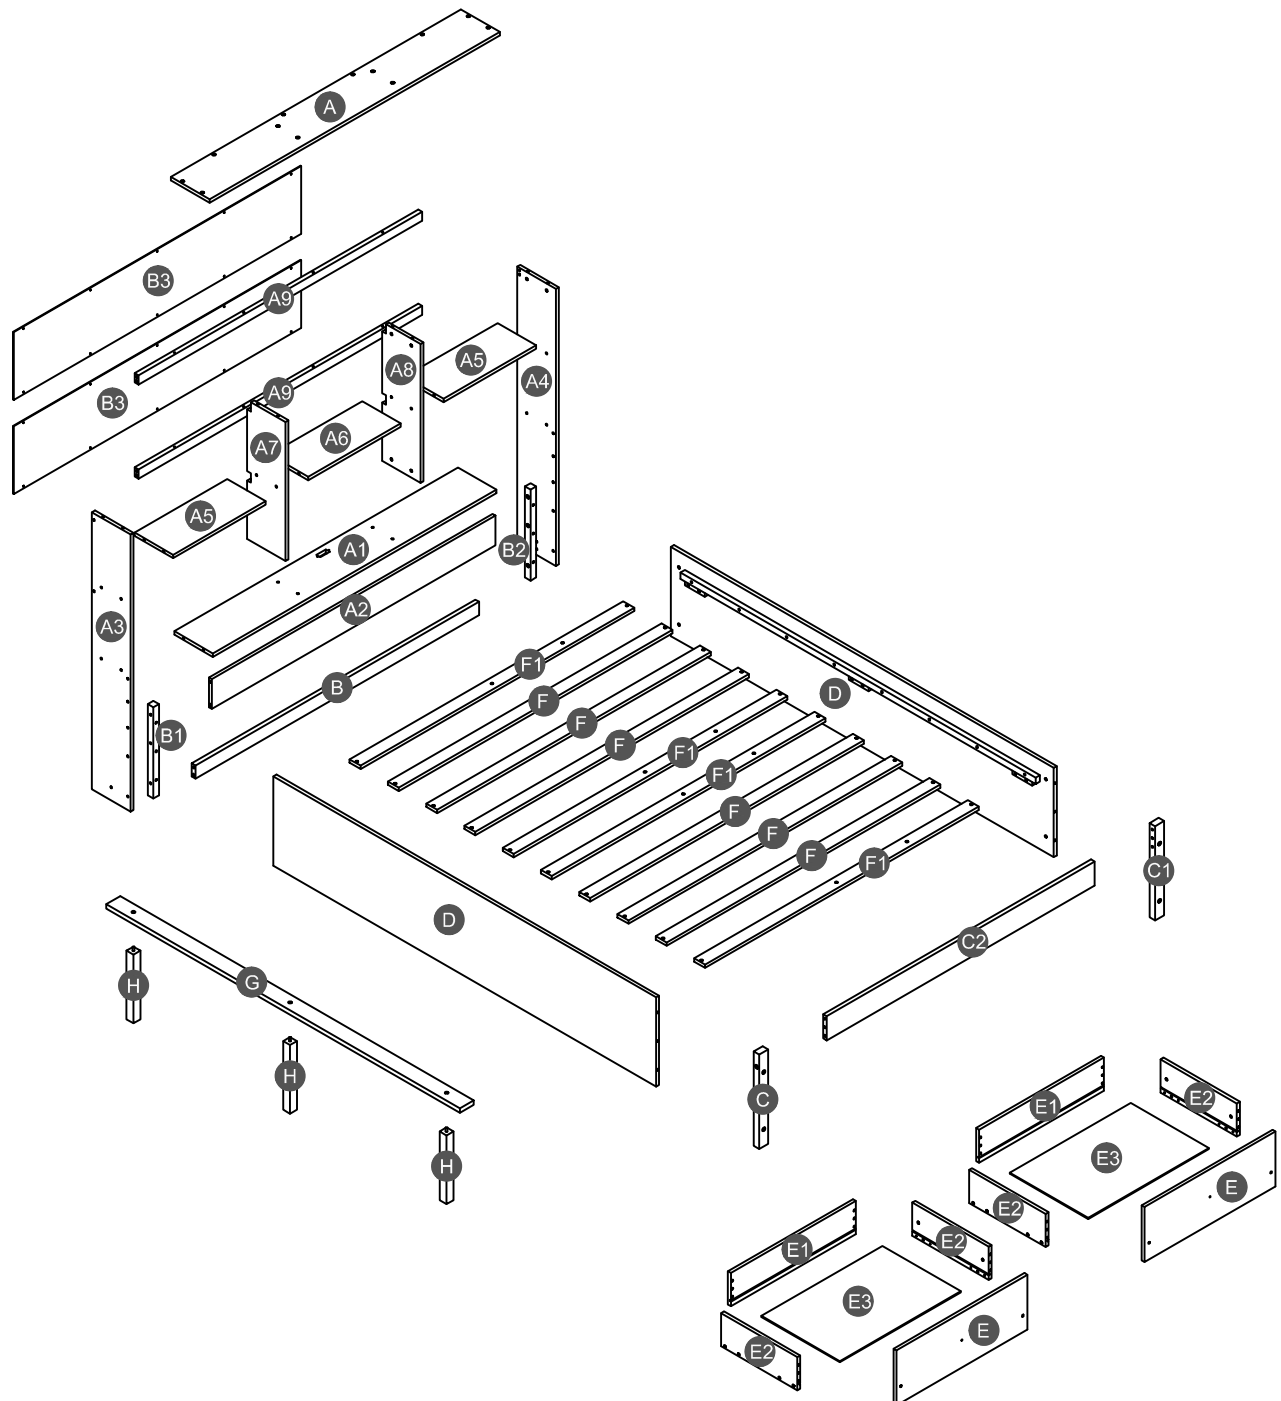
## Detail View
















# Part List


















**WF310890**

<b>A9</b>  Upper horizontal HB (back) - 2pcs	<b>B</b>  Lower horizontal HB - 1pc	<b>B1</b>  Support HB (left) - 1pc
<b>B2</b>  Support HB (right) - 1pc	<b>B3</b>  Back panel - 2pcs	<b>C</b>  Leg FB (left) - 1pc
<b>C1</b>  Leg FB (right) - 1pc	<b>C2</b>  Horizontal FB - 1pc	<b>D</b>  Side rail - 2pcs
<b>F</b>  Slats - 6pcs	<b>F1</b>  Slats - 4pcs	<b>G</b>  Lower support slat - 1pc
<b>H</b>  Leg support - 3pcs		


## WF310891 + Hardware inside

<b>A</b>  Top panel HB - 1pc	<b>A1</b>  Shelf panel HB - 1pc	<b>A2</b>  Horizontal bar HB - 1pc
<b>A3</b>  Side panel (left) - 1pc	<b>A4</b>  Side panel (right) - 1pc	<b>A5</b>  Shelf panel HB - 2pcs
<b>A6</b>  Divider shelf panel HB - 1pc	<b>A7</b>  Divider panel (left) - 1pc	<b>A8</b>  Divider panel (right) - 1pc
<b>E</b>  Front drawer panel - 2pcs	<b>E1</b>  Back drawer panel - 2pcs	<b>E2</b>  Left / right drawer panel - 4pcs
<b>E3</b>  Drawer bottom - 2pcs		

# Hardware List WF310891

<b>1</b>  Ø8*30mm Wood dowel (38pcs)	<b>2</b>  (Ø15)1/4"*80mm Hex-Head bolts (2pcs)	<b>3</b>  (Ø12)1/4"*70mm Hex-Head bolts (8pcs)
<b>4</b>  (Ø12)1/4"*60mm Hex-Head bolts (38pcs)	<b>5</b>  (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	<b>6</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(48pcs)
<b>7</b>  (1/4")4.5*58mm Allen key (1pc)	<b>8</b>  100*54*20 mm Wheels (8pcs)	<b>9</b>  Ø38*31mm Pine Knob (2pcs)
<b>10</b>  3/16"*25mm Ph zinc(Knob) (2pcs)	<b>11</b>  Ø3.5*15mm Wood screws (2pcs)	<b>12</b>  (Ø12)1/4"*40mm Wood screw bolts (4pcs)
<b>13</b>  Ø4*30mm Wood screws (46pcs)	<b>14</b>  Ø3.5*15mm Wood screws (20pcs)	<b>15</b>  Ø10*20mm Wood dowel (8pcs)
<b>16</b>  70*50*19 mm Drawer stopper (3pcs)	<b>17</b>  1500*68*30*22mm USB port (1set)	

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

## STEP 1:

5



6PCS

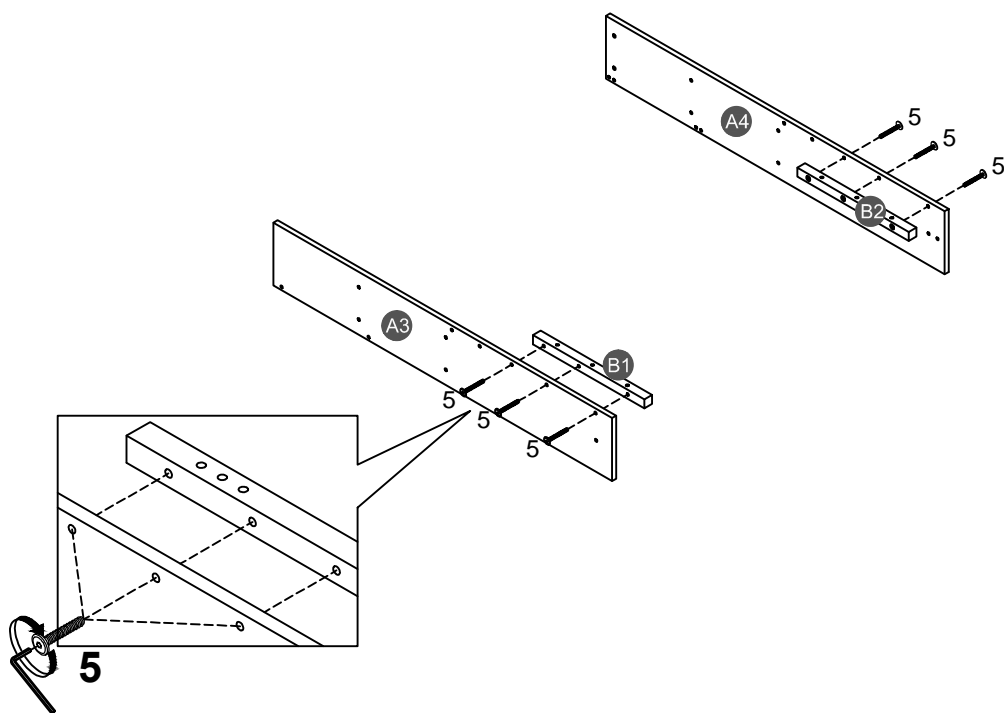


## STEP 2:


1



4PCS

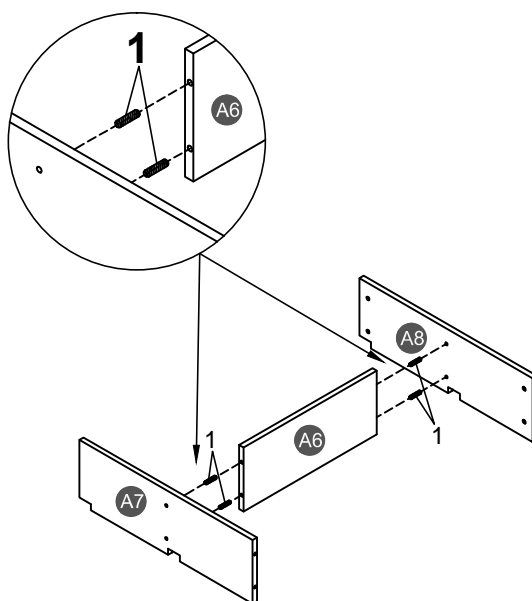


### STEP 3:

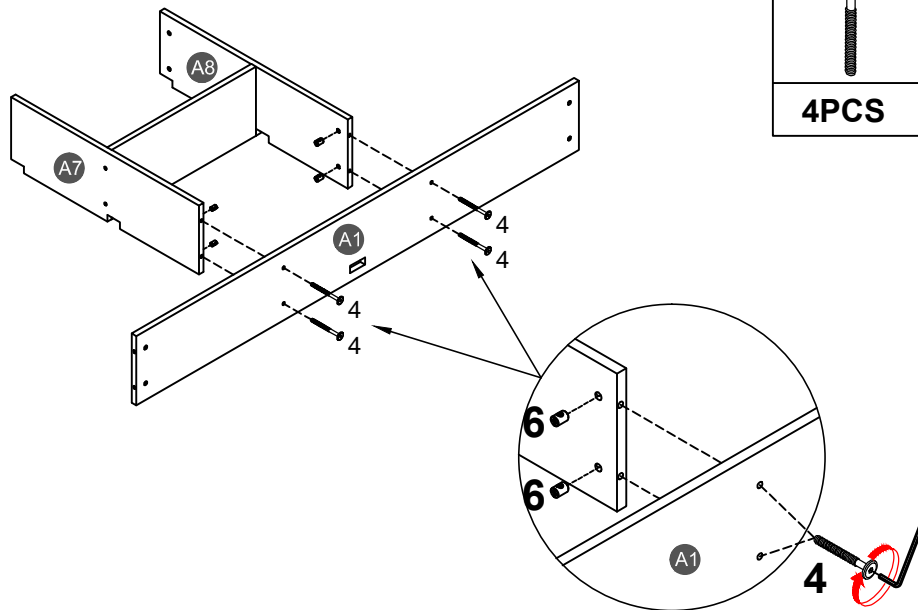


4	6
4PCS	4PCS

### STEP 4:

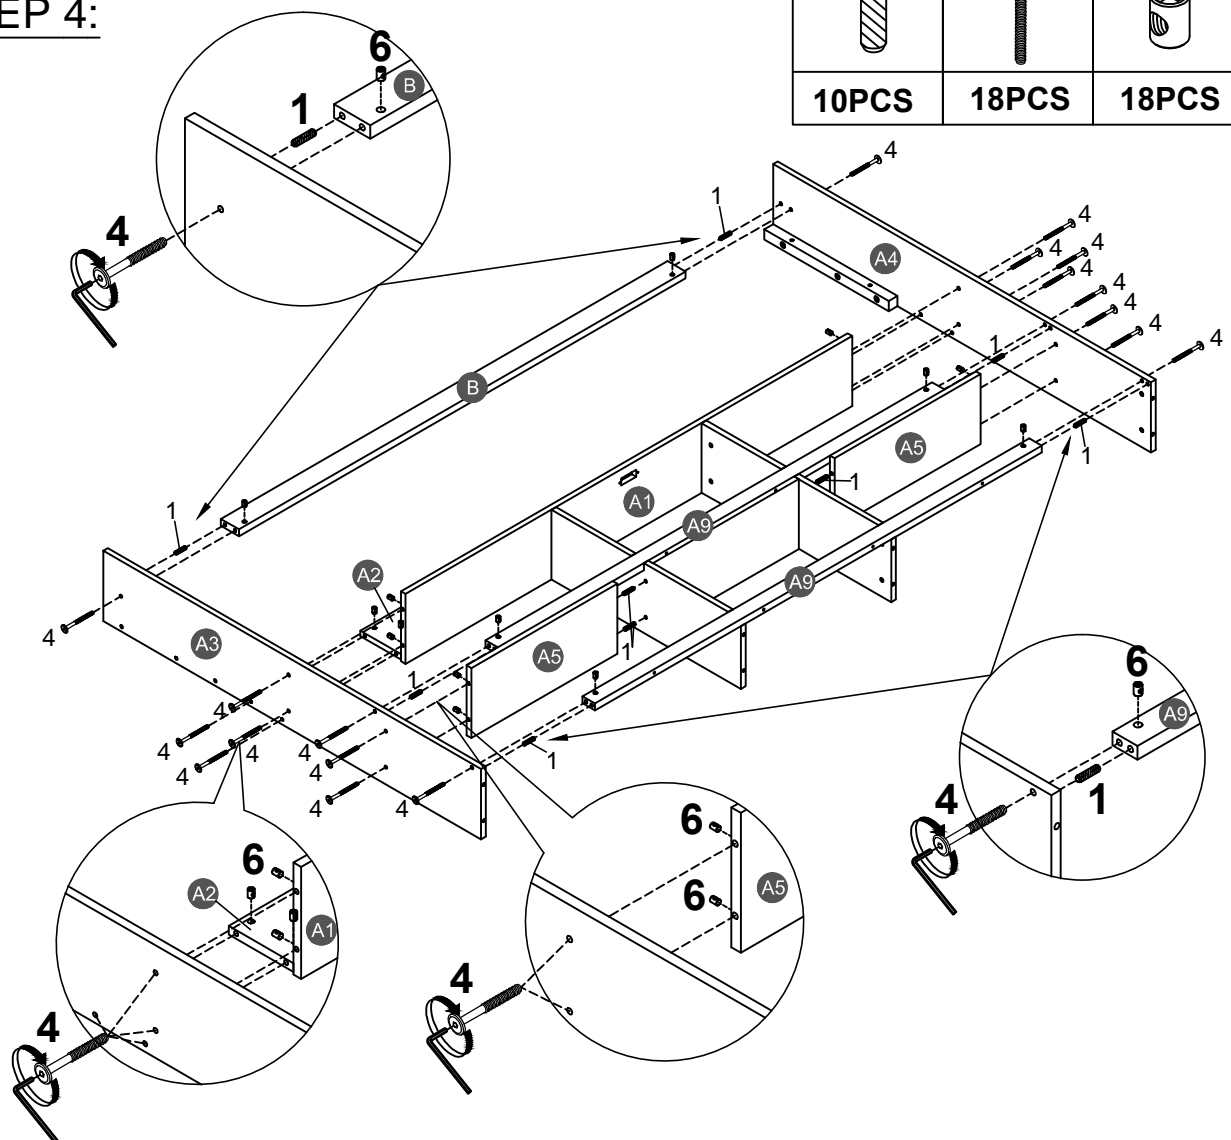


1	4	6
10PCS	18PCS	18PCS

## STEP 5:

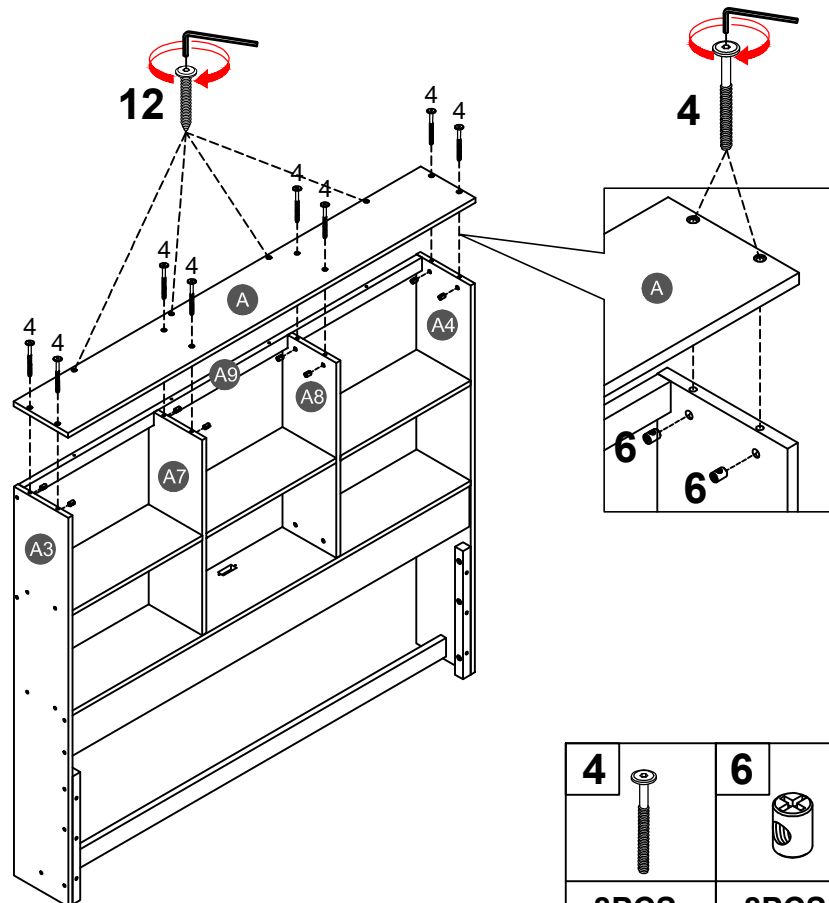

4	6	12
8PCS	8PCS	4PCS

## STEP 6:

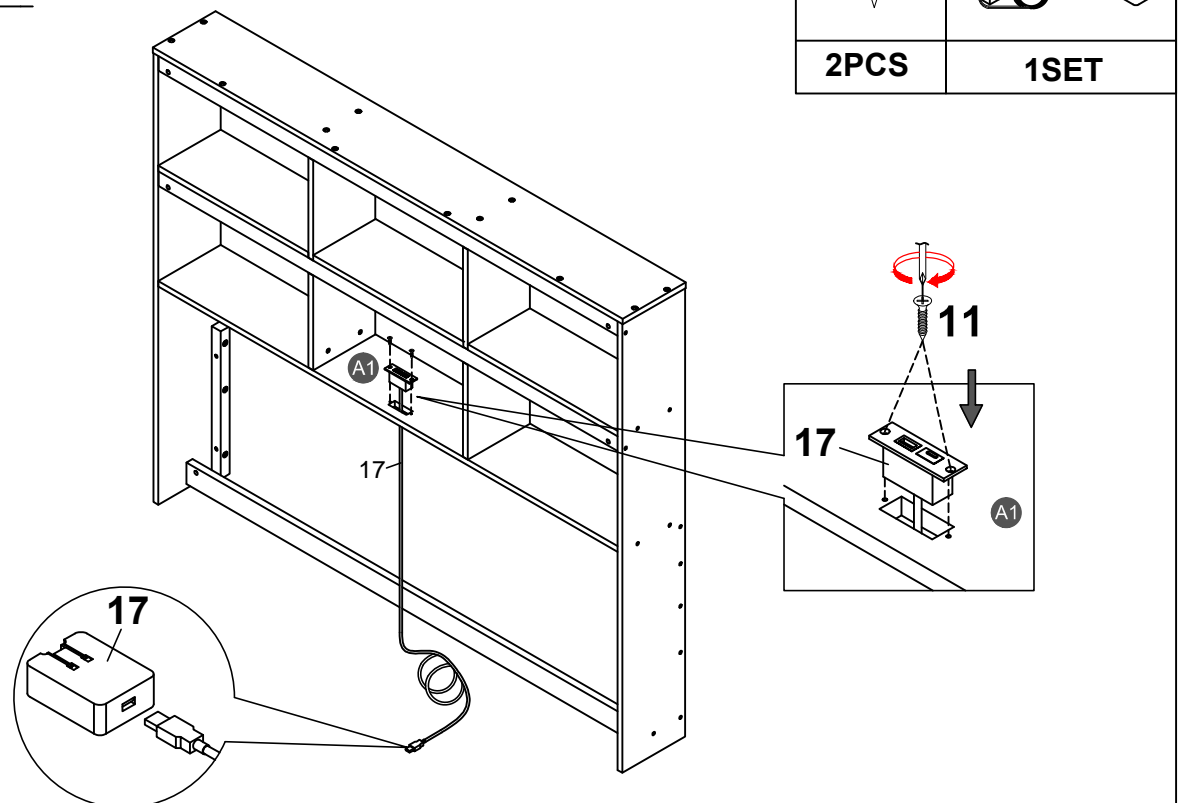


11	17
2PCS	1SET

STEP 7:

14



20PCS

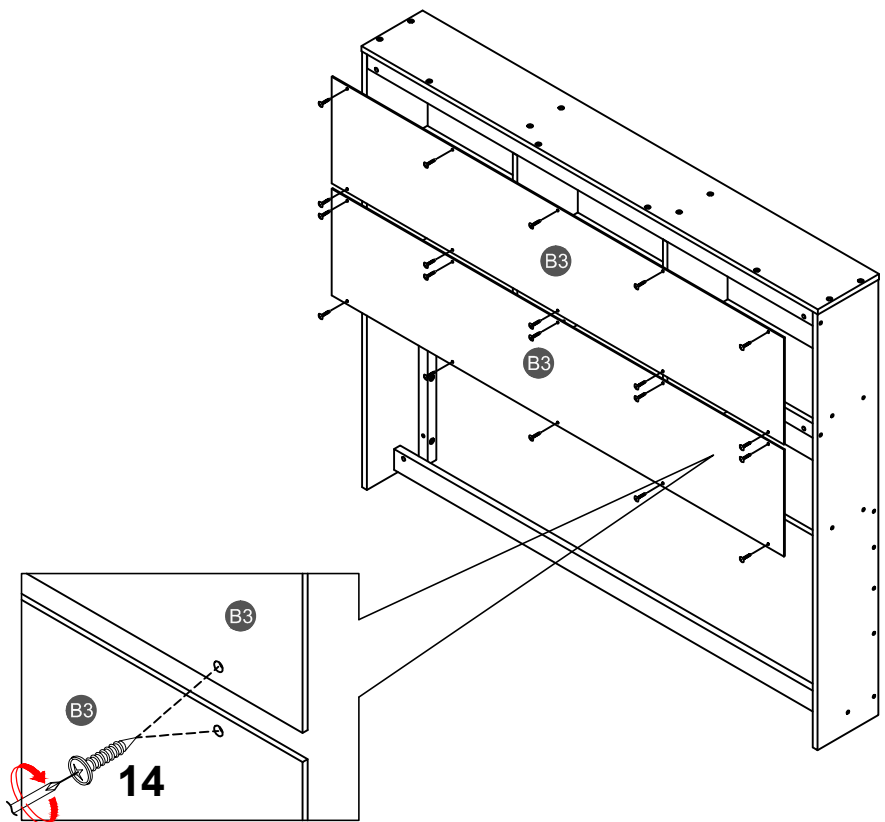

STEP 8:

13




6PCS

16




3PCS

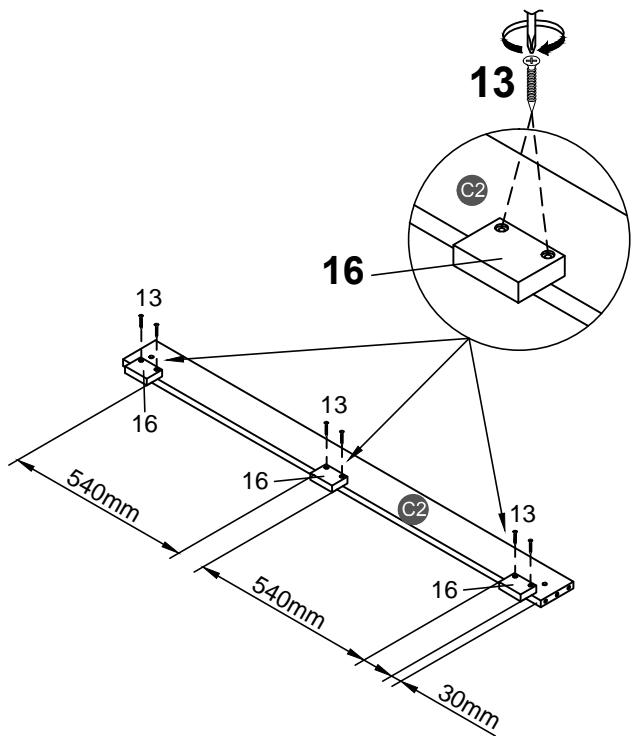




## STEP 9:

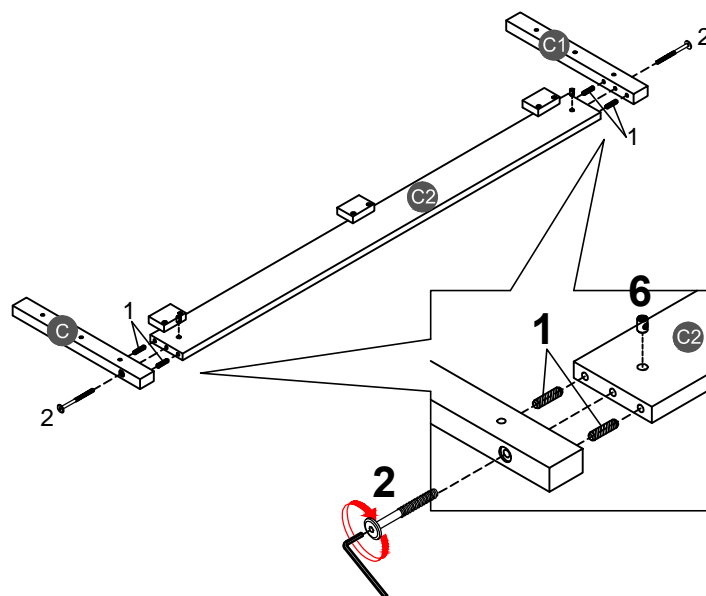


1		2	
4PCS		2PCS	
		6	
		2PCS	

## STEP 10:

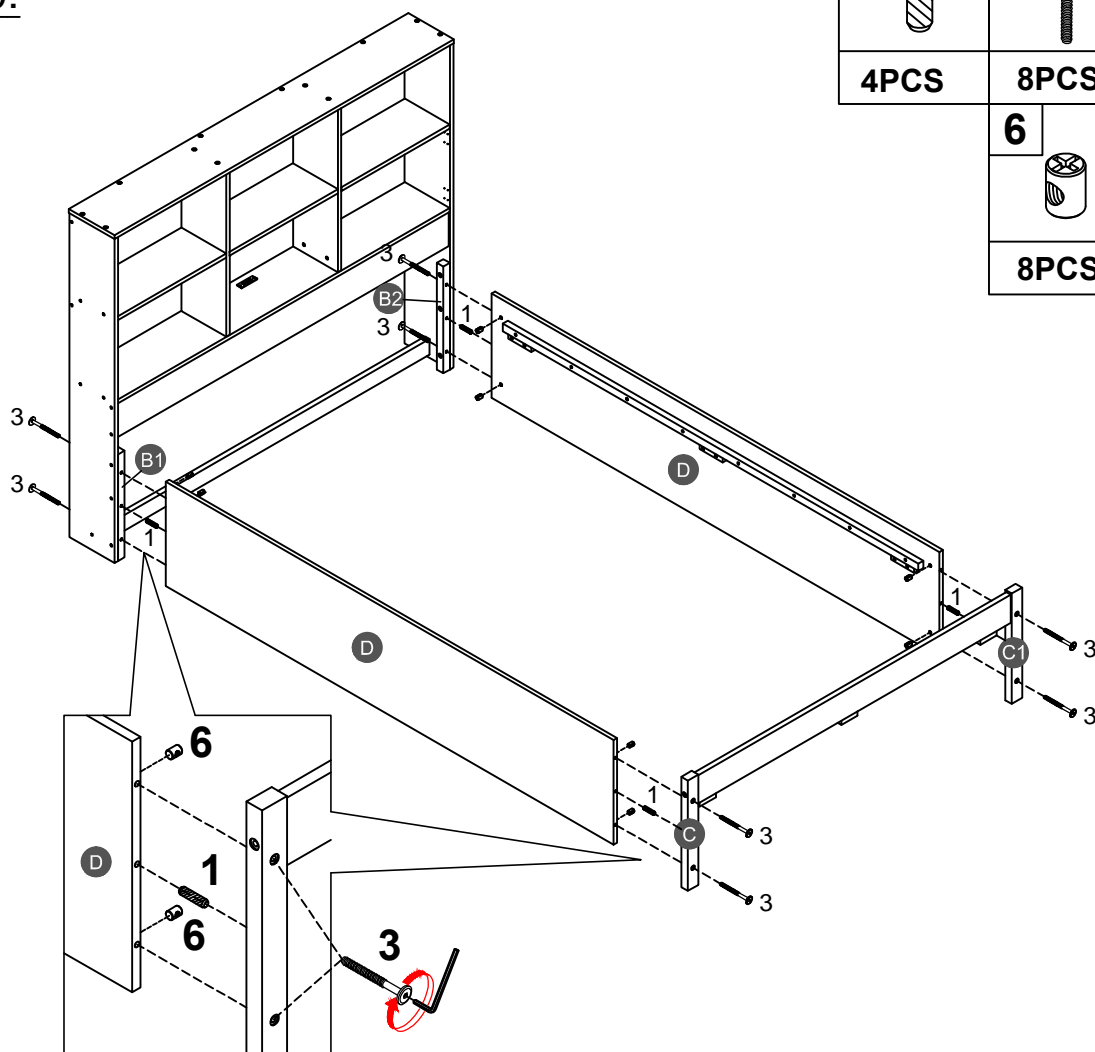


1		3	
4PCS		8PCS	
		6	
		8PCS	

## STEP 11:

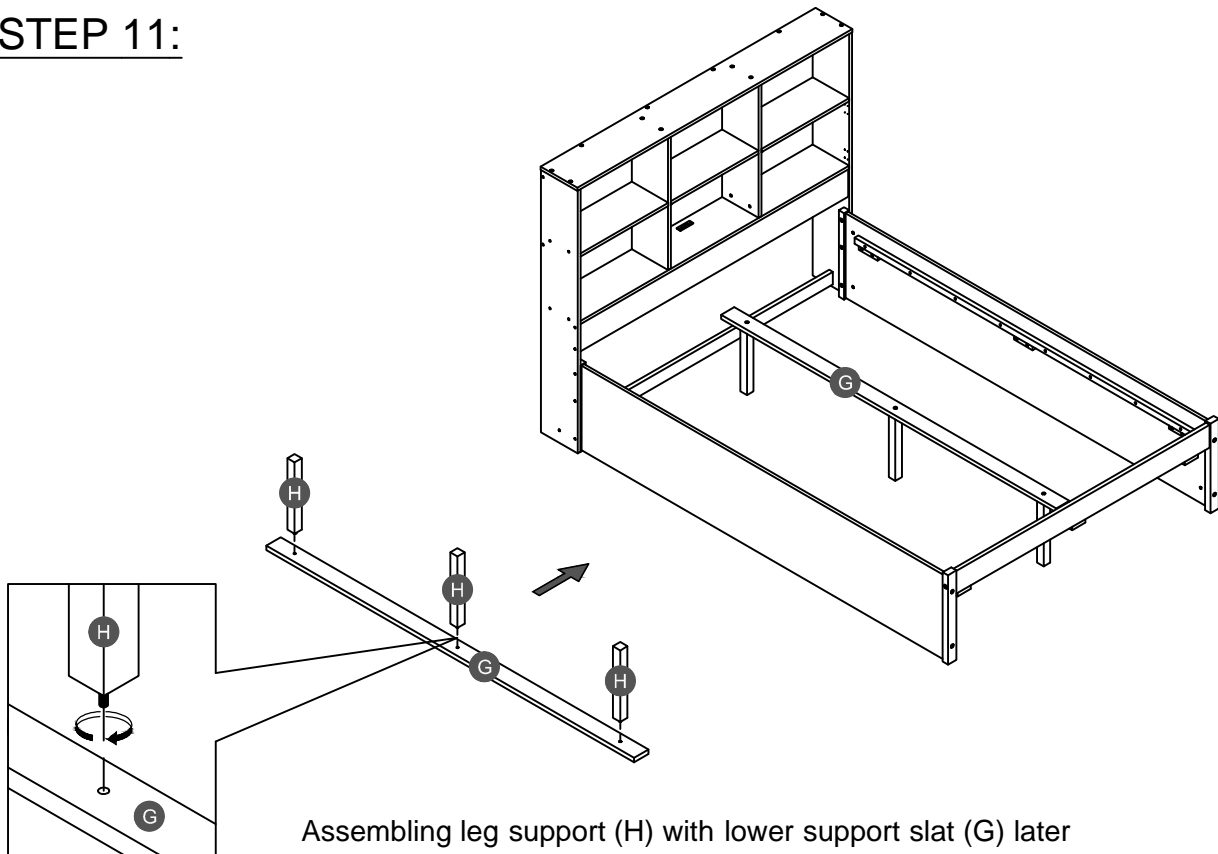

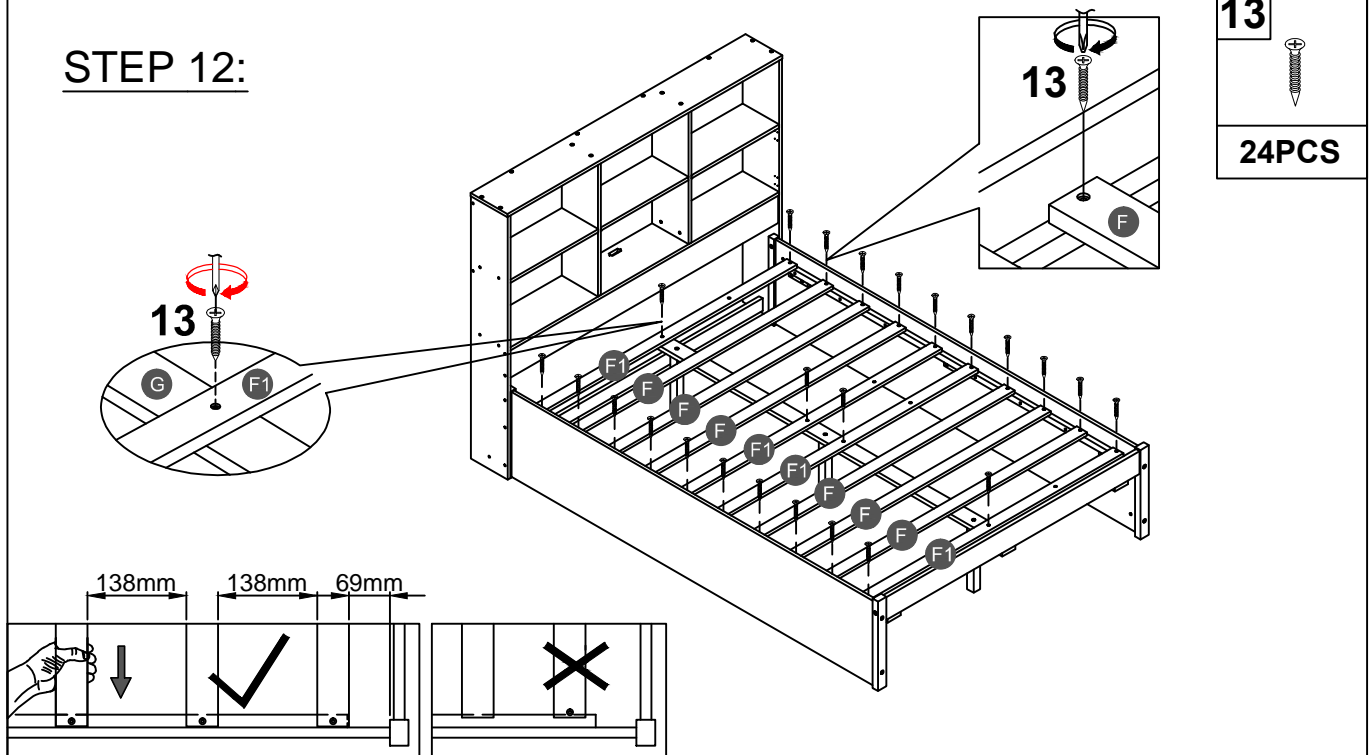


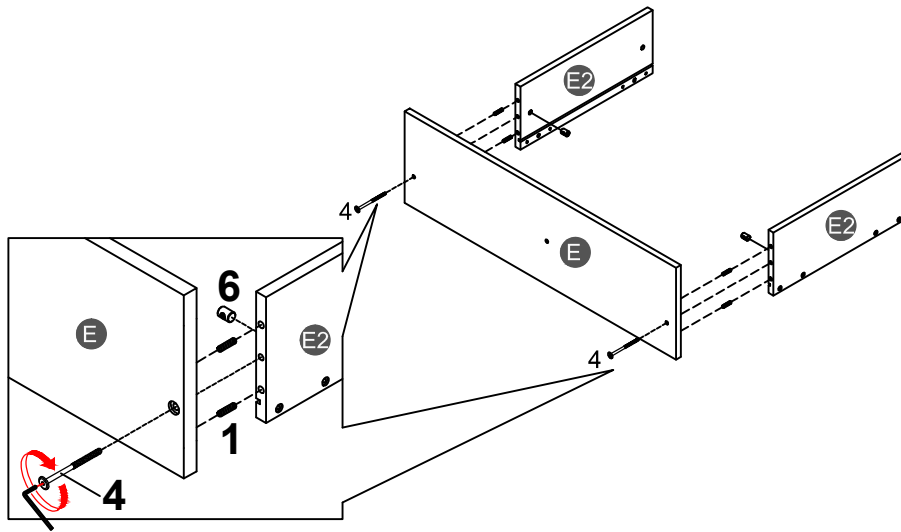
## STEP 12:



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.




## STEP 13:


1	4	6
		
8PCS	4PCS	4PCS



x 2




## STEP 14:

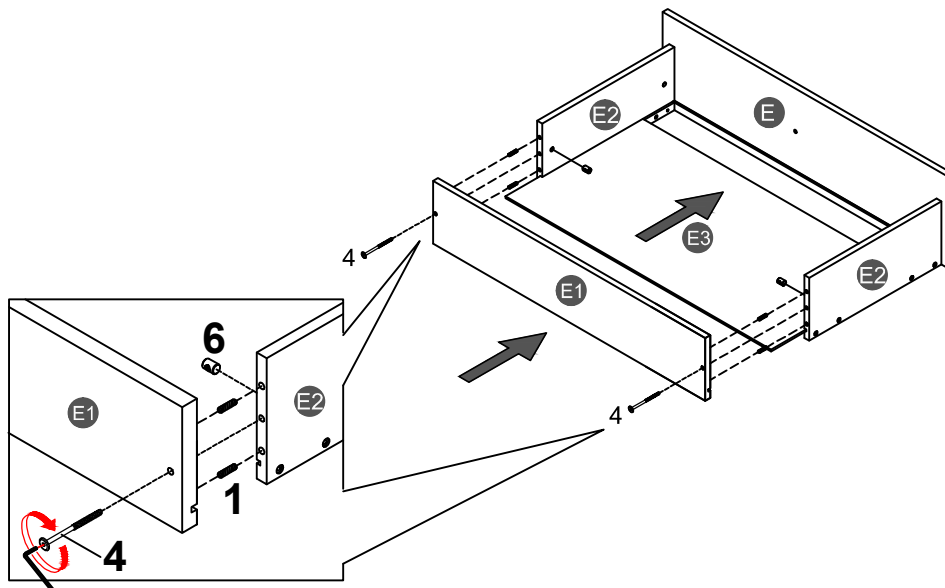
1	4	6
		
8PCS	4PCS	4PCS





x 2


## STEP 15:
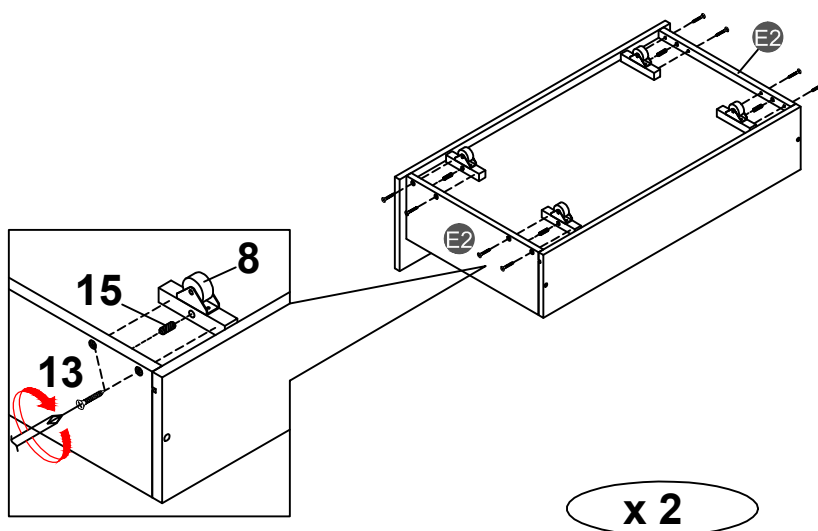
<b>8</b>	<b>13</b>	<b>15</b>
		
<b>8PCS</b>	<b>16PCS</b>	<b>8PCS</b>




## STEP 16:


<b>9</b>	<b>10</b>
	
<b>2PCS</b>	<b>2PCS</b>

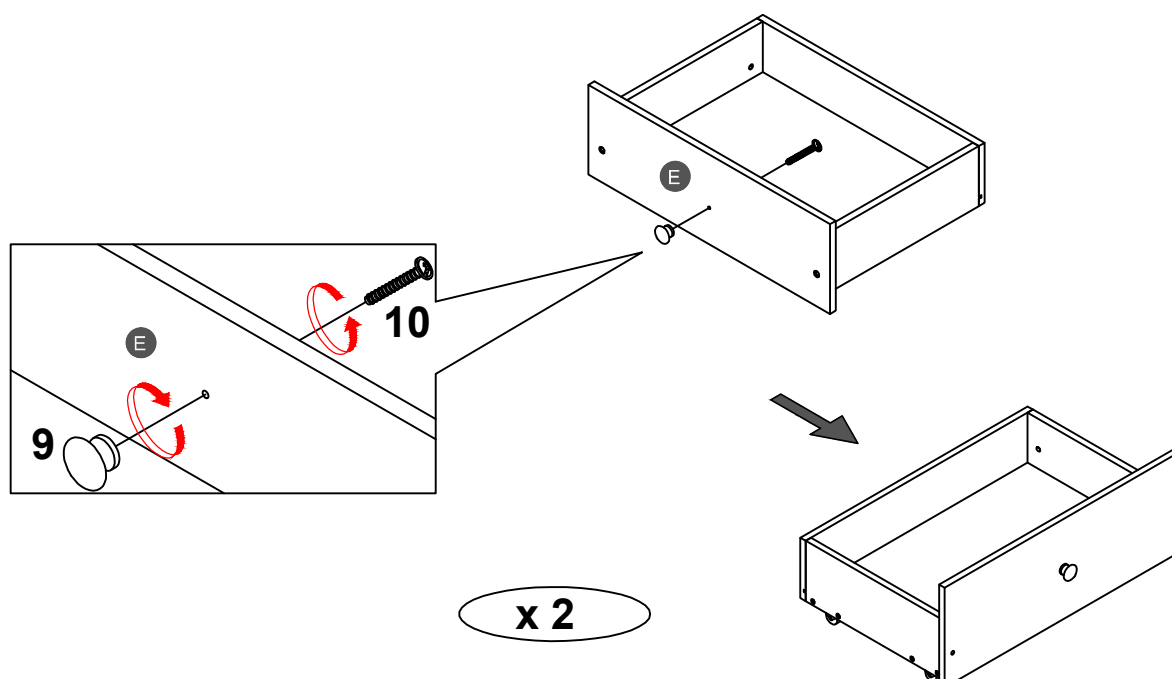

## STEP 17:

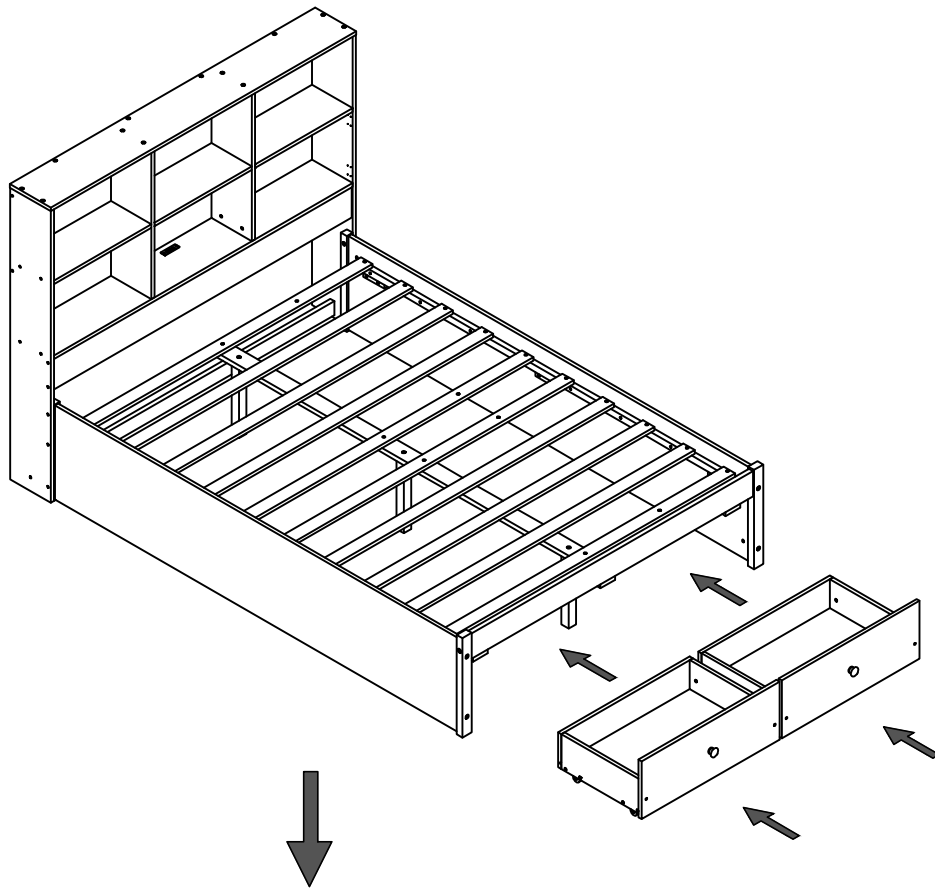

Push Drawer under the bottom of Bunk Bed.

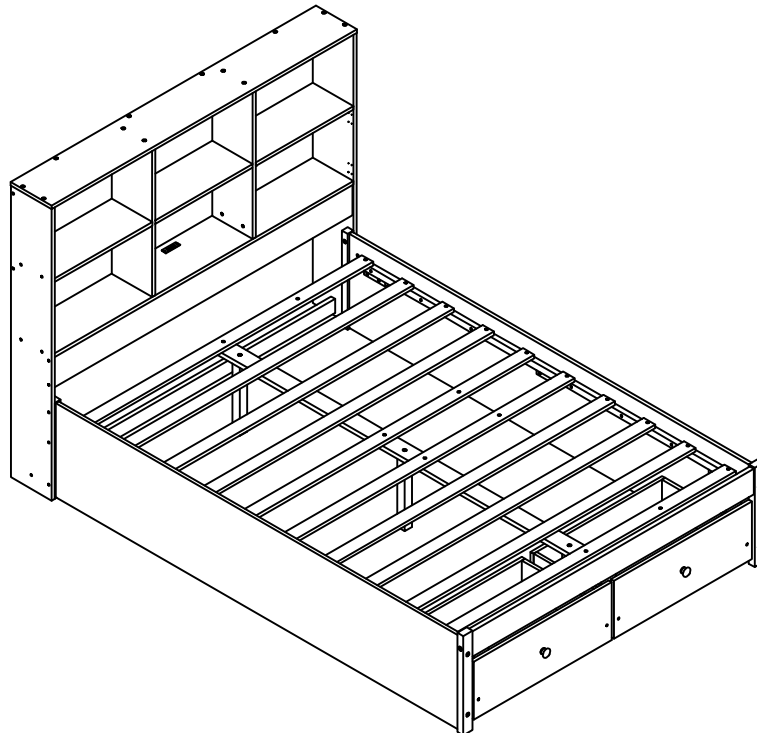

**Make sure to tighten all the screws of the bed.**