




***Boraam Industries***

**STEP STOOL**

ASSEMBLY INSTRUCTIONS

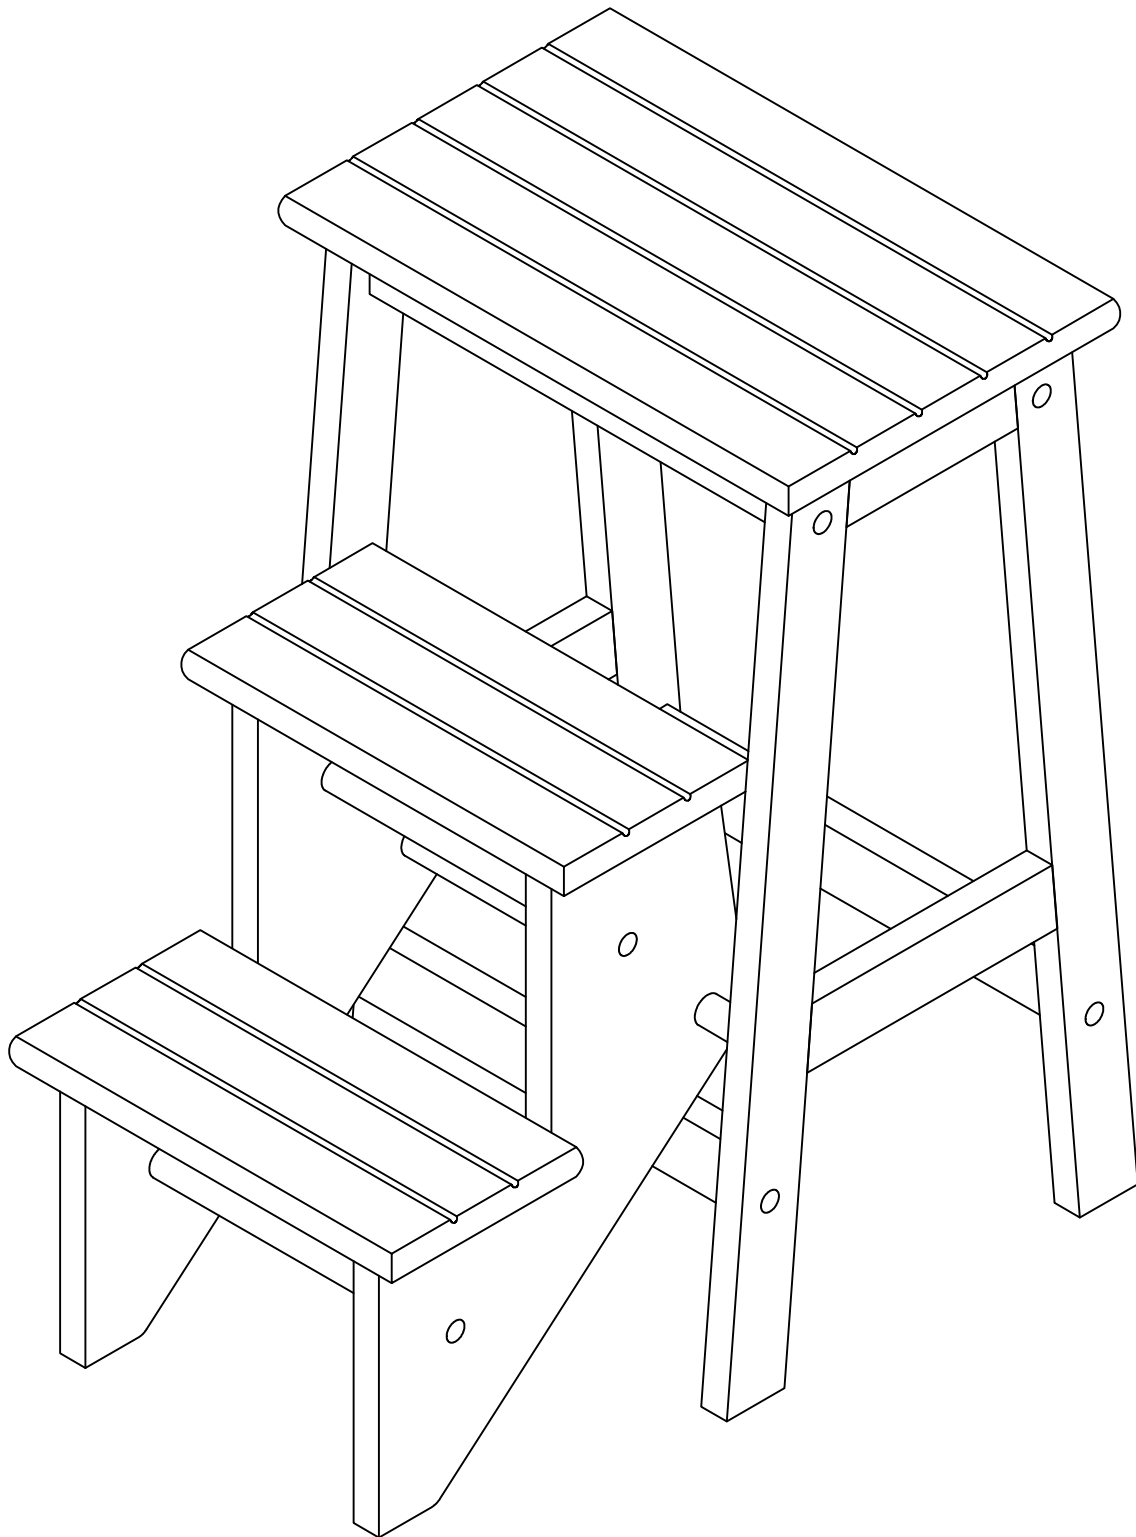



PLEASE READ ME FIRST



- Have questions about assembling your item?



- Item or parts damaged?



- Missing a part?



- We're here to help!



(847)949-6300 (M-F, 9am-5pm CST)



[www.boraamindustries.com](http://www.boraamindustries.com)




[customerservice@boraamindustries.com](mailto:customerservice@boraamindustries.com)

Phillips  
Screwdriver  
(Not provided)




**A**

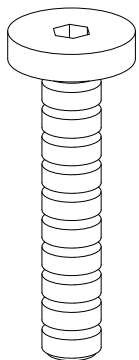


**8 PCS**

**B**

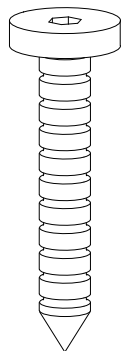


**12 PCS**

**C**

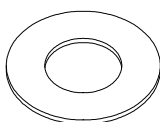

**8 PCS**

**D**




**2 PCS**

**E**




**12 PCS**

**F**

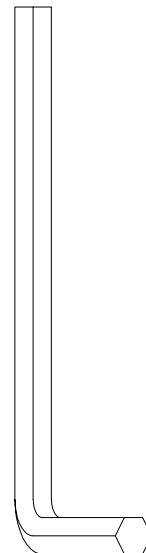


**1 PC**

**①**

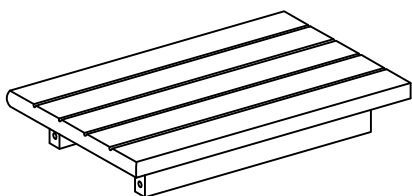


**②**

LEFT

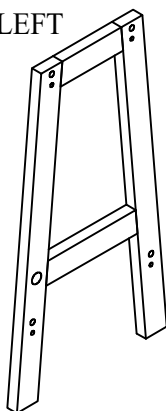


**③**

RIGHT

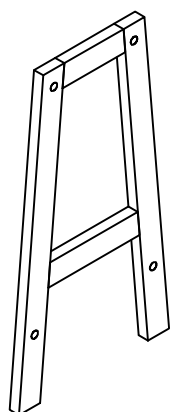


**④**

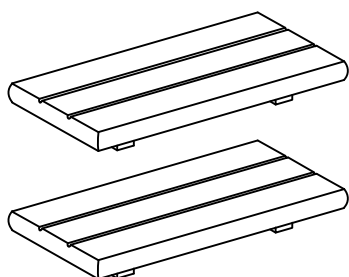


**⑤**

LEFT

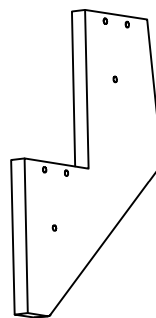


**⑥**


RIGHT

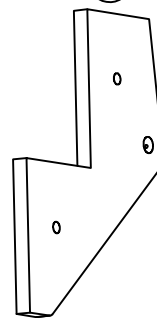

**⑦**

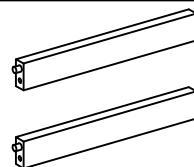


**⑧**

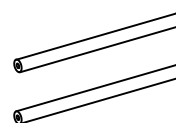

**⑨**




# 01

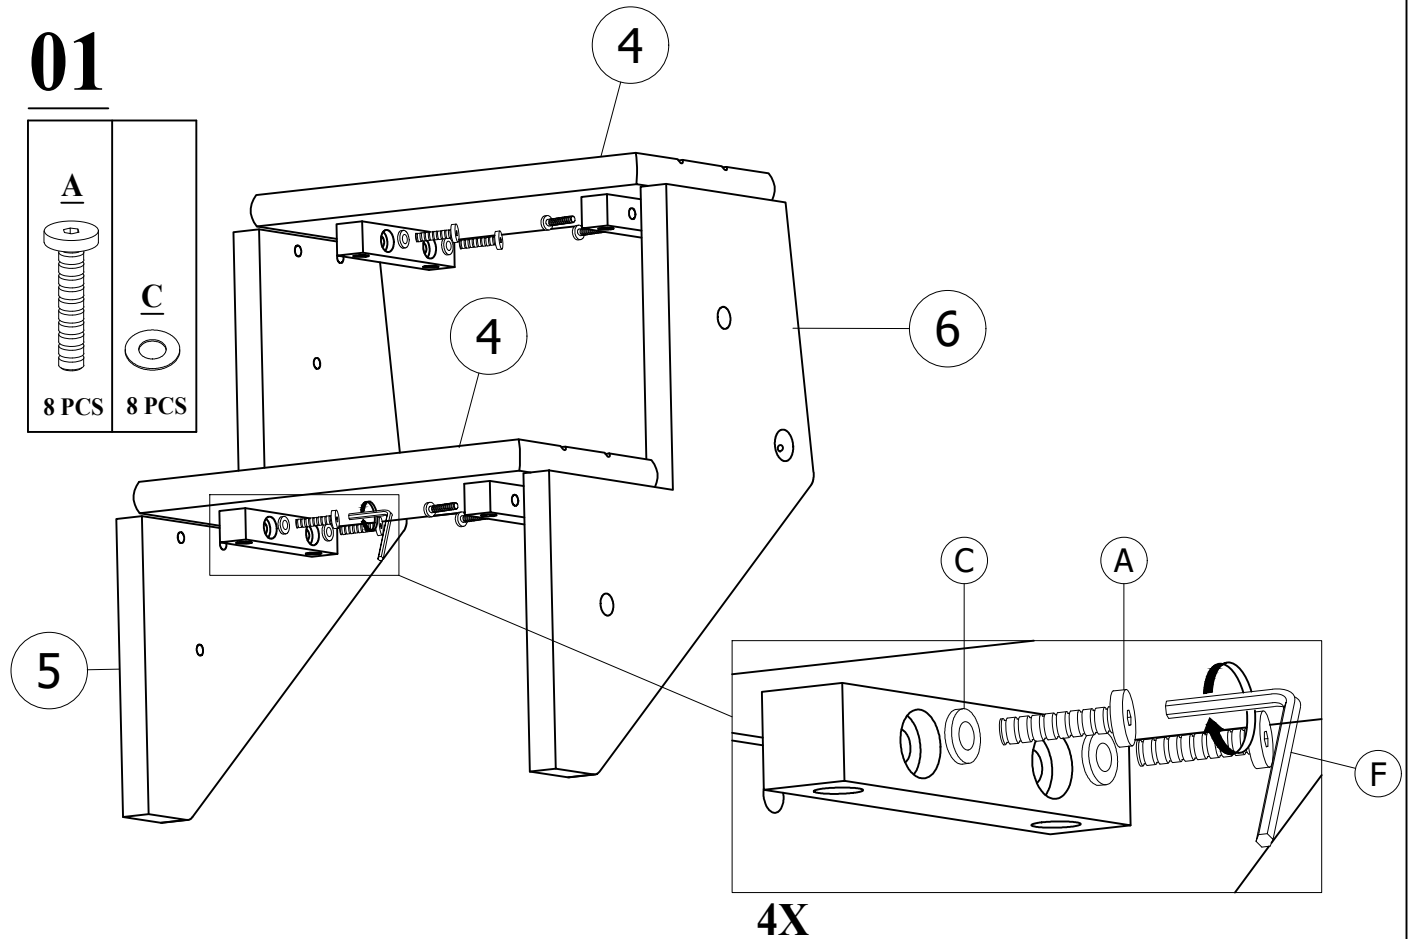



DO NOT TIGHTEN BOLT COMPLETELY UNTIL STEP 2 IS COMPLETE.

# 02

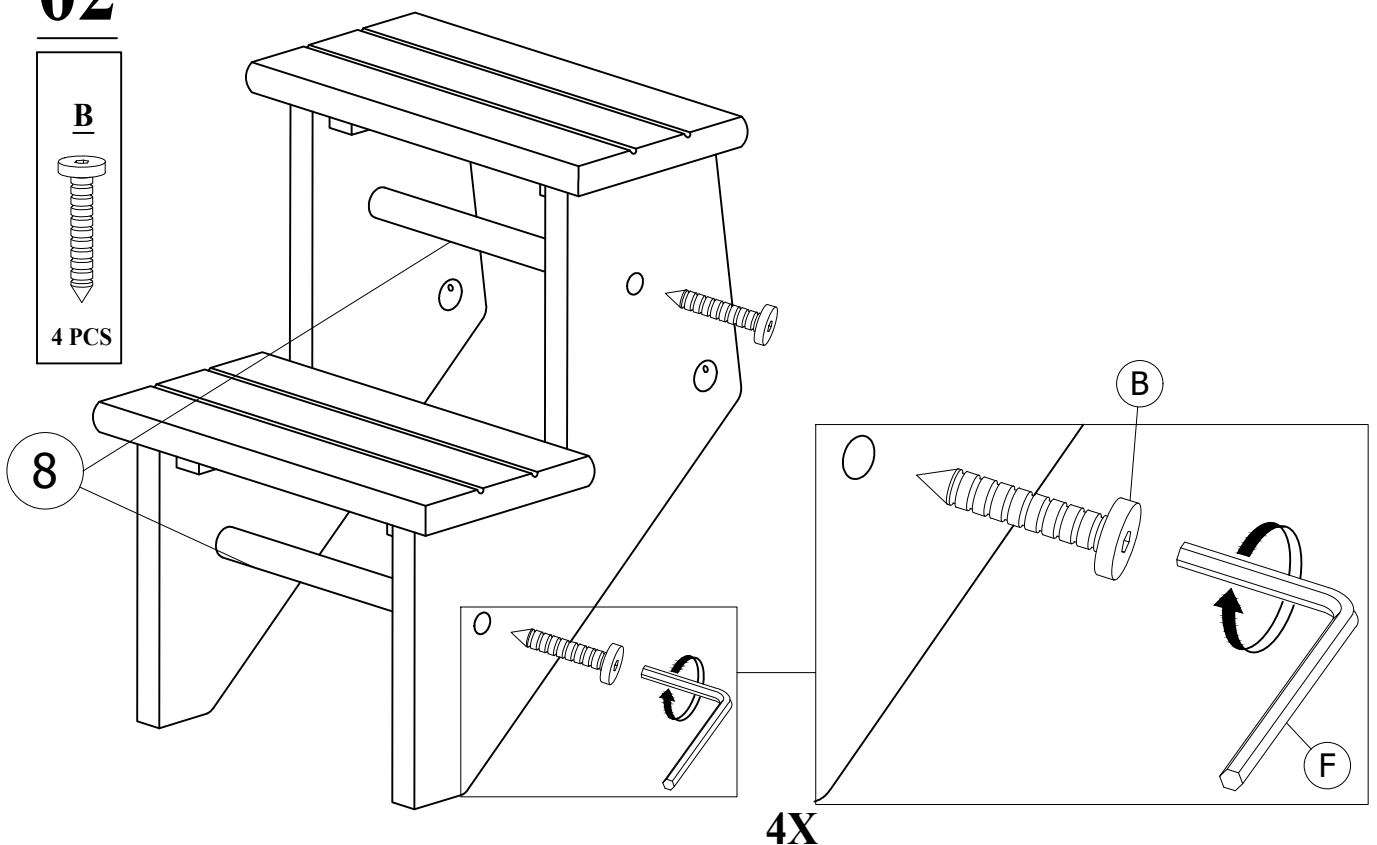


TIGHTEN SCREW COMPLETELY.

# 03

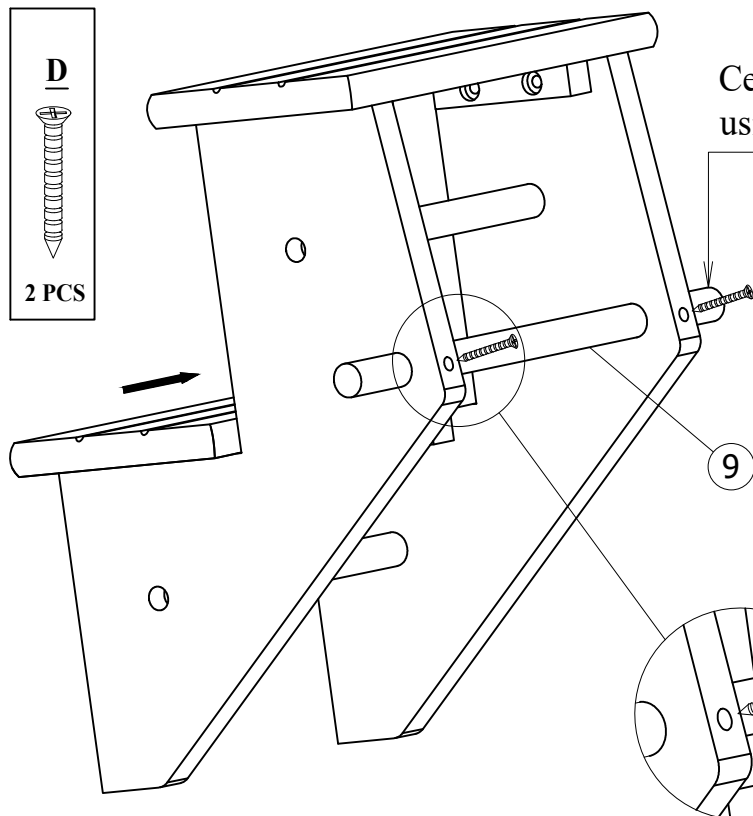



Centerline part 9 then carefully screw by using part D

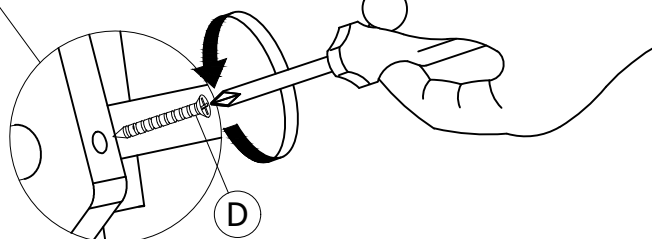

**2X**

TIGHTEN SCREW COMPLETELY.


# 04

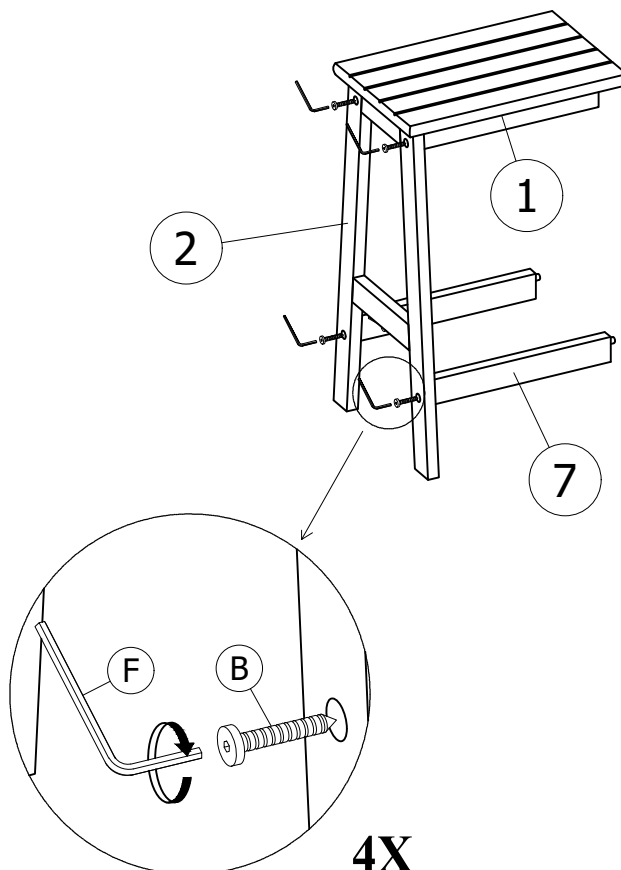


**4X**

TIGHTEN SCREW COMPLETELY.

**05**

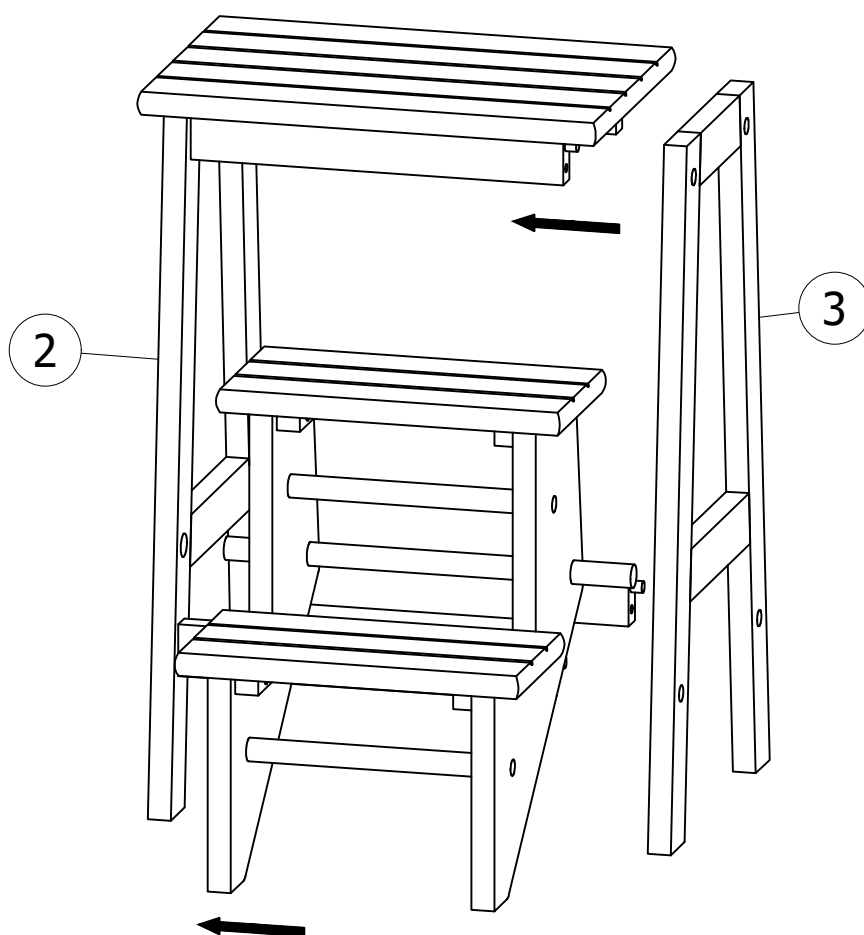

**06**



**4X**



TIGHTEN BOLT AND SCREW COMPLETELY.

# 07


E



12 PCS

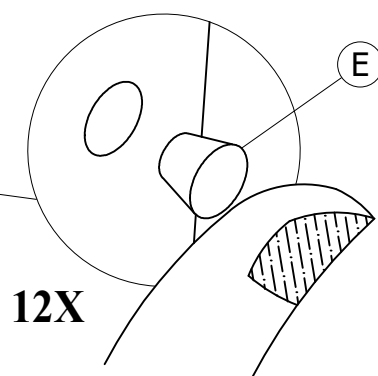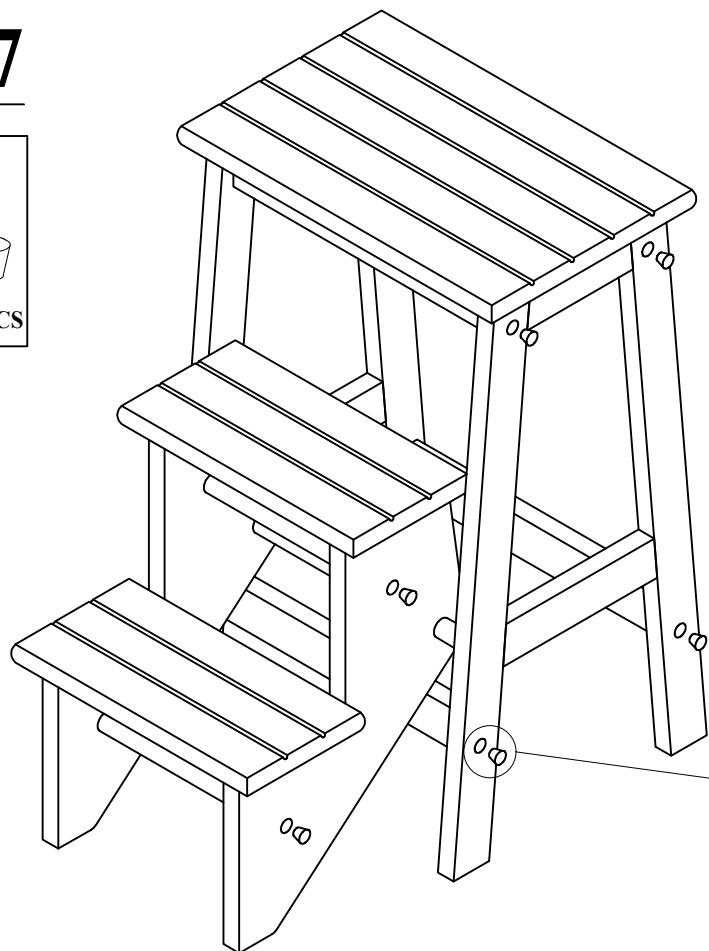

12X

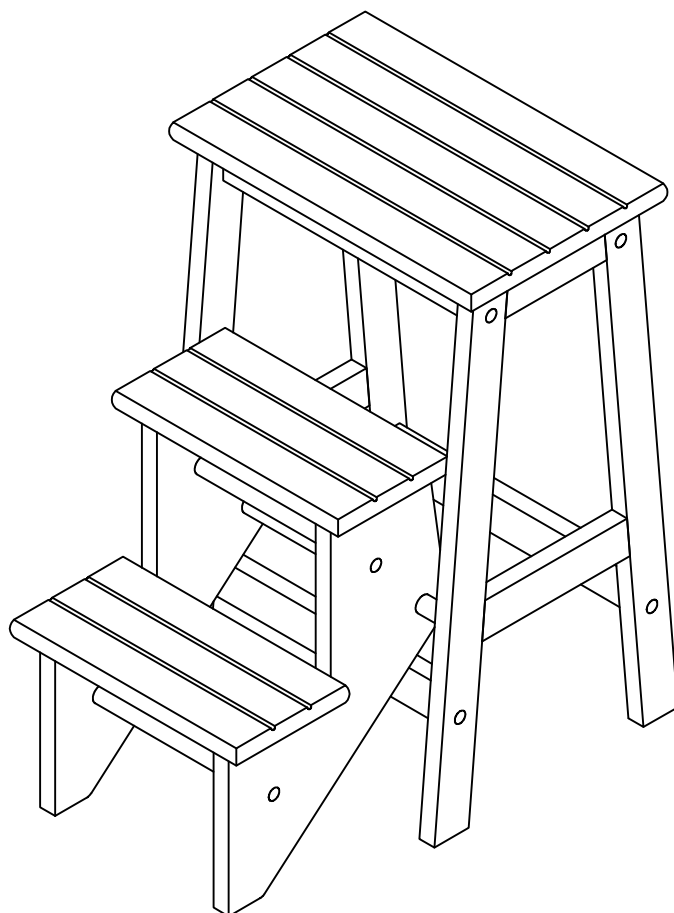

BE SURE TO CHECK ALL BOLTS ARE SECURELY TIGHTENED PRIOR USING THIS STOOL