
Cabinet

Assembly Instructions - Please keep for future reference

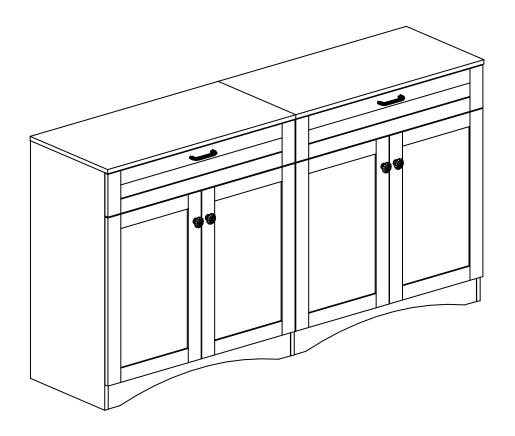

Dimensions

Width-63 inch

Depth-15.75 inch

Height-33.45 inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.



Step 2


Push the male camlock into the entry hole.

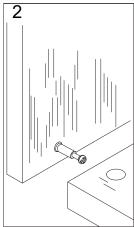

Step 3

Insert the female camlock as shown in the instruction.

Note:ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

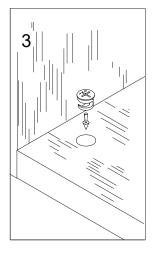



Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

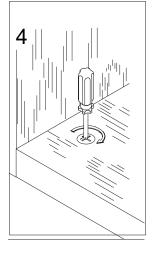

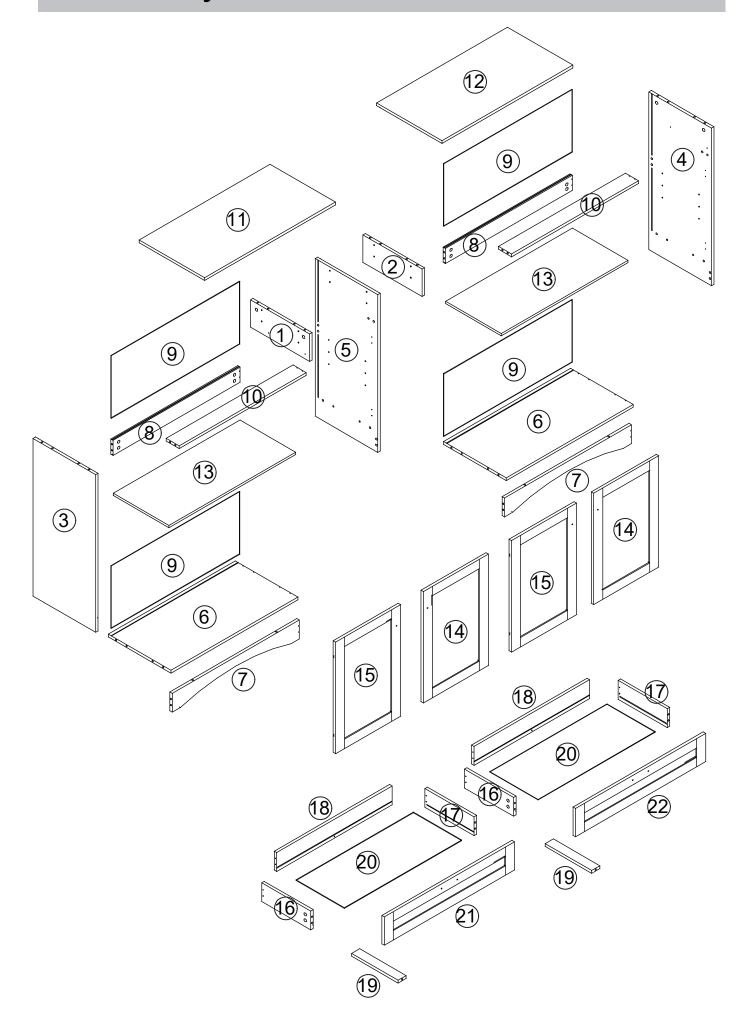

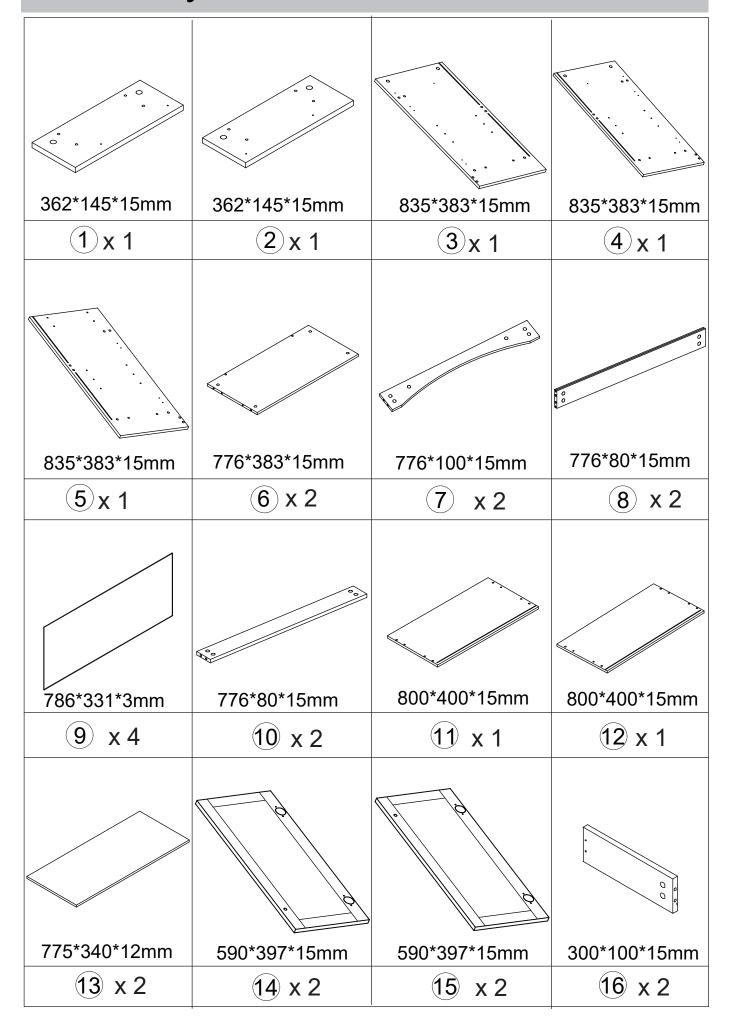


300*100*15mm	706*100*15mm	284*50*15mm	717*295*3mm
17x2	18 x 2	19 x 2	20 x 2
796*150*15mm	796*150*15mm		
/96^15U^15mm	/96°150°15mm		
21 x 1	22 x 1		


Components-Fittings


Please check you have all the panels listed below


Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

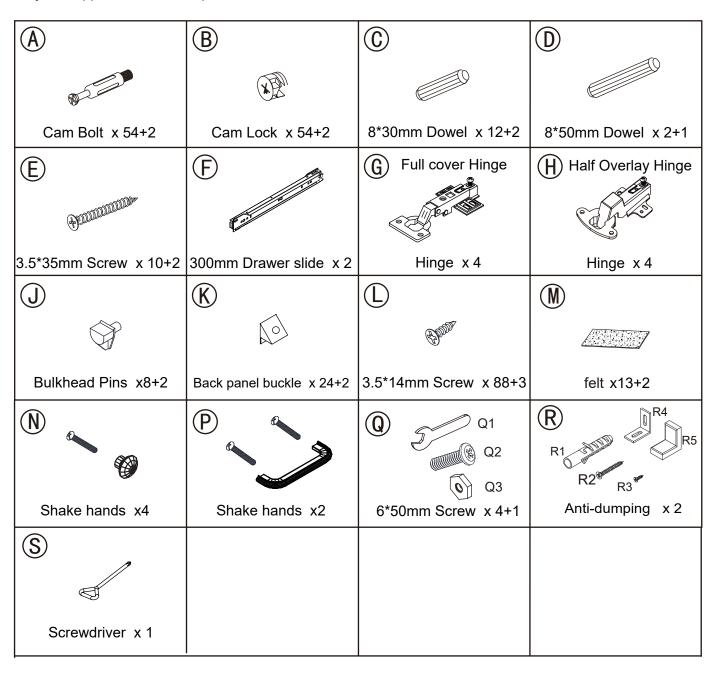



F-CR F-DL*2 F-CR*2 F-cL*2 F-DR*2 F*2 300mm F-CR F-CL 0 00 0 F-cL*2 F-cr*2 L*8 **Balan**

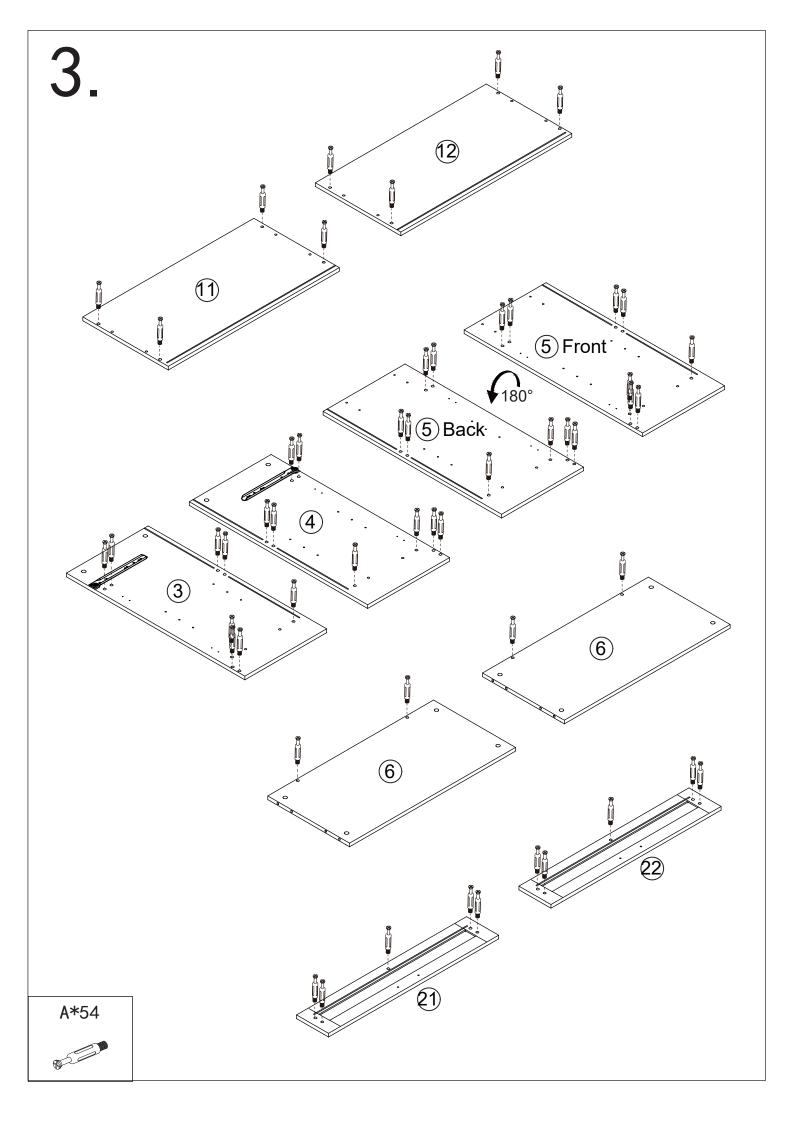


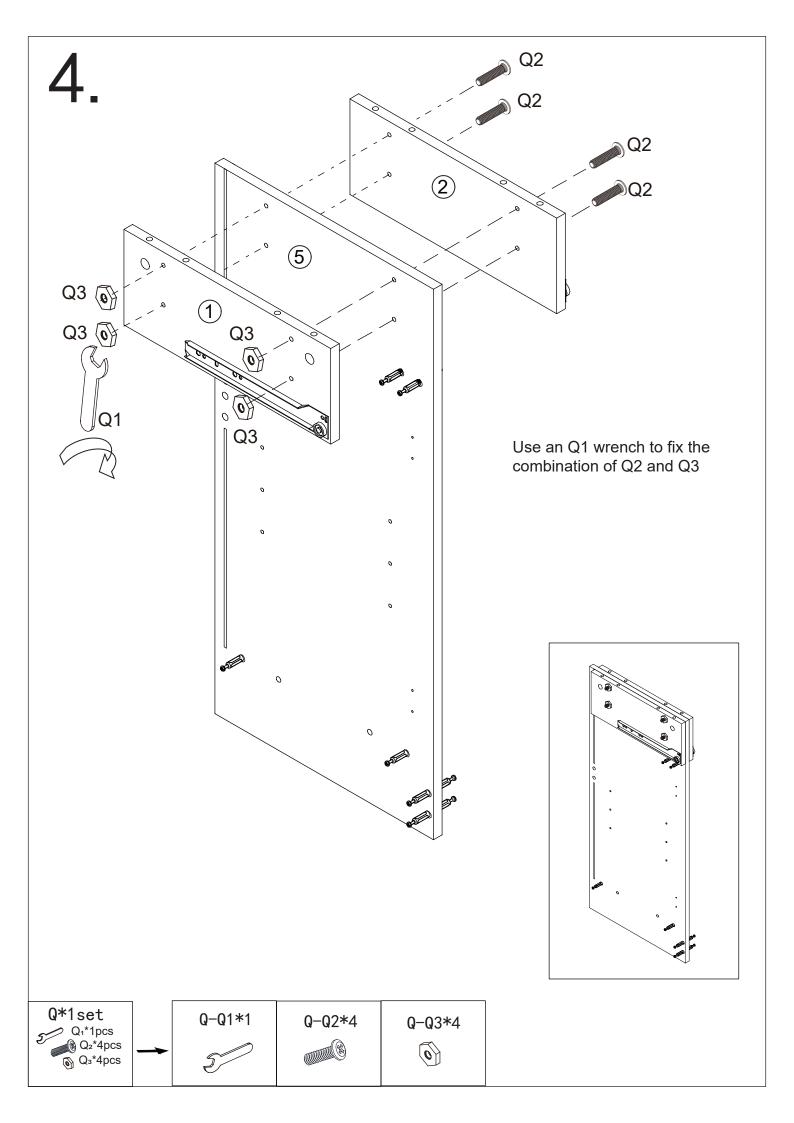


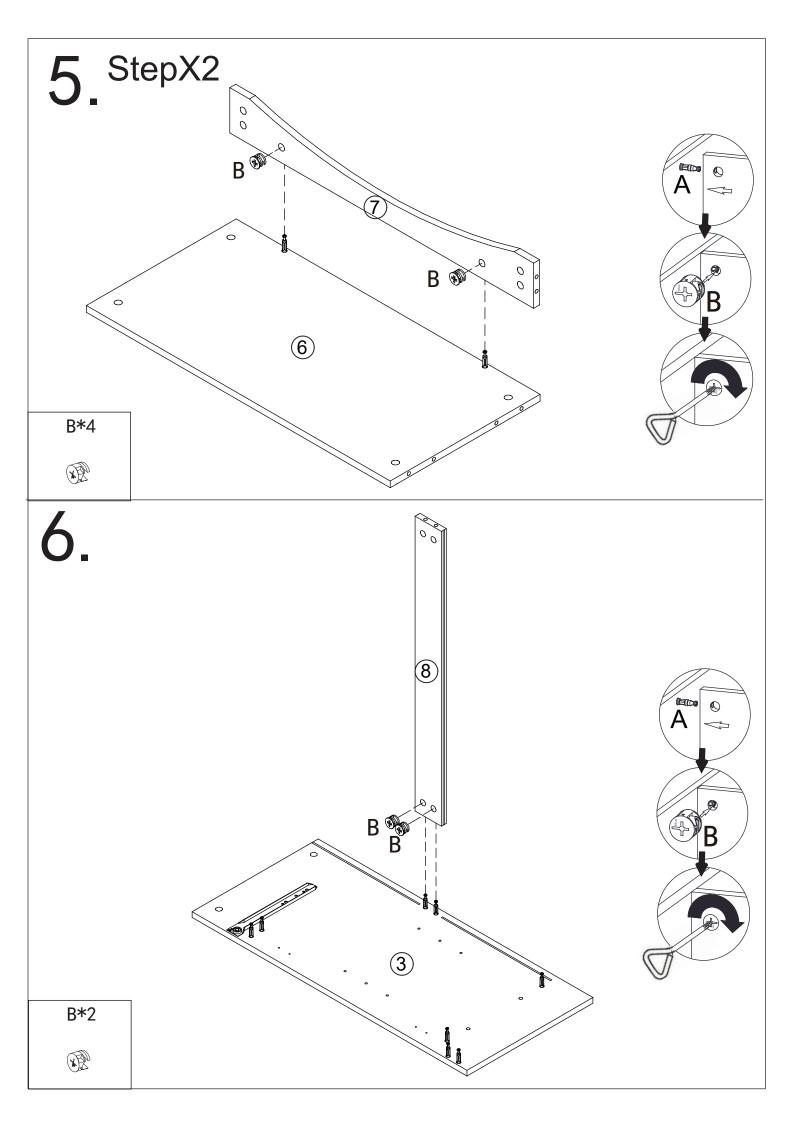

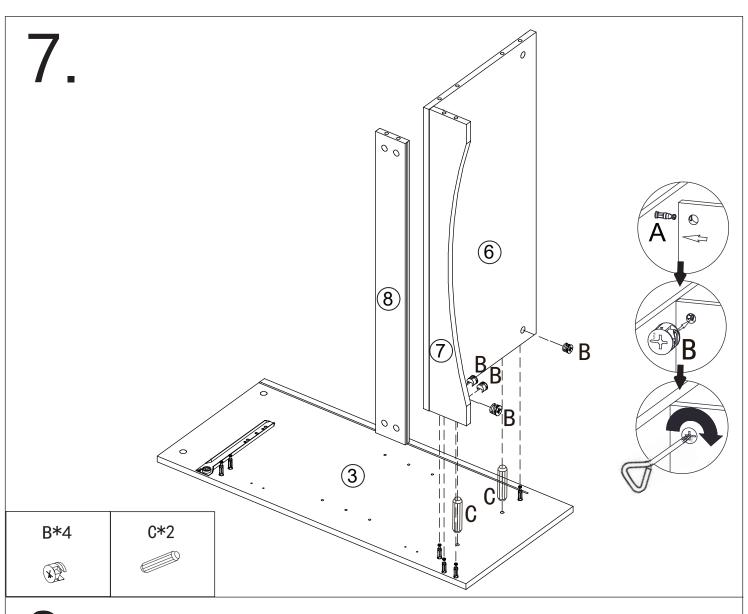


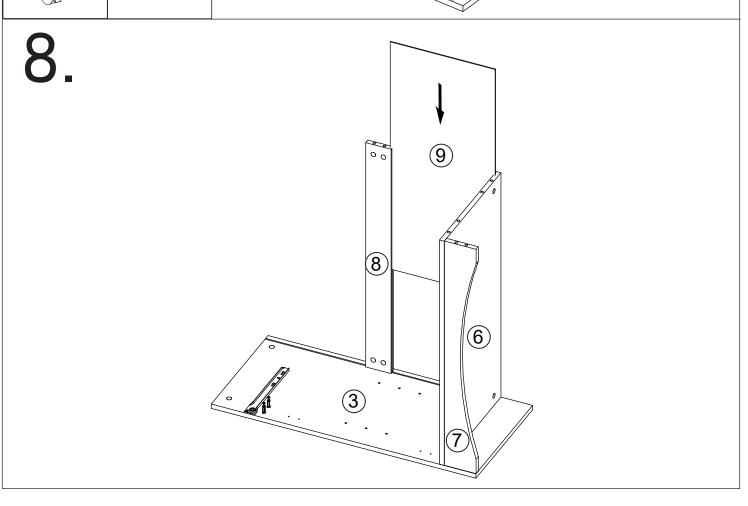


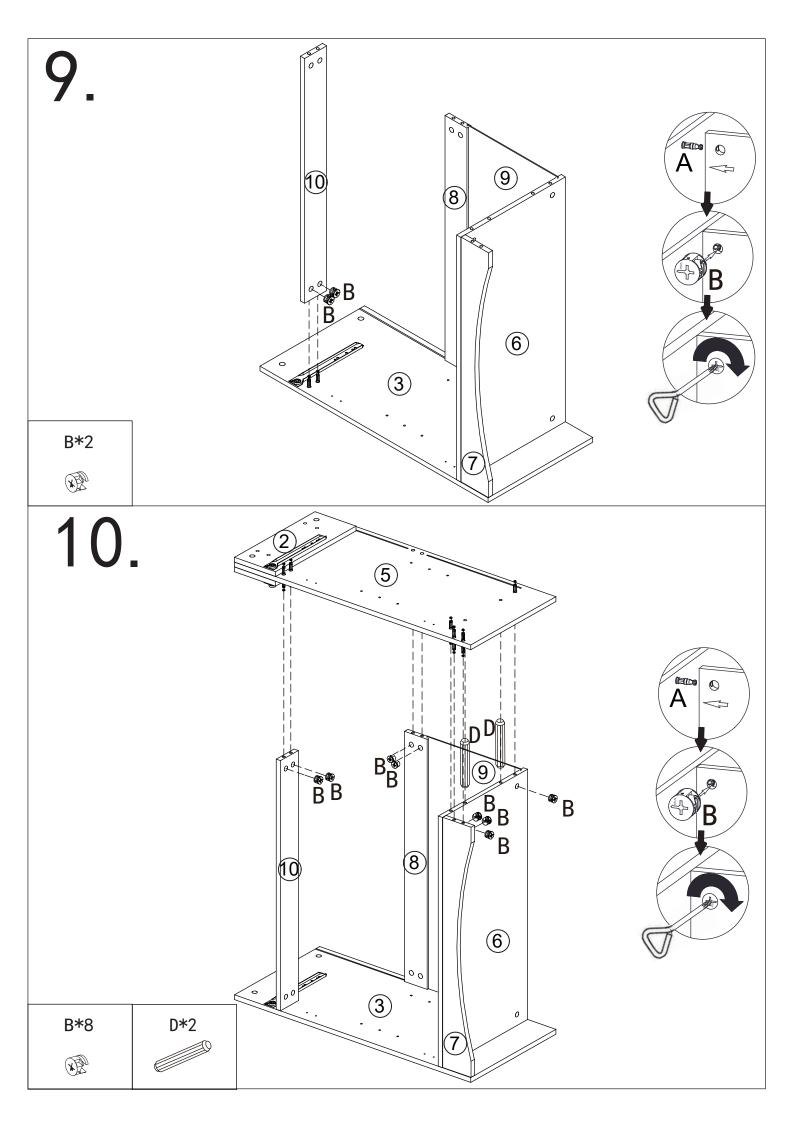


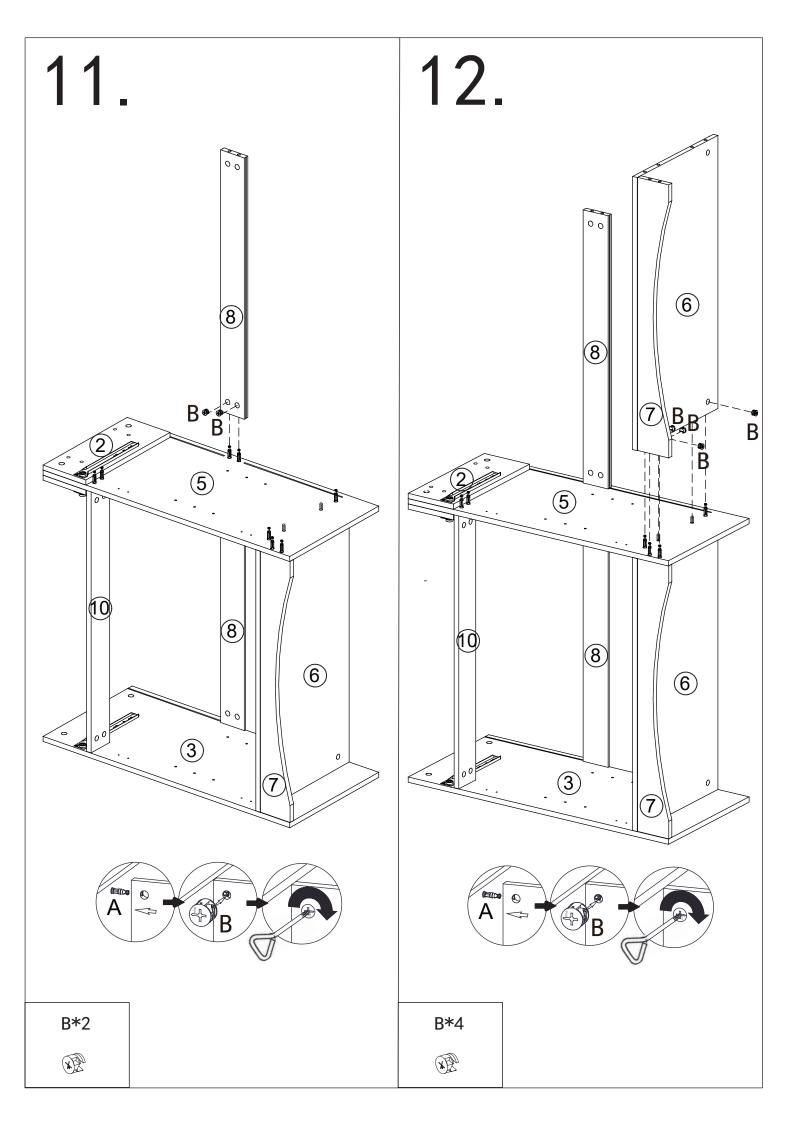



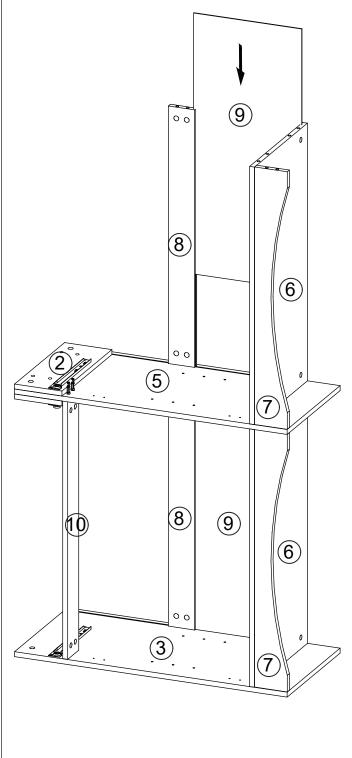

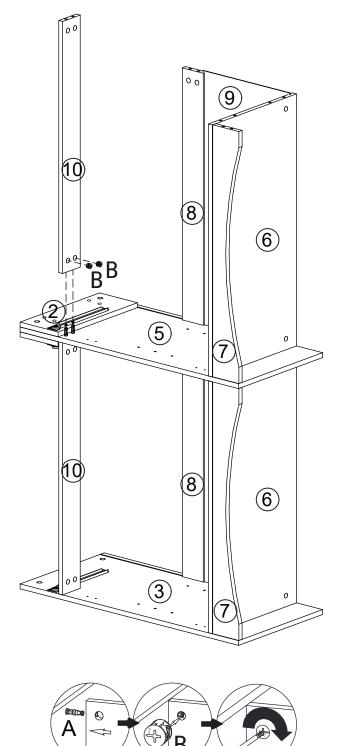





B*2




15. 4 A B 9 BB В 8 10 6 00 **(5)** 7 9 8 10 6 3 C*2 B*8

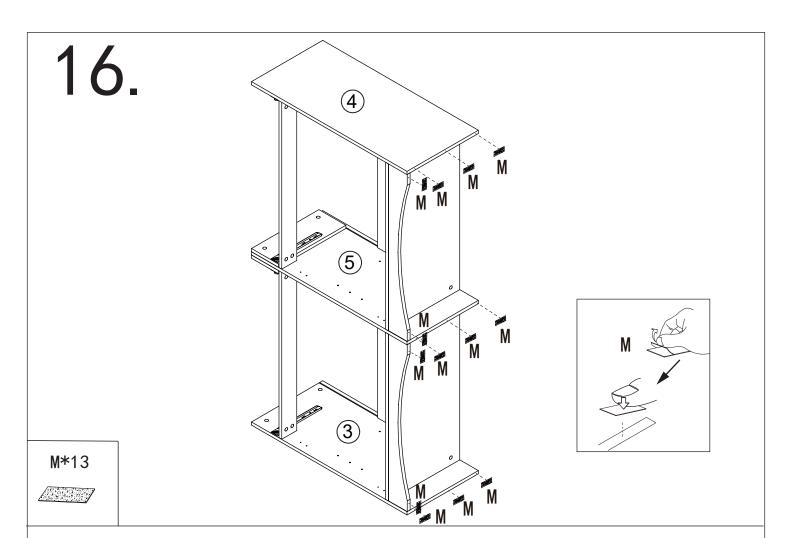

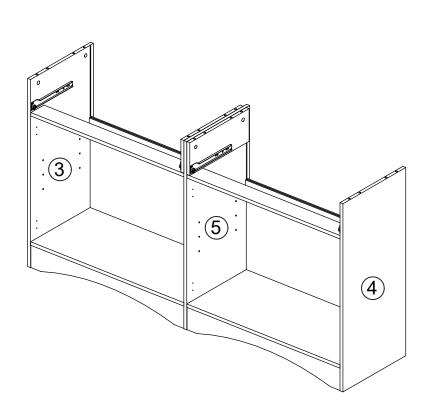

Please flip carefully!

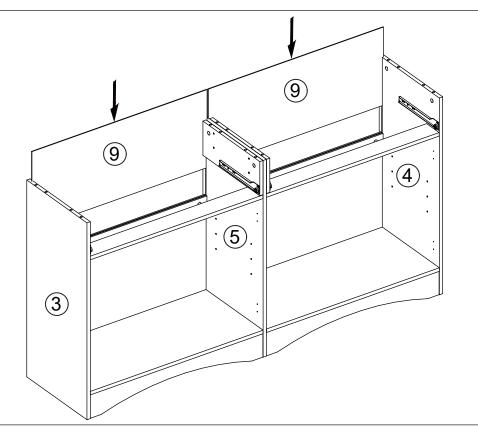



19.


B*8


A PORTOR OF THE PROPERTY OF TH


C*8

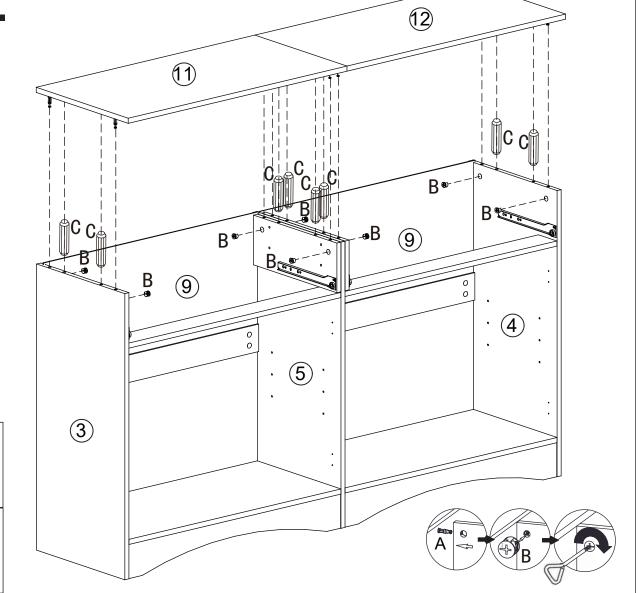

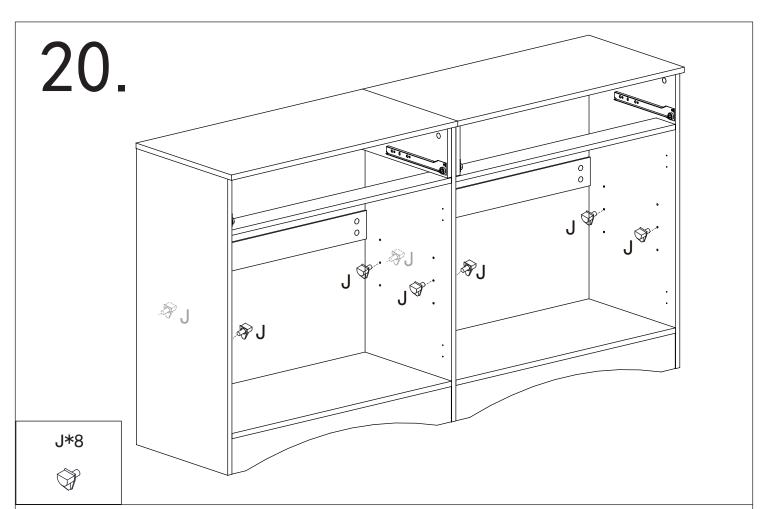

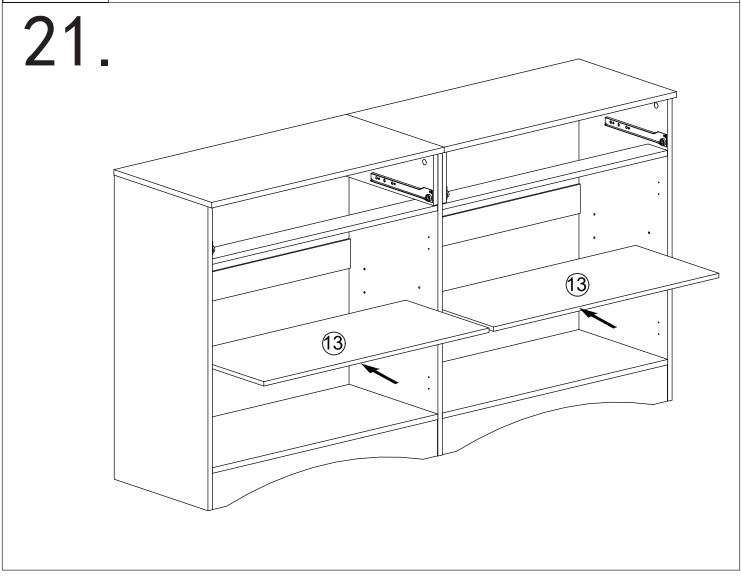


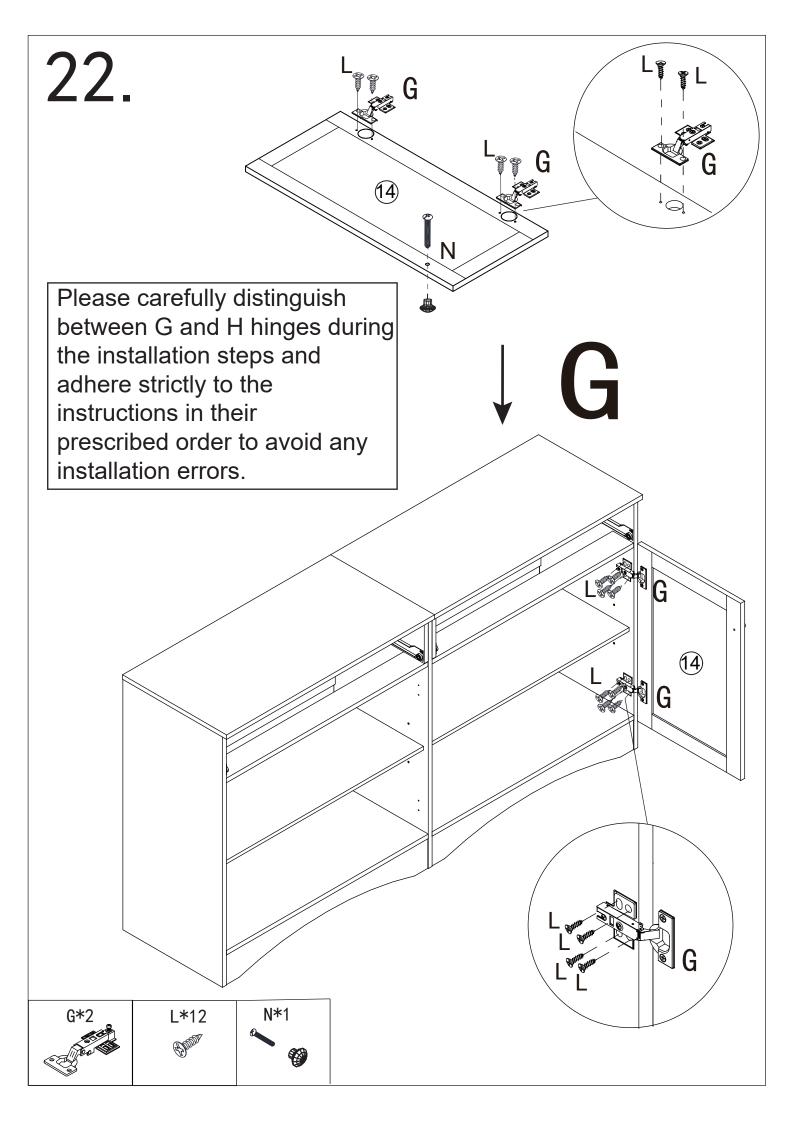

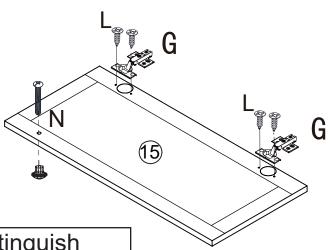


Please carefully distinguish between G and H hinges during the installation steps and adhere strictly to the instructions in their prescribed order to avoid any installation errors.



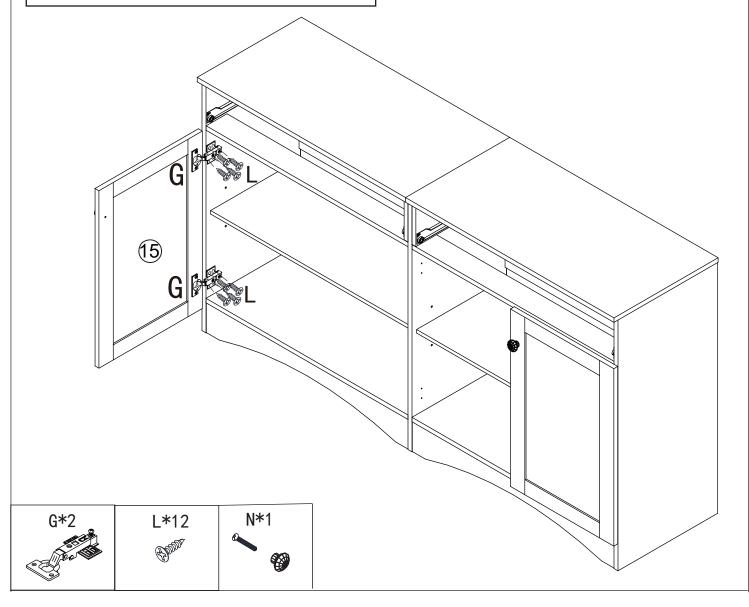


24. 15) Please carefully distinguish between G and H hinges during the installation steps and adhere strictly to the instructions in their prescribed order to avoid any installation errors. 15) Н H*2 L*12 N*1


25. 14) Please carefully distinguish between G and H hinges during the installation steps and adhere strictly to the instructions in their prescribed order to avoid any installation errors. H 14) L*12 N*1

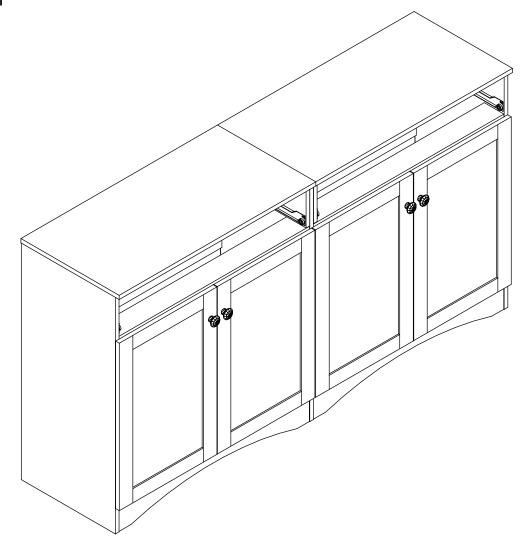



When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

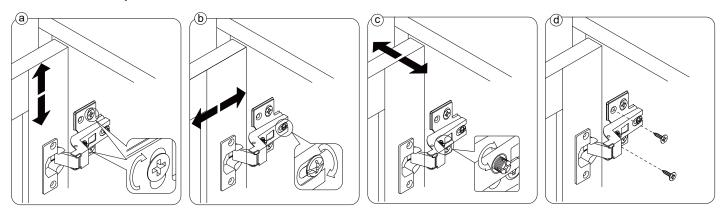


- 1. To adjust the doors up and down, please refer to step (a)
- 2. To adjust the distance between the doors and side panels, please refer to step(b)
- 3. To adjust the gap between two doors, please refer to step (c)
- 4. After the adjustment finished, please tight the screws, refer to step (d)

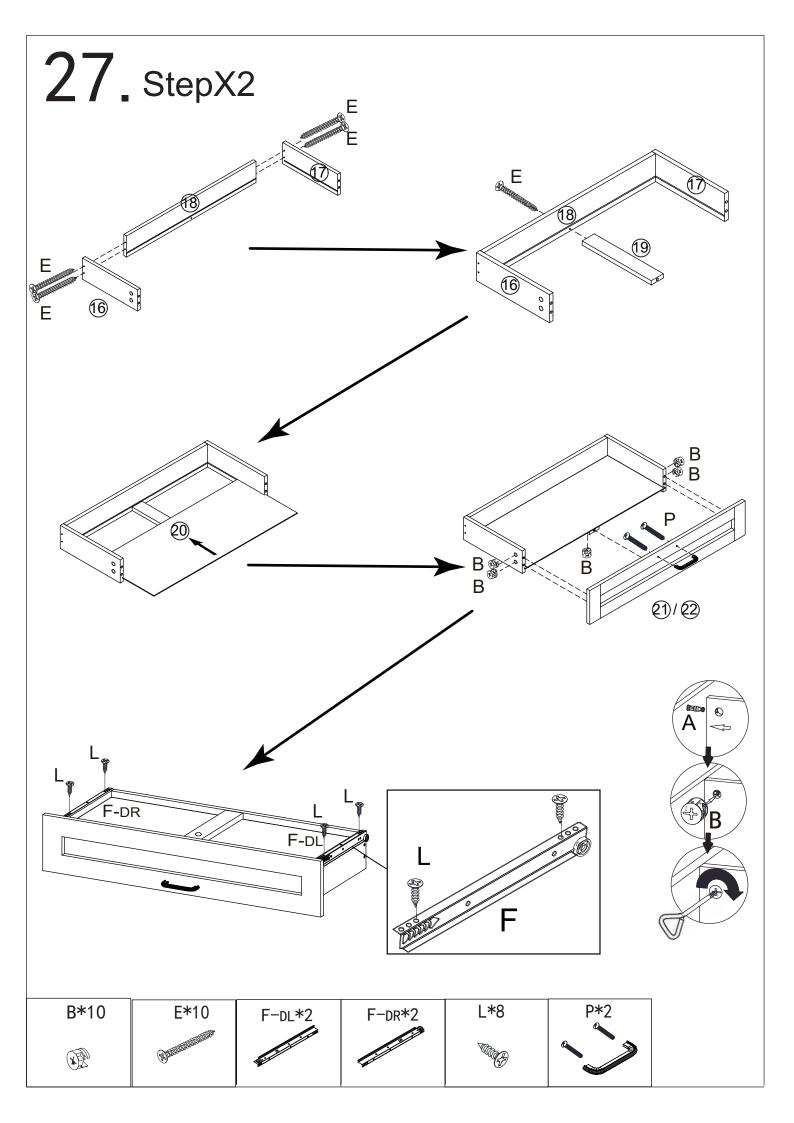

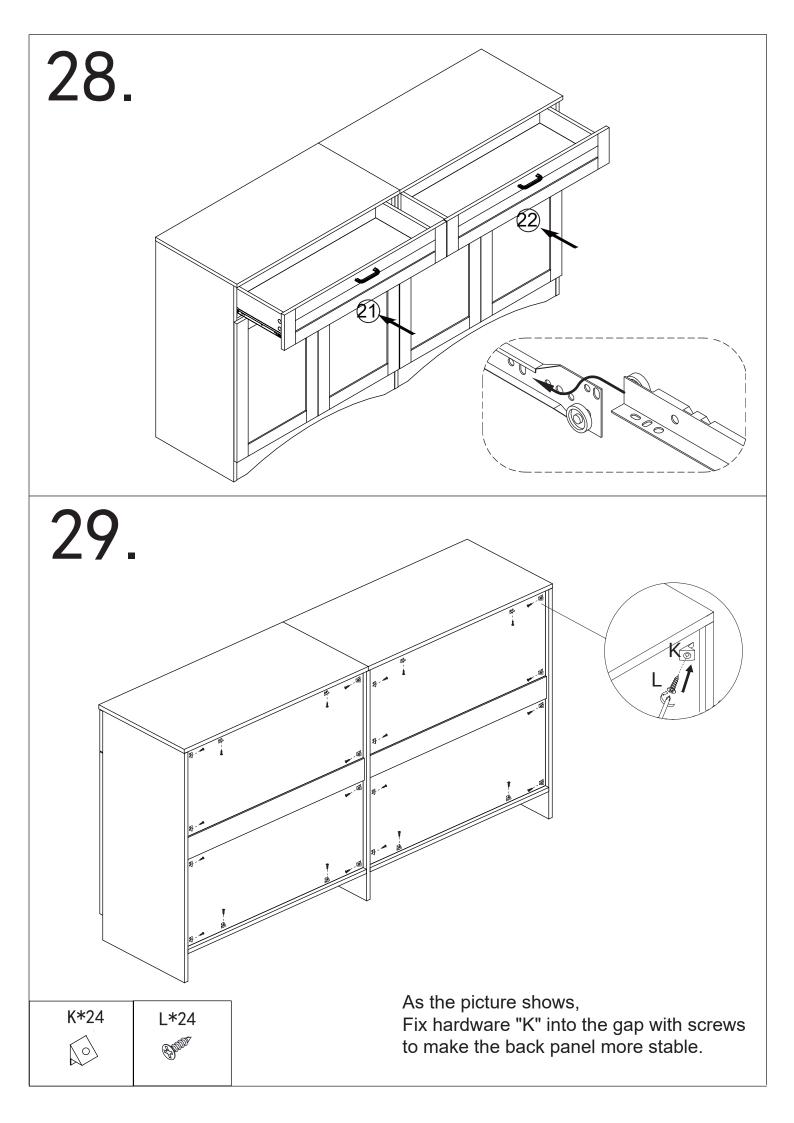


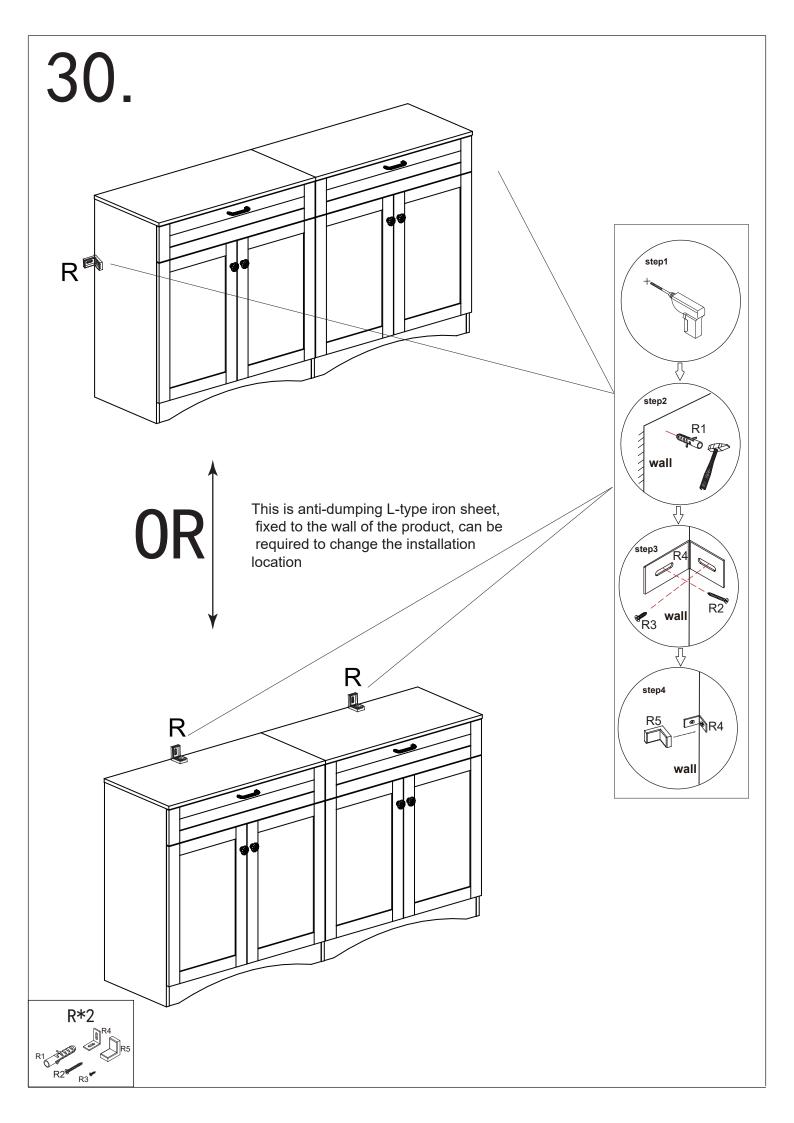

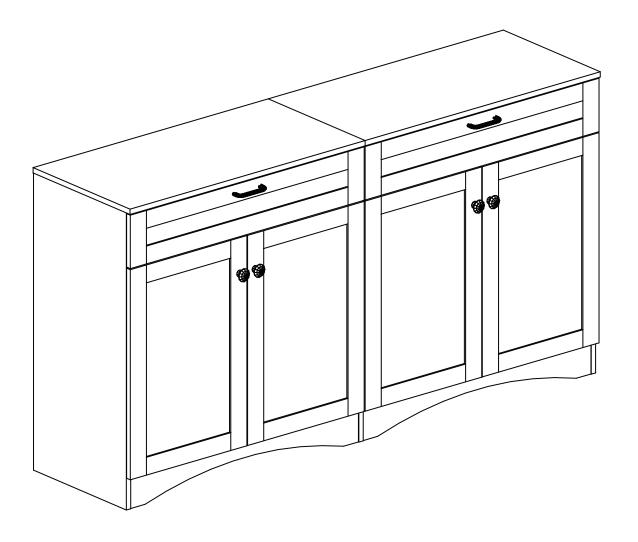

Cabinet

Assembly Instructions - Please keep for future reference

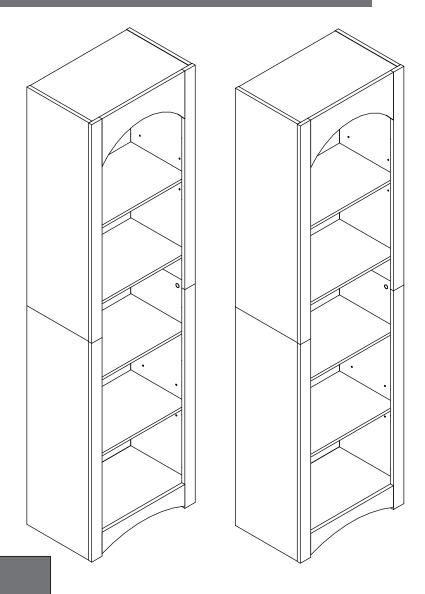

Dimensions

Width-19.7 inch

Depth-12.4 inch

Height-72.05 inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time


Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

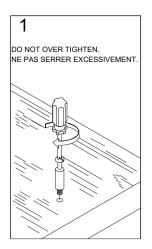

Step 2


Push the male camlock into the entry hole.

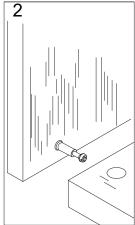

Step 3

Insert the female camlock as shown in the instruction.

Note:ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

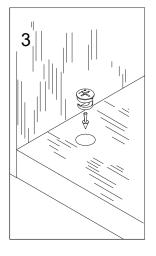


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

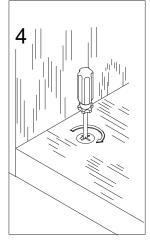

Note:2 set / 1 carton. The following is 1 set of panels.Quantity X2

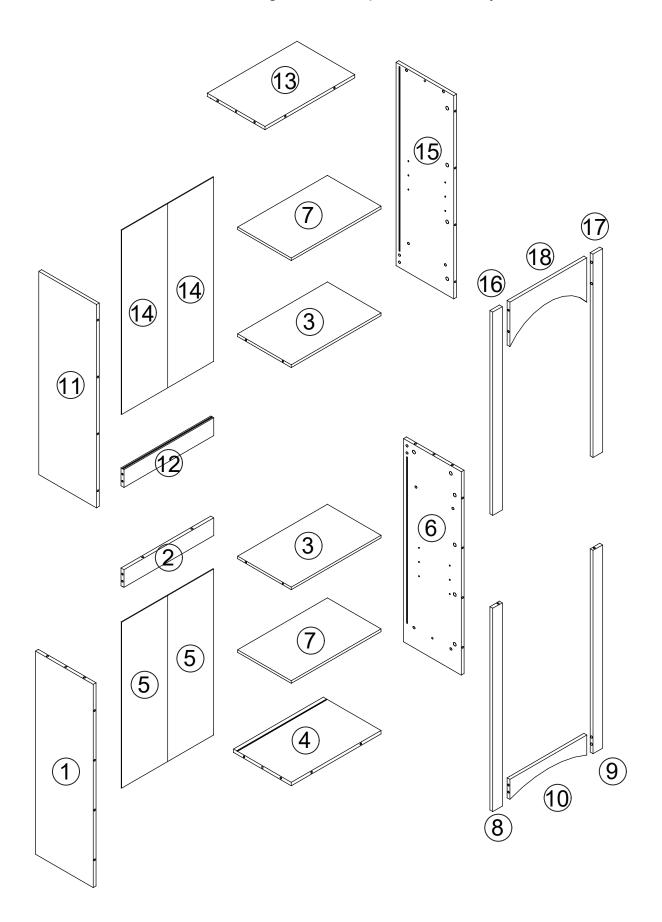


915*300*15mm	467*80*15mm	467*279*12mm	467*300*15mm
1) x 2	2 x 2	3 x 4	4 x 2
747.5*239*3mm	915*300*15mm	466*277*12mm	915*50*15mm
5 x 4	6 x 2	7 x 4	8 x 2
	000		
915*50*15mm	400*90*15mm	915*300*15mm	467*80*15mm
9 x 2	10 x 2	①1 x 2	12 x 2
467*300*15mm	829.5*239*3mm	915*300*15mm	915*50*15mm
13 x 2	(14) x 4	15 x 2	16 x 2
915*50*15mm	400*200*15mm		
(17) x 2	18 x 2		


Components-Fittings


Please check you have all the panels listed below


Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.


A	B	©	D
Cam Bolt x 120+4	Cam Lock x 120+4	8*30mm Dowel x 12+2	Backboard buckle x 32+3
E	(F)	G	\oplus
	F1 F5 F3		
Bulkhead Pins x 16+2	Anti dumping x 4 set	Perfect Fit x 50	felt x12+2
J			
Screwdriver x 1			

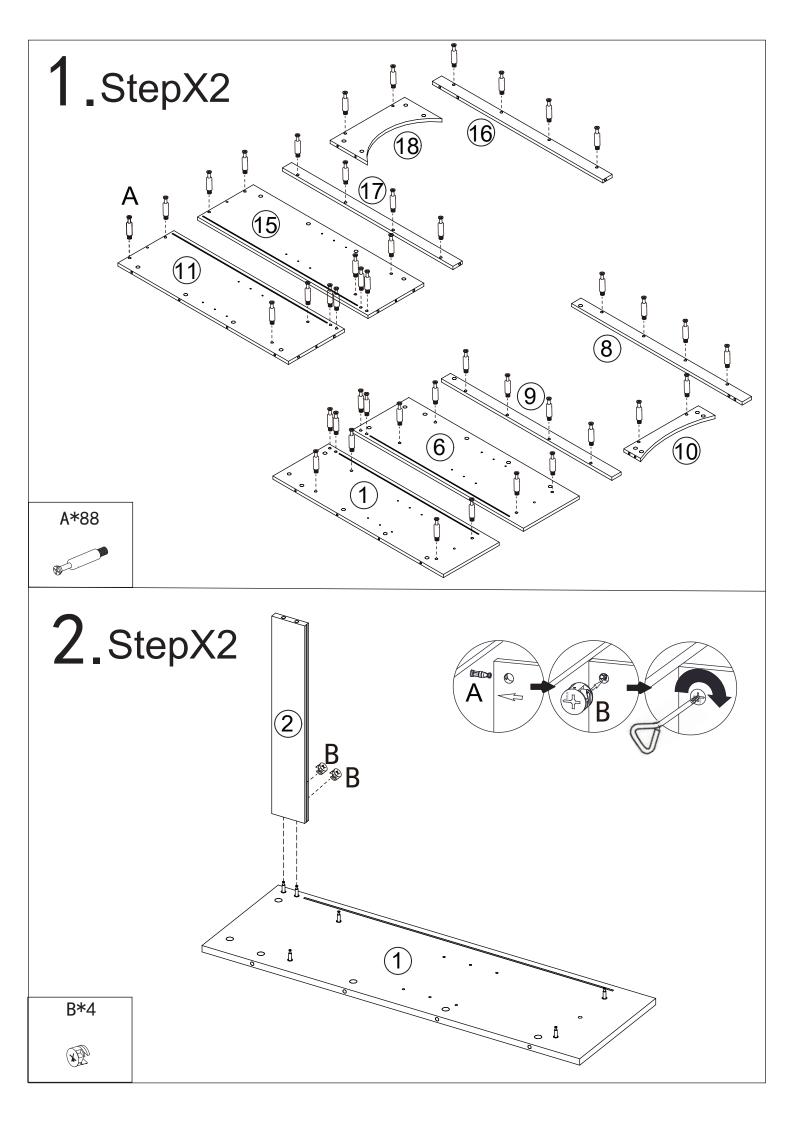

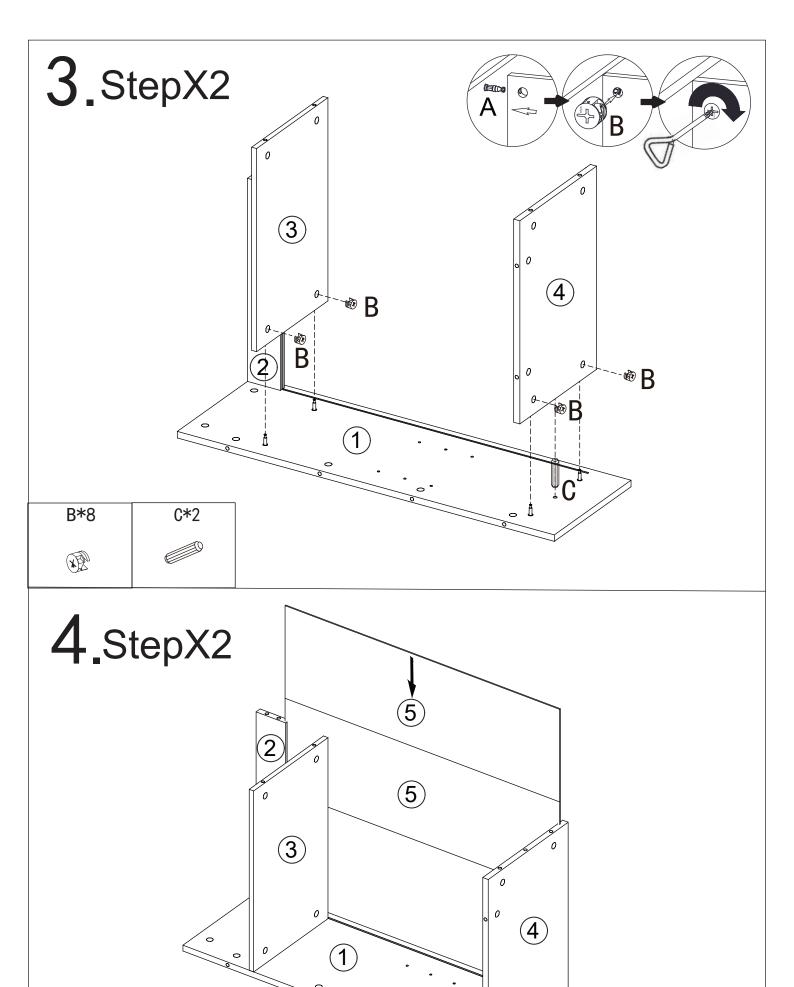

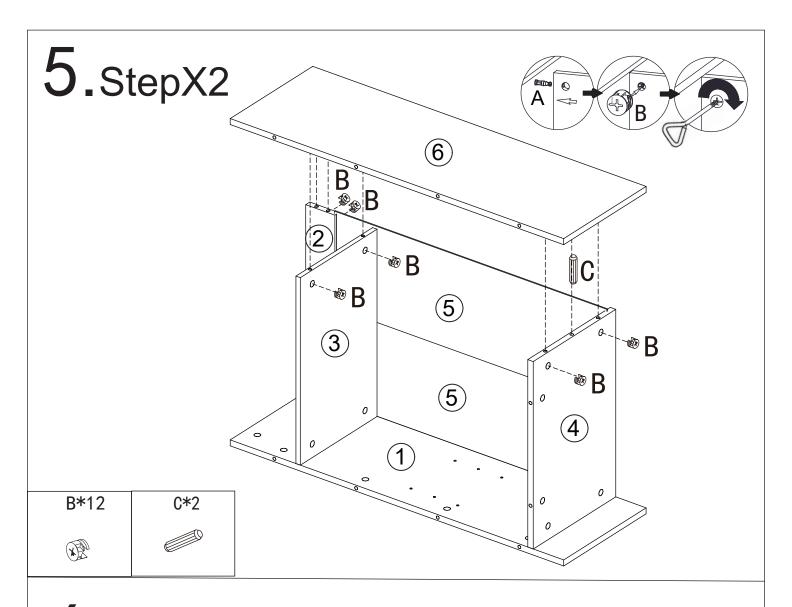

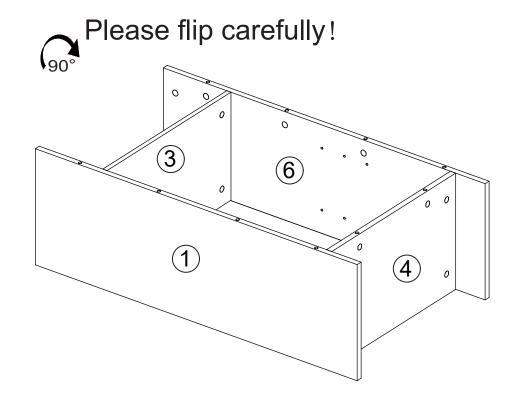


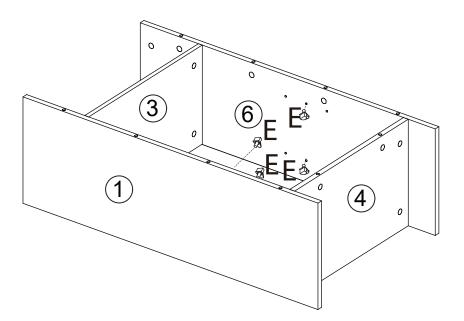



E*8




8.StepX2

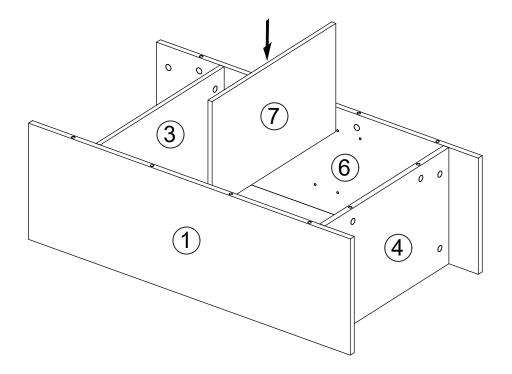

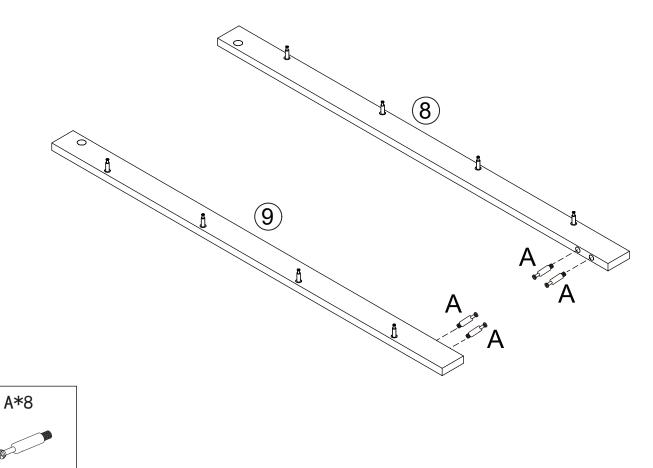


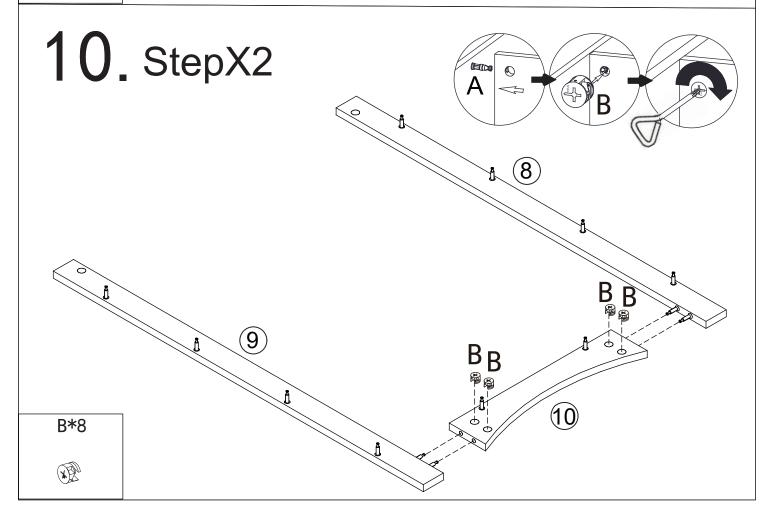


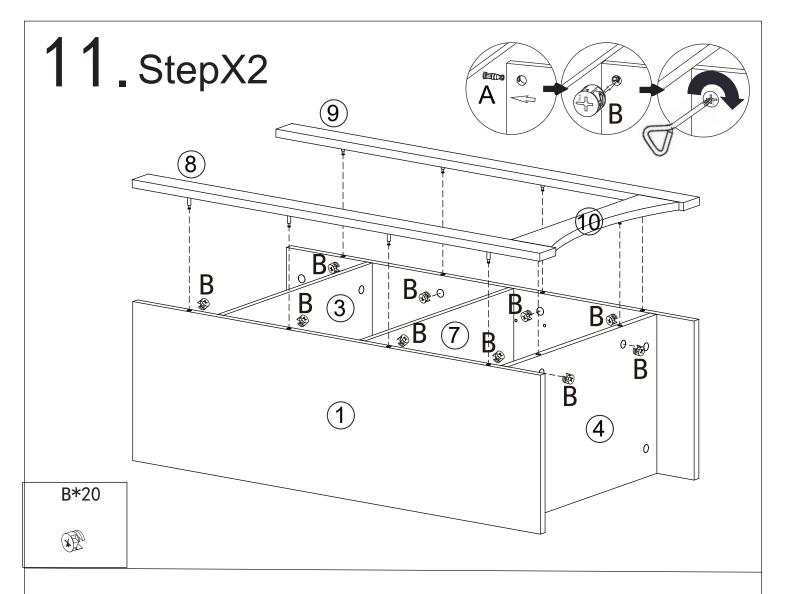






Please flip carefully!

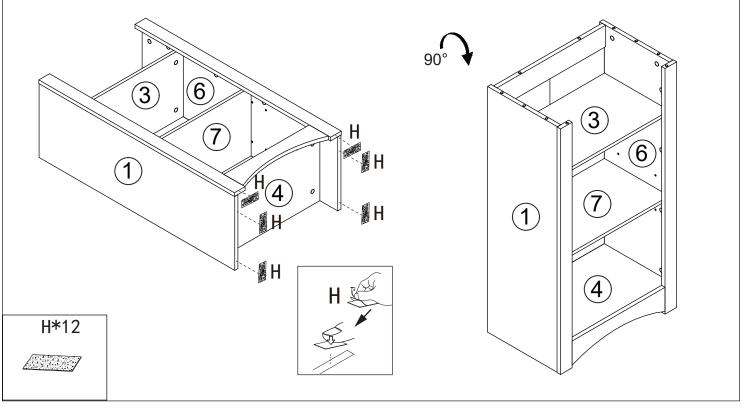

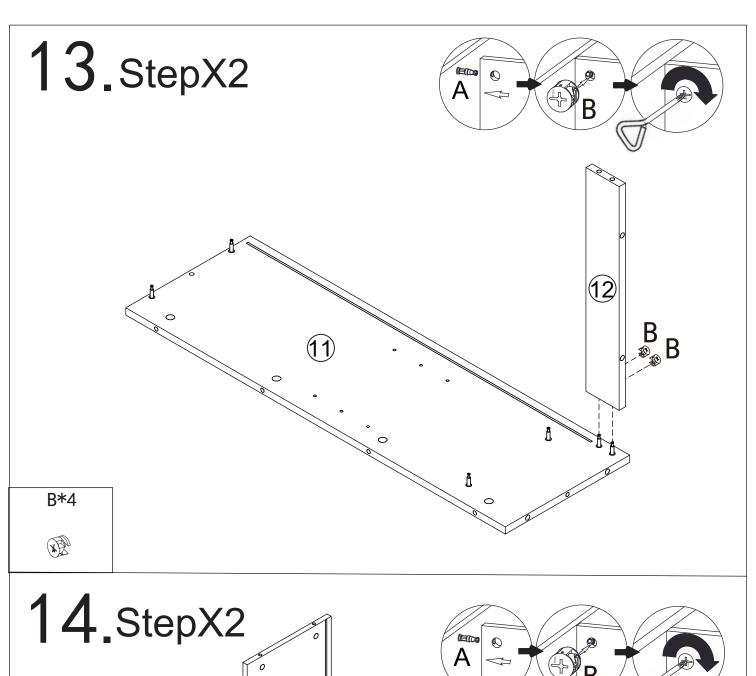


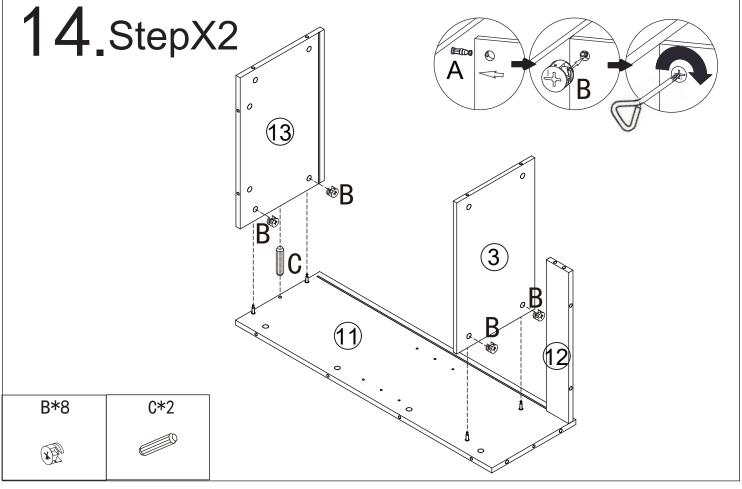

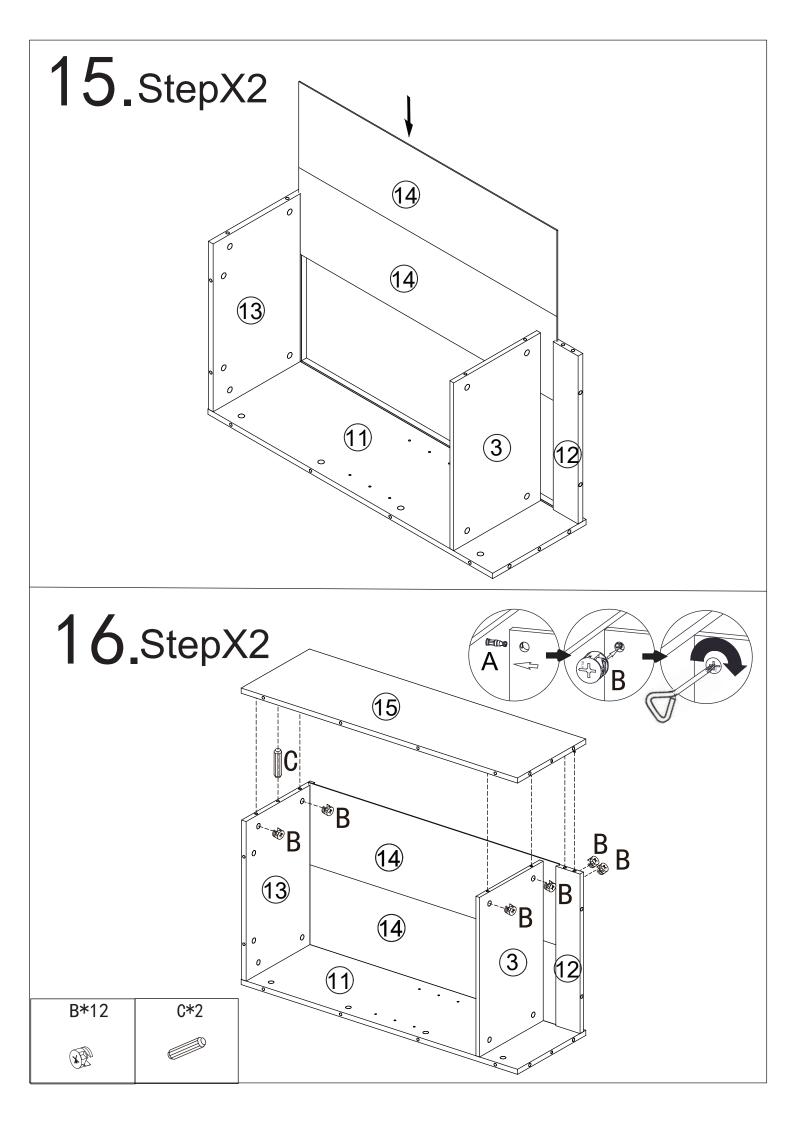

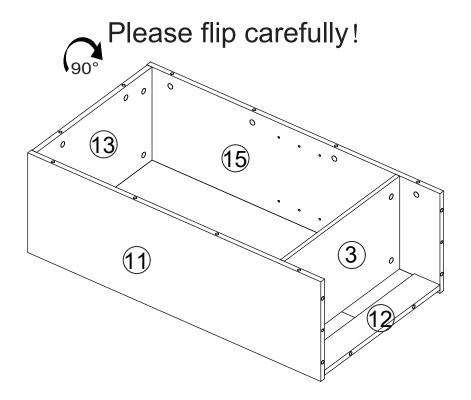


18. StepX2

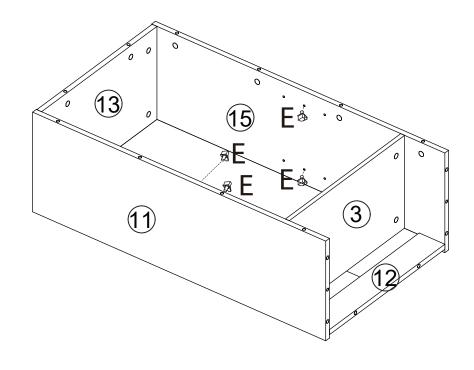



E*8




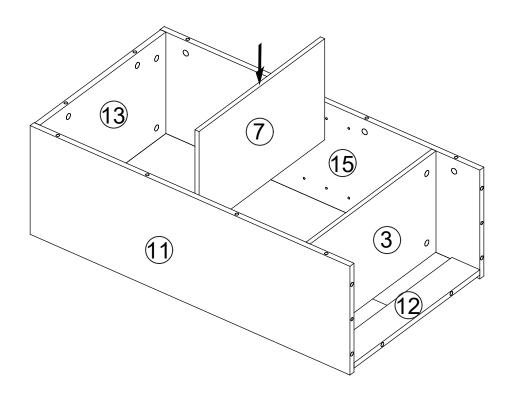

20. StepX2

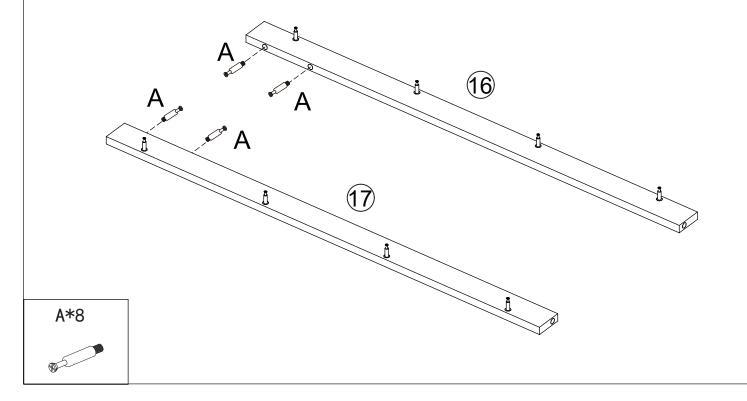


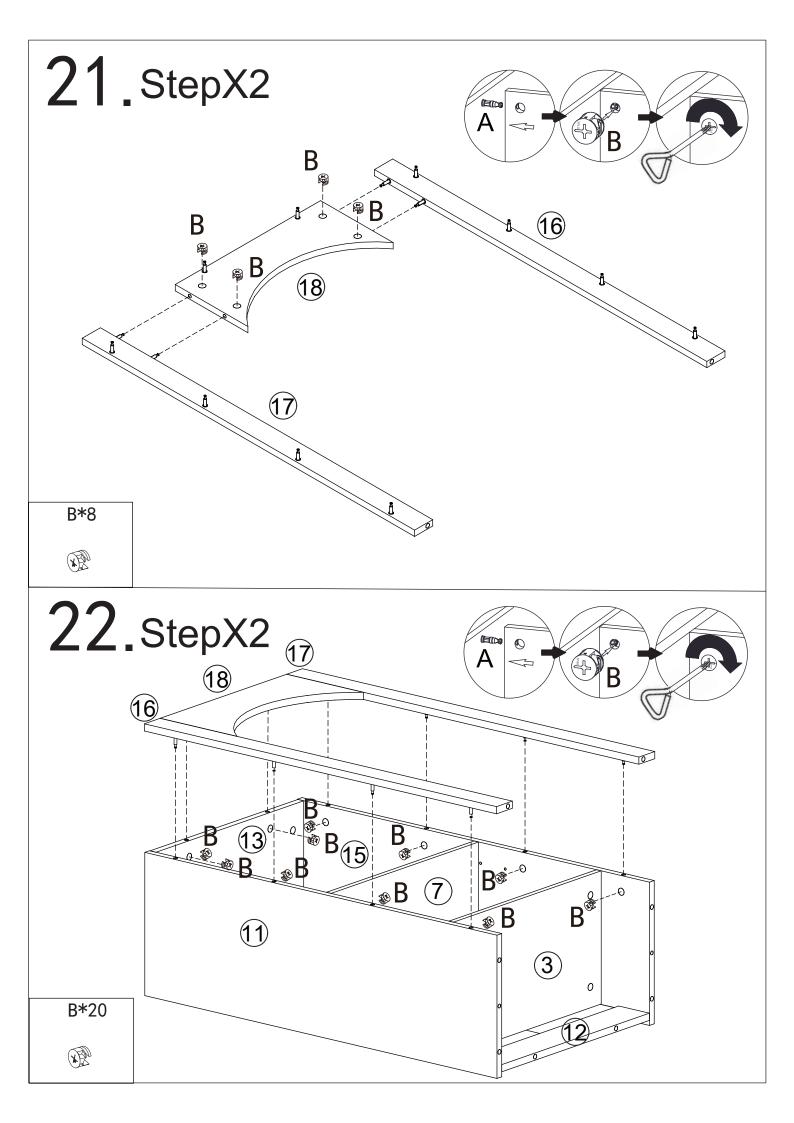

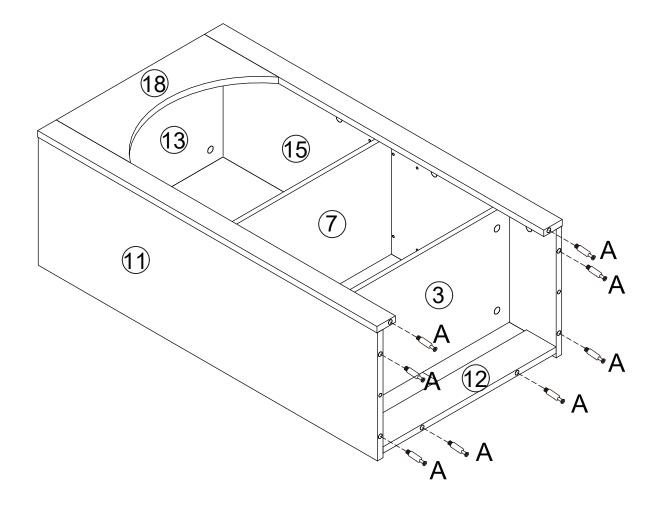


A*16


24. StepX2 18 15 11 C B BBB B B . 6 1 B*16 C*4 10 W.

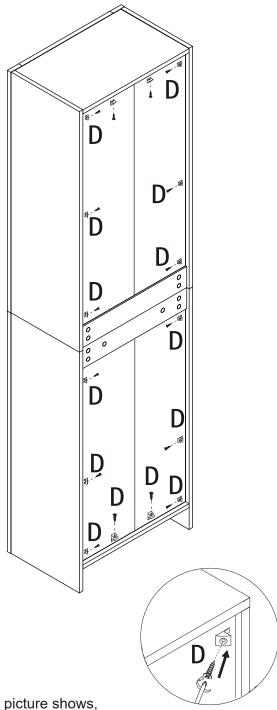


As the picture shows,
Fix hardware "D" into the gap with screws to make the back panel more stable.




26. StepX2

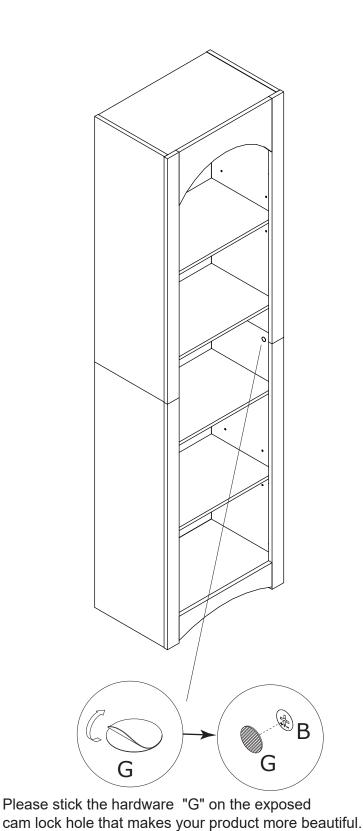

G*50

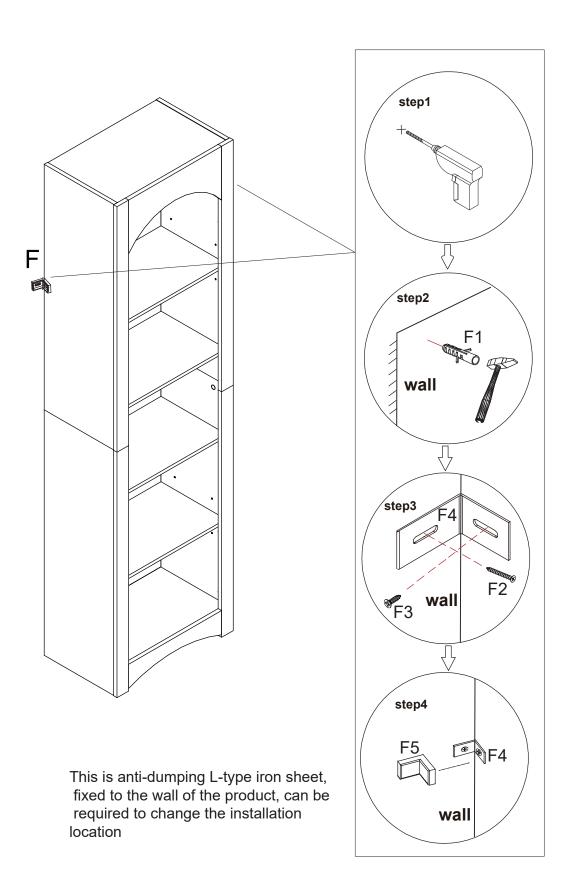



28.

