
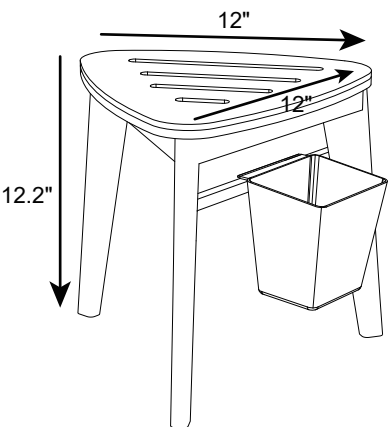
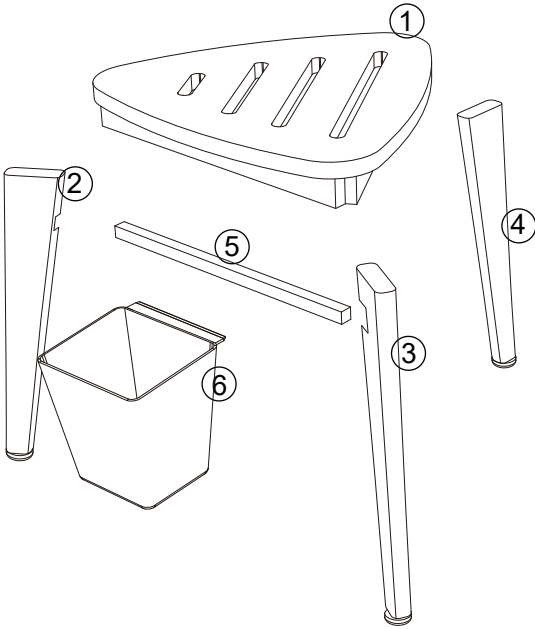



SHOWER STOOL ASSEMBLY INSTRUCTIONS


Please keep for future reference




We recommend
air-drying the
wet teak shower
bench and NOT
leaving in the
sun.


HARDWARE LIST			
A		M6X40	3pcs
B		M4X65	1pc

STEP 1

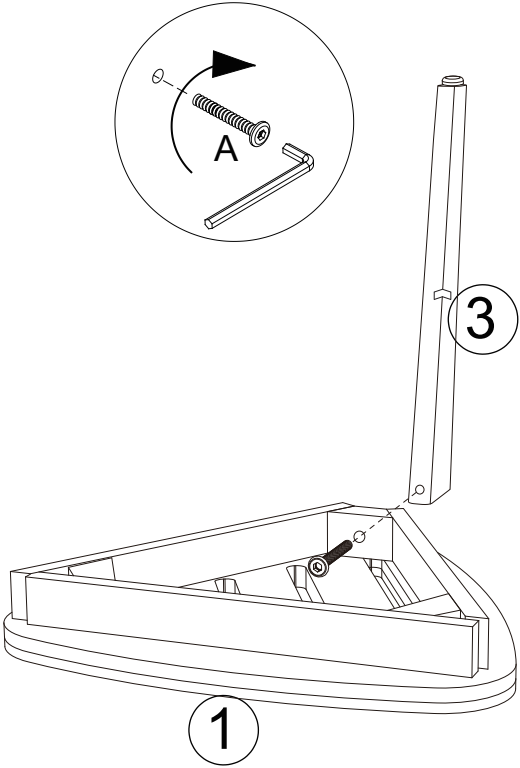


A		1 pc
---	---	------

STEP 2

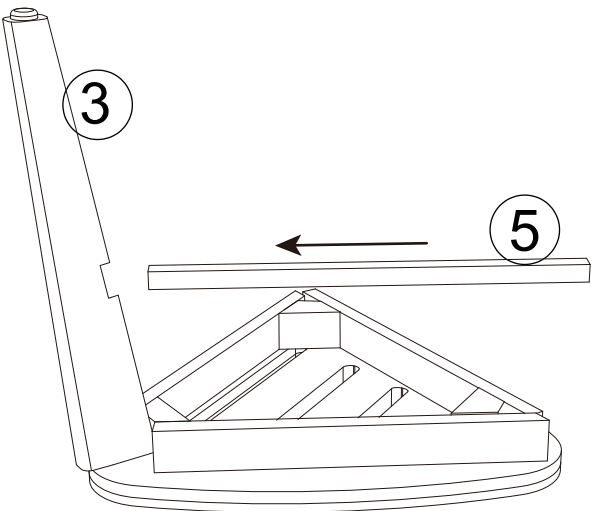


ASSEMBLY INSTRUCTIONS


STEP3

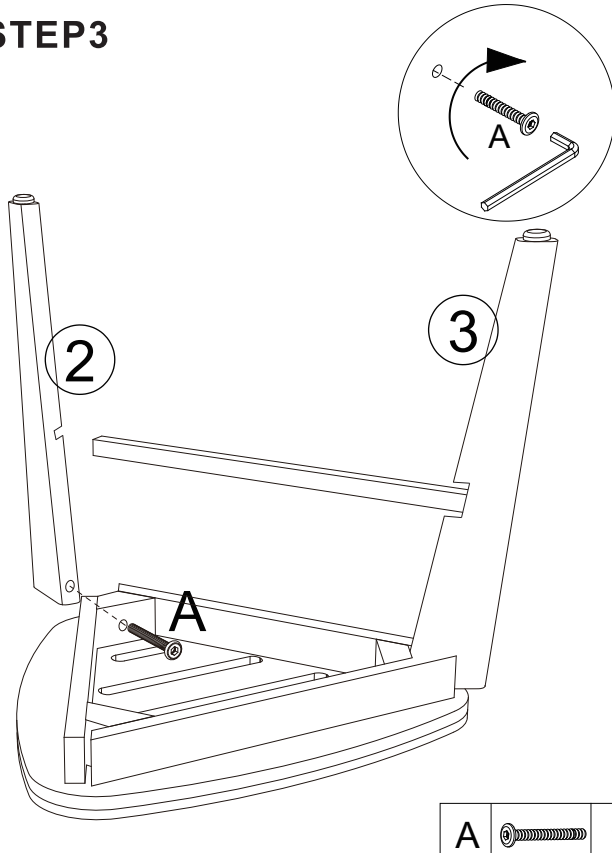


STEP4

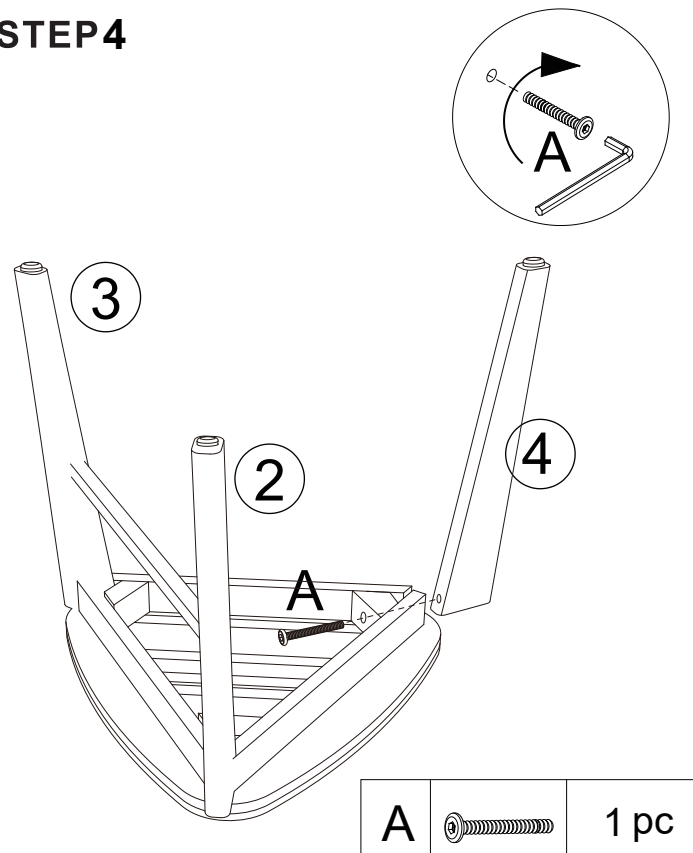

STEP5

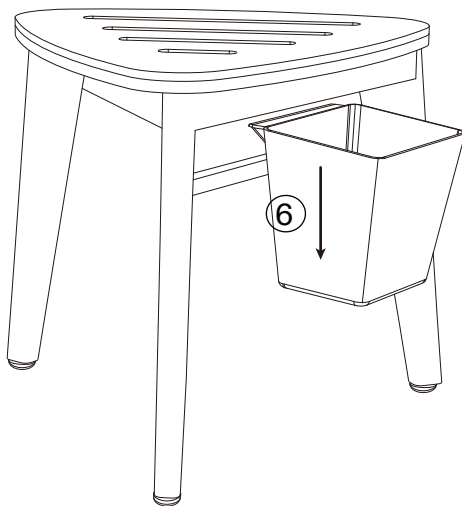

STEP6

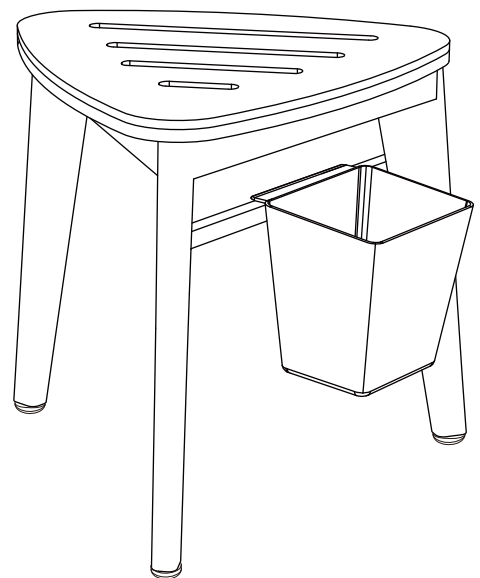

We value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us at email cs@lovitgoshop.com. Please provide your name and order no. so that we can better assist you. To help expedite the service, please have the assembly instructions available along with your order receipt.