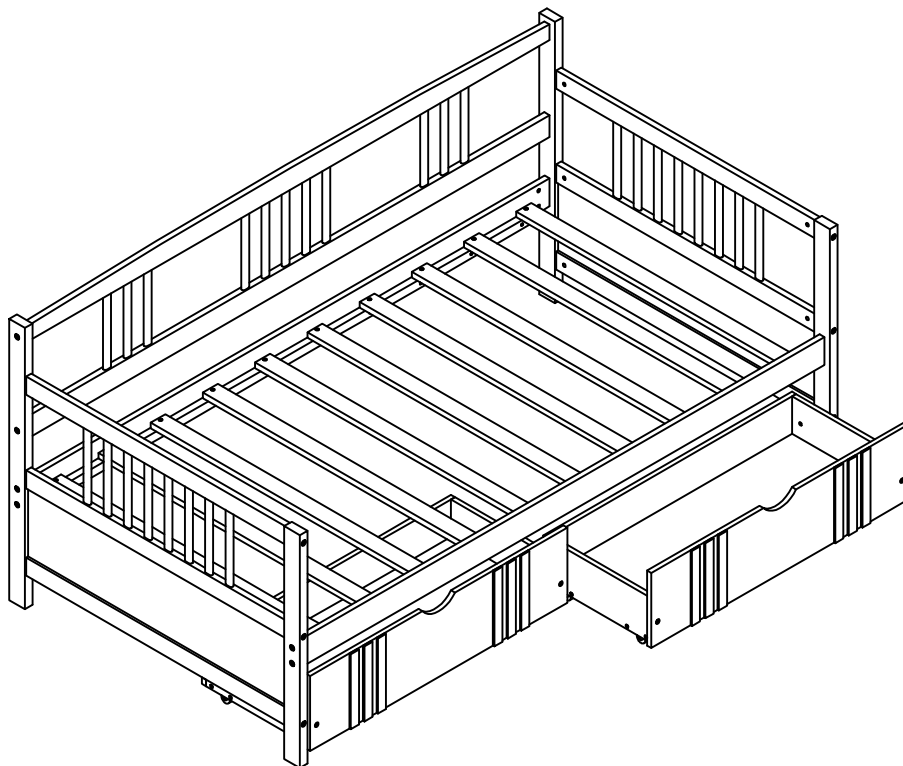


# ASSEMBLY INSTRUCTIONS


## TWIN SIZE DAYBED WITH 2 DRAWERS

If you have any questions, please feel free to contact us.  
Email: [lowes.team@qualfurn.net](mailto:lowes.team@qualfurn.net)


















**WF295029**




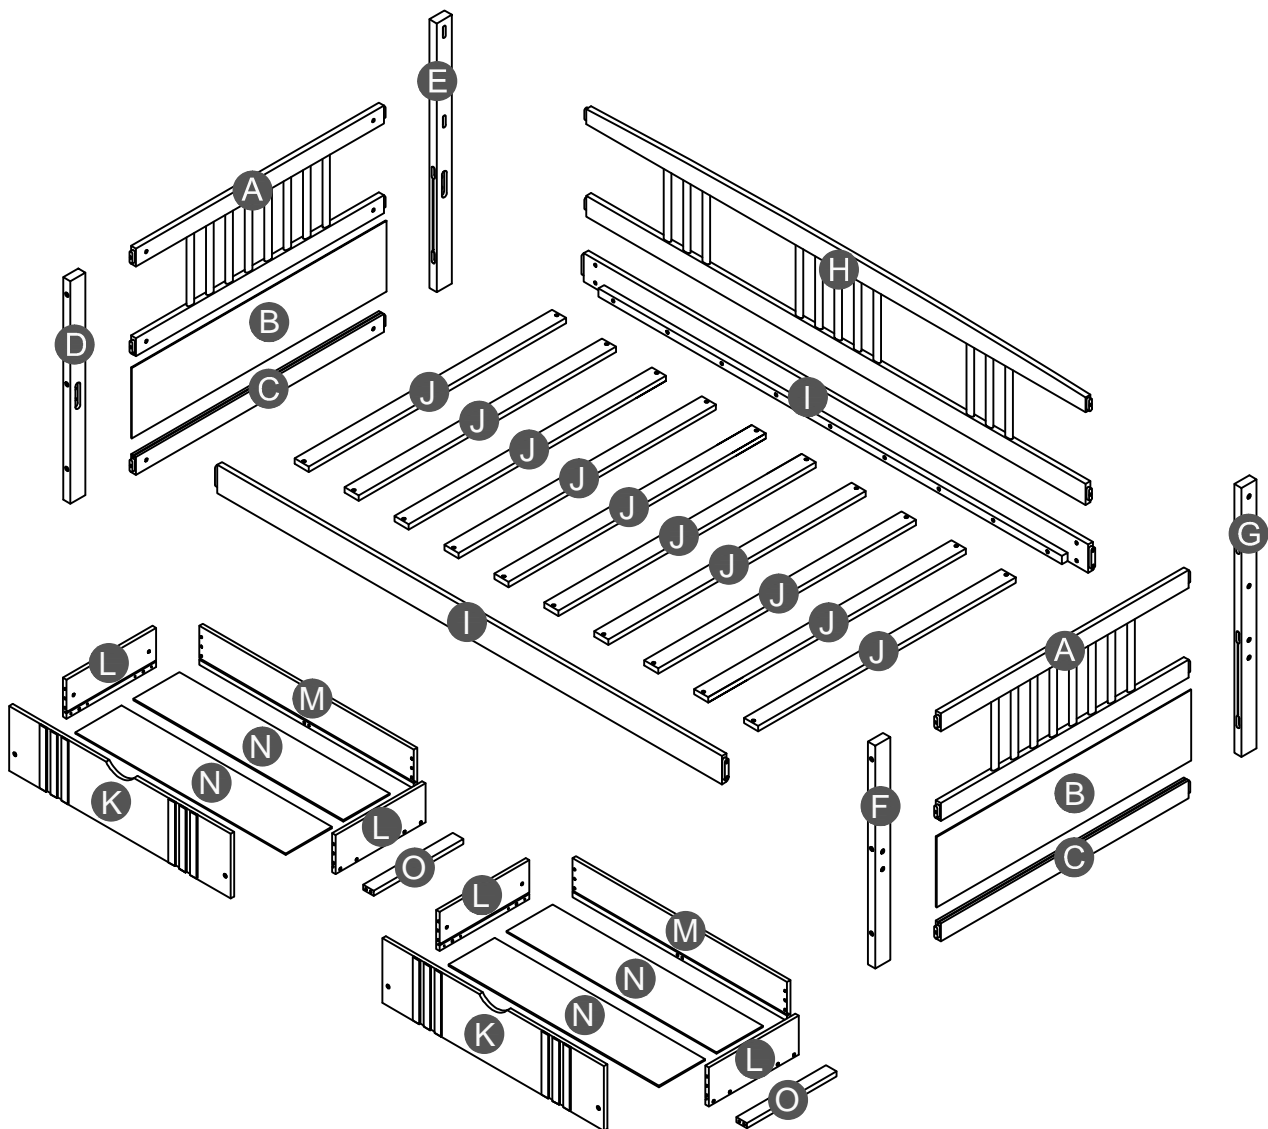






## Detail View




# Part List

<b>A</b>  <p>Frame HB/FB - 2pcs</p>	<b>B</b>  <p>Side panel - 2pcs</p>	<b>C</b>  <p>Horizontal bar - 2pcs</p>
<b>D</b>  <p>Leg left (Front) - 1pc</p>	<b>E</b>  <p>Leg left (Back) - 1pc</p>	<b>F</b>  <p>Leg right (Front) - 1pc</p>
<b>G</b>  <p>Leg right (Back) - 1pc</p>	<b>H</b>  <p>Long guard rail - 1pc</p>	<b>I</b>  <p>Side rail - 2pcs</p>
<b>J</b>  <p>Slats - 10pcs</p>	<b>K</b>  <p>Front drawer panel - 2pcs</p>	<b>L</b>  <p>Left / right drawer panel - 4pcs</p>
<b>M</b>  <p>Back drawer panel - 2pcs</p>	<b>N</b>  <p>Drawer bottom - 4pcs</p>	<b>O</b>  <p>Support drawer - 2pcs</p>

# Hardware List


<b>1</b>  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	<b>2</b>  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)	<b>3</b>  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
<b>4</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(32pcs)	<b>5</b>  Ø4*30mm Wood screws (42pcs)	<b>6</b>  (1/4")4.5*58mm Allen key (1pc)
<b>7</b>  100*54*20 mm Wheels (8pcs)	<b>8</b>  70*35*19 mm Drawer stopper (3pcs)	<b>9</b>  Ø8*30mm Wood dowel (24pcs)
<b>10</b>  Ø10*20mm Wood dowel (8pcs)		

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


## STEP 1:

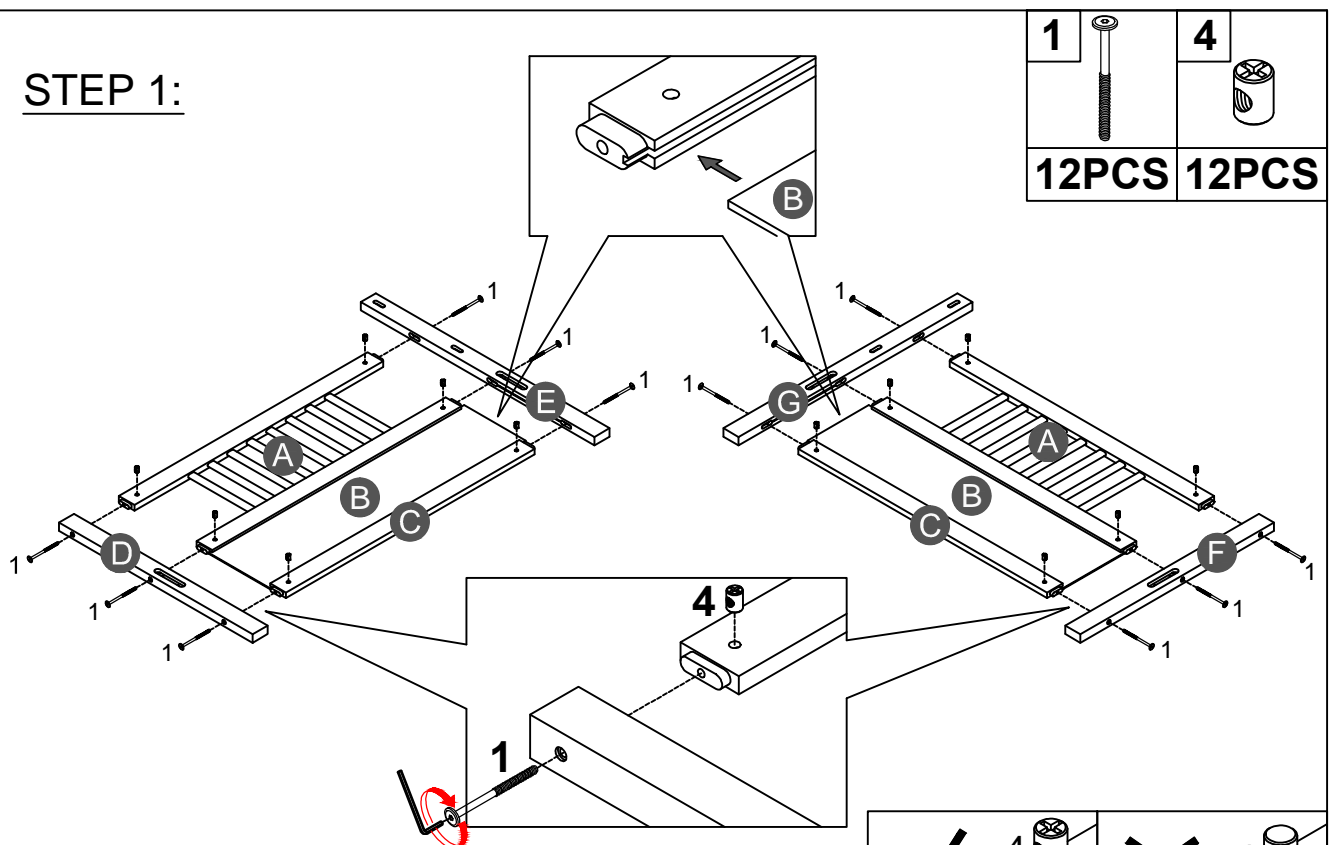

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

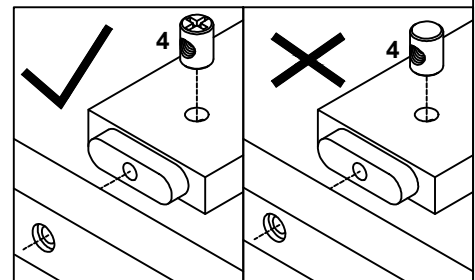


## STEP 2:

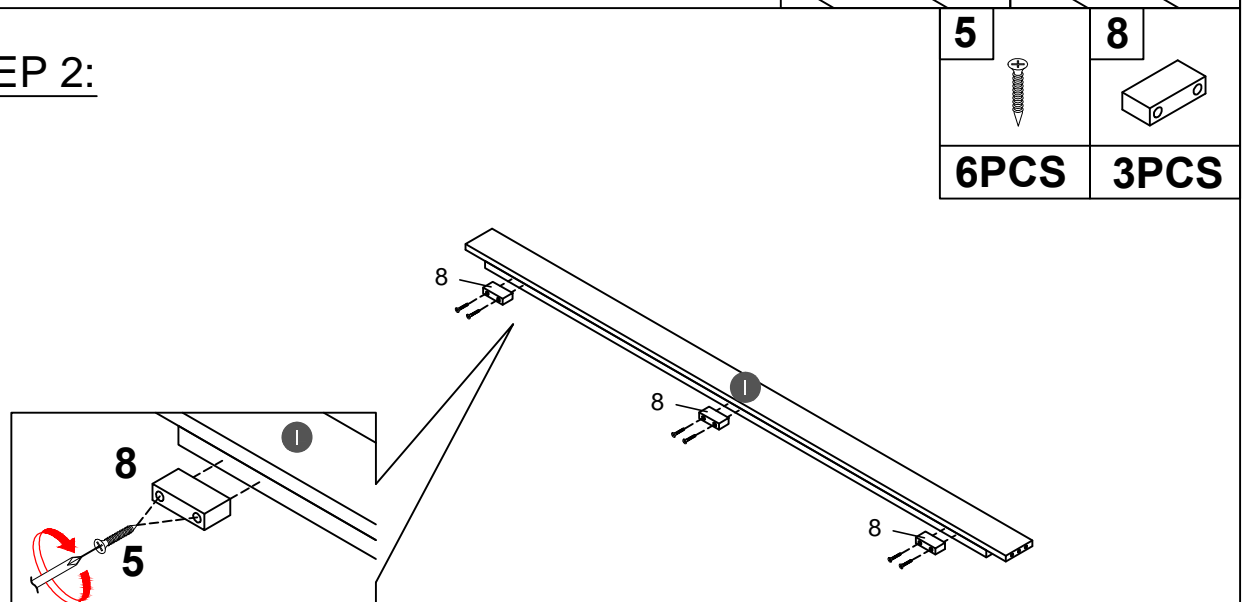


Drawer stopper (8) with lower side rail front (1) by using screw (5).

### STEP 3:

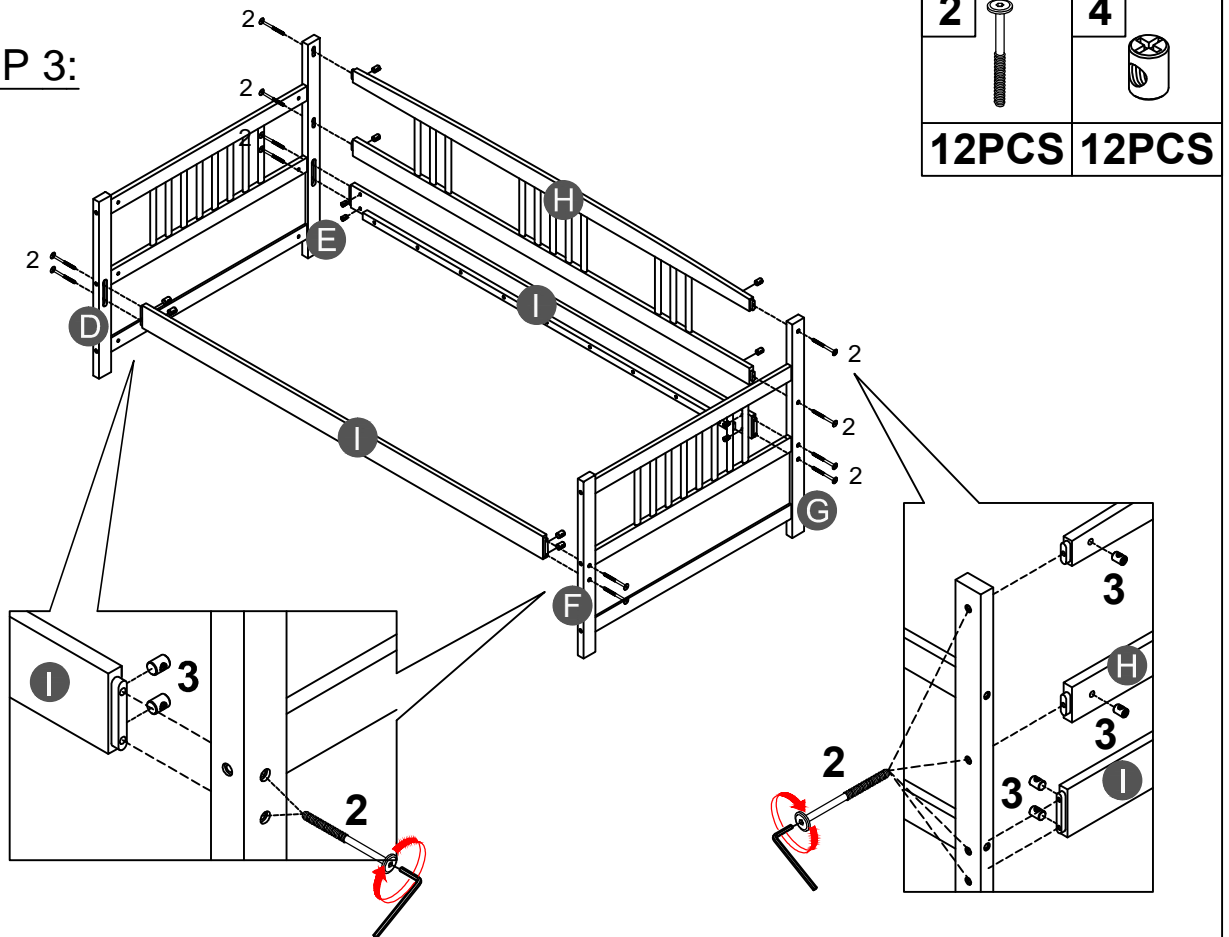


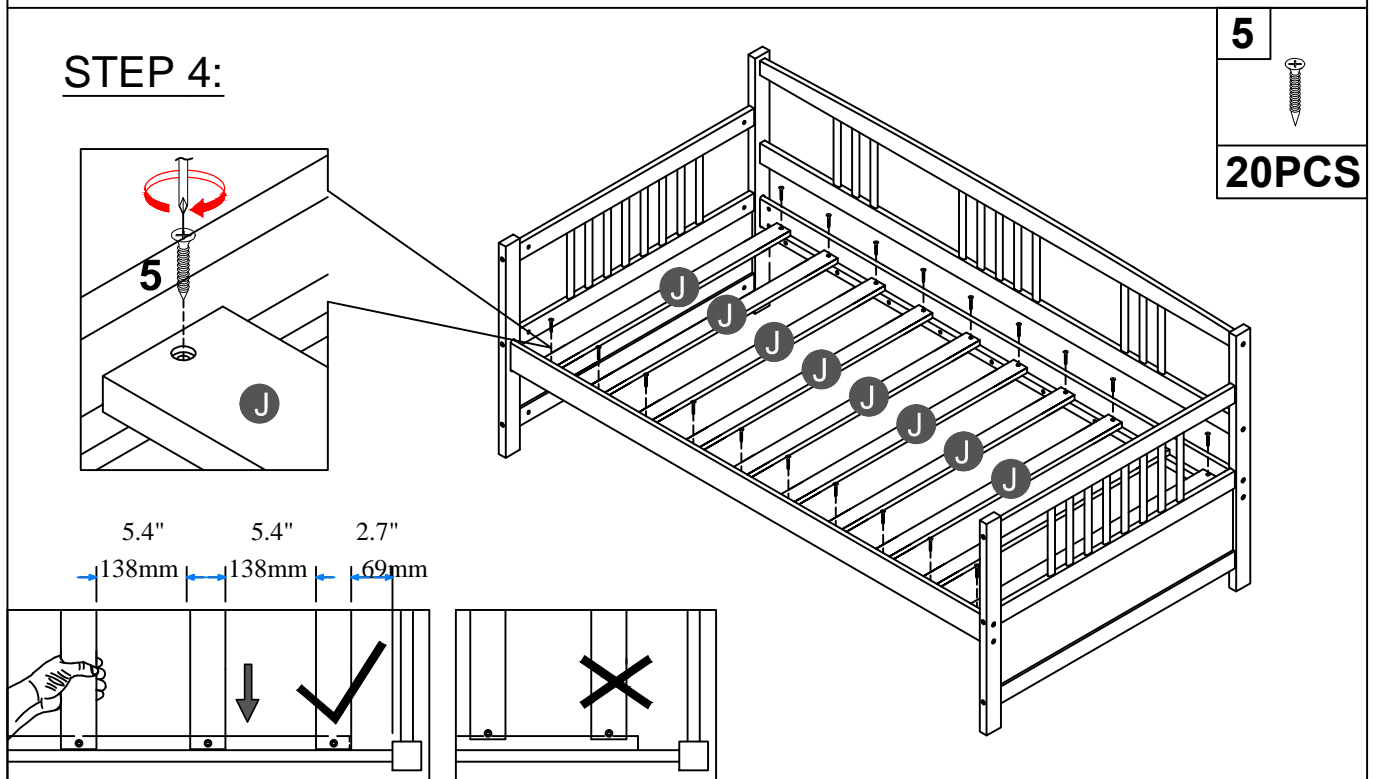


### STEP 4:




Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.  
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

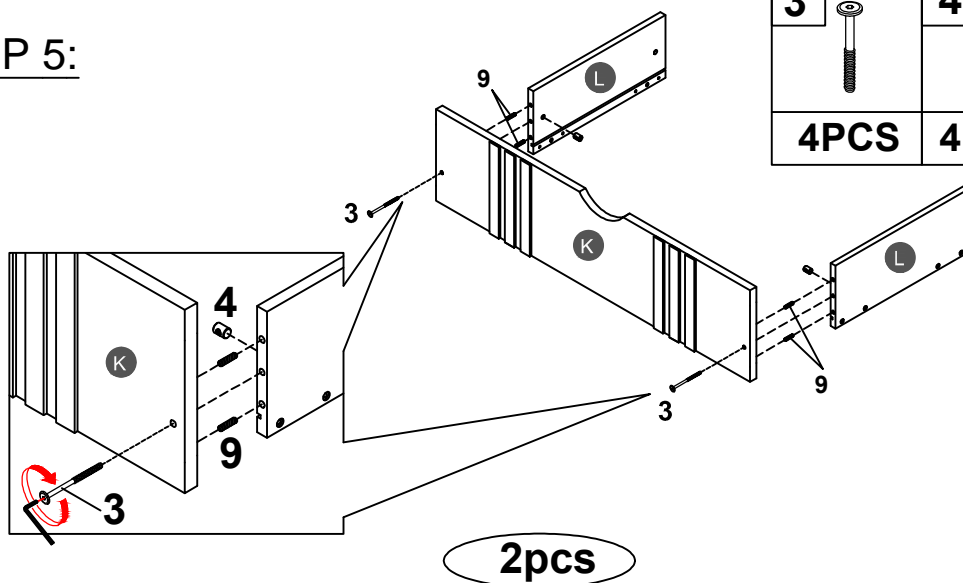


### STEP 5:




3	4	9
		
4PCS	4PCS	8PCS

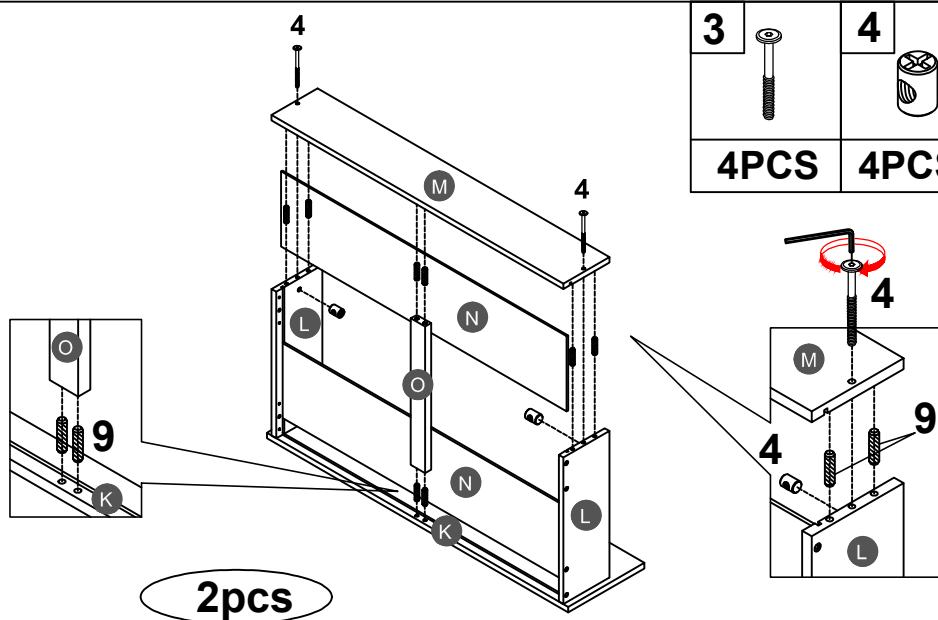


### STEP 6:




3	4	9
		
4PCS	4PCS	16PCS
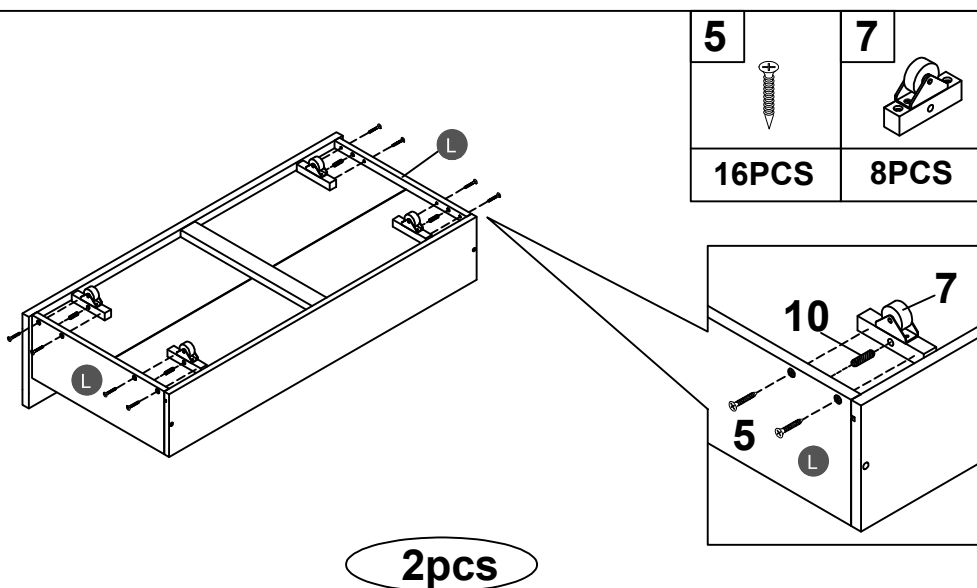
### STEP 7:



5	7	10
		
16PCS	8PCS	8PCS

## STEP 8:

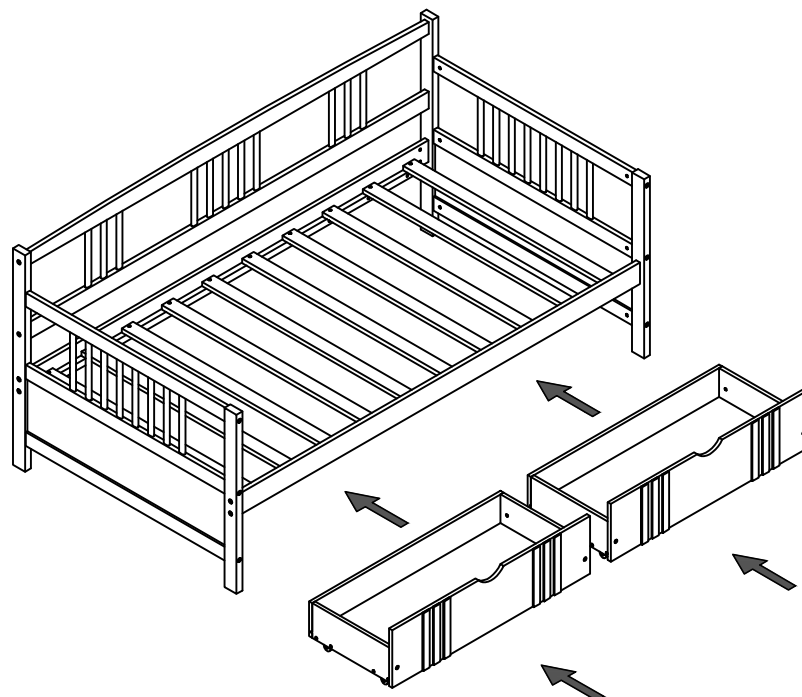

Push drawers under the bottom of daybed.

