


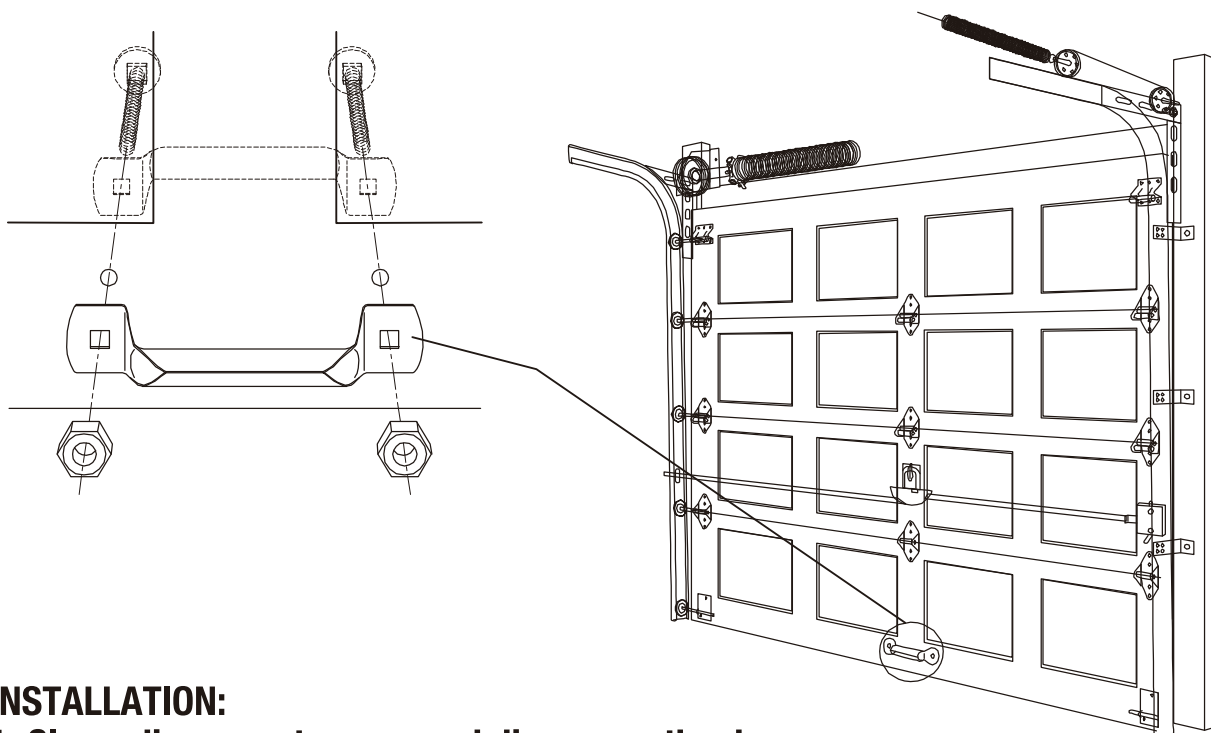

INSTALLATION:

1. Close, disconnect power and disengage the door.
2. Fasten C clamps to doors, above both rollers to prevent door from opening.
3. Using a 17/64-inch diameter drill bit, drill mounting holes on the outside facing skin of the door section in line with the center stile.
4. Drill a 17/64-inch diameter hole at same location on the interior of the door at the center stile. Drill through foam if door is insulated.
5. Install 2 carriage bolts and 2 washers (sold separately) and 2 nuts (sold separately) to complete installation of lift handle.
6. Wipe away any metal shavings.

INSTALACIÓN:

1. Cierre, desconecte la alimentación y desenganche la puerta.
2. Asegure las abrazaderas en C a las puertas, por encima de los dos rodillos para evitar que la puerta se abra.
3. Con una broca para taladro de 17/64 pulg. de diámetro, taladre los orificios de montaje del lado externo de la puerta, en la sección alineada con el montante central.
4. Taladre un orificio de 17/64 pulg. de diámetro en la misma ubicación del interior de la puerta en el montante central. Si la puerta tiene espuma aislante, taladre hasta atravesarla.
5. Coloque 2 pernos cabeza de hongo y 2 arandelas (se venden por separado) y 2 tuercas (se venden por separado) para finalizar la instalación de la manija de elevación.
6. Limpie las virutas metálicas.

TOOLS REQUIRED

HERRAMIENTAS NECESARIAS

