




MANHATTAN
COMFORT

ASSEMBLY HANDBOOK – FORTRESS GARAGE TABLE

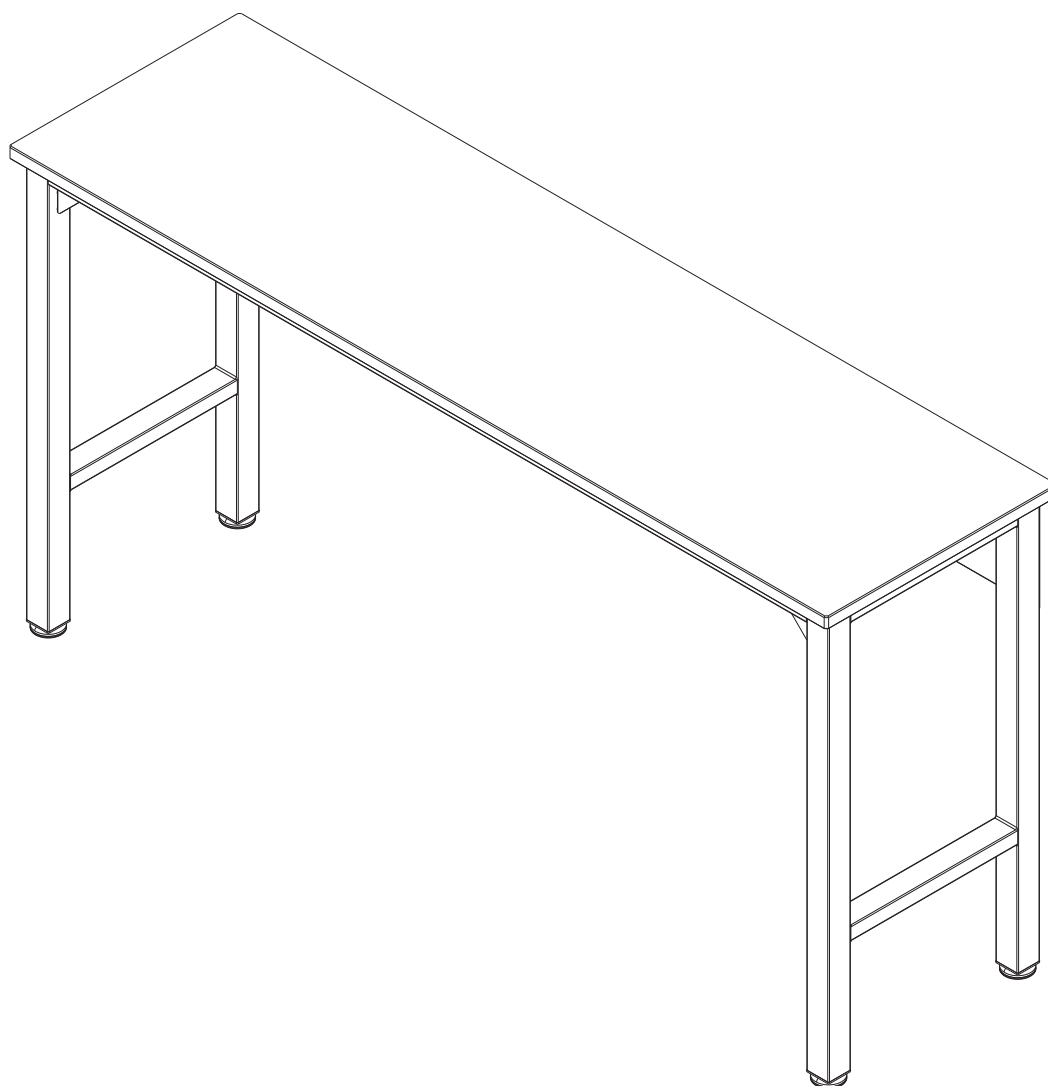



6GMC



Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com





View our assembly video online
www.manhattancomfort.com

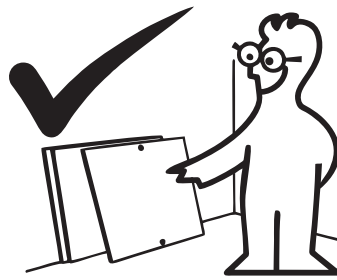
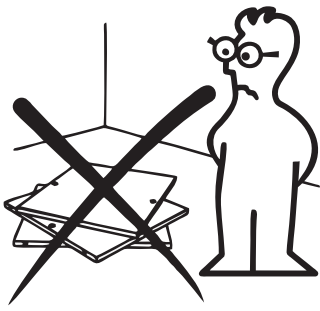


In order to ease the assembly,
you should separate and identify the parts first


Necessary hardware for the assembly

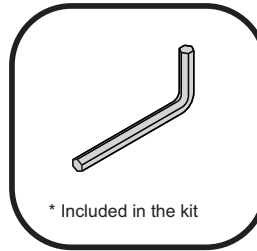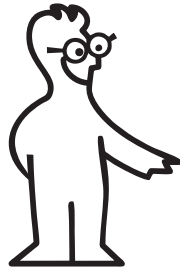

* Included in the kit

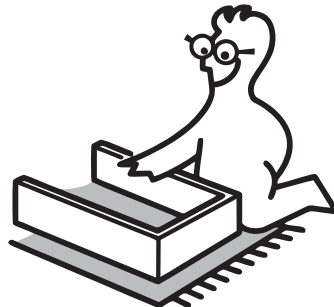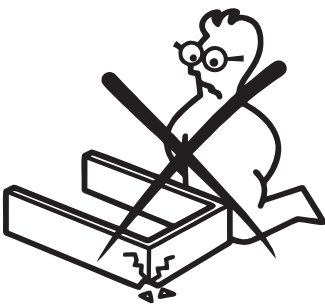

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

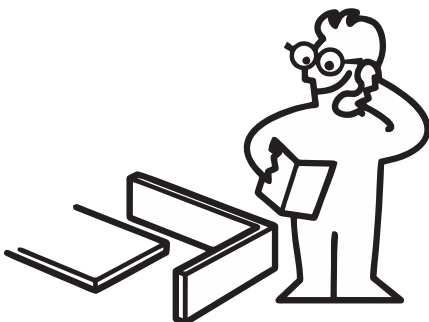

Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com




View our assembly video online
www.manhattancomfort.com

IMPORTANT

In order to avoid severe or even fatal injuries, follow the instructions carefully.


ASSEMBLY HANDBOOK – FORTRESS GARAGE TABLE

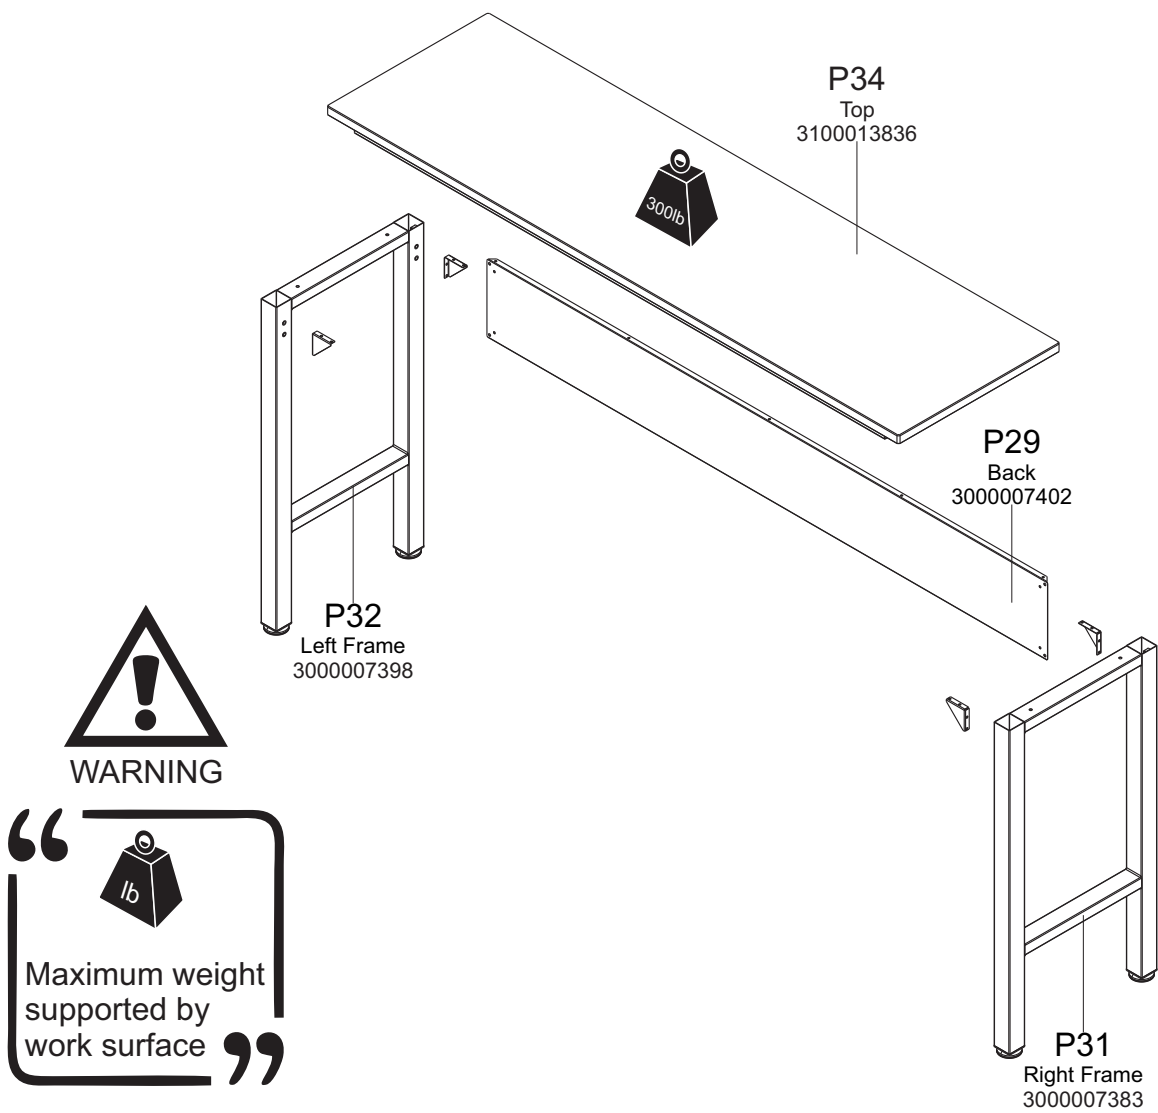

Hardware list

F2


1000009499



Qty. 3

F3

1000008391



Qty. 20

F8


1000008387



Qty. 20

F4


1000008299



Qty. 4

F9


1000008368

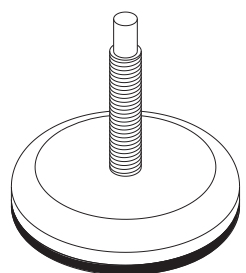

Qty. 4

F13


1000009033

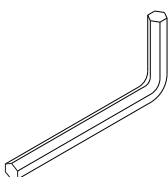

Qty. 1

F16


3000007407

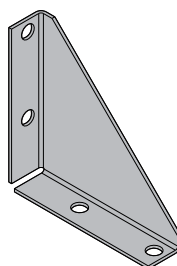

Qty. 4

F17



1000008285

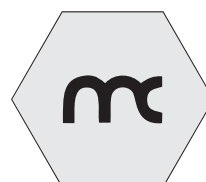

Qty. 1





STEP 1

1. Fit the shoes to frame **P32** and **P31** base and turn to screw. To level the height or the table, turn the shoe clockwise or counterclockwise until is aligned

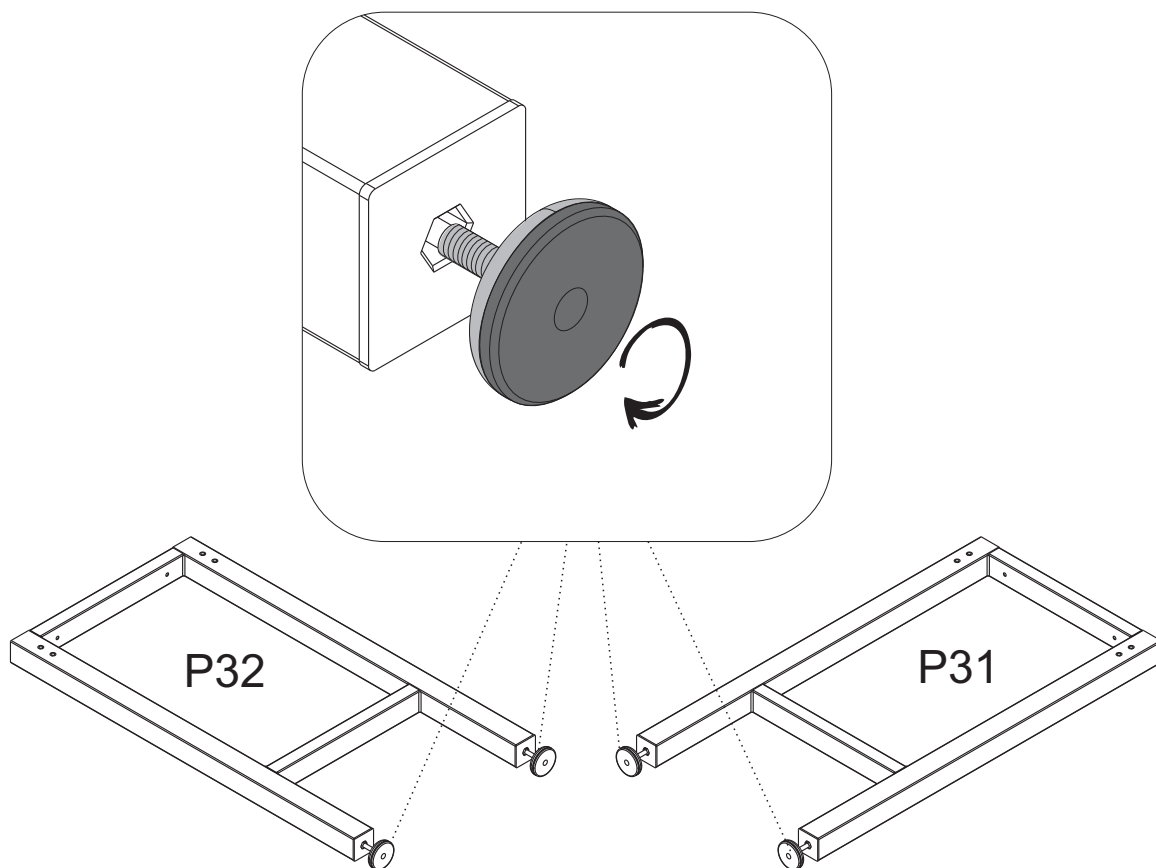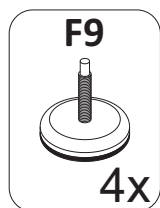

STEP 2





1. Align corner brackets **F16** to the upper sides of frames **P31** and **P32** and fix them with **F3** and **F8**

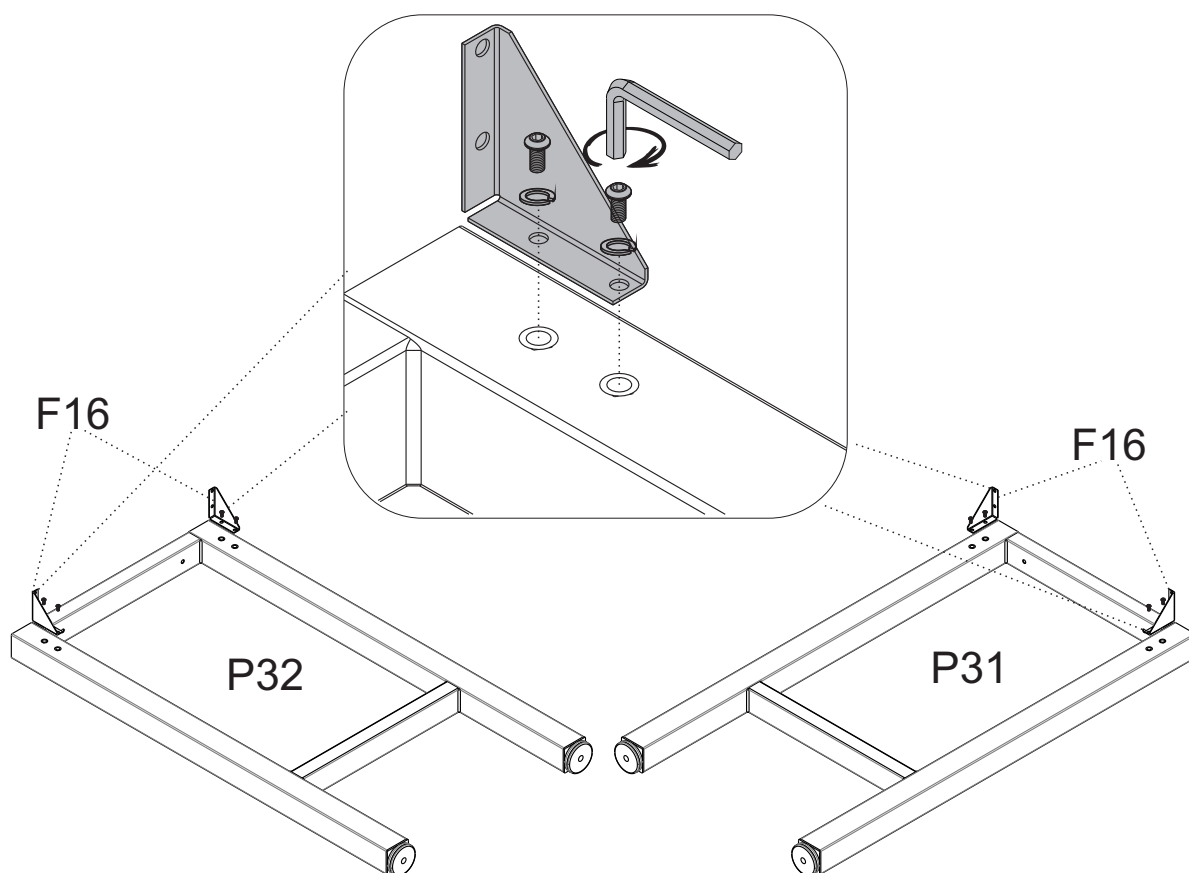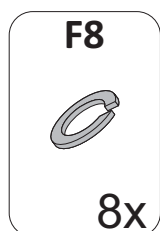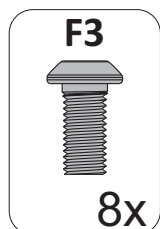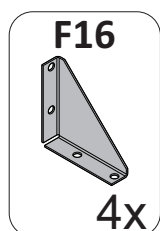

STEP 3



1.Align frames **P31** and **P32** to **P34**

2.Fix corner brackets **F16** to the metallic part of **P34**, with **F3** and **F8**

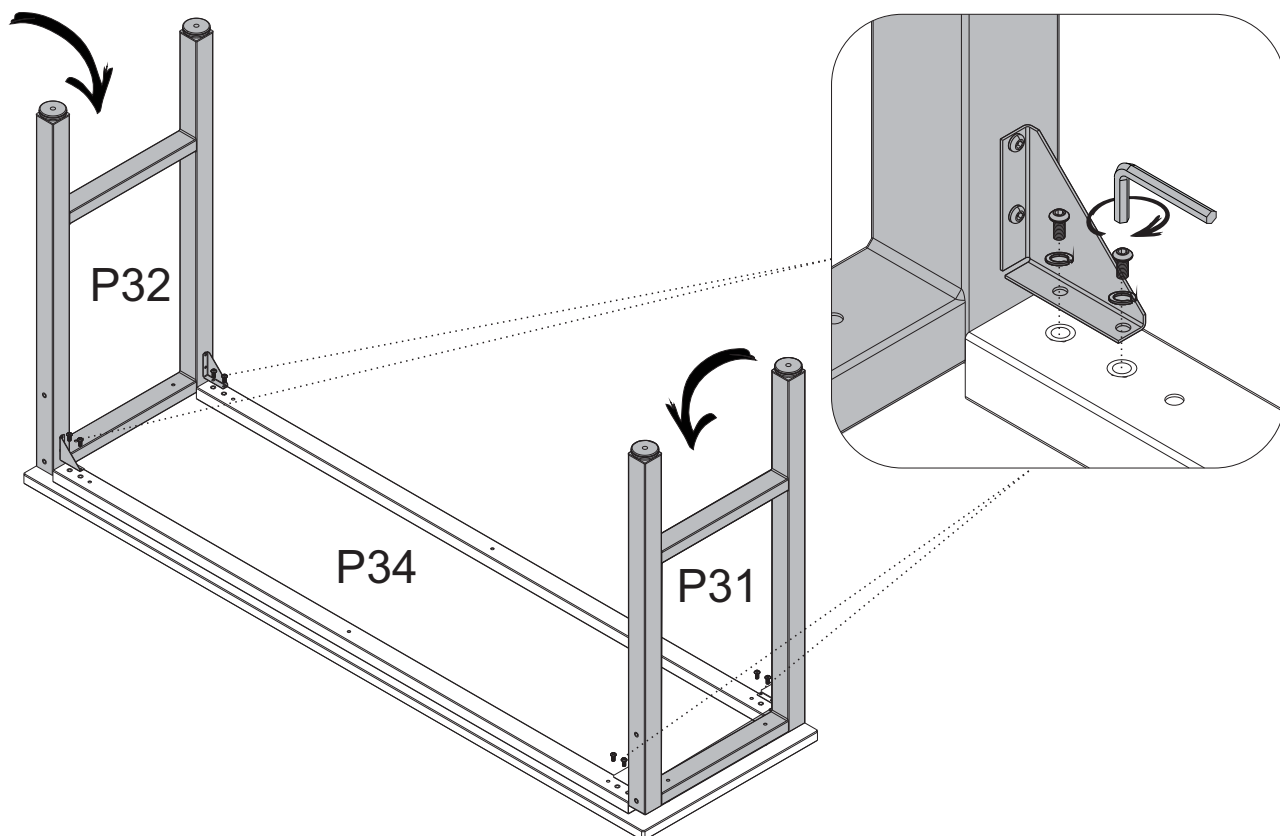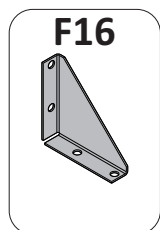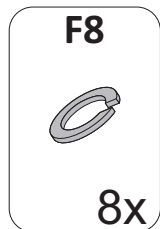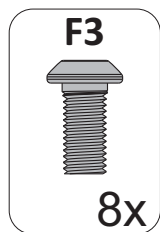




STEP 4

1.Then, fix frames **P31** and **P32** to the wooden part of part **P34**, with **F4**

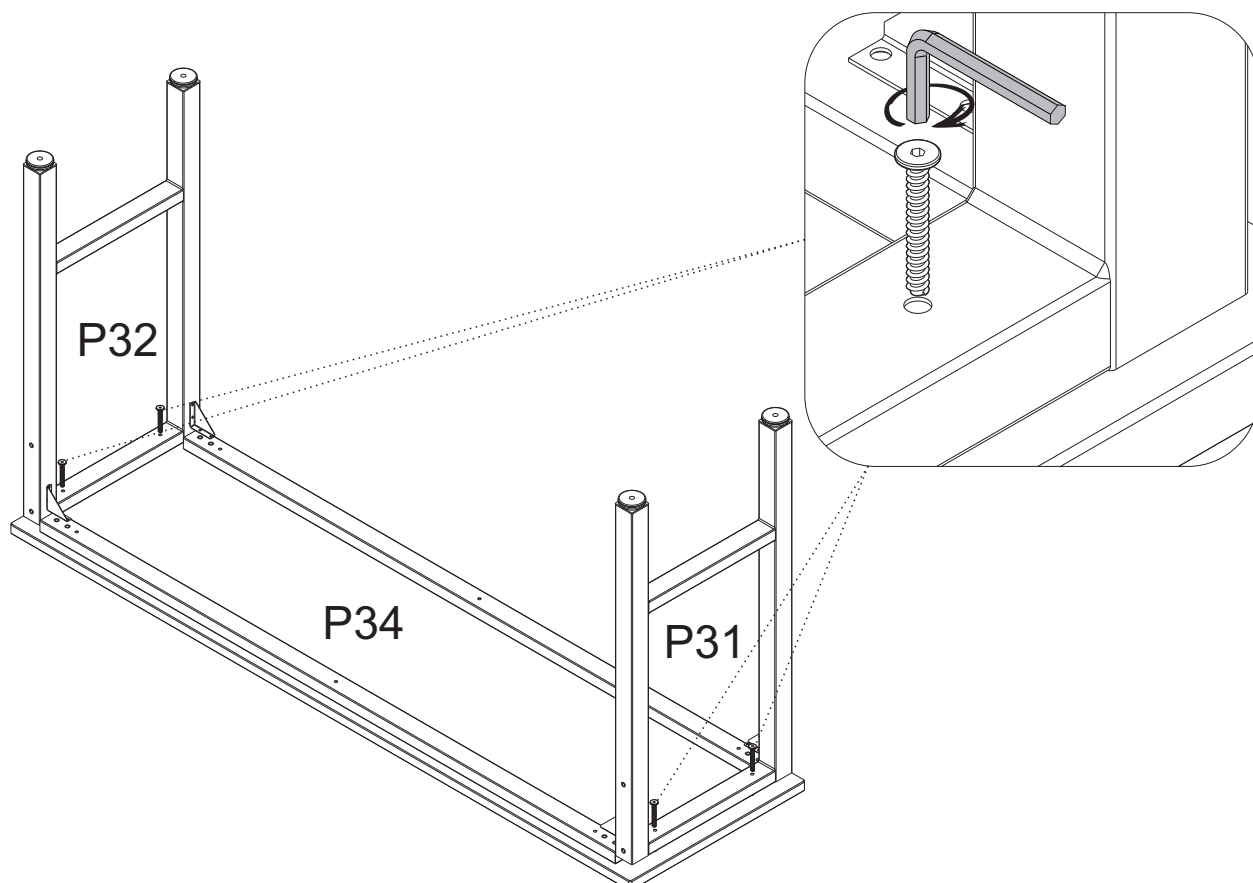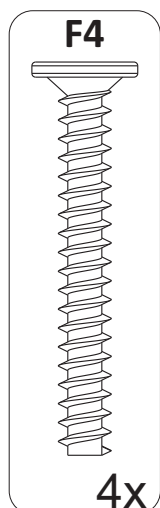



STEP 5

- 1.Align the part **P29** to frames **P31** and **P32**
- 2.Fix part **P29** to frames **P31** and **P32** with **F3** and **F8**

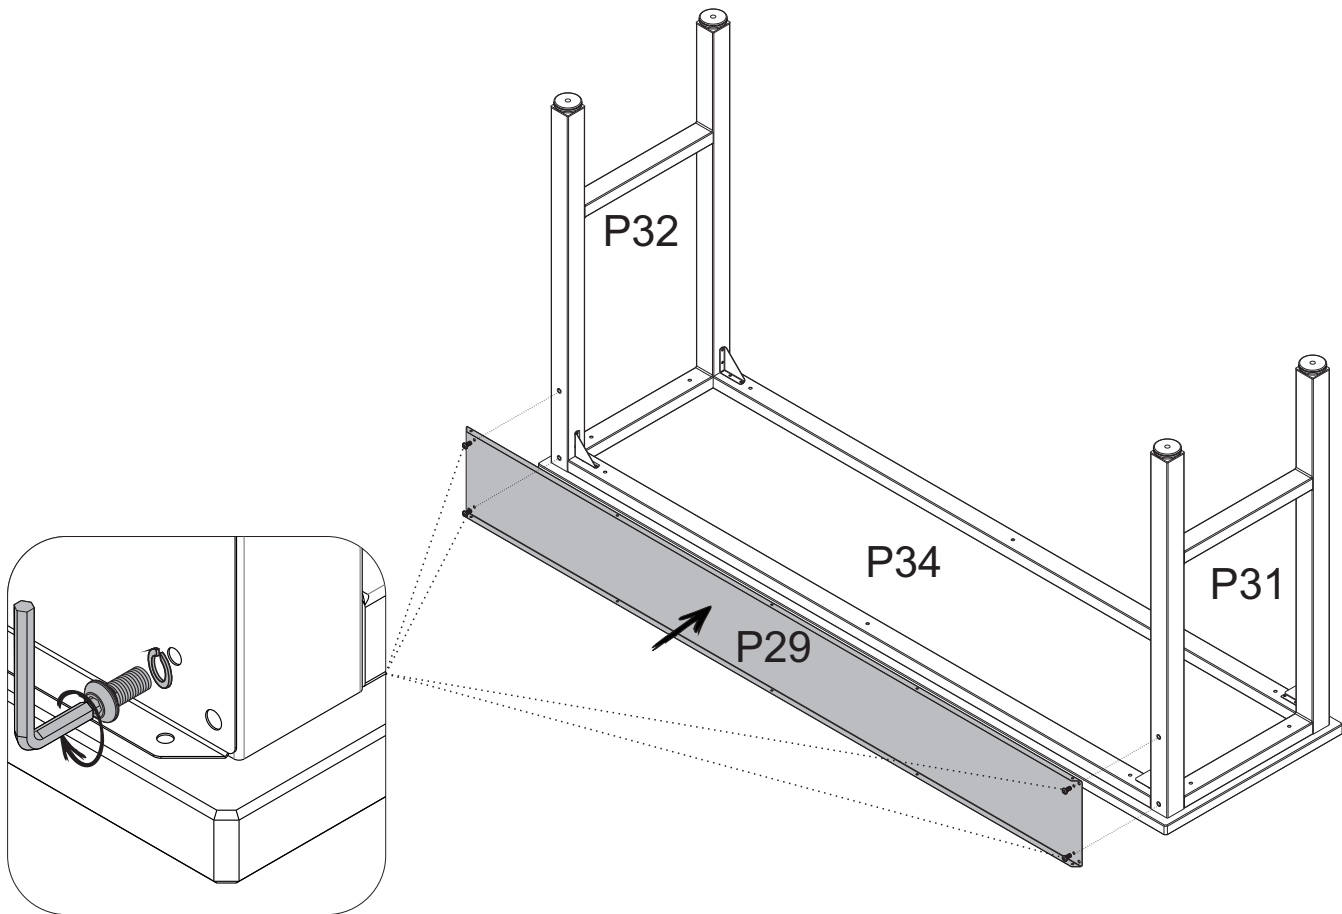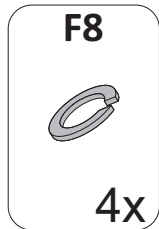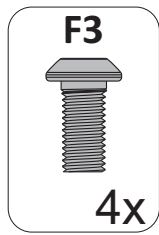



STEP 6

- 1.Fix part **P29** to part **P34** wooden side, with **F2**

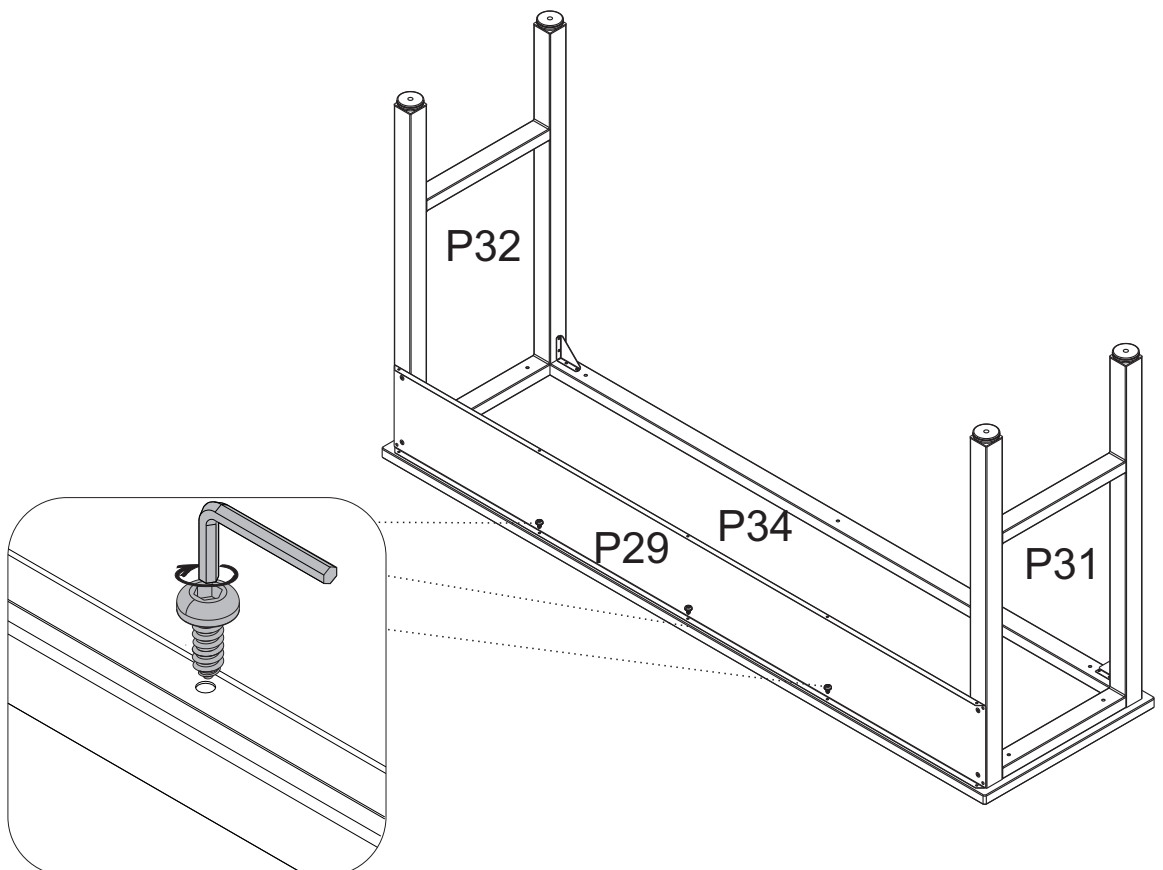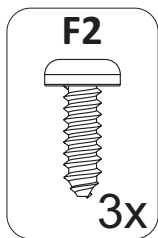

STEP 7


1 -Insert product log

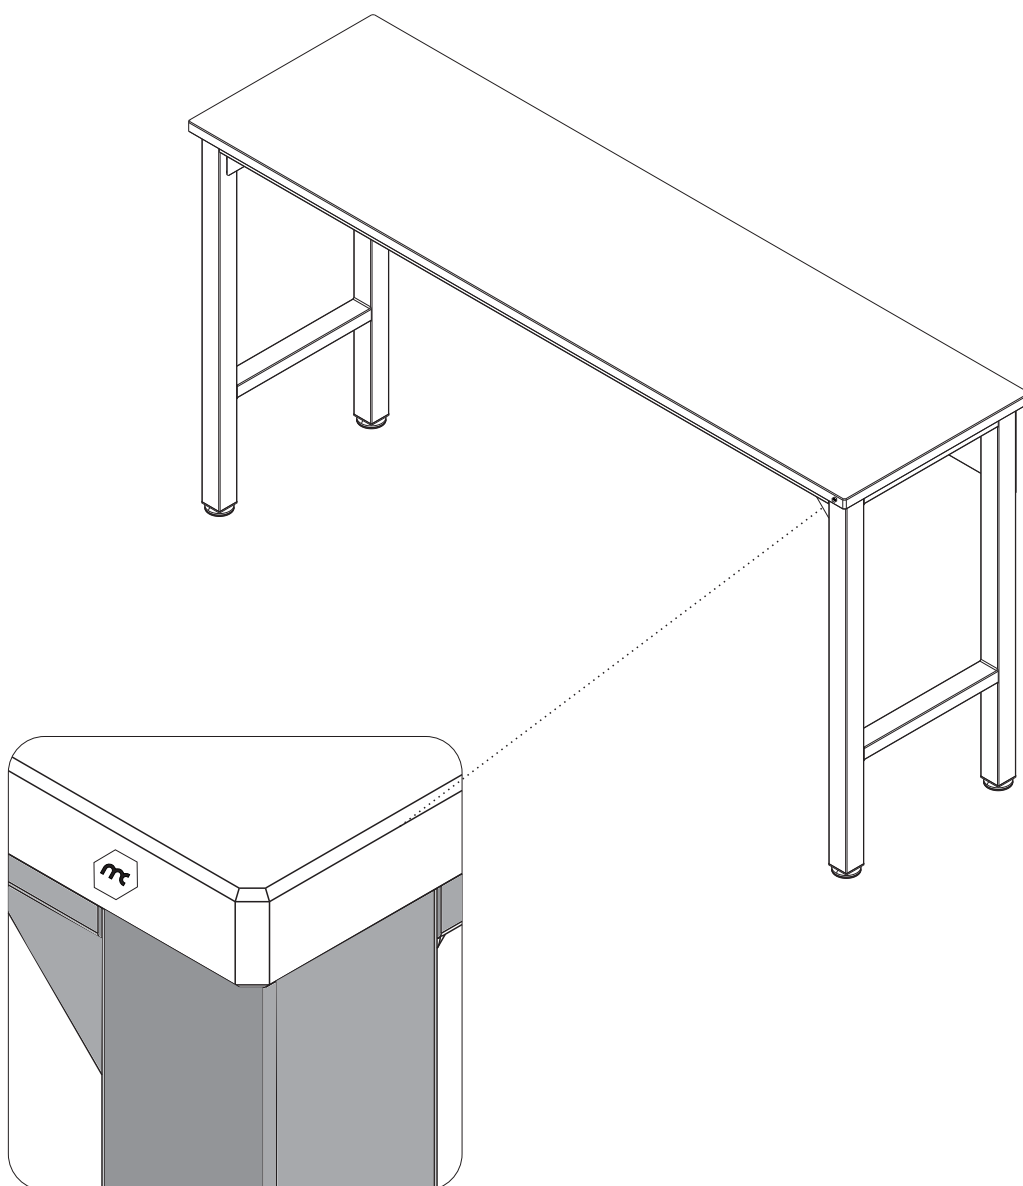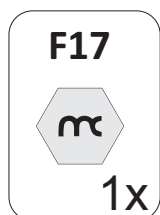



MANHATTAN
COMFORT

ASSEMBLY HANDBOOK – FORTRESS 31.5" MOBILE GARAGE CHEST WITH DRAWERS

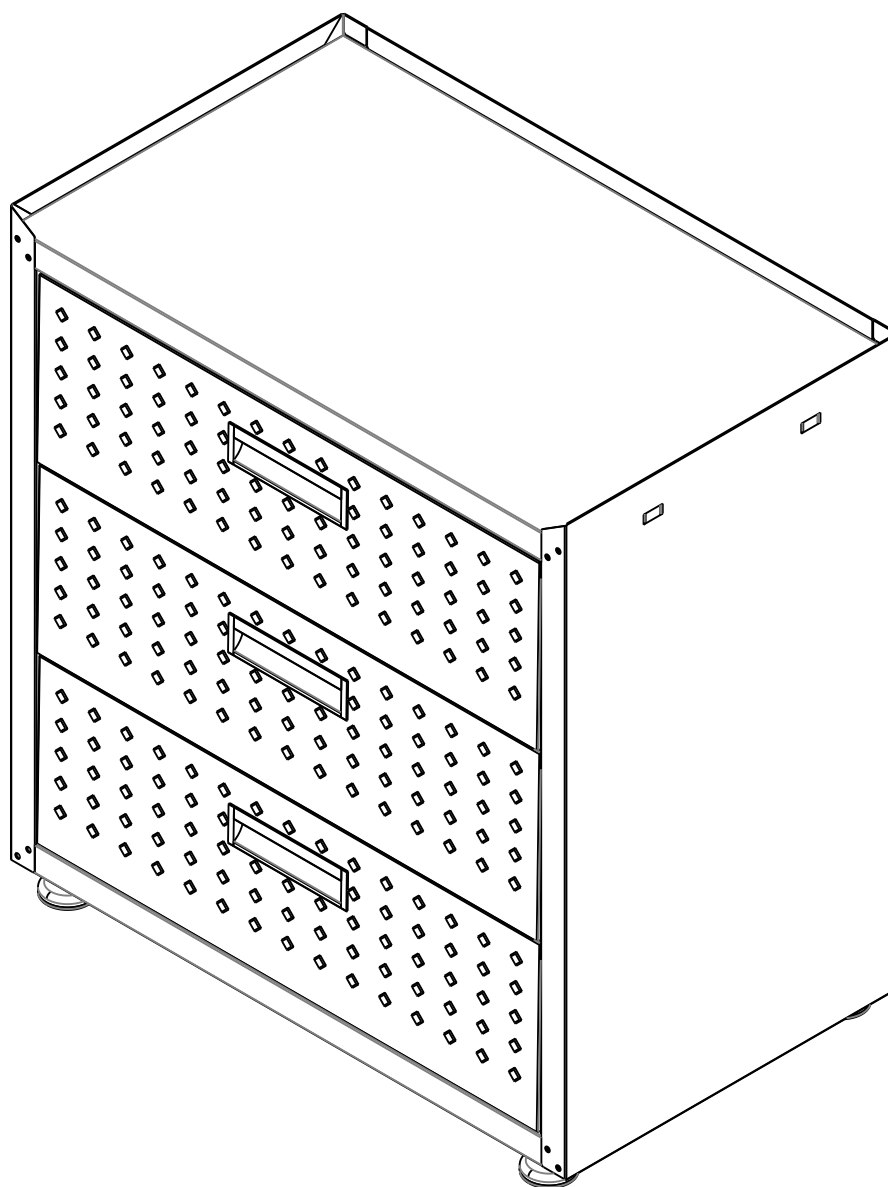



4GMCF



Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com





View our assembly video online
www.manhattancomfort.com

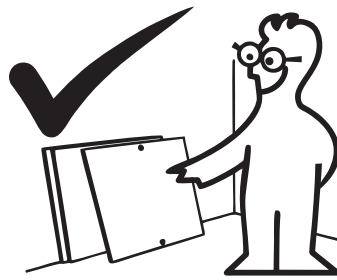
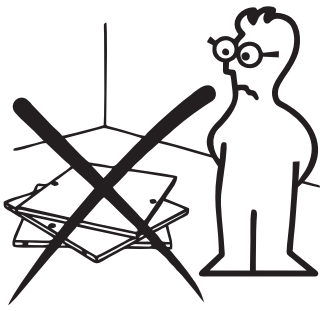


In order to ease the assembly,
you should separate and identify the parts first


Necessary hardware for the assembly

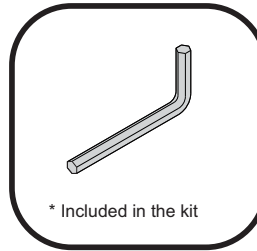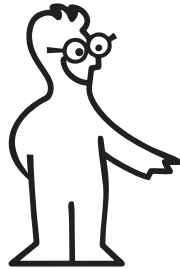

* Included in the kit

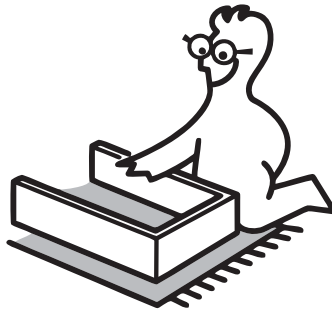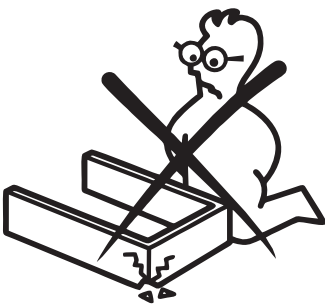

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

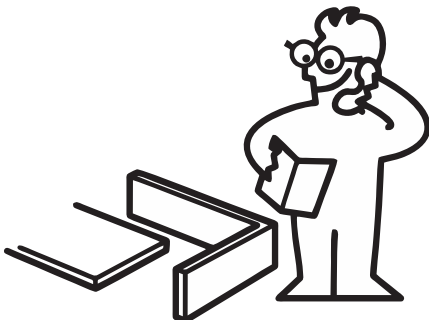

Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com






View our assembly video online
www.manhattancomfort.com

IMPORTANT


In order to avoid severe or even fatal injuries, follow the instructions carefully.

ASSEMBLY HANDBOOK – FORTRESS 31.5" MOBILE GARAGE CHEST WITH DRAWERS

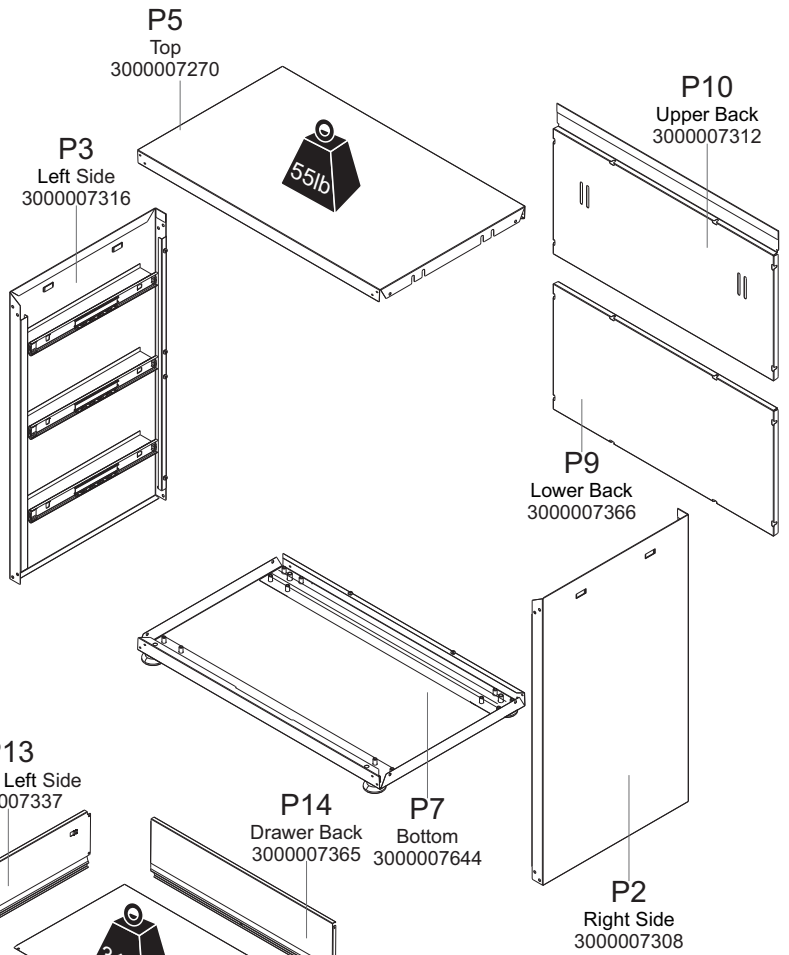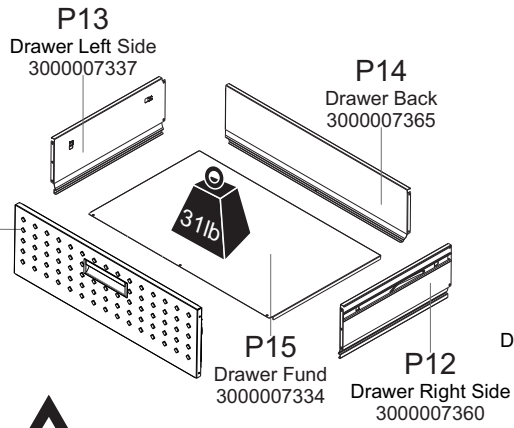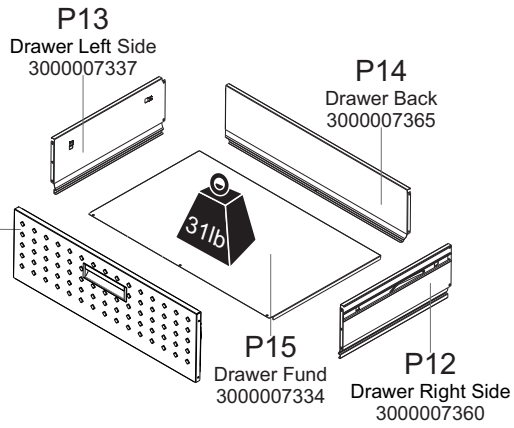


Hardware list

F1
1000009500



Qty. 52

F13
1000009033

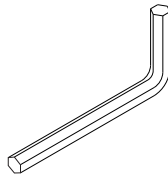


Qty. 1

F17
1000008285




F9
1000008368

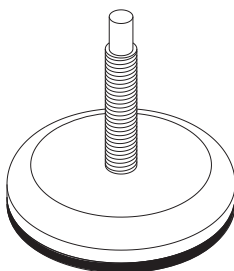

Qty. 4

* Only in cabinets without caster


F3
1000008391



Qty. 16


* Only in cabinets with caster

F10
1000008352

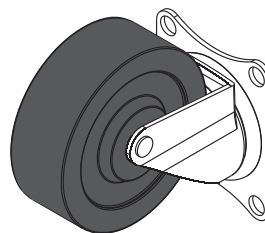




Qty. 2

F11
1000008354



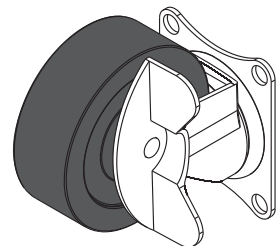


Qty. 2

- STEP 1**
- 1 - Fit part **P7** inside part **P3**
 - 2 - Fit both parts in the frontal side, with **F1**



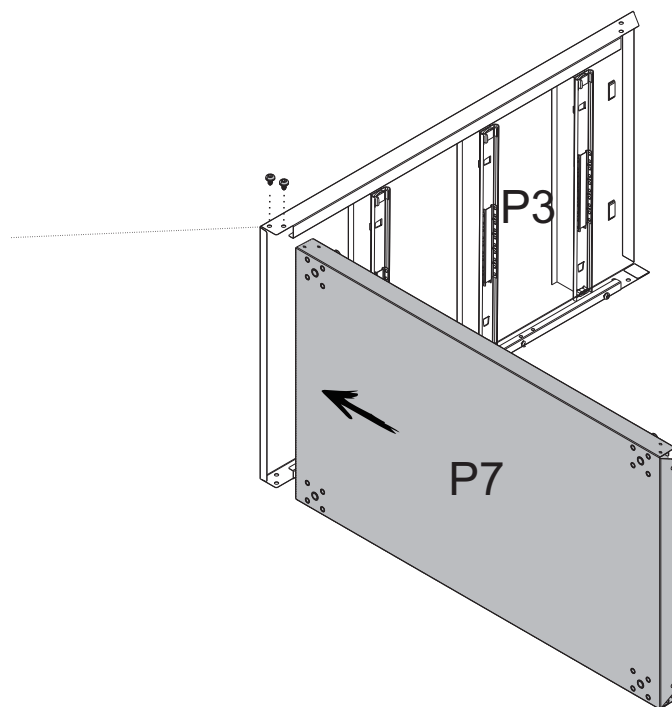
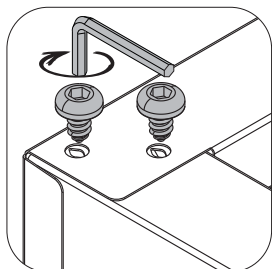
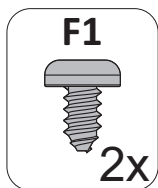


-
- STEP 2**
- 1 - Fit part **P2** inside part **P7**
 - 2 - Fit both parts in the frontal side, with **F1**

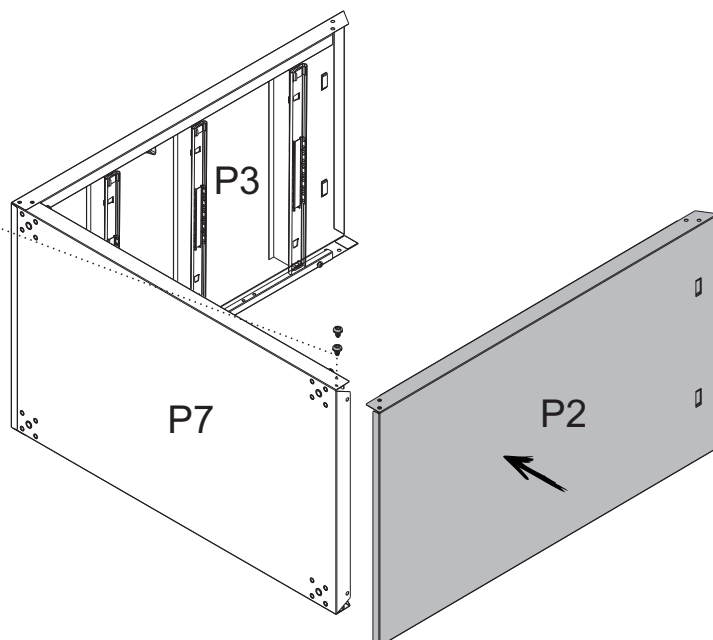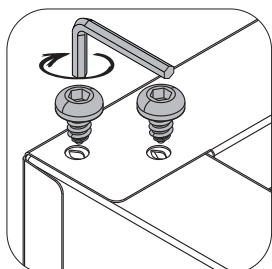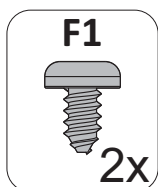



STEP 3

- 1 - Fit part **P5** between part **P2** and **P3**
- 2 - Check that all 4 tabs have been fitted
- 3 - Fit part **P5** to parts **P2** and **P3**, at the frontal side, with **F1**

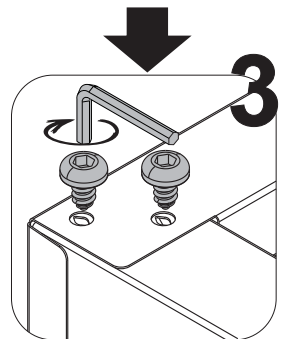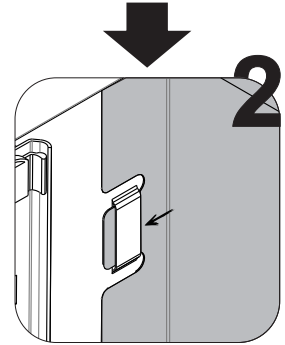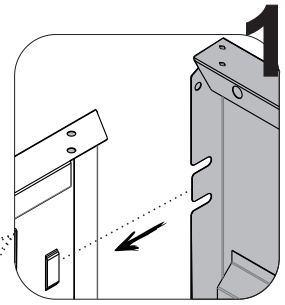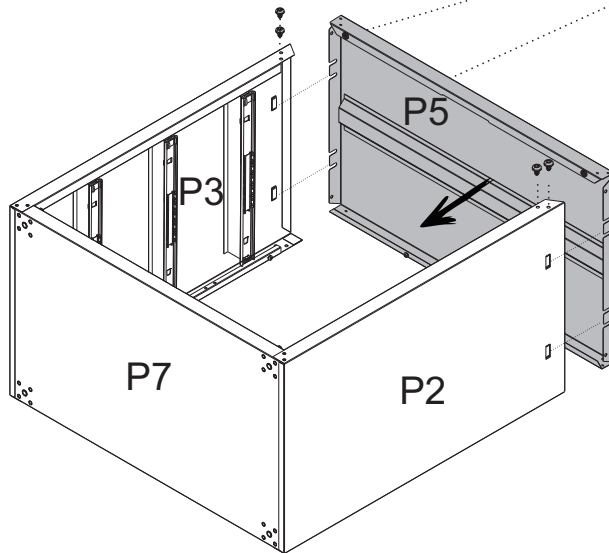
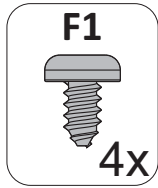


STEP 4

- 1 - Turn the cabinet with the back side upwards

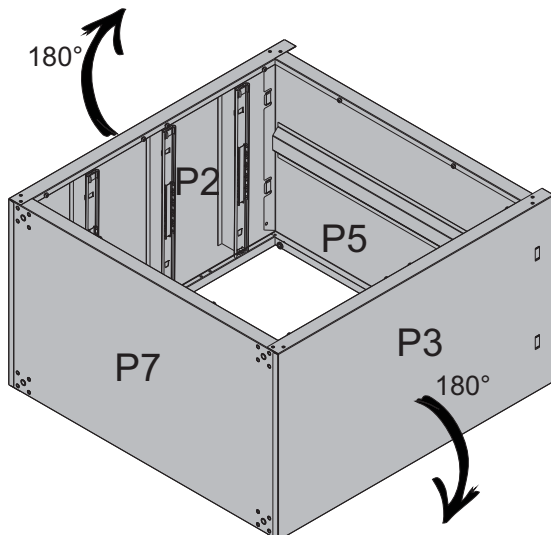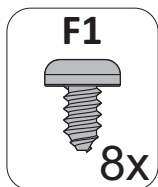


- 2 - Fit parts **P2** and **P3** to parts **P5** and **P7** with **F1**

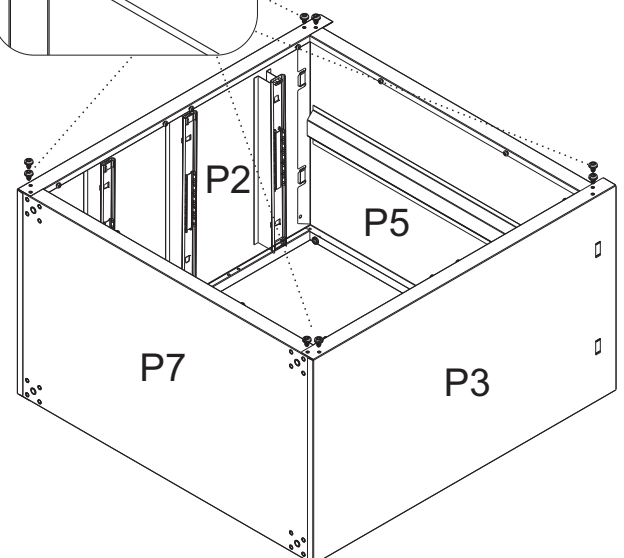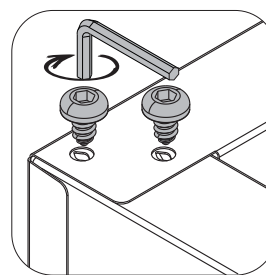


STEP 5

- 1 - Fit part **P10** into parts **P2**, **P3** and **P5**.
Check that all fits are supported over the bolts
- 3 - After fitting the parts, screw the bolts until locked

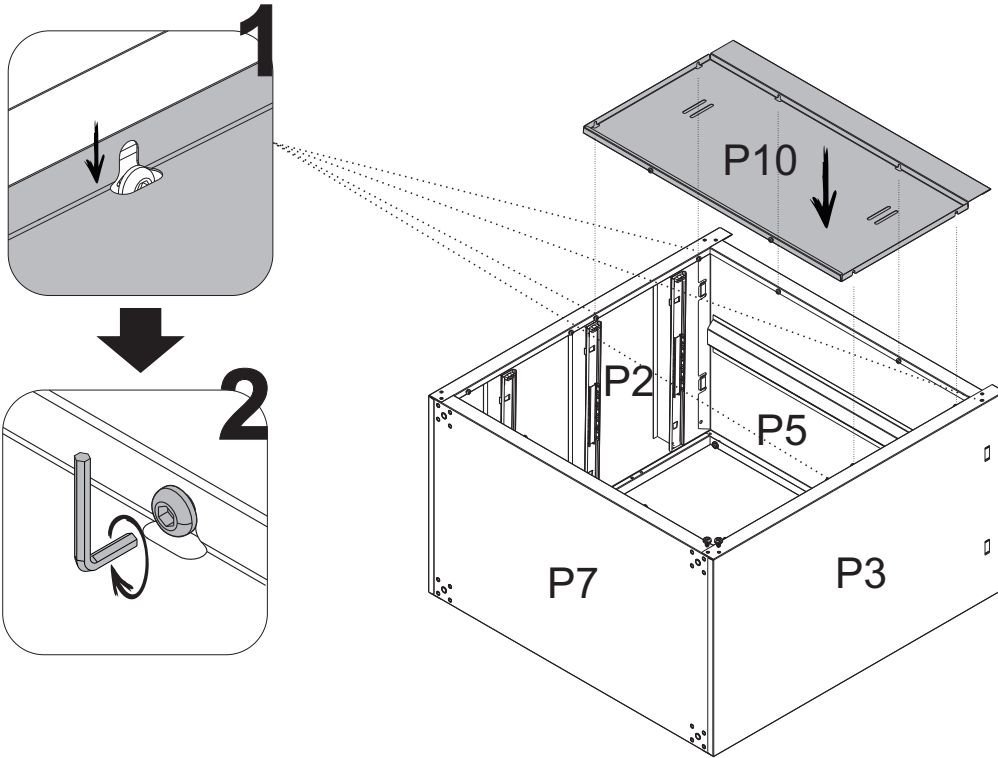




“Position part P10 on the P5 side for mounting the cabinet.”

- ## STEP 6
- 1 - Fit part **P9** into parts **P2**, **P3** and **P7**.
Check that all fits are supported over the bolts
 - 2 - After fitting the parts, screw the bolts until locked

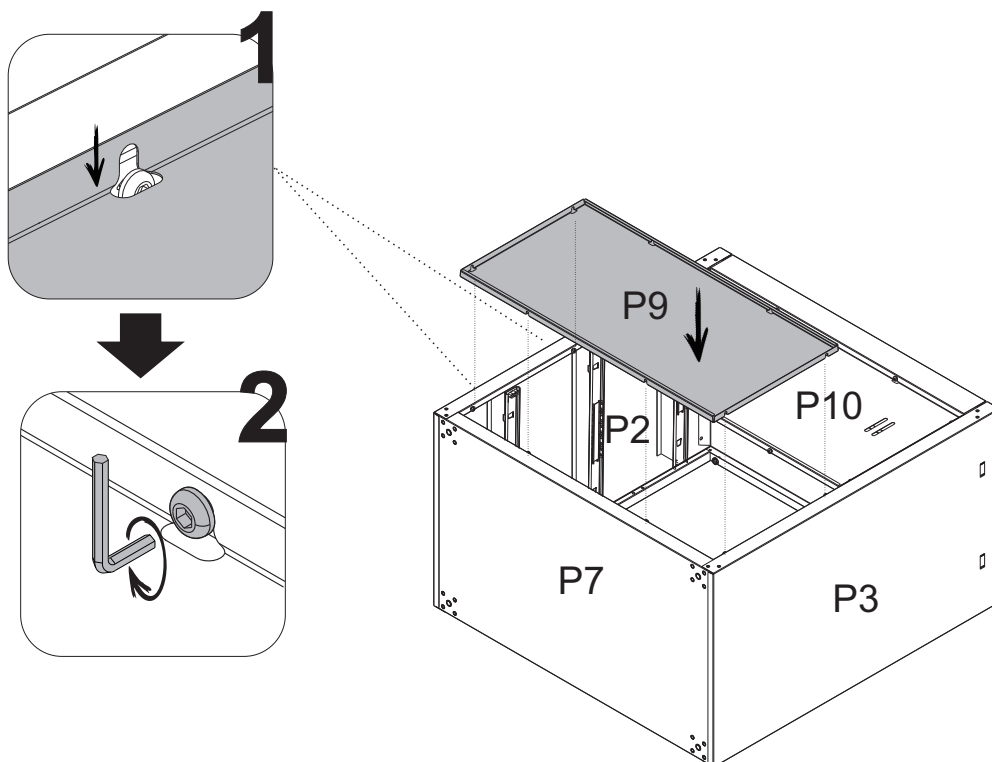






STEP 7

- 1 - To assembly the cabinet with shoe fit the accessory **F9** in part **P7** as illustrated here below and turn to screw. To level the height or the cabinet, turn the shoe either clockwise or counterclockwise to align it.

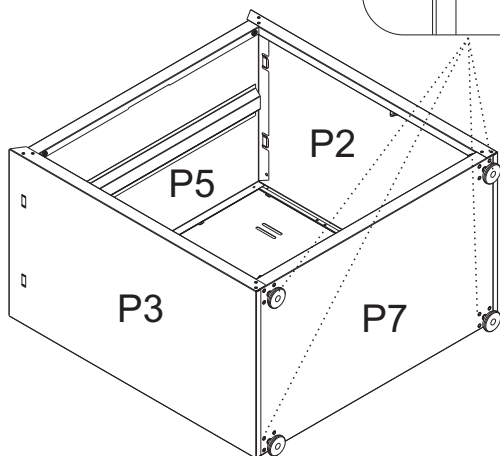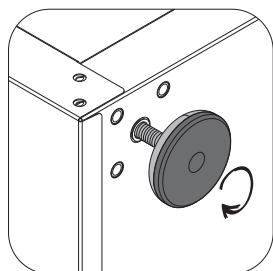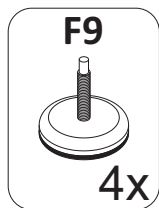

* Only in cabinets without caster




- 2 - To assembly the cabinet with caster, align the **F10** and **F11** to the holes in part **P7** and fix them with **F3**
- 3 - **WARNING:** Casters with lock (**F11**) must be fitted in the frontal side of the cabinet

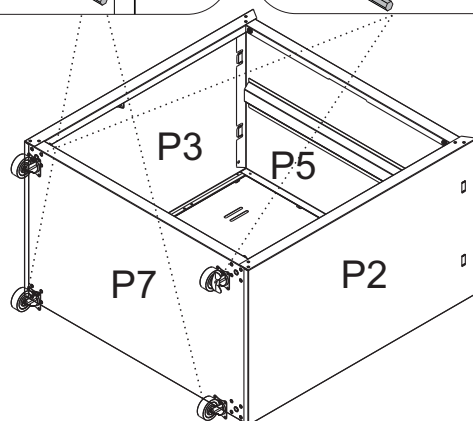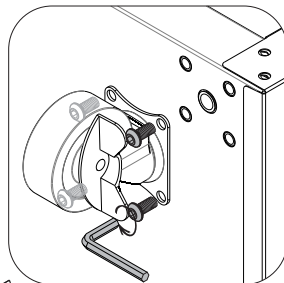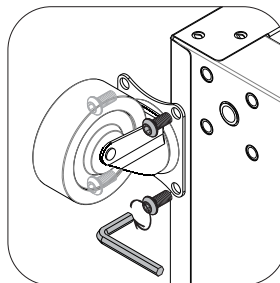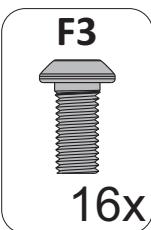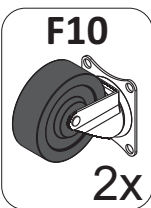




* Only in cabinets with caster

STEP 8

- 1 - Fit part **P15** to part **P28**
- 2 - Fit them with **F1**


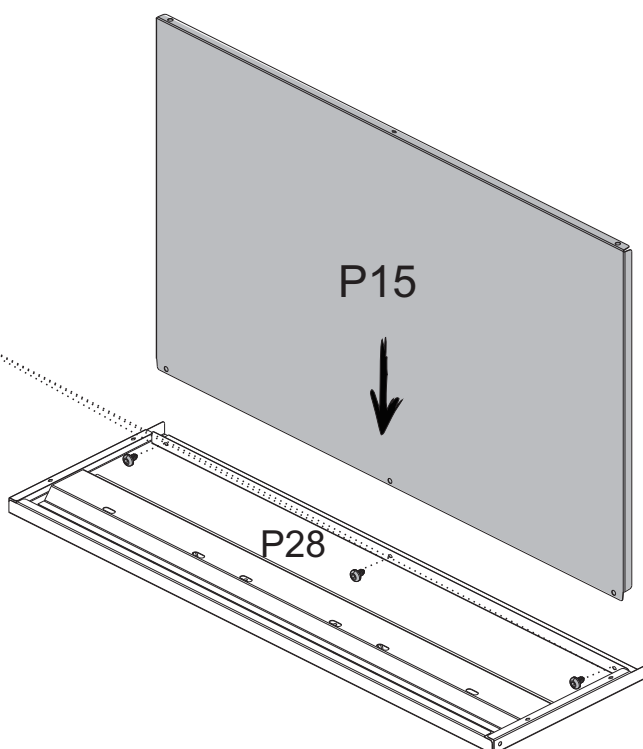
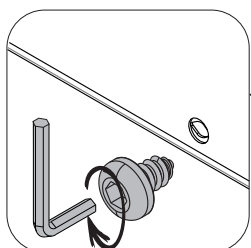
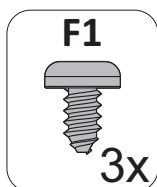


- STEP 13**
- 1 - Align parts **P12** and **P13** to part **P15**, until it leans against part **P28**
 - 2 - Fit them with **F1**

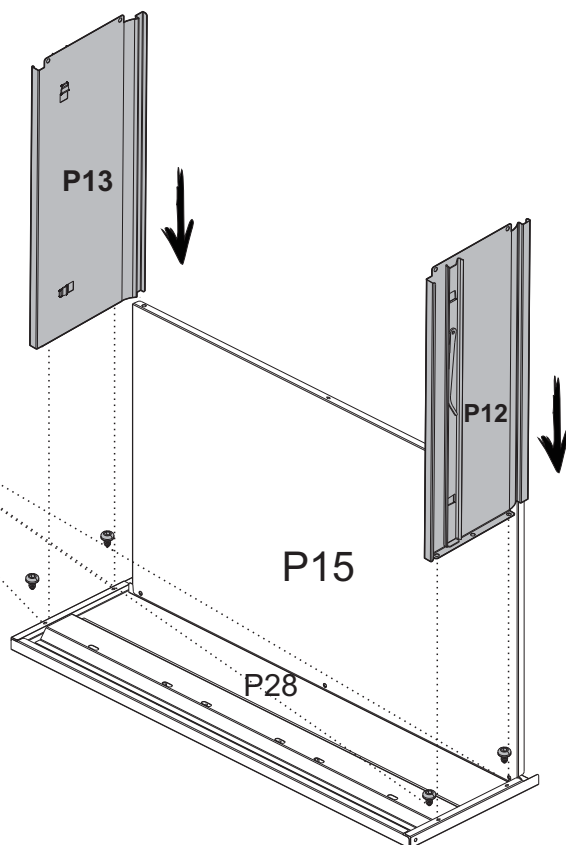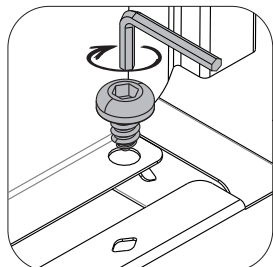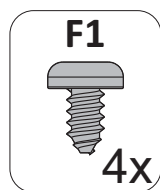


STEP 14

- 1 - Insert part **P14** over part **P15** and between parts **P12** and **P13**
- 2 - Then, fix part **P14** to parts **P12**, **P13** and **P15**, with **F1**

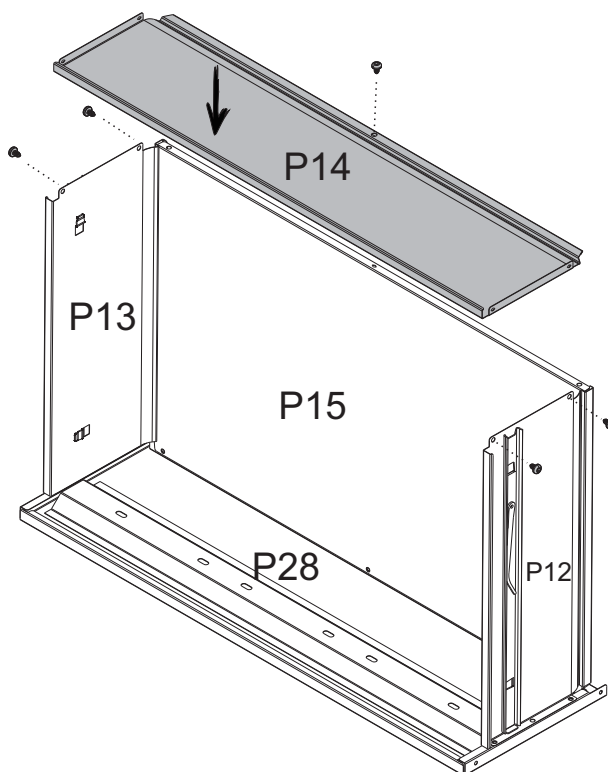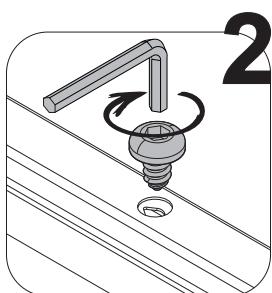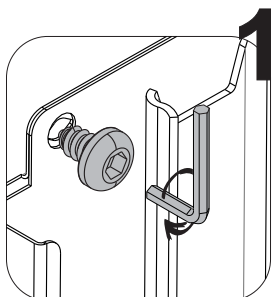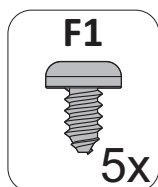


STEP 14

- 1 - Fit the drawers – already assembled – between parts **P2** and **P3**, through the slidings
- 2 - Check that slidings of both sides are properly fitted. Move the drawer, opening and closing it, testing

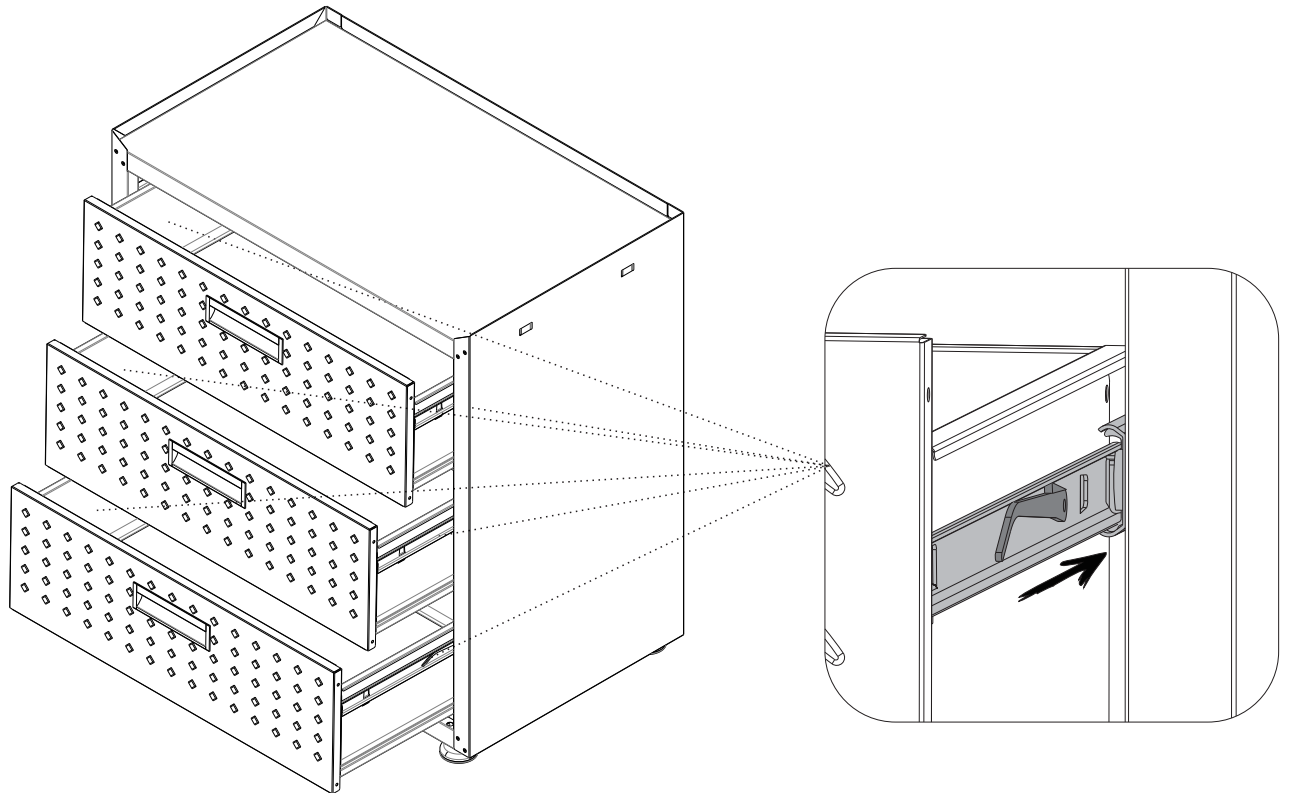

STEP 15


- 1 -Insert product log

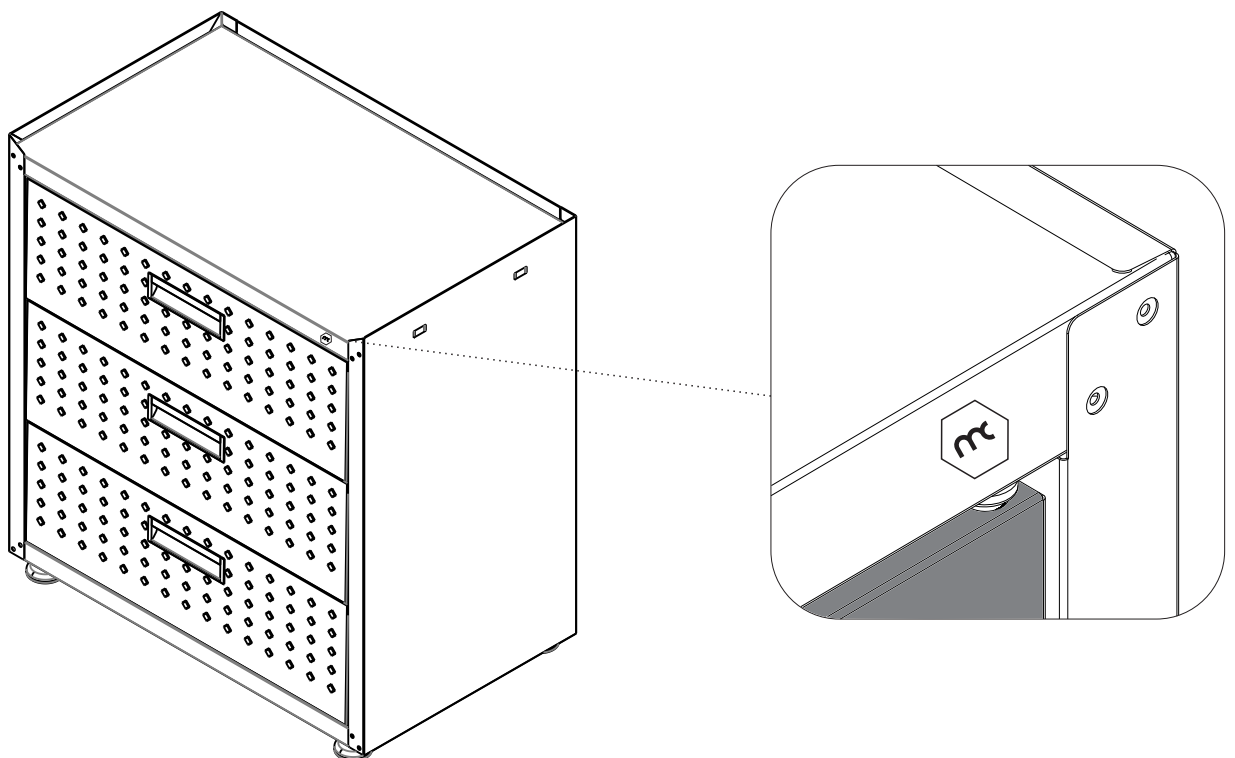



MANHATTAN
COMFORT

ASSEMBLY HANDBOOK – FORTRESS 31.5" MOBILE GARAGE CABINET WITH DRAWER AND SHELVES

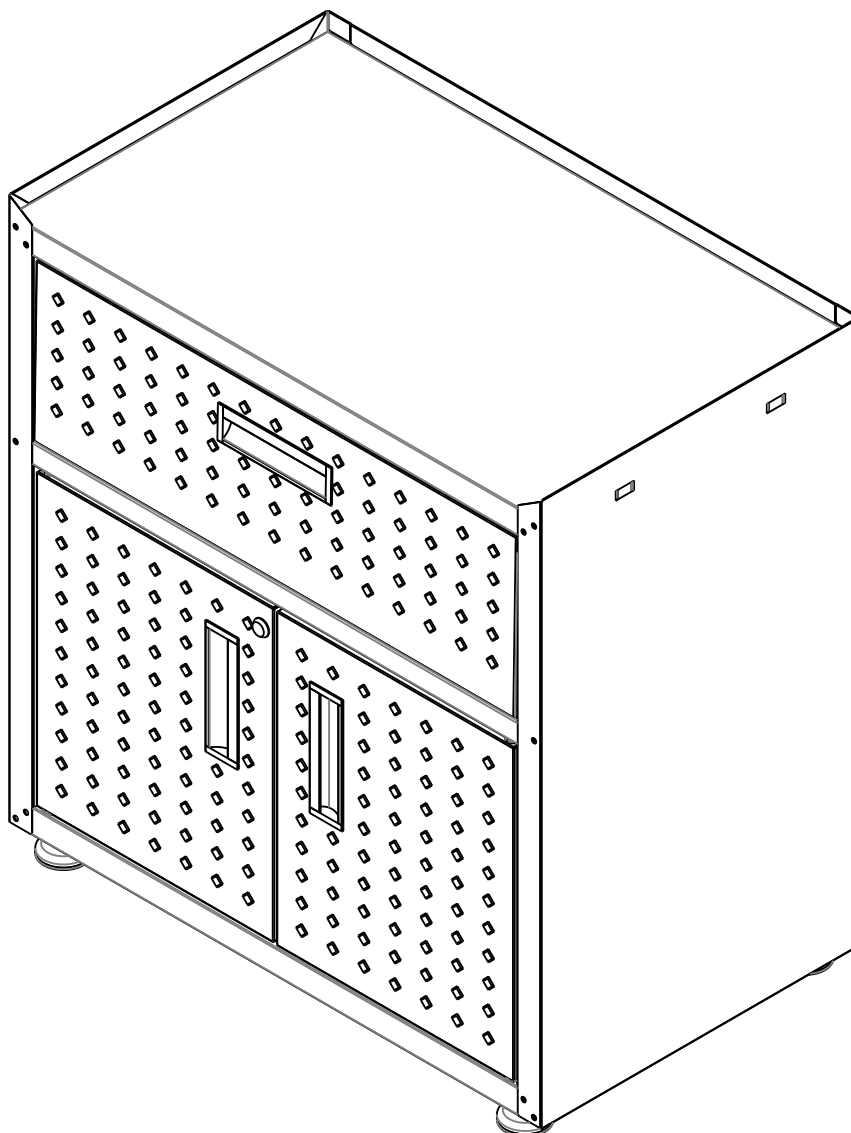



2GMCF



Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com





View our assembly video online
www.manhattancomfort.com

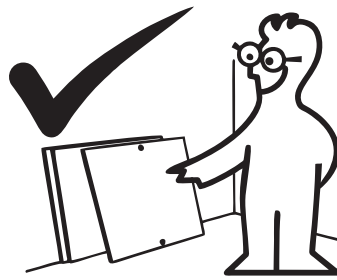
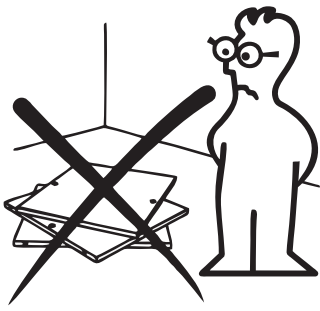


In order to ease the assembly,
you should separate and identify the parts first


Necessary hardware for the assembly

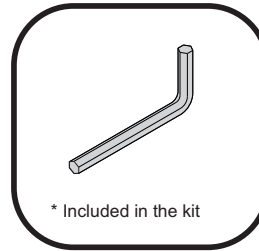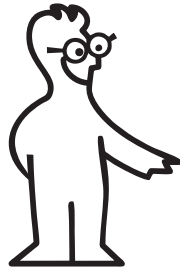

* Included in the kit

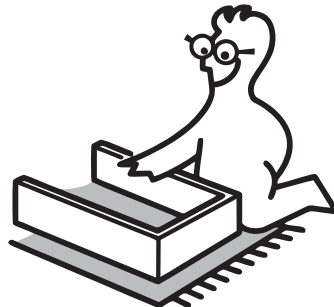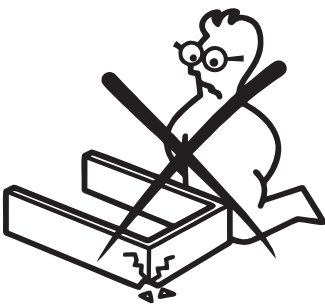

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

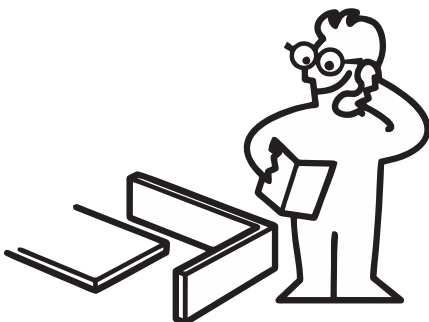

Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com



View our assembly video online
www.manhattancomfort.com


IMPORTANT

In order to avoid severe or even fatal injuries, follow the instructions carefully.

ASSEMBLY HANDBOOK – FORTRESS 31.5" MOBILE GARAGE CABINET WITH DRAWER AND SHELVES




WARNING

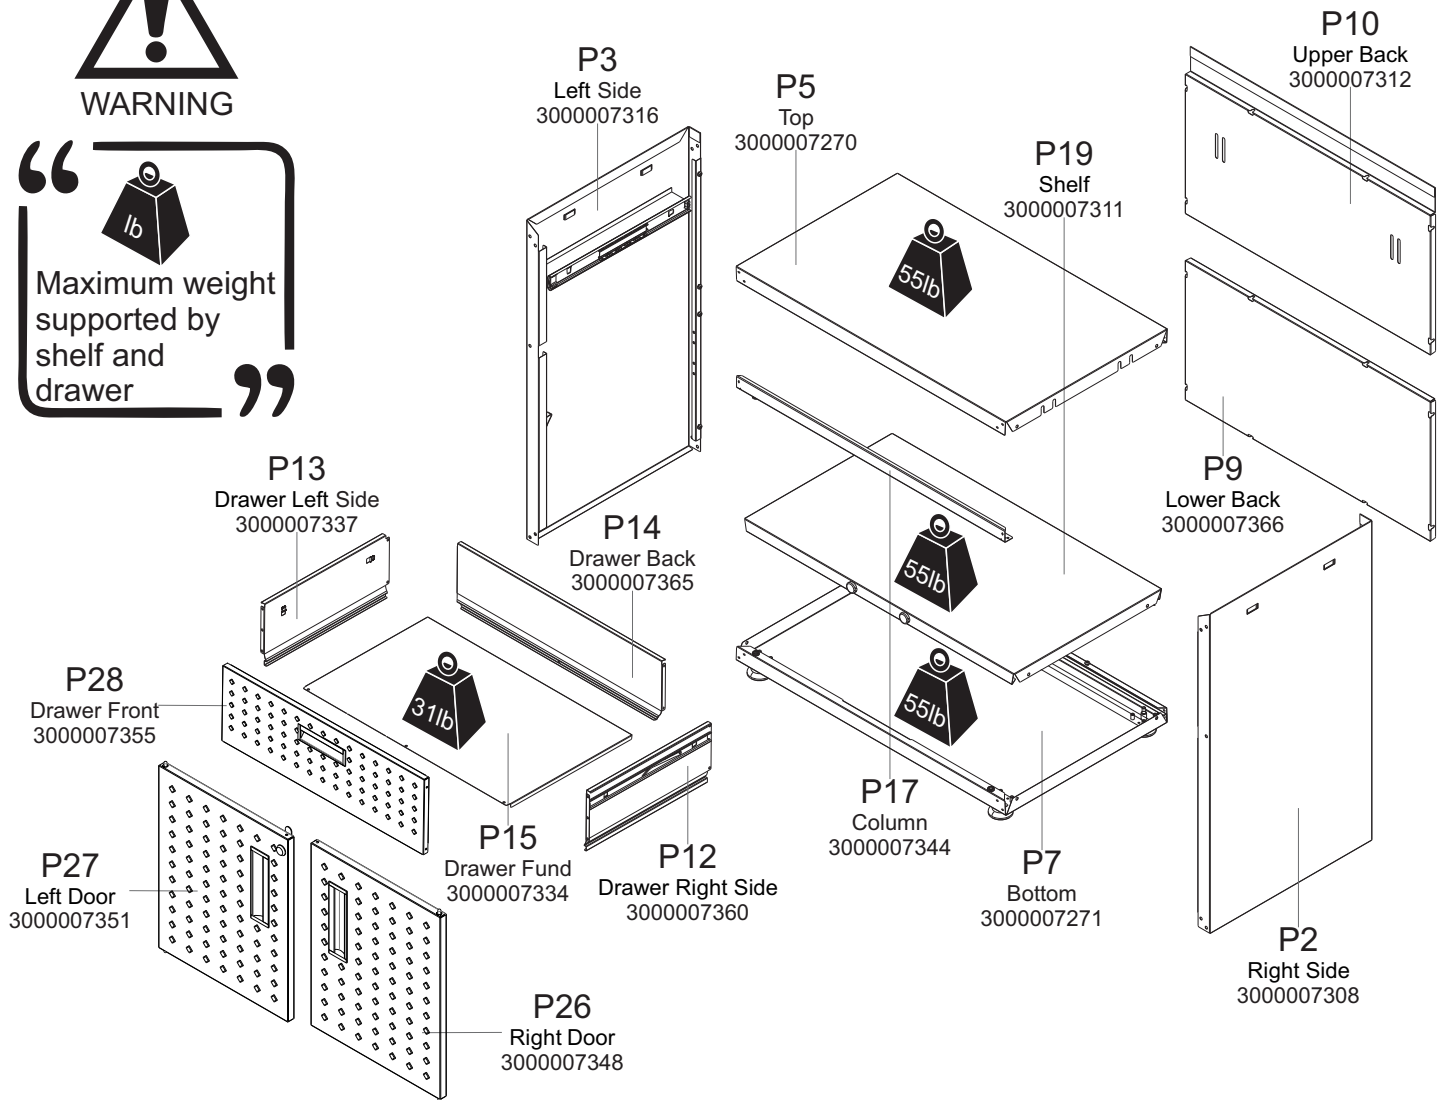

Hardware list

F1


1000009500



Qty. 30

F7


1000008301

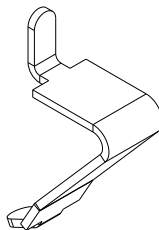

Qty. 4

F15


1000008280

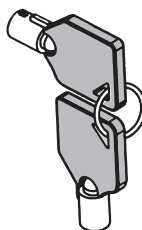

Qty. 1

F13

1000009033

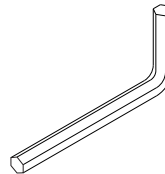

Qty. 1


F17

1000008285



F9


1000008368

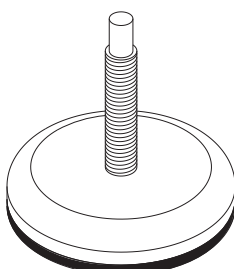

Qty. 4

F3


1000008391



Qty. 16

F10


1000008352

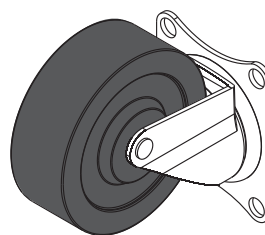

Qty. 2

F11

1000008354

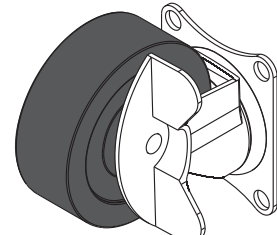




Qty. 2

* Only in cabinets without caster

* Only in cabinets with caster




STEP 1

- 1 - Fit part **P7** inside part **P3**
- 2 - Fit both parts in the frontal side, with **F1**

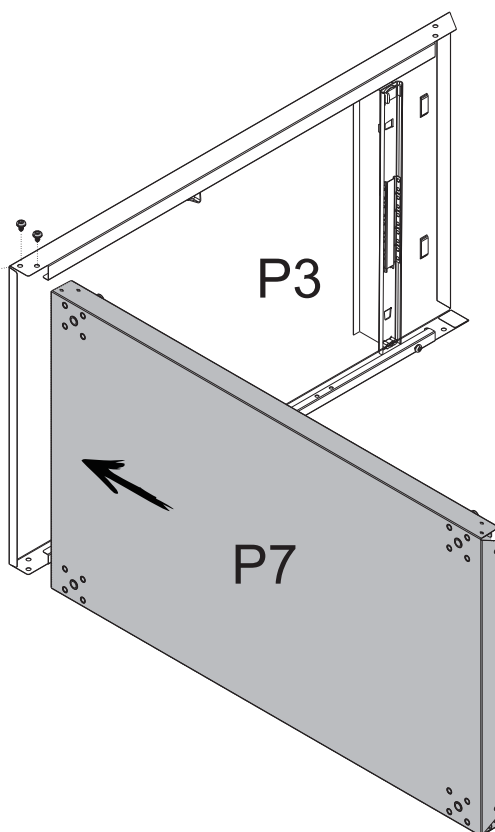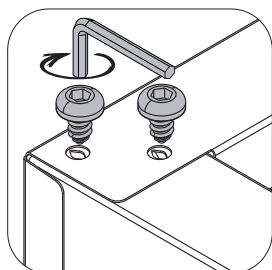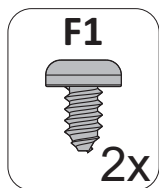






STEP 2

- 1 - Fit part **P2** inside part **P7**
- 2 - Fit both parts in the frontal side, with **F1**

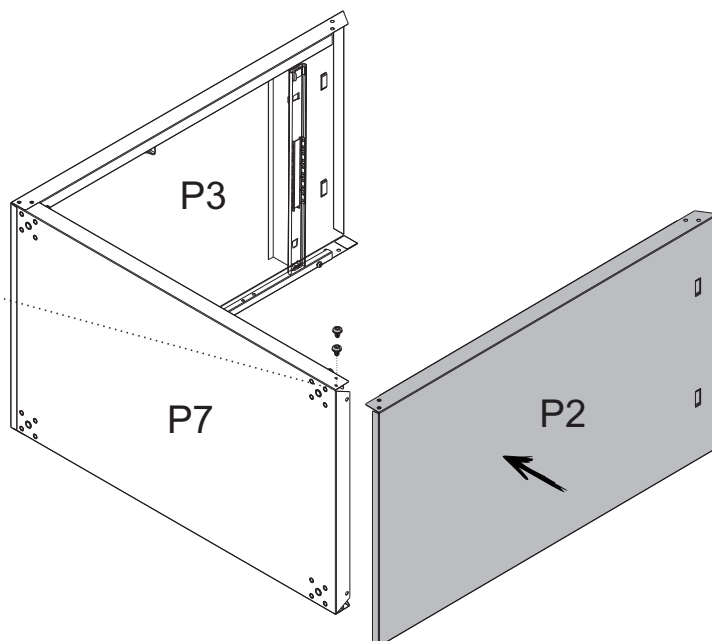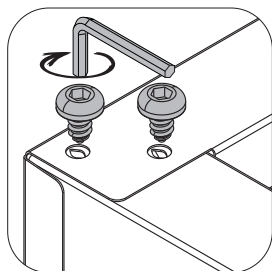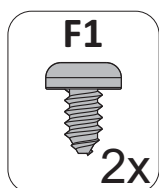



STEP 3

- 1 - Fit part **P5** between part **P2** and **P3**
- 2 - Check that all 4 tabs have been fitted
- 3 - Fit part **P5** to parts **P2** and **P3**, at the frontal side, with **F1**

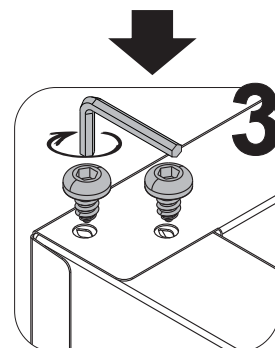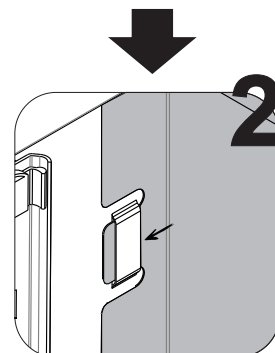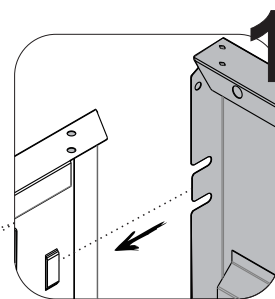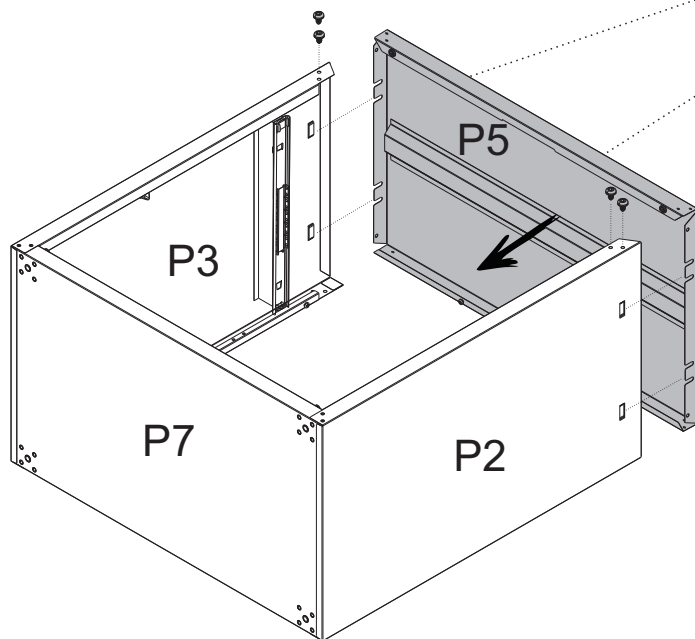
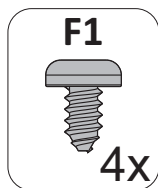


STEP 4

- 1 - Turn the cabinet with the back side upwards


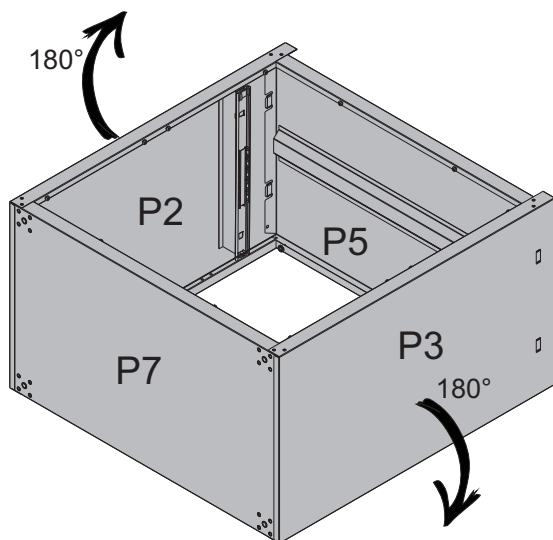
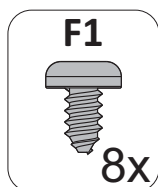


- 2 - Fit parts **P2** and **P3** to parts **P5** and **P7** with **F1**

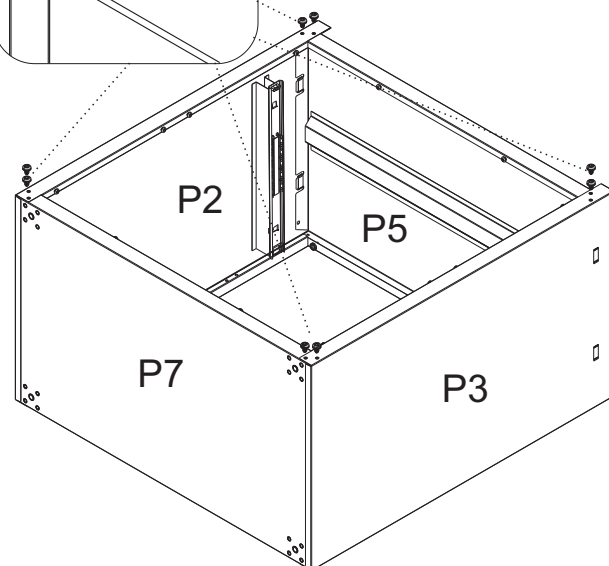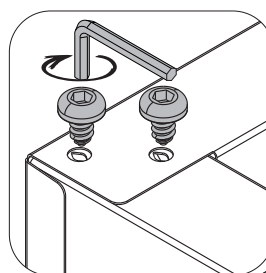

STEP 5




- 1 - Fit part **P10** into parts **P2**, **P3** and **P5**
Check that all fits are supported over the bolts
- 2 - After fitting the parts, screw the bolts until locked

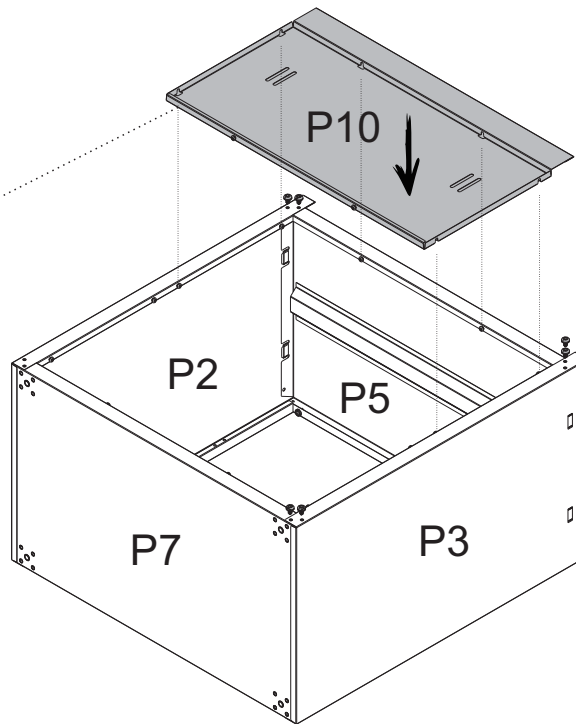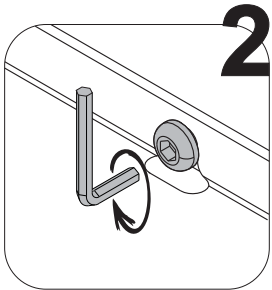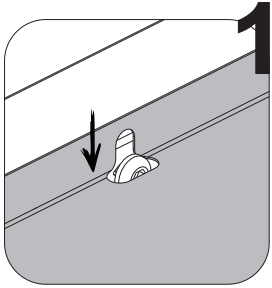

WARNING


“Position part P10 on the P5 side for mounting the cabinet.”

- ## STEP 6
- 1 - Fit part **P9** into parts **P2**, **P3** and **P7**
Check that all fits are supported over the bolts
 - 2 - After fitting the parts, screw the bolts until locked

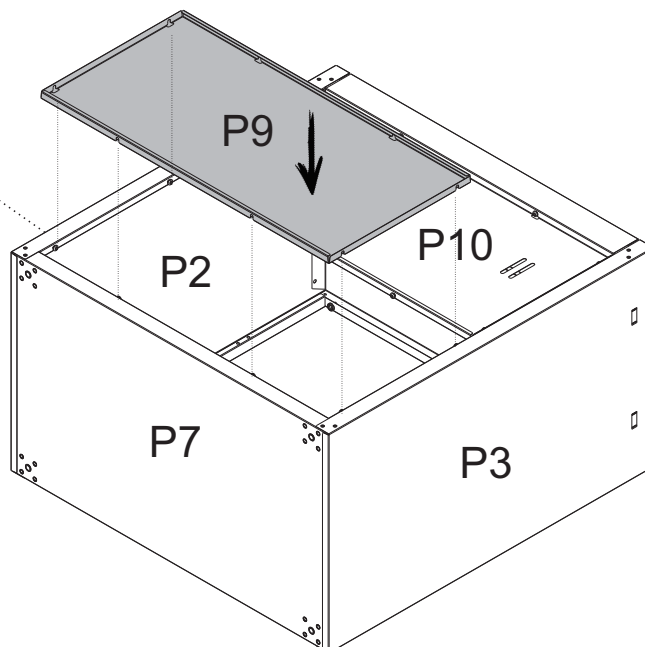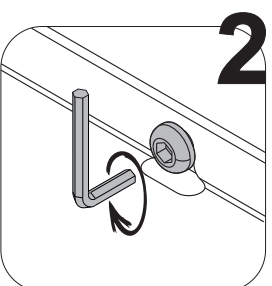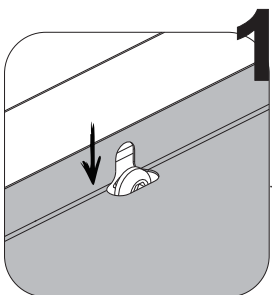


STEP 7

1 - To assembly the cabinet with shoe fit the accessory **F9** in part **P7** as illustrated here below and turn to screw. To level the height or the cabinet, turn the shoe either clockwise or counterclockwise to align it.

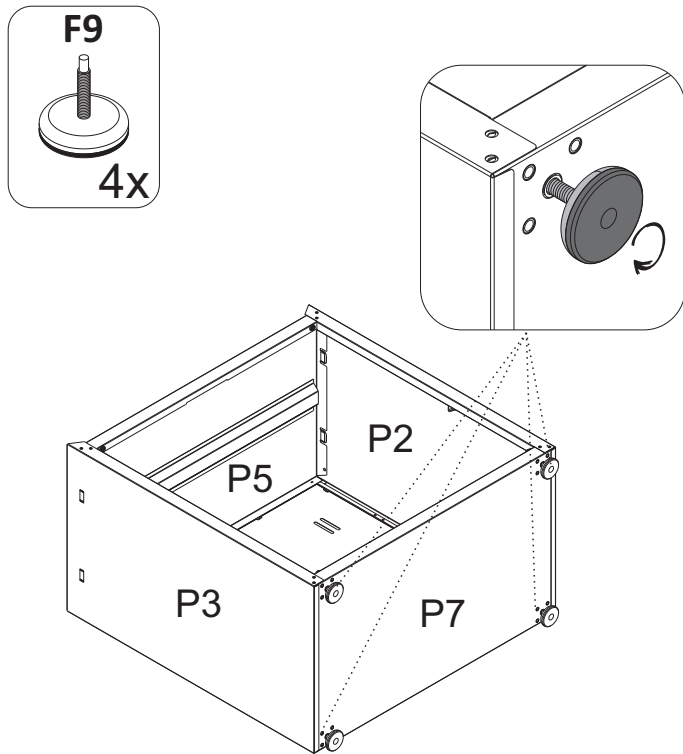

* Only in cabinets without caster


- 2 - To assembly the cabinet with caster, align the **F10** and **F11** to the holes in part **P7** and fix them with **F3**
- 3 - **WARNING:** Casters with lock (**F11**) must be fitted in the frontal side of the cabinet

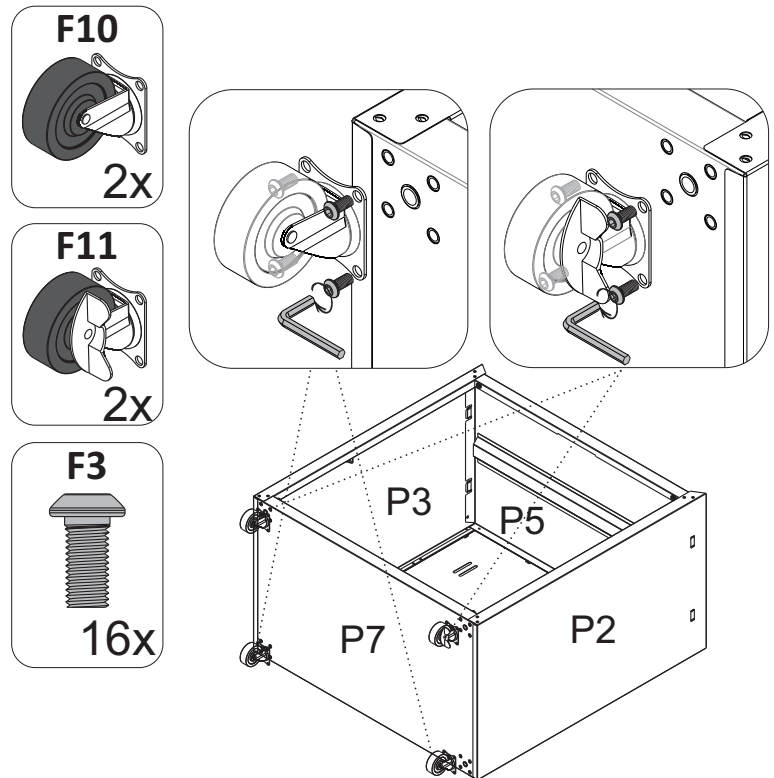

* Only in cabinets with caster




STEP 8

- 1- Turn the cupboard so that it will stand in the position of use
- 2- Fix **F7** to parts **P2** and **P3**, as shown here below

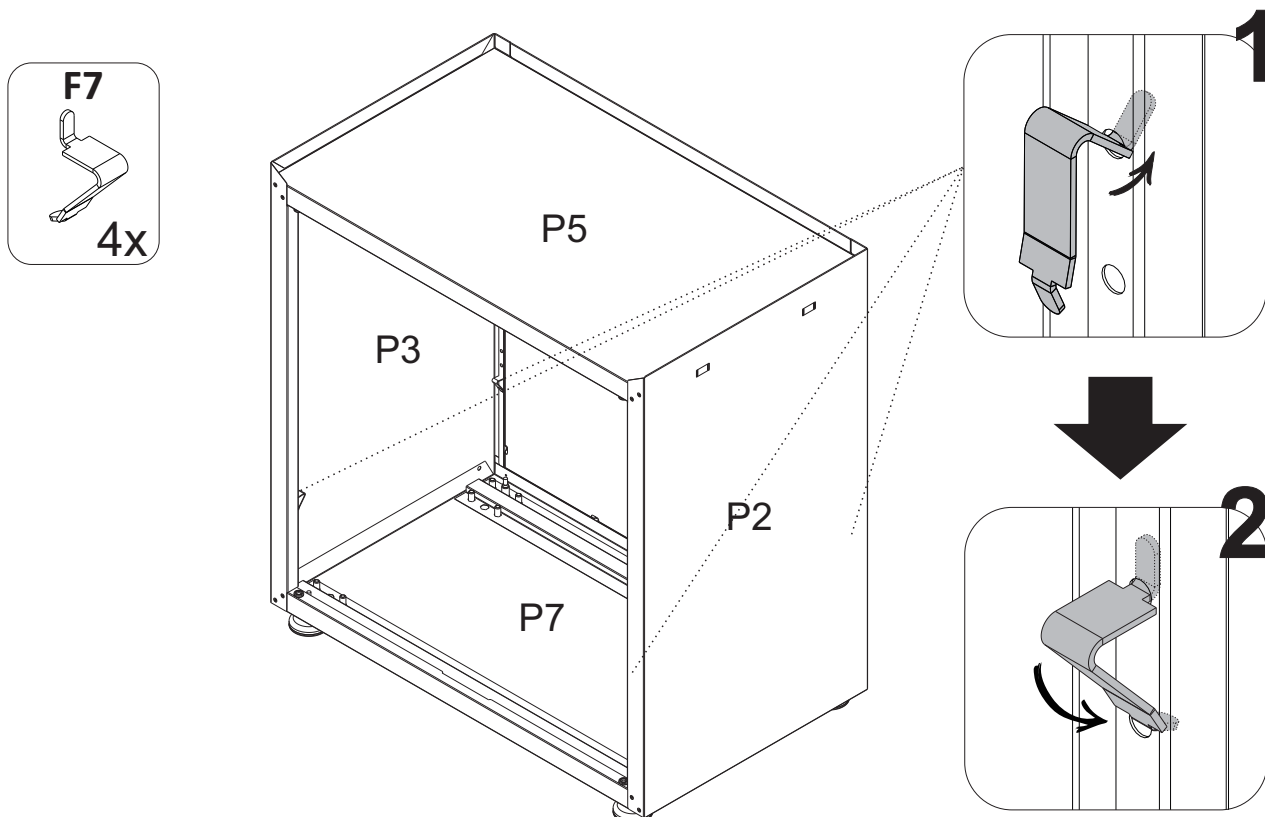





STEP 9

- 1 - Fit the lower part **P19** in diagonal position to insert it inside the cupboard
- 2 - Lean part **P19** in part **P2**, **P3** and place it over the **F7** detailed in the figure here below
- 3 - Lower the other side of part **P19**, leaning it over the left **F7**

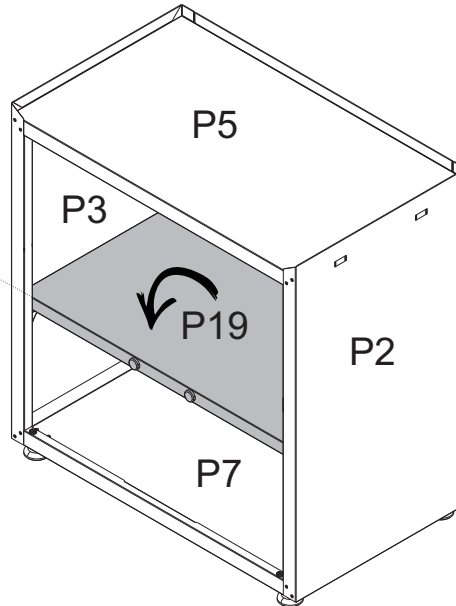
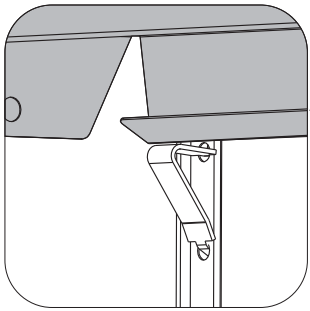
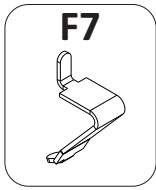


STEP 10

- 1 - Insert part **P17** inside the cabinet, in diagonal position.
Fit part **P17** in cut-offs of parts **P2** and **P3**, as detailed here below
- 3 - Fix part **P17** in parts **P2** and **P3**, with **F1**

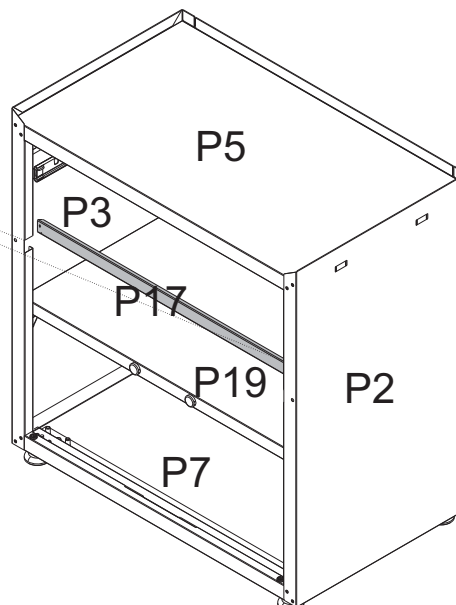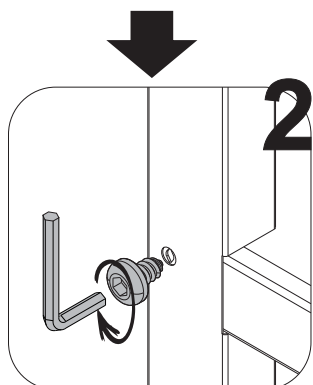
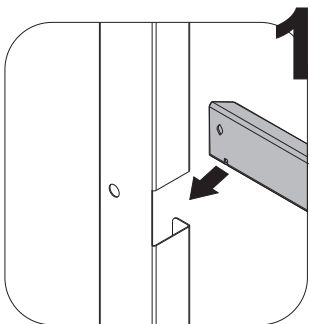
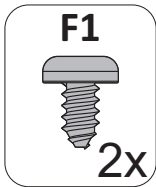


- STEP 11**
- 1 - To assembly the doors, fit door **P26** lower hinge bolt inside the bushing fixed in part **P7**
 - 2 - Then, pull down the pin of door **P26** upper hinge; align the door and release the pin to fit the bushing fixed in part **P17**
 - 3 - Repeat the step for part **P27**

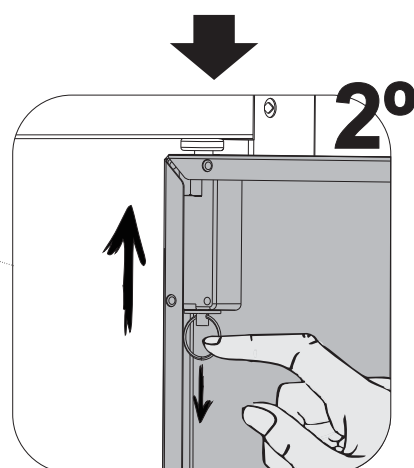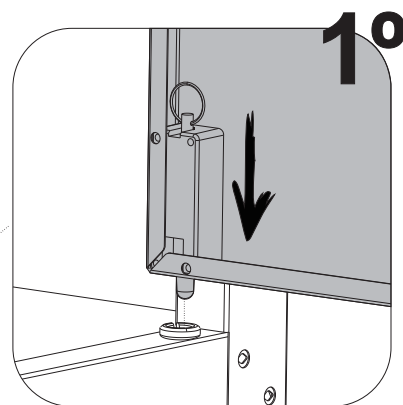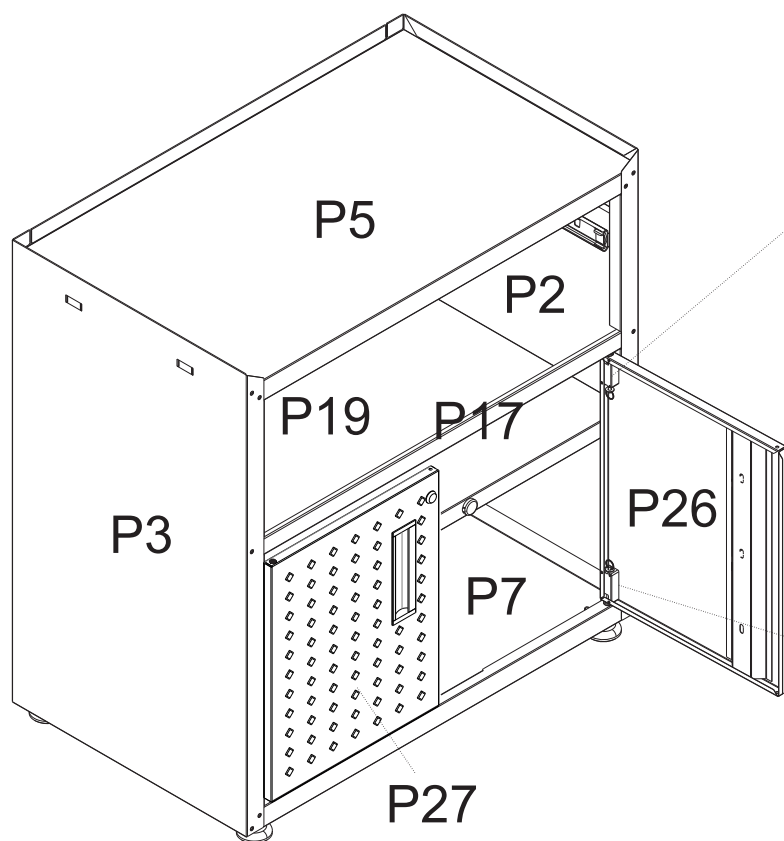

STEP 12




- 1 - Fit part **P15** to part **P28**
- 2 - Fit them with **F1**

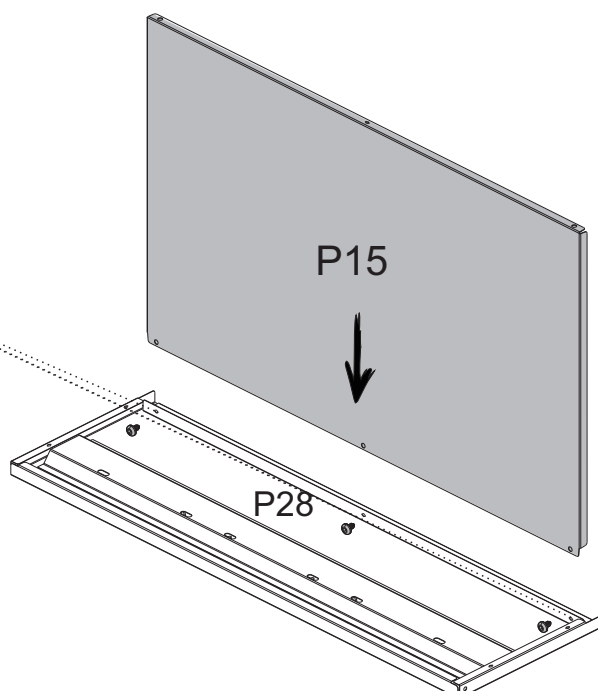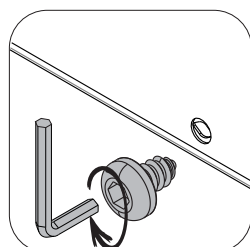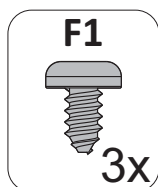

STEP 13

1 - Align parts **P12** and **P13** to part **P15**,
until it leans against part **P28**





2 - Fit them with **F1**

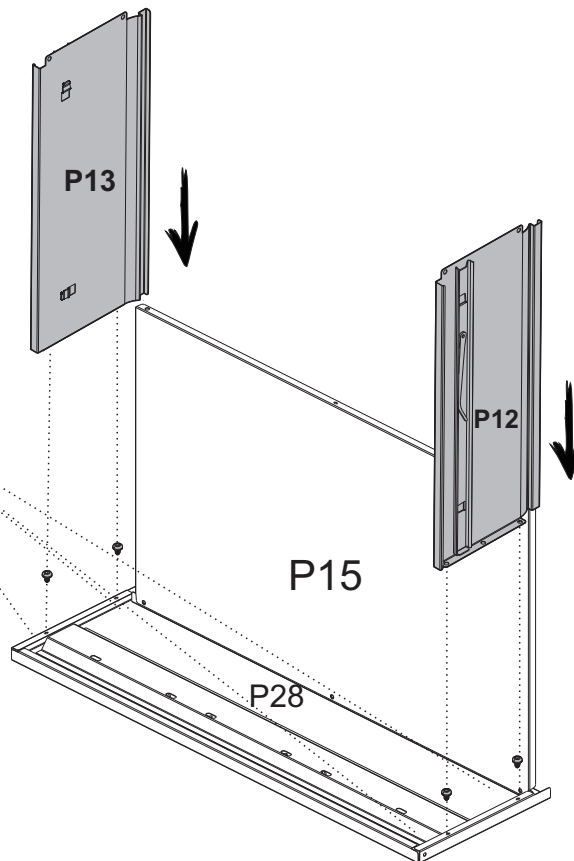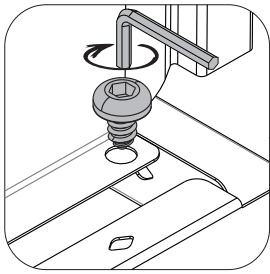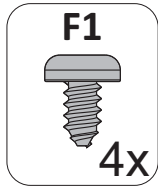

STEP 14


1 - Insert part **P14** over part **P15** and between
parts **P12** and **P13**

2 - Then, fix part **P14** to parts **P12**, **P13** and **P15**,
with **F1**

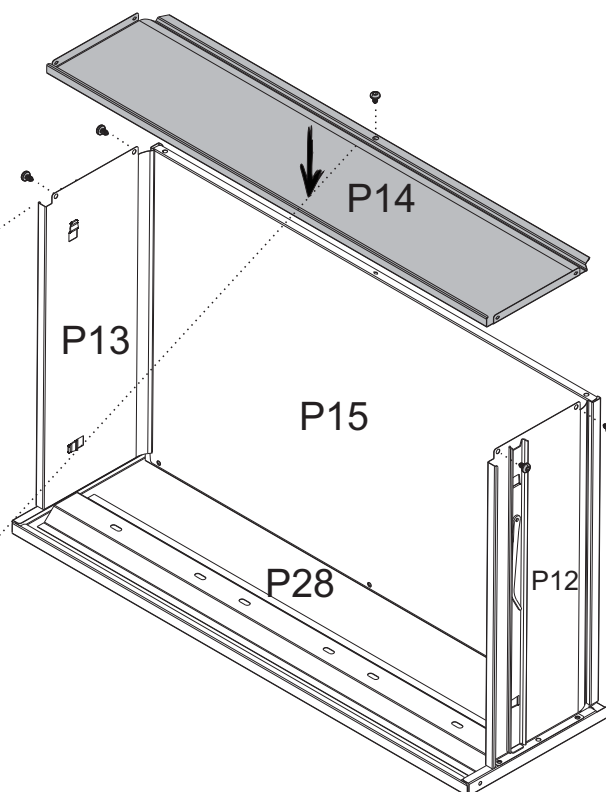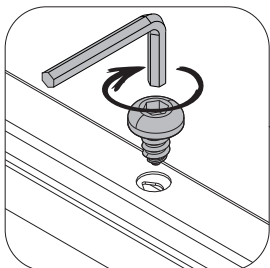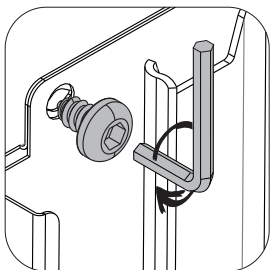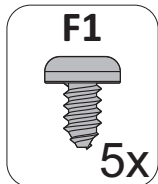

STEP 14

- 1 - Fit the drawers – already assembled – between parts **P2** and **P3**, through the slidings
- 2 - Check that slidings of both sides are properly fitted. Move the drawer, opening and closing it, testing

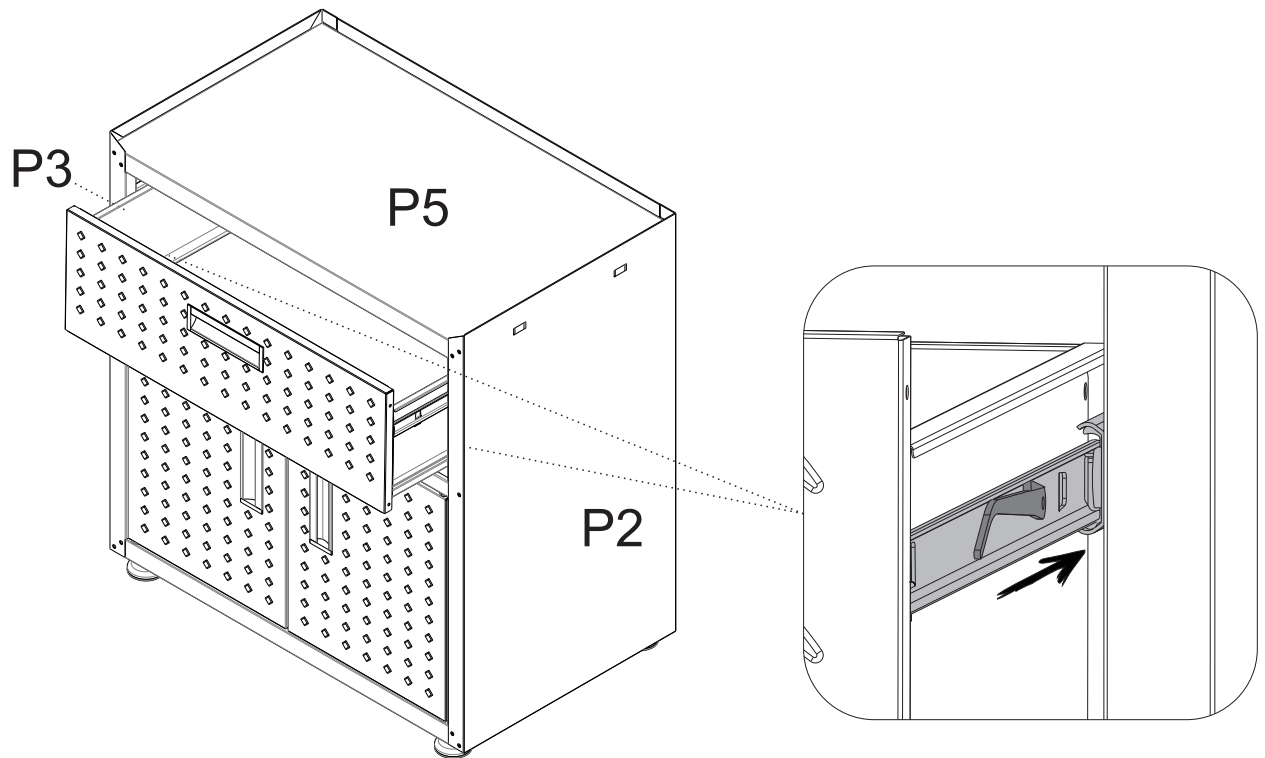

STEP 15

- 1 -Insert product log

