
ALTAIR

INSTALLATION INSTRUCTIONS

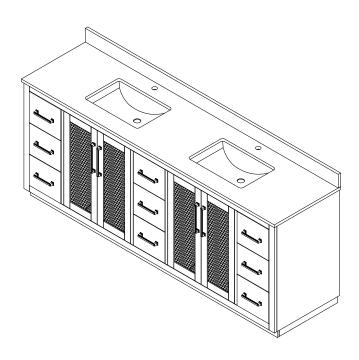

Model: 561084

ARE YOU INSTALLING THIS PRODUCT?




IMPORTANT-It is the responsibility of the installer to make any adjustments to doors/drawers after installation if required.

There may have been some movement in transportation and installation which causes doors/drawers to become unaligned.


PLEASE RETURN TO HOME OWNER- IMPORTANT CARE & WARRANTY INFORMATION INSIDE.

Crate Storage and Care


• Keep the countertop and sink in its box until installation

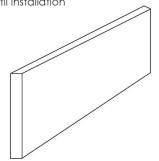

Do not stack anything on top of box

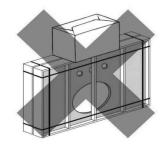

Store Crate vertically in safe location

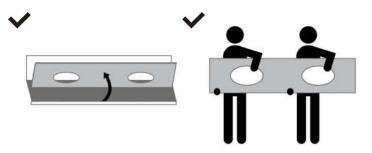



NEVER LIFT THE VANITY TOP FLAT



NEVER CARRY THE VANITY TOP FLAT

Tools and Materials



Marker

Measure

Tape



Screwdriver





Level



Neutral Cure Silicone Sealant




Damp


Cloth

Wood Shims


Main Body Parts

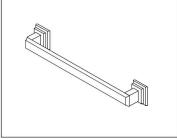


Hardware(13)

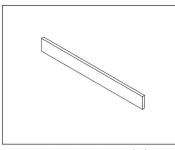


Backsplash(1)

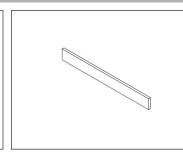

Sidesplash(0)

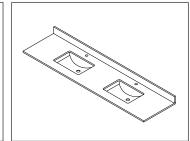


Top&Basin(1)

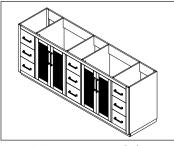


Main cabinet(1)


Cabinet Installation

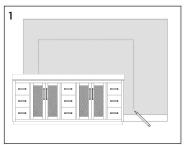


Determine location of where you would like to install your vanity.

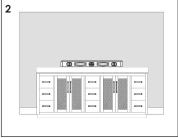


Place vanity in the installation location. Check that vanity cabinet is level.

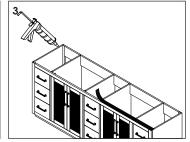


Apply a bead of adhesive silicone onto each edge of cabinet top. You can leave the EVA buffer strip or tear it off, before gluing the top.

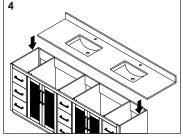

Place ALTAIR vanity top onto the cabinet, making sure vanity is seated properly.

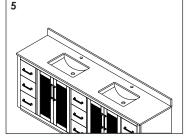



Do not use the vanity for at least 24 hours, in order to allow the glue to cure fully.

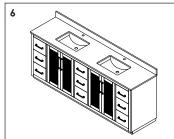



Disassemble drawer handles inside and install on drawer panel (Please disregard if the handles are installed properly).


Slider/Drawer Adjustment

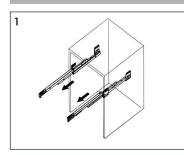

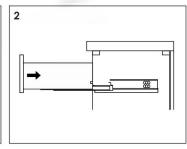


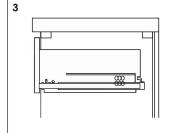


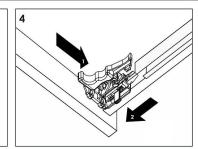


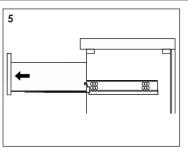

Hinge/Door Adjustment

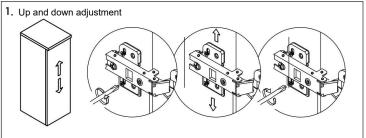

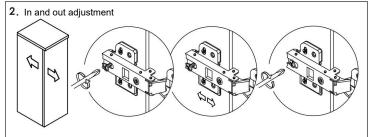

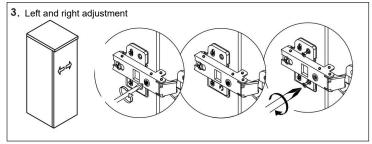

Dimensions

