


- 1 Align loop hook position, drill 2 vertical holes 0.71" apart, then install 2 screws included leaving 0.125" projection from wall.

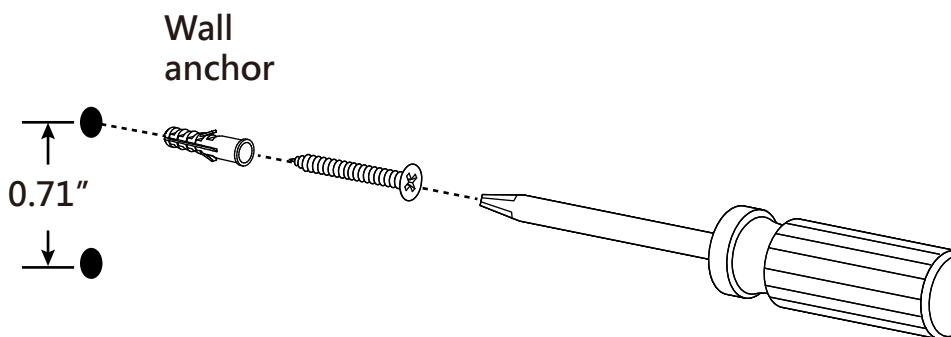

- 2 Attach loop hook onto the 2 screws installed. Adjust projection of each screw as needed for secure fit.

