


Shoe Cabinet

Assembly Instructions - Please keep for future reference

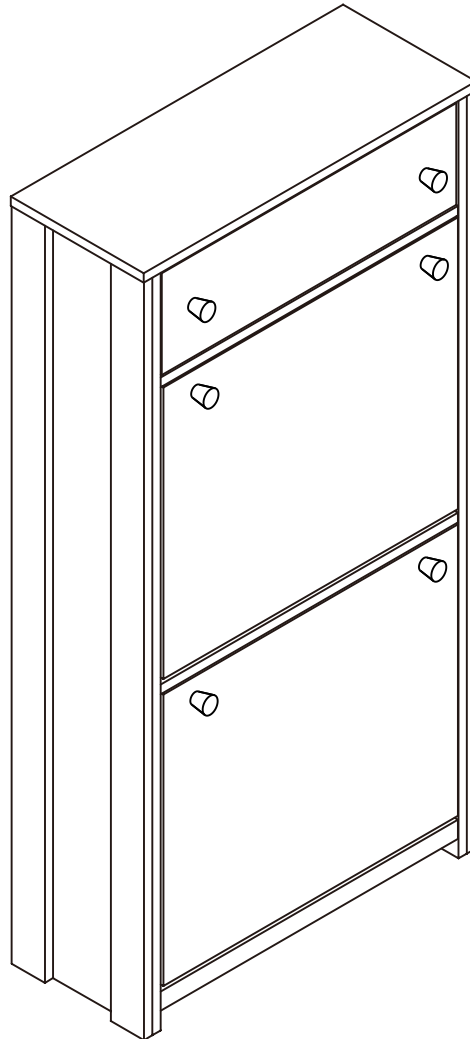

Dimensions

Width-23.62inch

Depth-9.44inch

Height-47.24inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
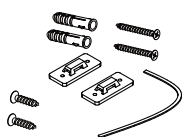
<p>(A)</p>  <p>Cam Bolt x 30+2</p>	<p>(B)</p>  <p>Cam Lock x 30+2</p>	<p>(C)</p>  <p>8*30mm Dowel x 4+1</p>	<p>(D)</p>  <p>Shake hands x 6+1</p>
<p>(E)</p>  <p>200mm Drawer slide x 1</p>	<p>(F)</p>  <p>3.5*14mm Screw x 32+2</p>	<p>(G)</p>  <p>3.5*40mm Screw x 4+1</p>	<p>(H)</p>  <p>4*11mm Screw x 4+1</p>
<p>(J)</p>  <p>Tipping shoe rack x 2</p>	<p>(K)</p>  <p>Shoe rack stopper x 4</p>	<p>(L)</p>  <p>Shoe frame outer pivot x 4</p>	<p>(M)</p>  <p>Shoe rack inner pivot x 4</p>
<p>(N)</p>  <p>Backboard buckle x 4+1</p>	<p>(P)</p>  <p>Anti fall component x 2</p>	<p>(Q)</p>  <p>Perfect Fit x 30</p>	<p>(R)</p>  <p>Screwdriver x 1</p>


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

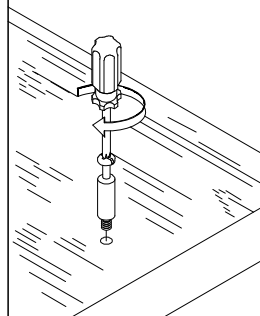

Step 2

Push the male camlock into the entry hole.

2

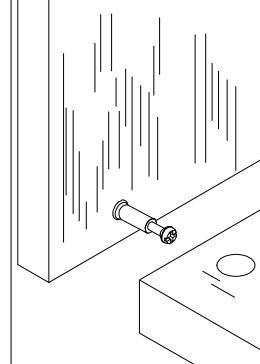


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

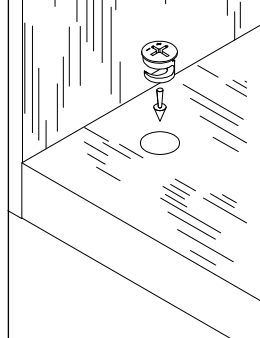


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

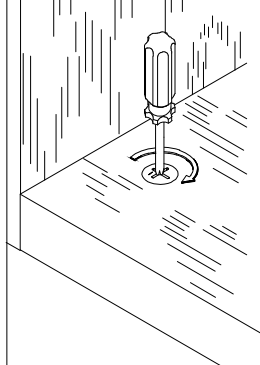


Assembly Instructions

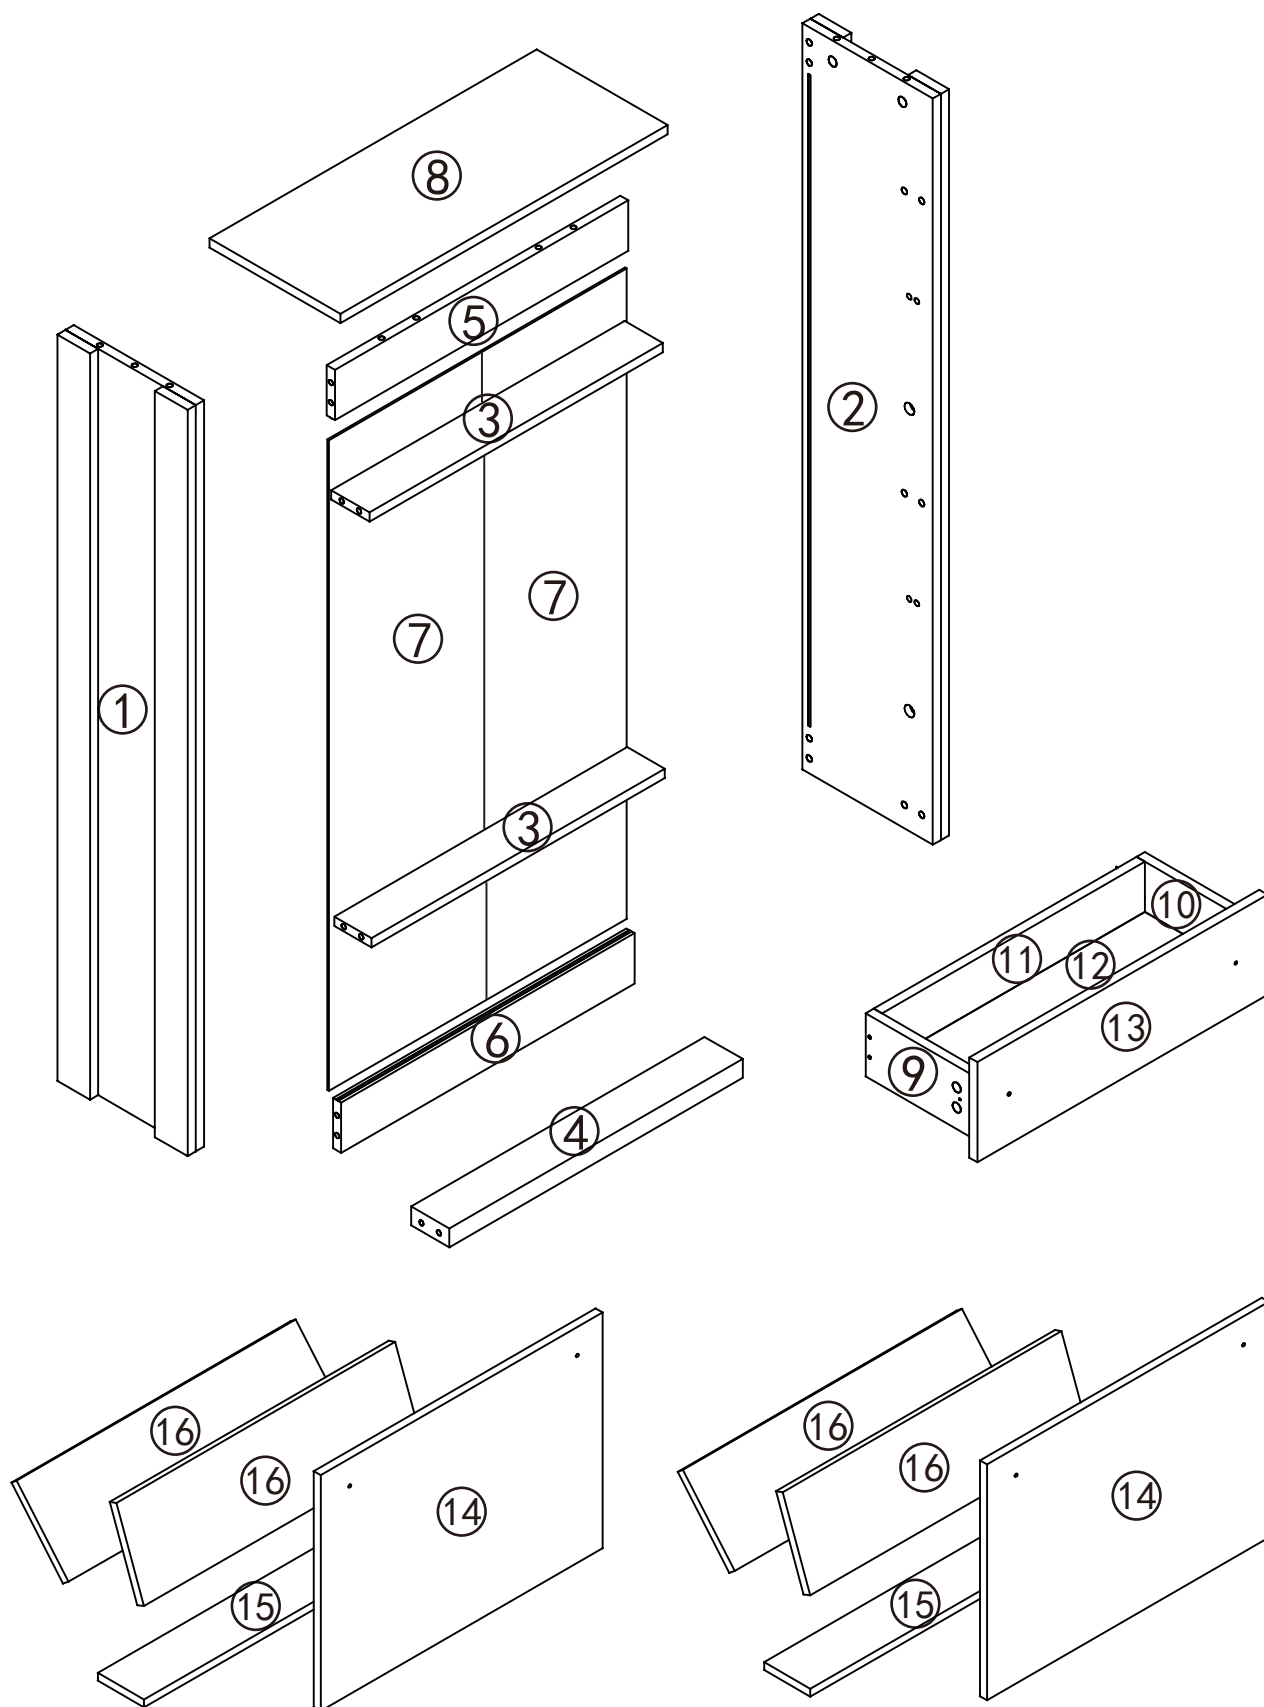

Assembly Instructions

Step 1

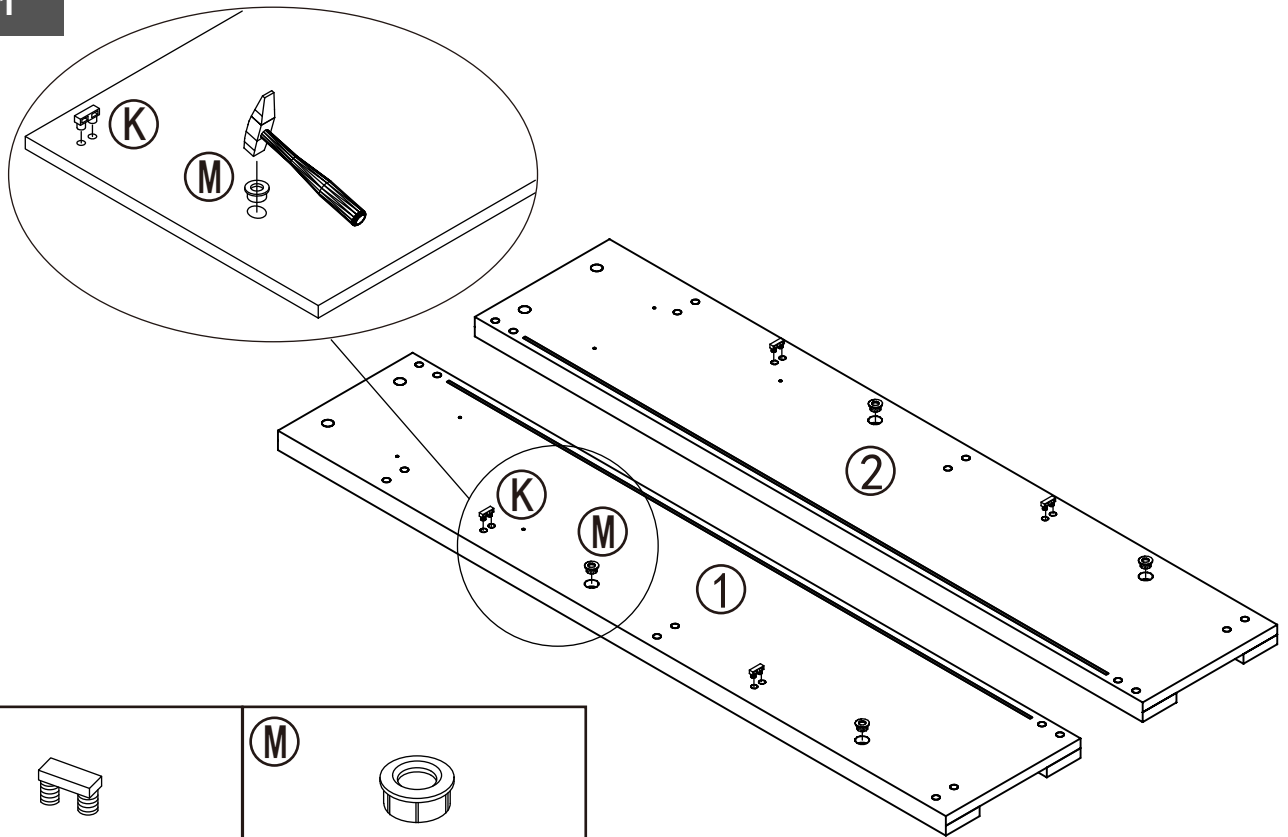

(K)




Shoe rack stopper x 4

(M)




Shoe rack inner pivot x 4

Step 2

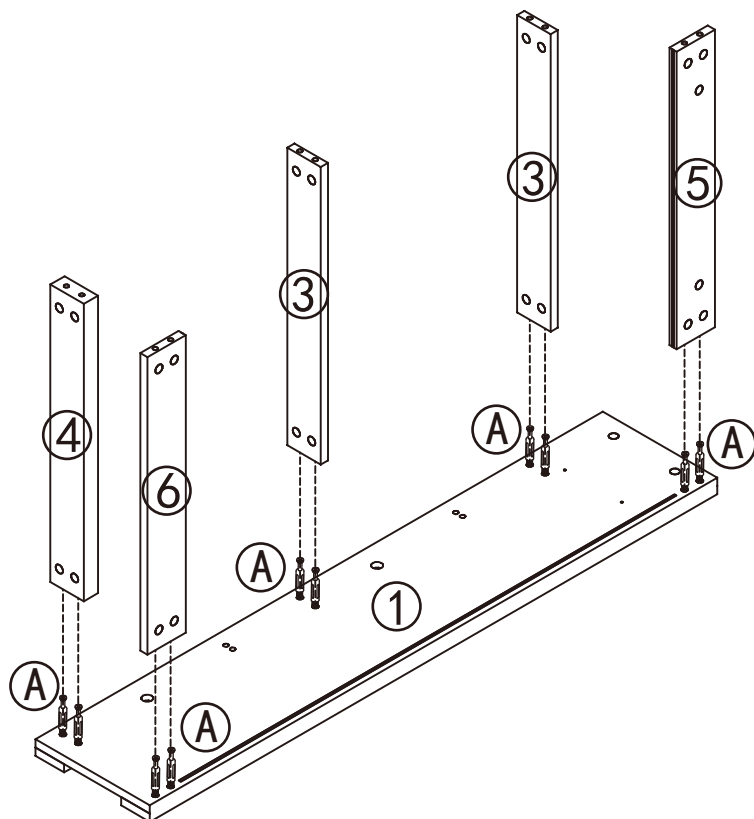


(A)



Cam Bolt x 10

Assembly Instructions

Step 3

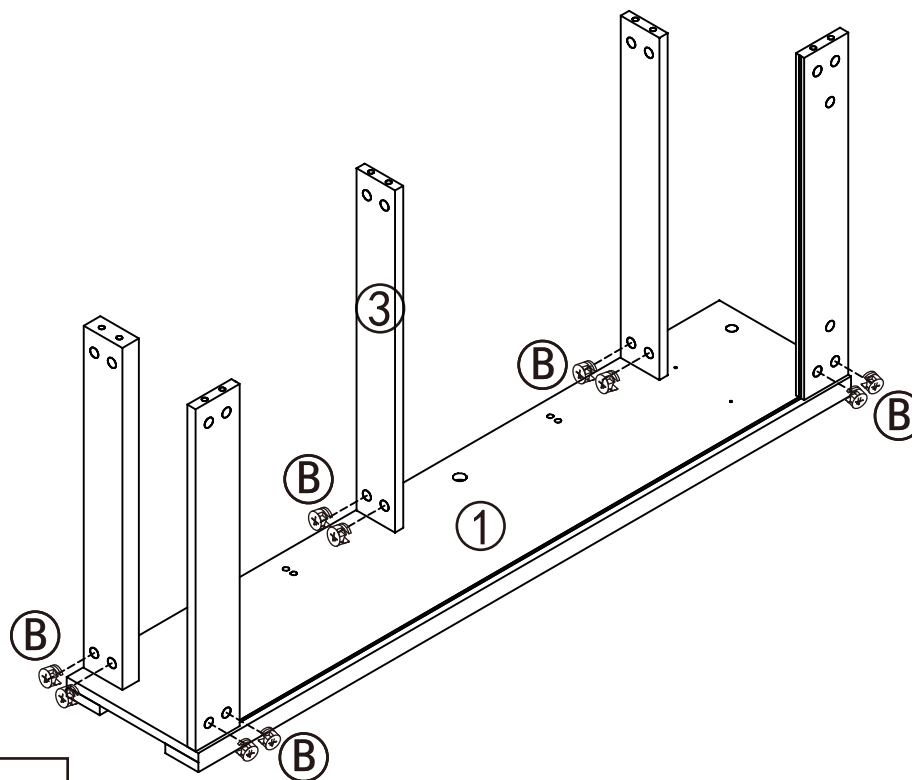


(B)




Cam Lock x 10

Step 4

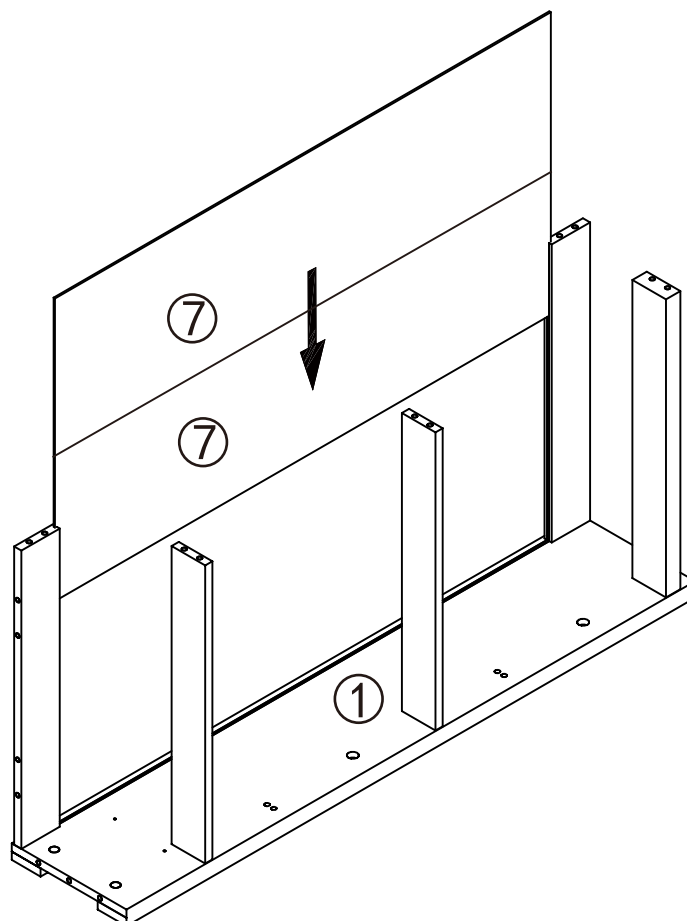

Assembly Instructions

Step 5

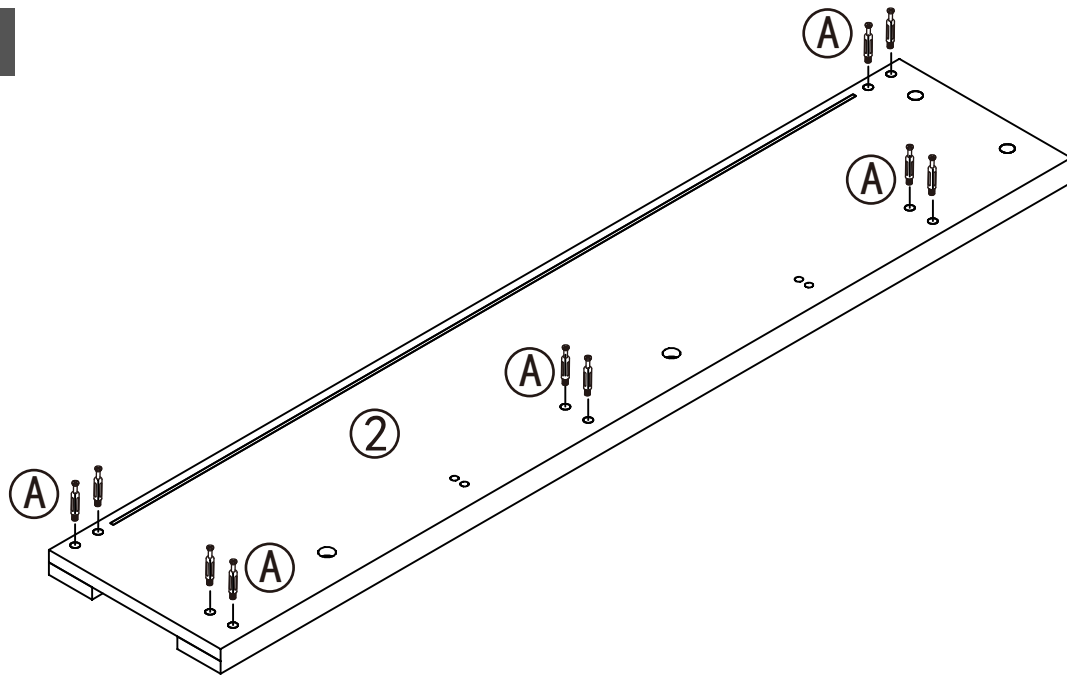


(A)




Cam Bolt x 10

Step 6

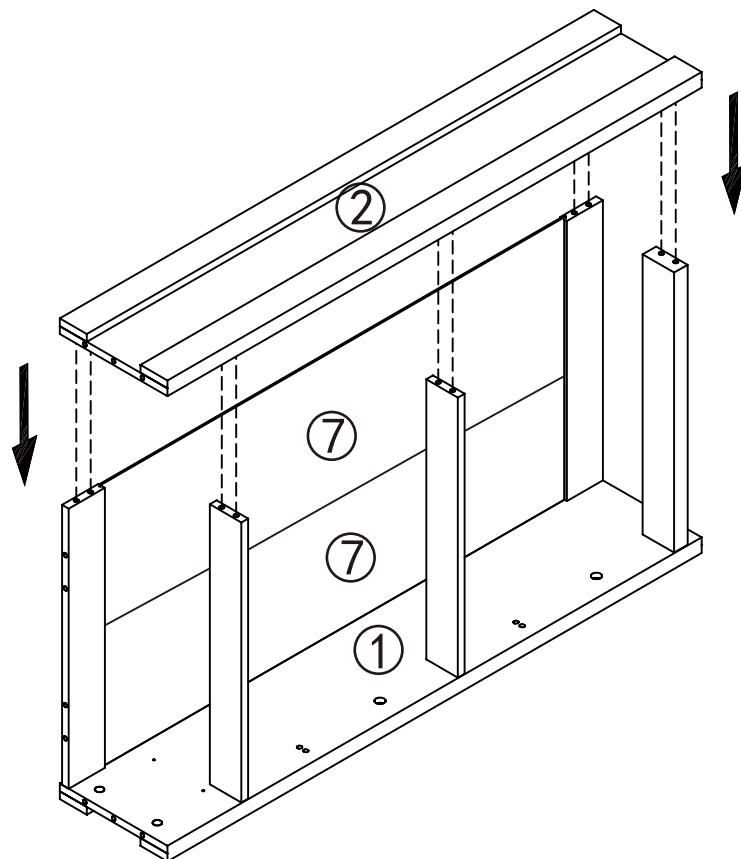

Assembly Instructions

Step 7

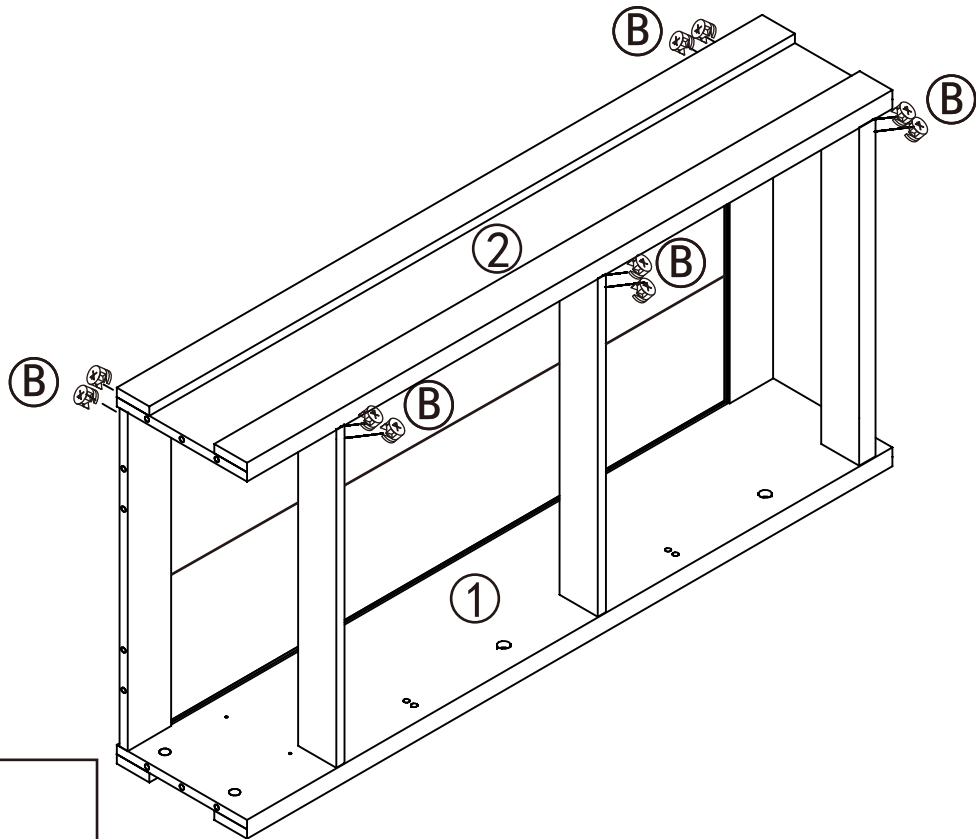


(B)




Cam Lock x 10

Step 8

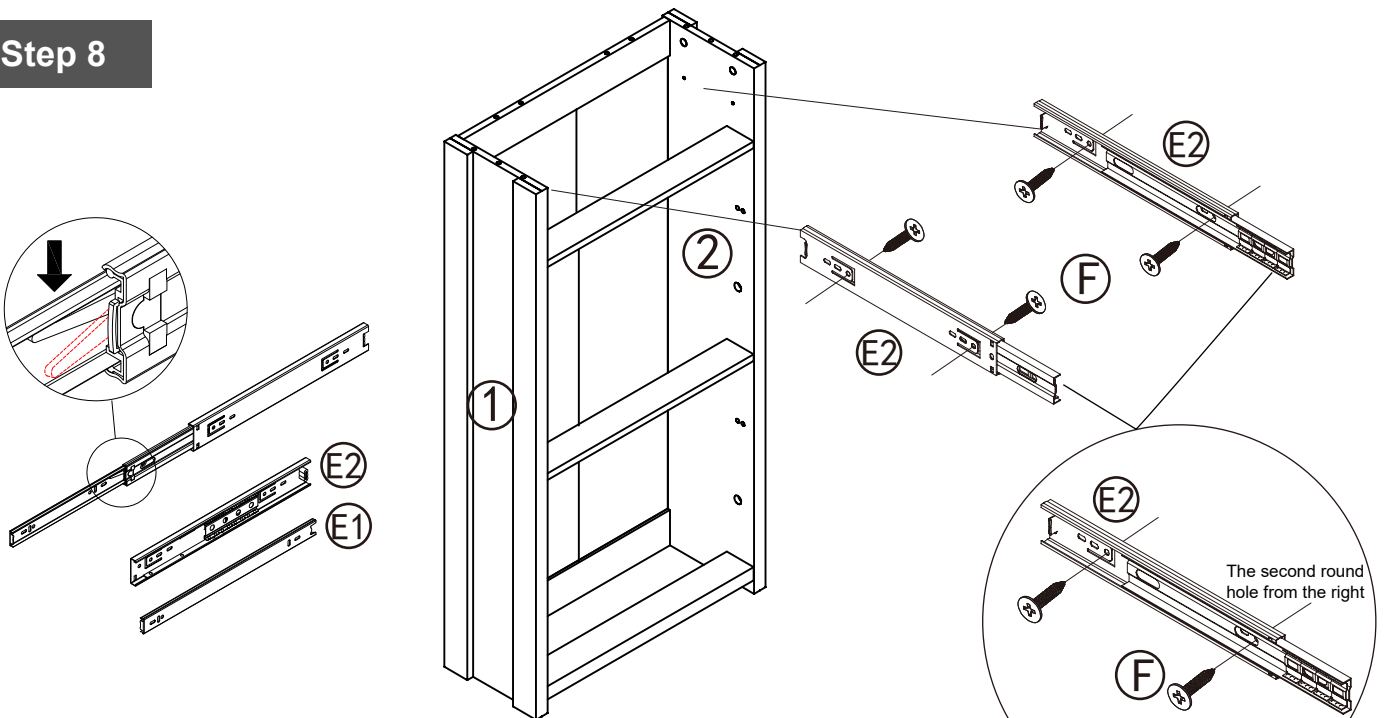

(E2)



200mm Drawer slide x 2


(F)




3.5*14mm Screw x 4

Assembly Instructions

Step 9

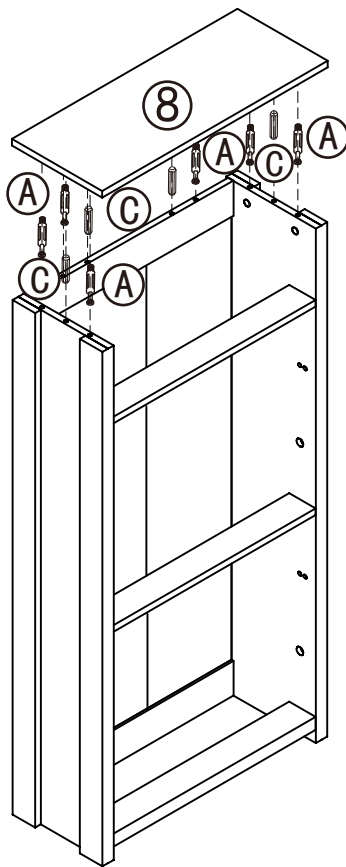


(C)




8*30mm Dowel x 4

(A)



Cam Bolt x 6

Step 10

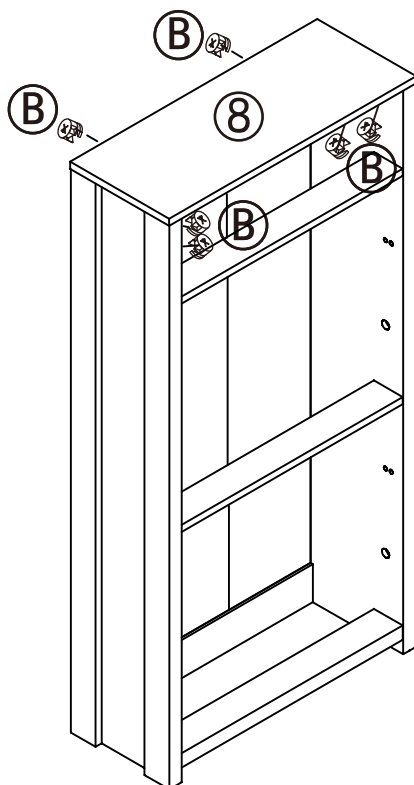


(B)



Cam Lock x 6

Assembly Instructions

Step 11

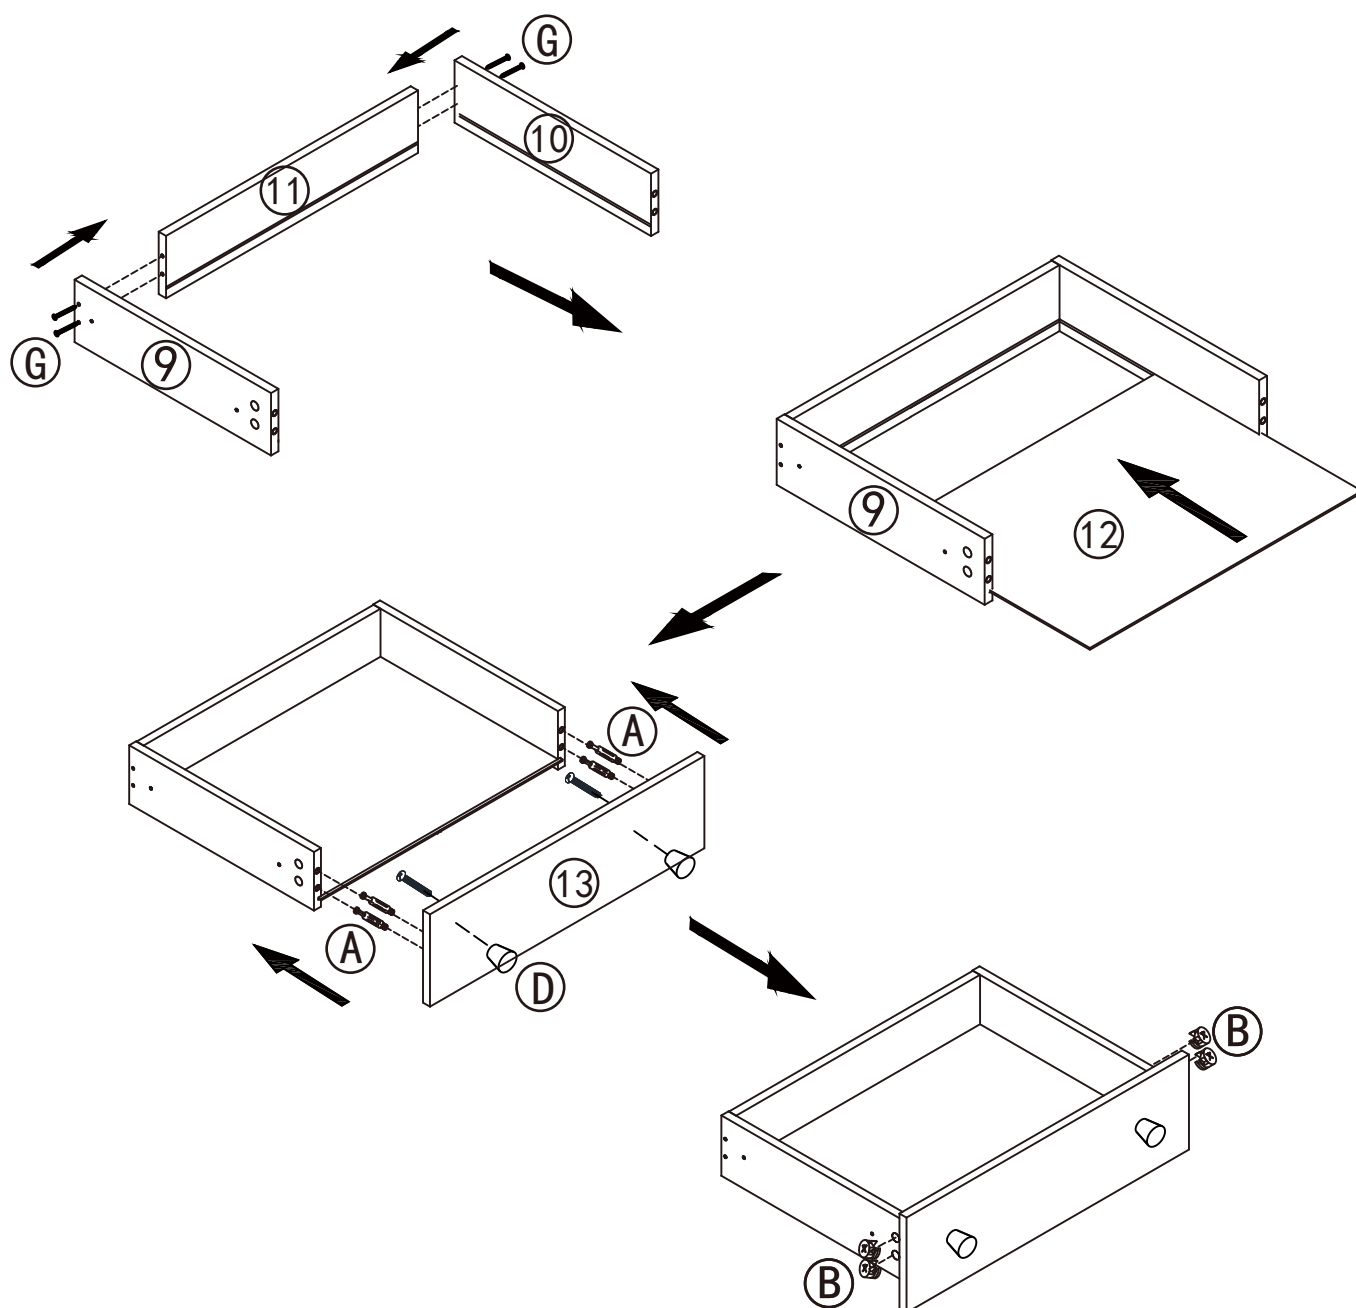


(G)



3.5*40mm Screw x 4

(A)



Cam Bolt x 4

(B)



Cam Lock x 4


(D)





Shake hands x 2


Assembly Instructions

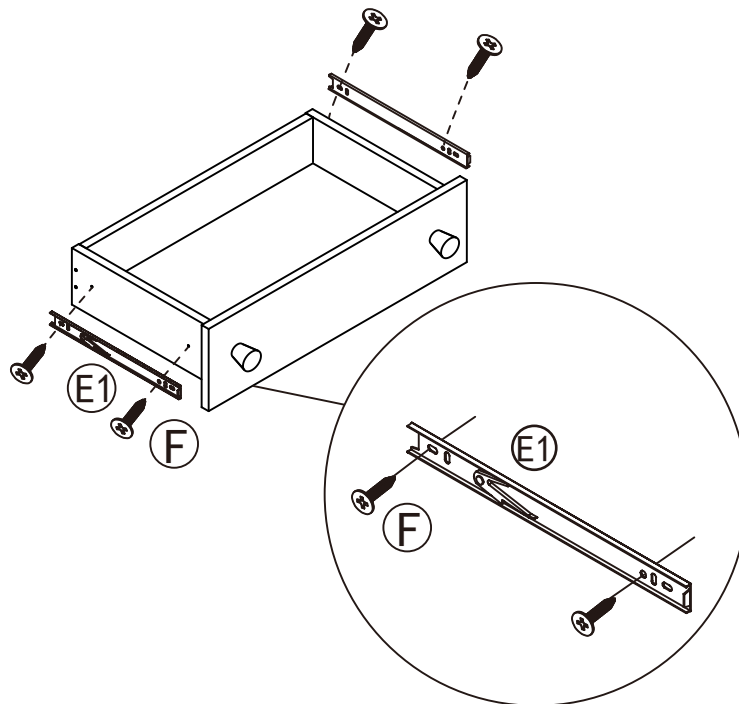


Step 12



<p>(E1)</p>  <p>200mm Drawer slide x 2</p>	<p>(F)</p>  <p>3.5*14mm Screw x 4</p>
---	--

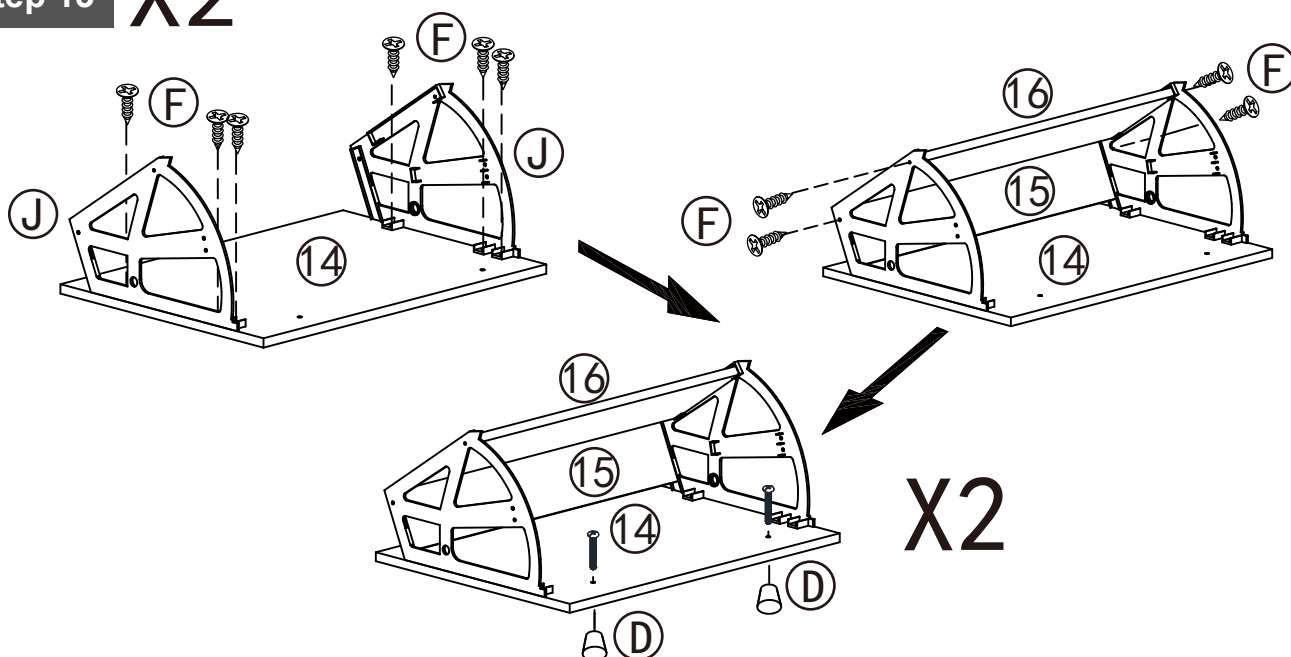
Step 13 X2



<p>(D)</p>  <p>Shake hands x 4</p>	<p>(F)</p>  <p>3.5*14mm Screw x 20</p>	<p>(J)</p>  <p>Tipping shoe rack x 2</p>
---	---	--

Assembly Instructions

Step 14

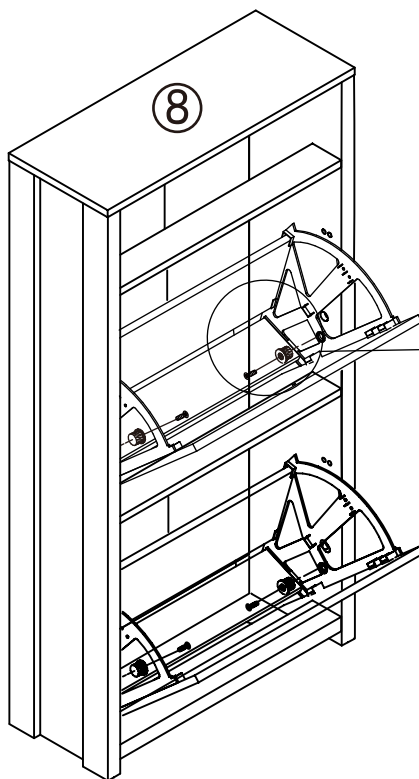

(L)




Shoe frame outer pivot x 4

(H)



4*11mm Screw x 4

Step 15

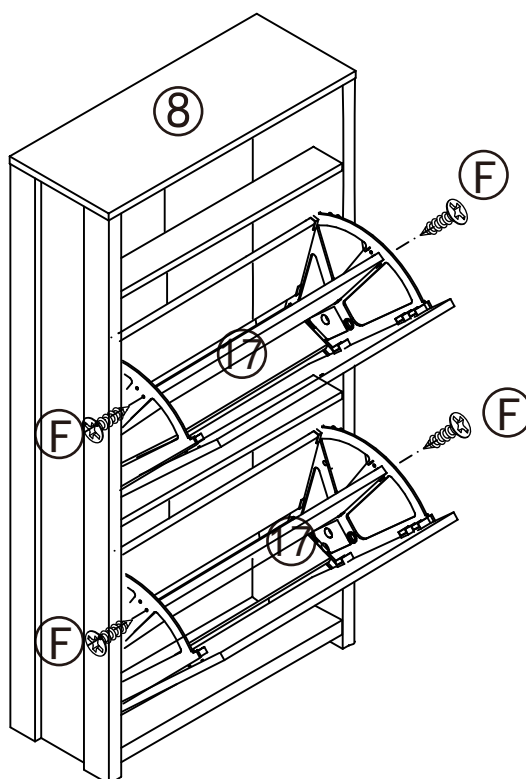


(F)





3.5*14mm Screw x 4

Assembly Instructions

Step 16


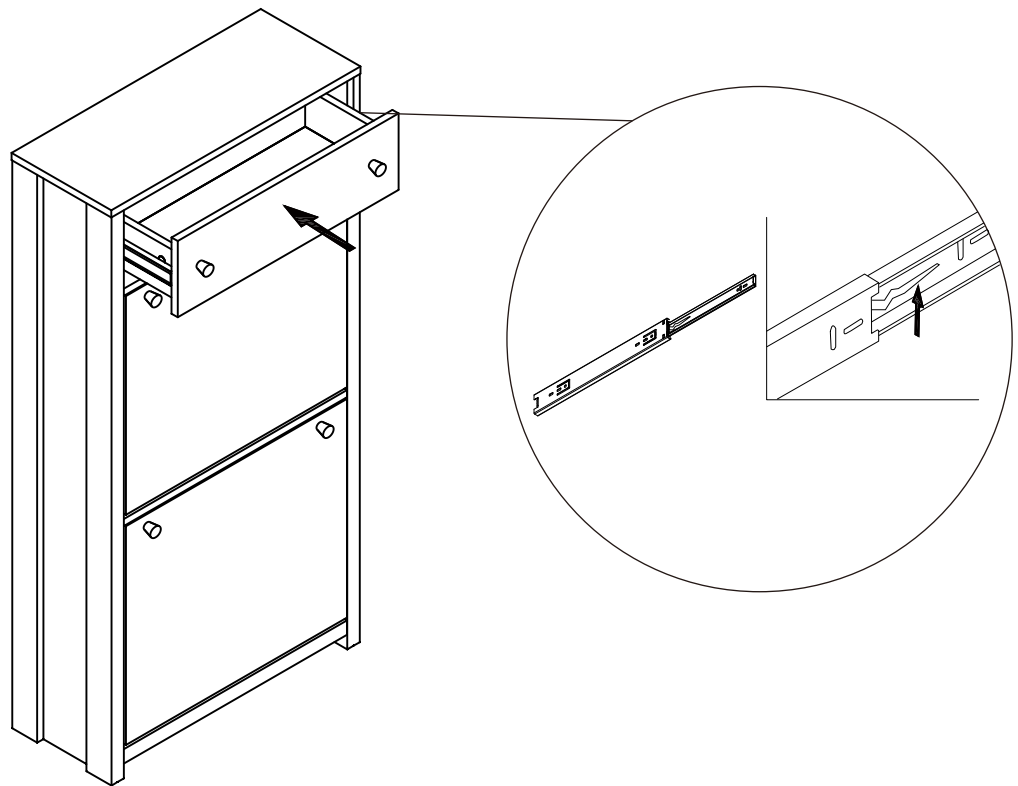


Step 17

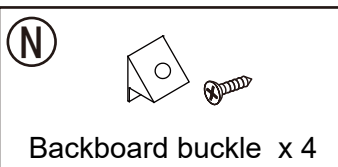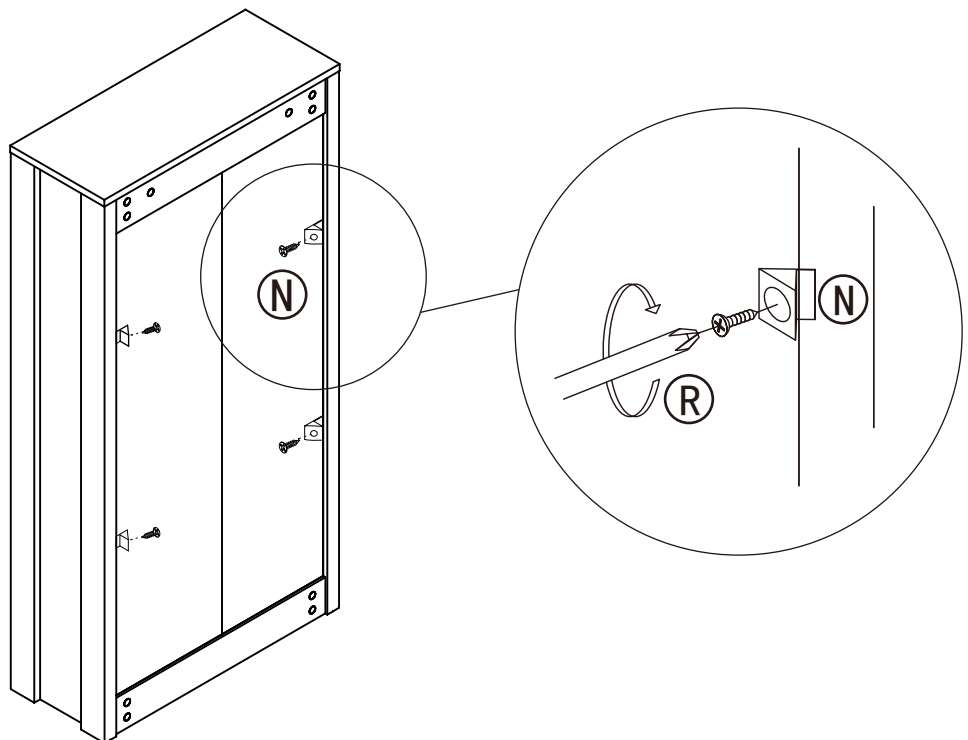




Assembly Instructions

Step 18

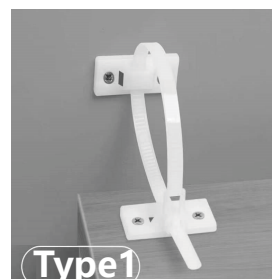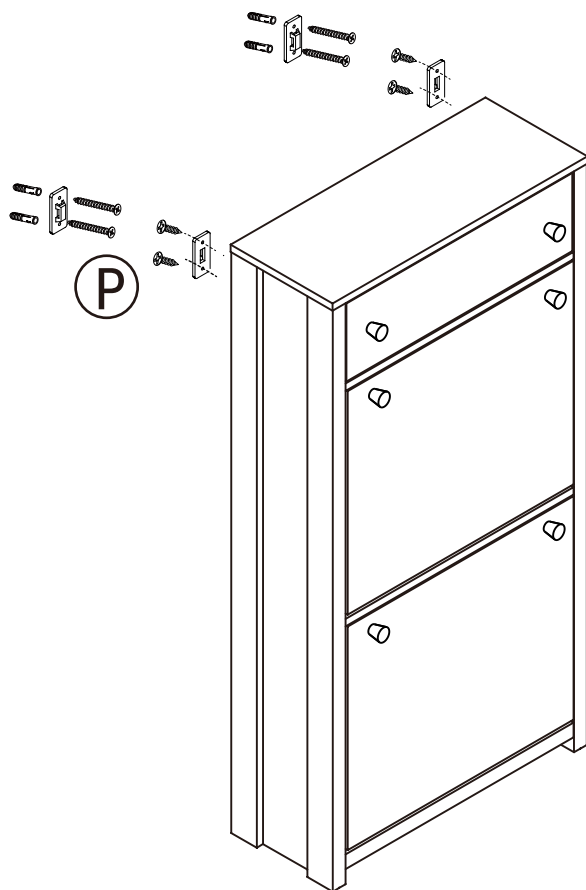

This is anti-dumping belt that fix the product to the wall and it can be used or not follow your needs.

If it is a solid wall, please use expansion and self-tapping screws, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws.

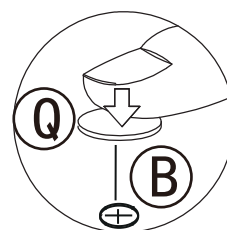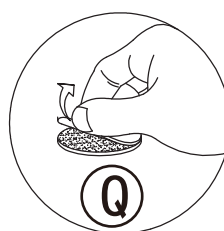

Anti fall component x 2



Perfect Fit x 30

Assembly Instructions

Step 19

