


ASSEMBLY INSTRUCTIONS


ITEM NO.WF315637

If you have any questions, please
feel free to contact us.
Email: lowesteam@aminalife.com

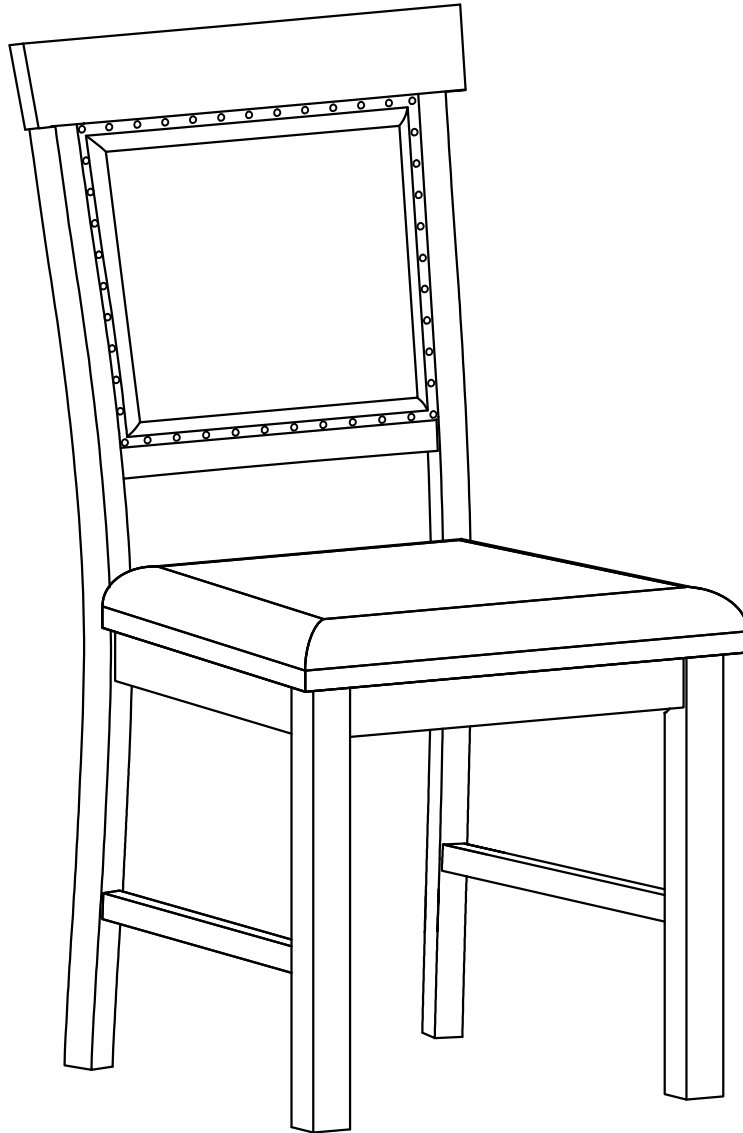



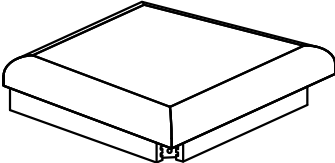





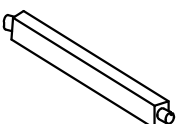

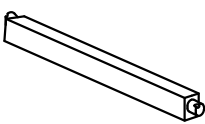


IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

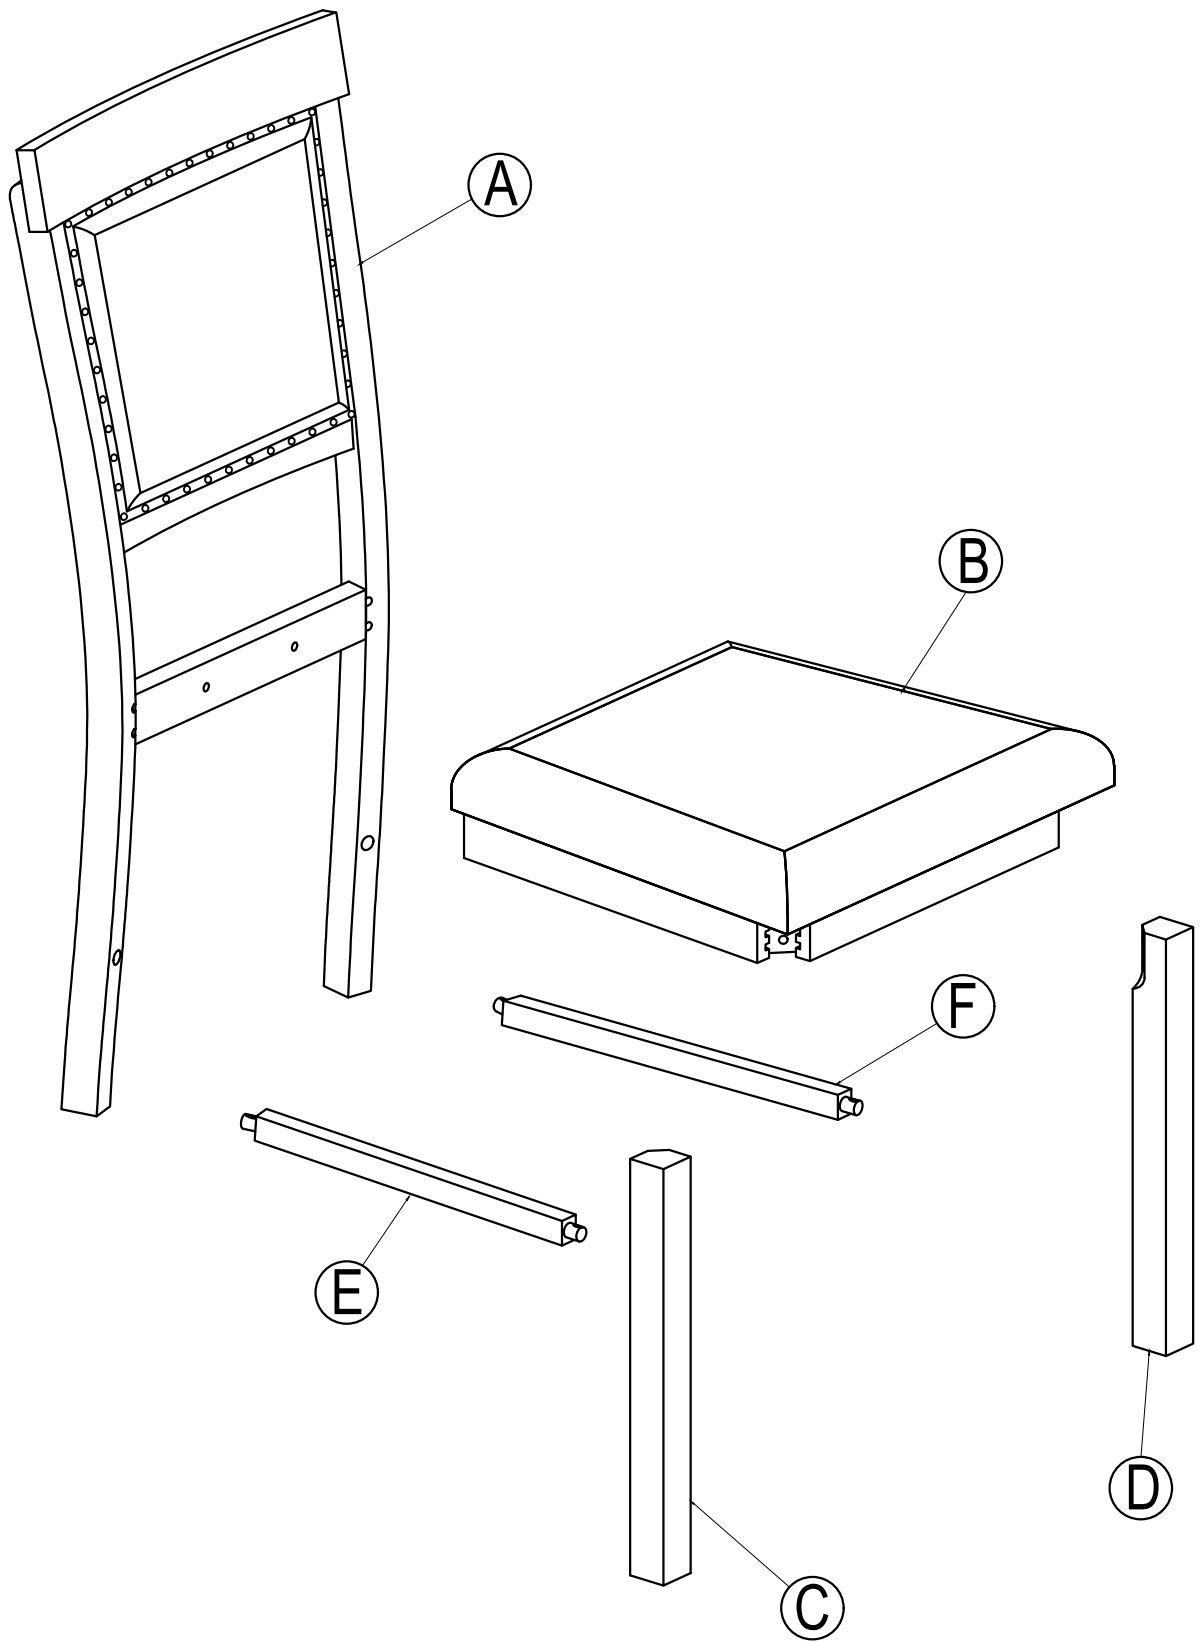


Part List

Hardware List

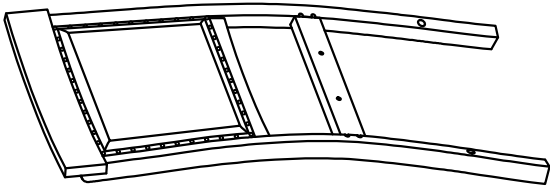
<div data-bbox="65 293 134 360">A</div> 	<div data-bbox="804 293 873 360">1</div>  <p>Ø 1/4" x 40mm BOLT (8 pcs)</p>
<div data-bbox="65 629 134 696">B</div> 	<div data-bbox="804 595 873 663">2</div>  <p>Ø 1/4" x 55mm BOLT (16 pcs)</p>
<div data-bbox="65 954 134 1021">C</div> 	<div data-bbox="804 864 873 931">3</div>  <p>Ø 1/4" x 75mm BOLT (16 pcs)</p>
<div data-bbox="65 1267 134 1335">D</div> 	<div data-bbox="804 1133 873 1200">4</div>  <p>Ø5/16" x 13mm FLAT WASHER (40 pcs)</p>
<div data-bbox="65 1581 134 1648">E</div> 	<div data-bbox="804 1402 873 1469">5</div>  <p>Ø5/16" x 19mm LOCK WASHER (40 pcs)</p>
<div data-bbox="65 1895 134 1962">F</div> 	<div data-bbox="804 1671 873 1738">6</div>  <p>4mm ALLEN KEY (1 pc)</p> <div data-bbox="804 1939 873 2007">7</div>  <p>Ø4 x 38mm WOOD SCREWS (16 pcs)</p>

STEP 1:

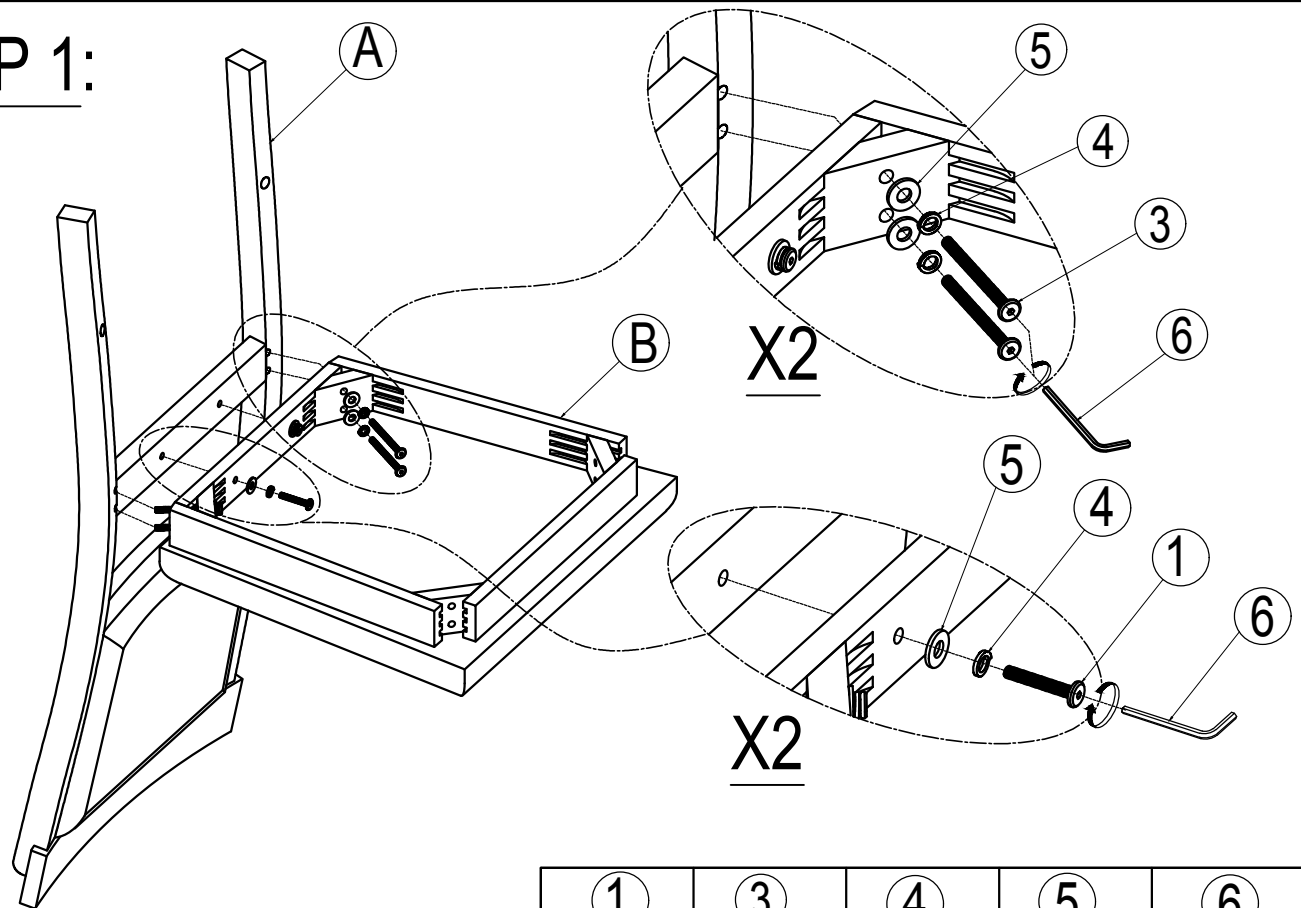


①	③	④	⑤	⑥
2 pcs	4 pcs	6 pcs	6 pcs	1 pcs



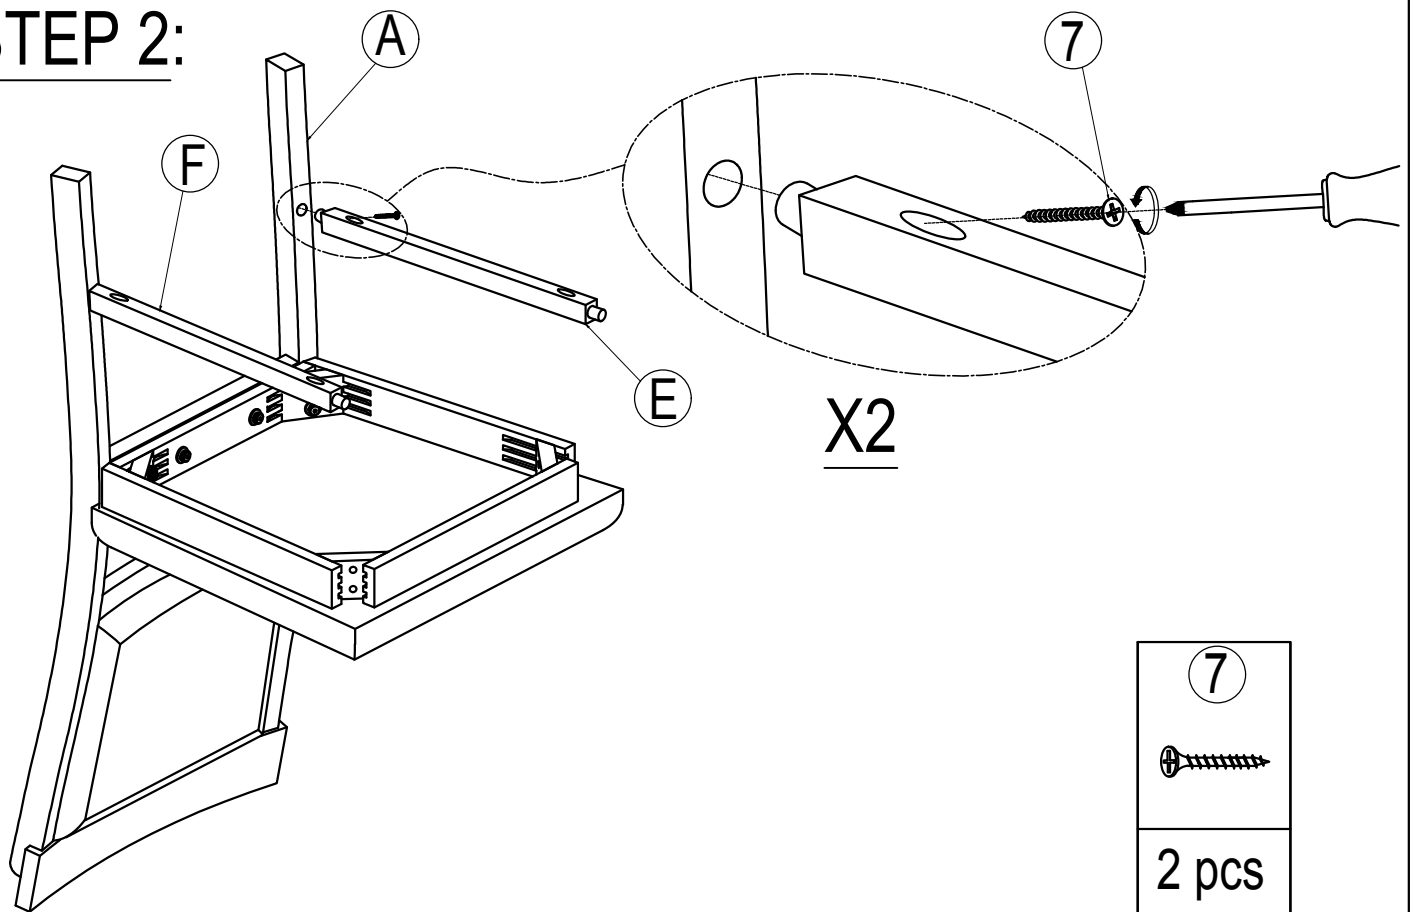


STEP 2:

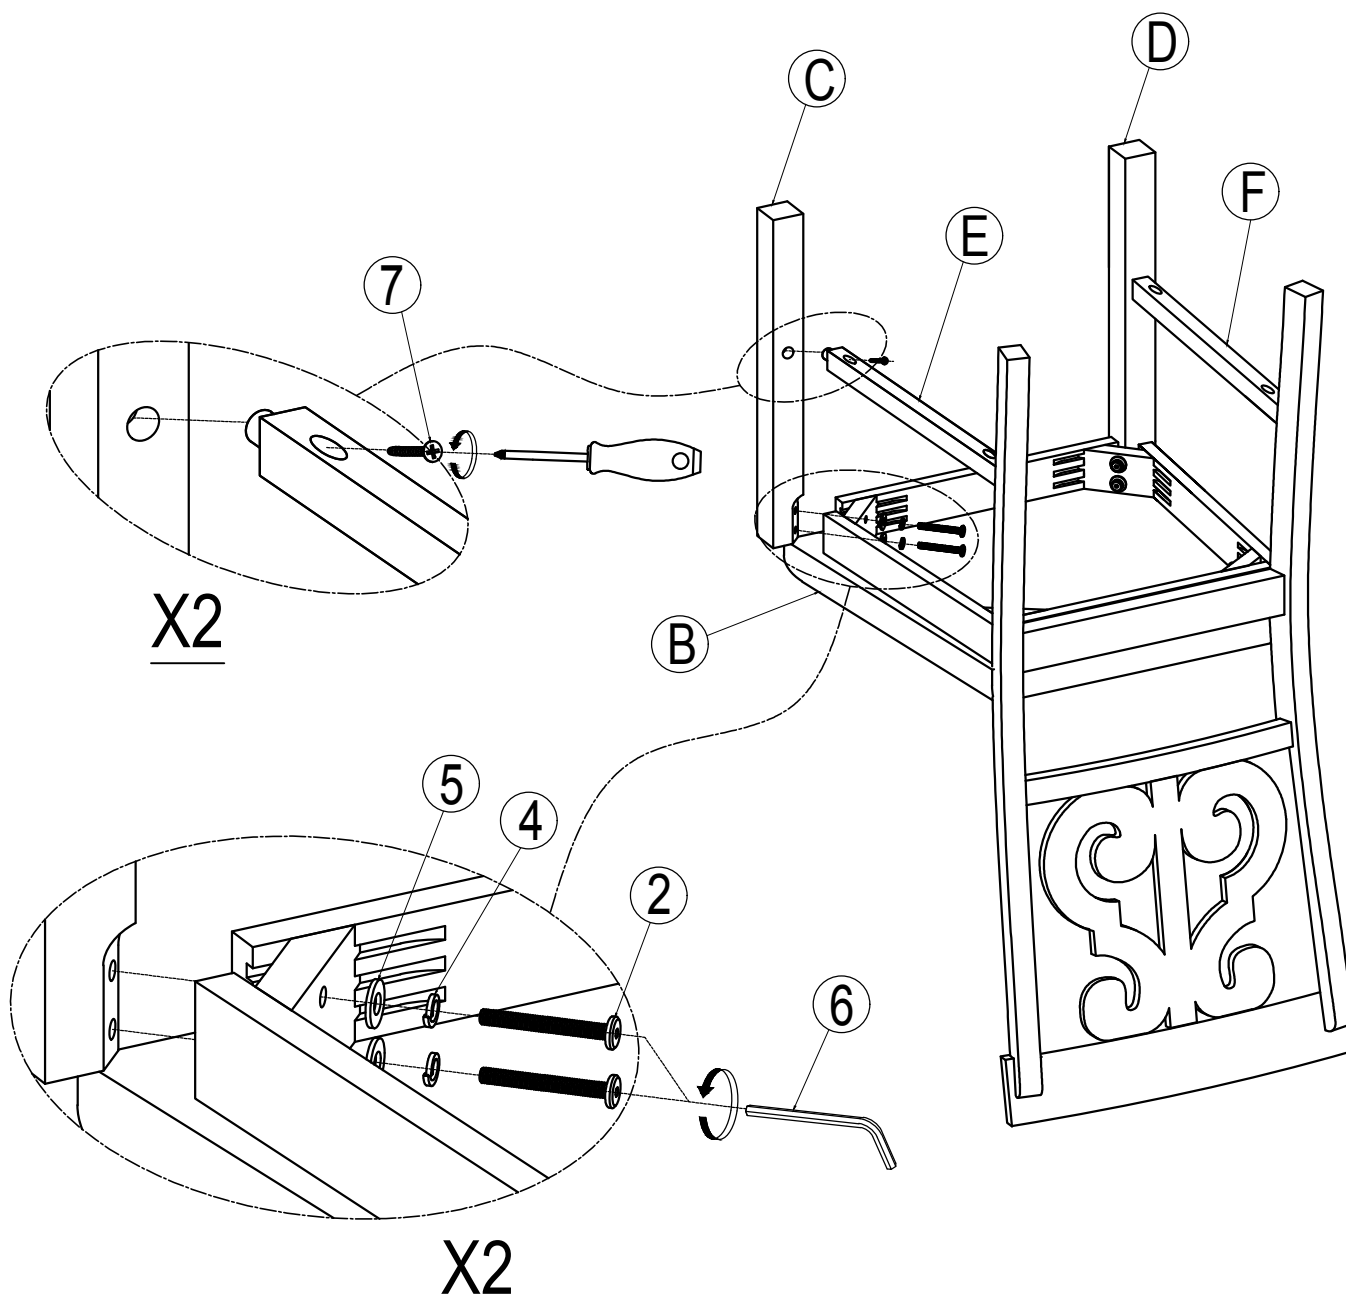

⑦
2 pcs

STEP 3:



②	④	⑤	⑥	⑦
				
4 pcs	4 pcs	4 pcs	1 pc	2 pcs