


ASSEMBLY INSTRUCTIONS

LUNA BELLA SCONCE

3011017WB

1. Carefully remove all lamp parts from the box.
2. Assemble round wall plate (B) to wall, secure with mounting screws (D).
3. Install the fixture body (A) to the round wall plate (B) and secure with screws (D).
4. Attach shade (G) to socket of the lamp and secure with socket ring (H).
5. Insert Bulb (I) **NOT INCLUDED**

Install one (1) 8.5W (850 lumens, 2700K) E26, medium base LED bulb into socket.

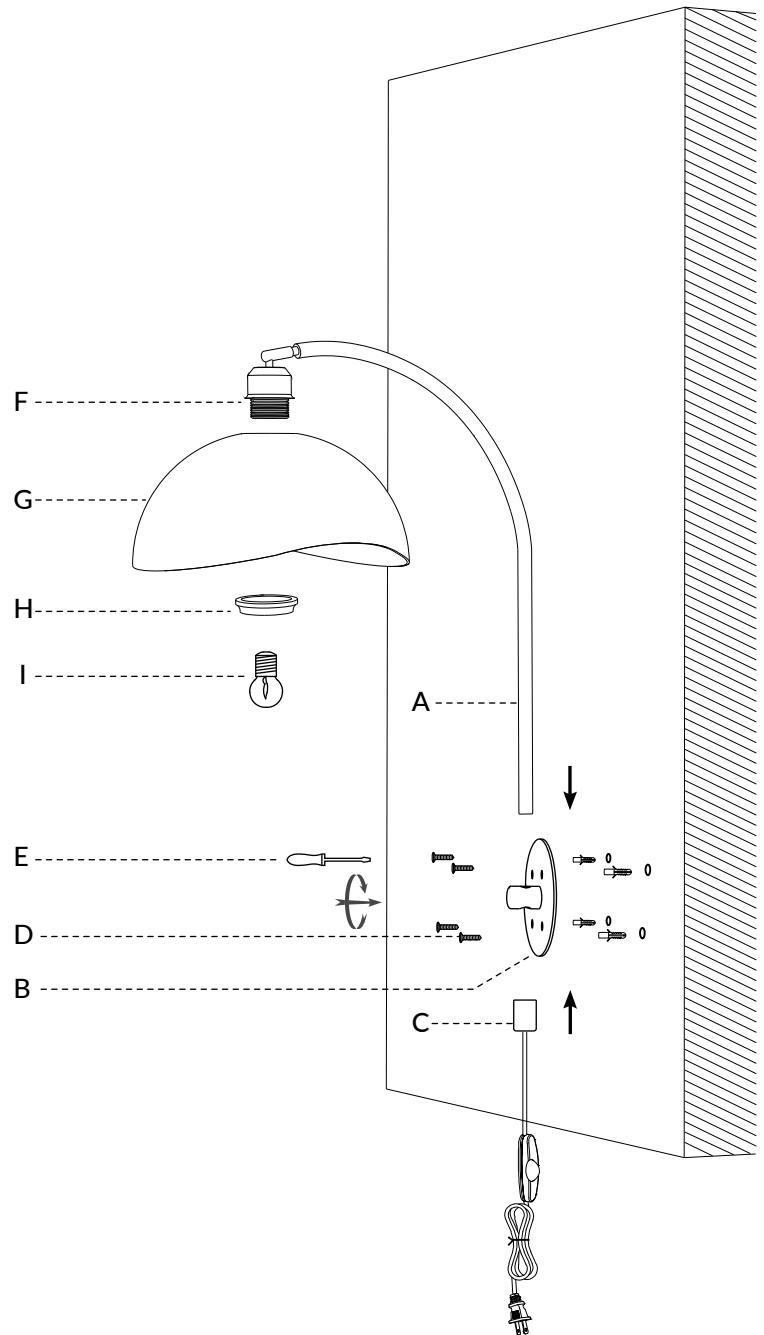

IMPORTANT SAFETY INSTRUCTIONS

This lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Esta lampara tiene un enchufe polarizado (una navaja es mas ancha que la otra) como forma de seguridad para reducir el riesgo de un shock electrico. Este enchufe polarizado entrara en una conexión solo de un lado. Si el enchufe no entra en la conexión trate al reverso. Si aun asi no entra, contacte a un electricista calificado. Nunca use una extension a menos que el enchufe pueda ser conectado completamente. No altere el enchufe.



WWW.NOVAOFCALIFORNIA.COM