

INSTALLATION MANUAL


Wall Sconce

Model No.: HLW329BL-1A



Scan for Installation Video


Thank you for choosing and using our product.

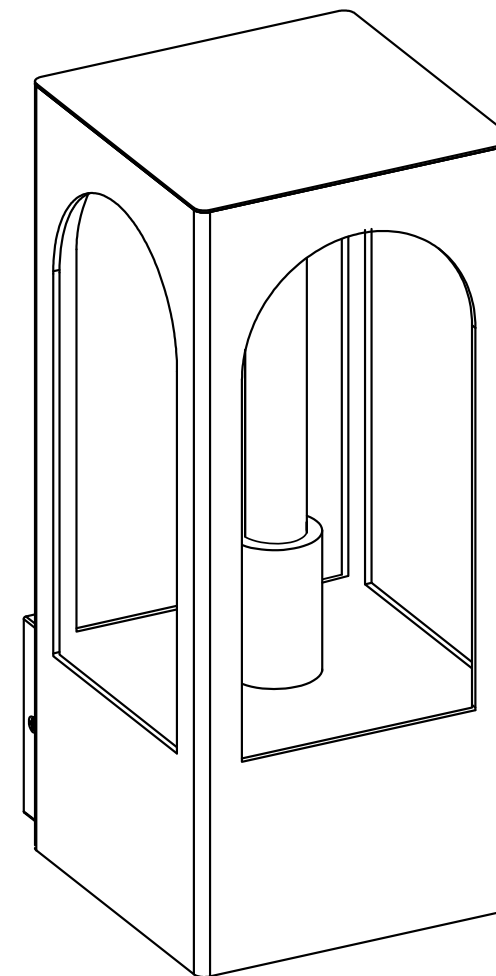


TOOLS REQUIRED




Ladder

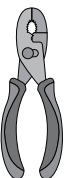

Pliers

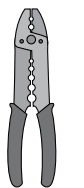


Wire
Strippers




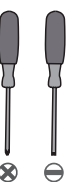


Screwdrivers

1.PACKING LIST

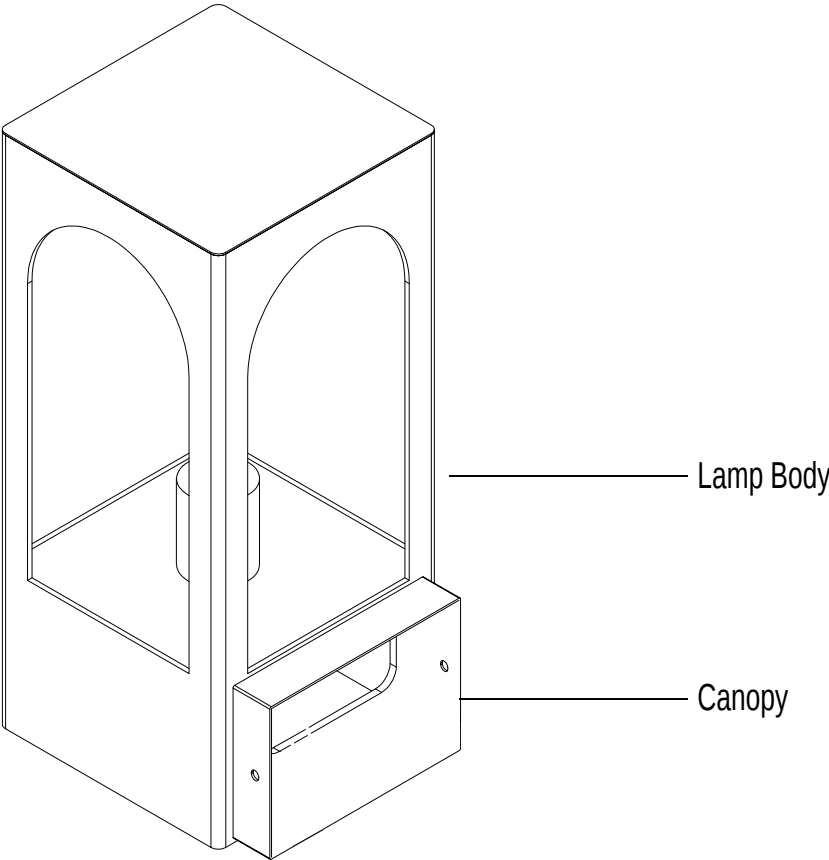

2.INSTALLATION KIT

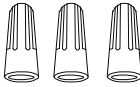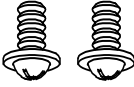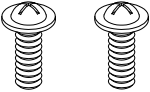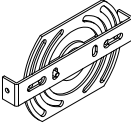AA  Wire Nut 3×	BB  Canopy Screw 2×	CC  Gloves 1×
DD  Washer for Outlet Box 2×	EE  Outlet Box Screw 2×	FF  Bracket 1×

Note:


- 1. Some extra hardware may be included. The quantity listed above is the number required for installation.
- 2. Parts "BB ,FF" have already been pre-installed together with canopy .

3.MOUNTING AND WIRING

1. Mount the Bracket

STEP 1: Loosen the Canopy Screw (BB) from canopy , take out the Bracket (FF).


STEP 2: Take off the screws from outlet box, secure the Bracket (FF) onto the box with screws taken off or screws provided (EE).

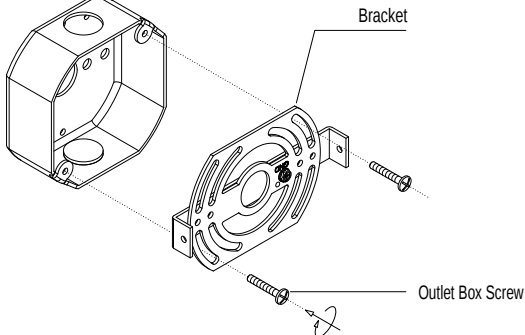

2. Connect the Wires


STEP 1: Connect the wires from the fixture to the house supply wires with wire nuts (AA), ground wire (green, green/yellow, or bare) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.

STEP 2: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

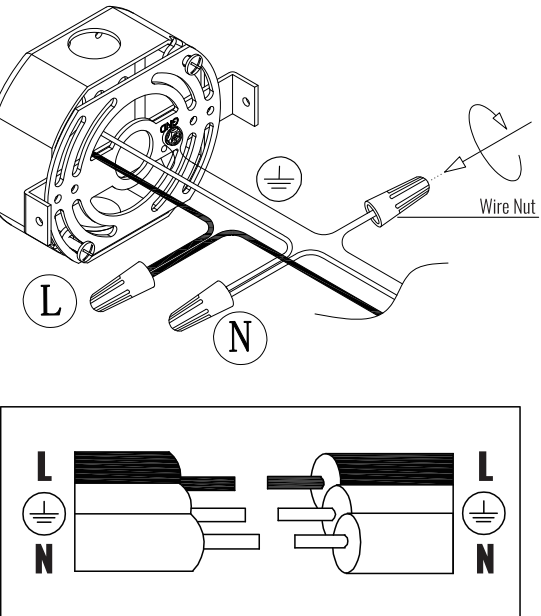


3. Installation the Lamp

STEP 1: Attach Canopy to the affixed Bracket using Canopy Screws (BB).

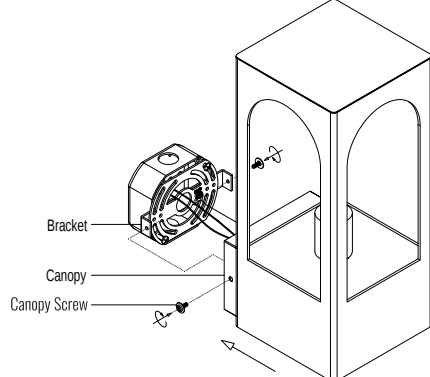

4. INSTALL THE BULB

Step 1. Install E26 bulb up to 60W (not included).

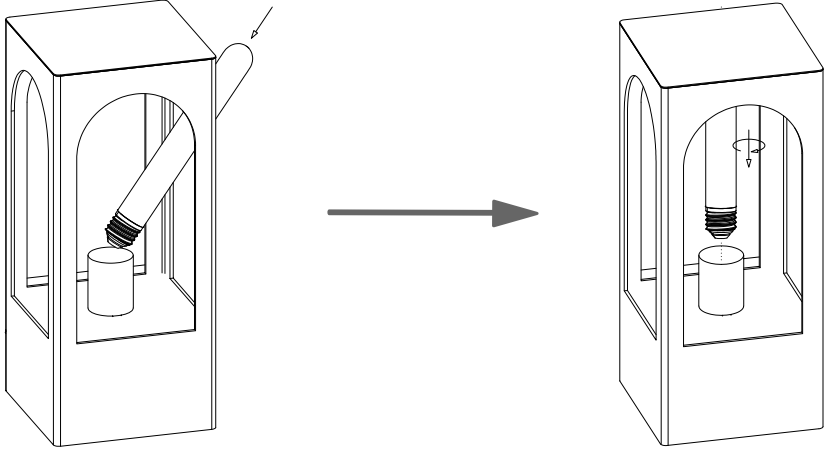

Note:

This lamp can be fully dimmed when used with dimmable bulbs and compatible dimming switches (not included).