


ASSEMBLY INSTRUCTIONS

# METAL GARDEN SHED

SKU: T-PS23-0356A

Store  
Your  
Patio Well

[www.patiowell.com](http://www.patiowell.com)

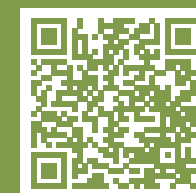

**Patiowell**  
Metal Garden House  
Installation Tutorial  
[https://www.patiowell.com/  
pages/video-t-ps23-0356a](https://www.patiowell.com/pages/video-t-ps23-0356a)



 [saleservice@patiowell.com](mailto:saleservice@patiowell.com)

# SITE PREPARATION

Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

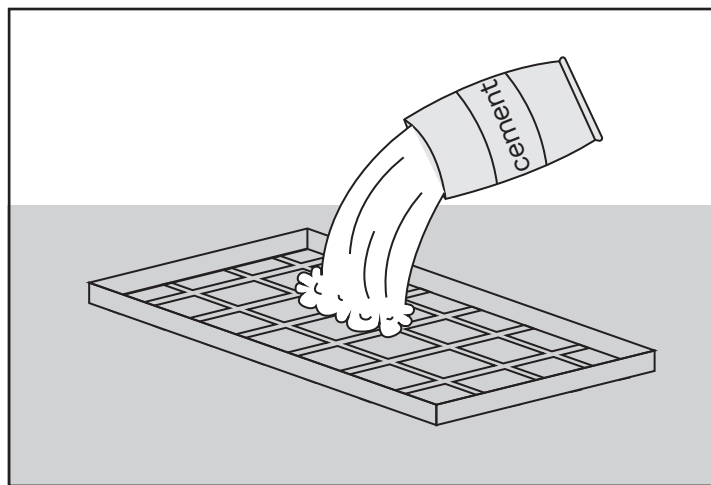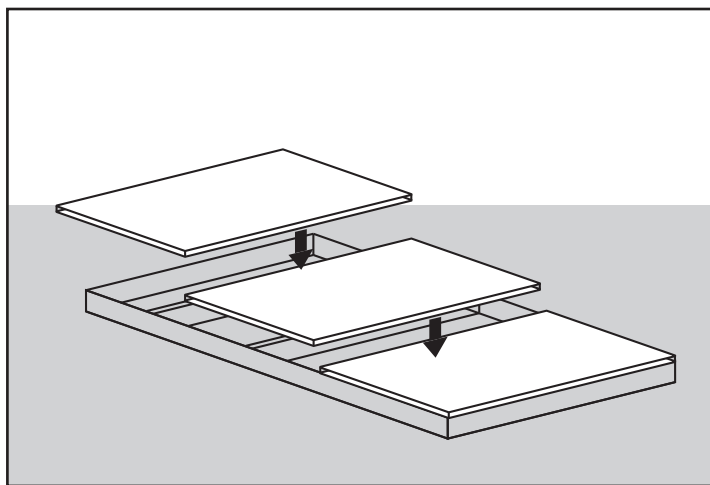

## BEFORE STARTING ASSEMBLY






Remove all of the pieces from the 3 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.

Please prepare these components in advance at the beginning of each stage.

## REQUIRED TOOLS

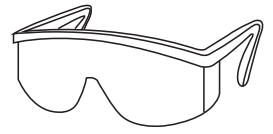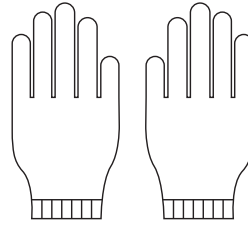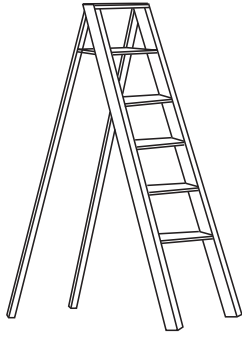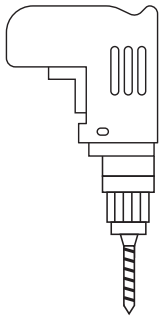

## CAUTION

Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.







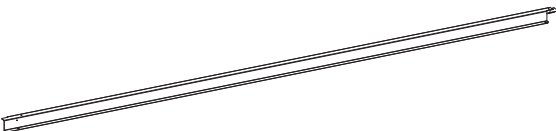


Requires two people and takes 2-3 hours for Installation.  
Recommended to wear gloves to avoid scratches.  
Please read the manual carefully before installation.










**DO NOT RETURN YOUR UNIT  
TO THE STORE**

**Contact us first**  
[saleservice@patiowell.com](mailto:saleservice@patiowell.com)

# FOUNDATION

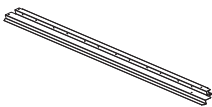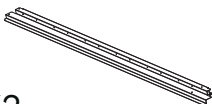
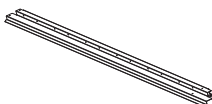
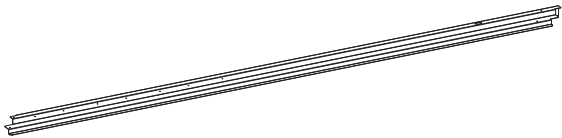
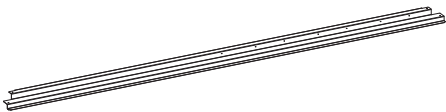

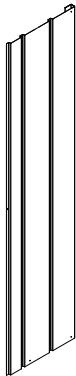



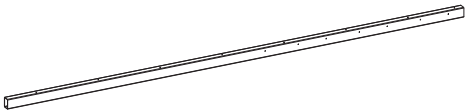
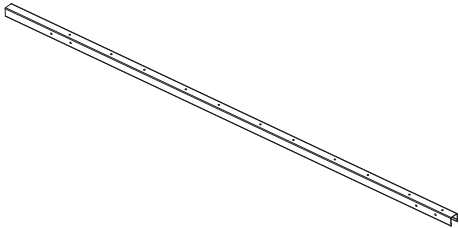
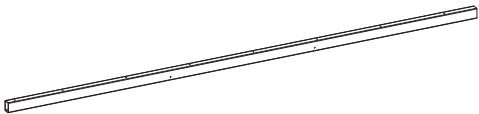
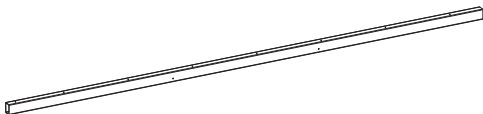
BE5 X2 	BE6 X2 	BE7 X2 
BE1L X1 	BE1 X1 	
BE2L X1 	BE2 X1 	
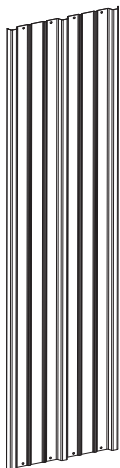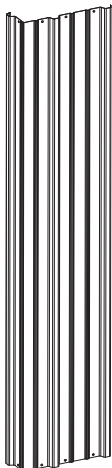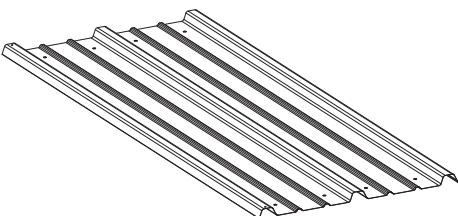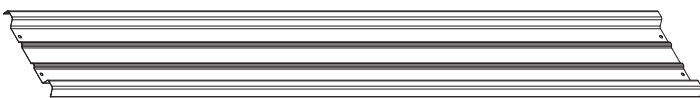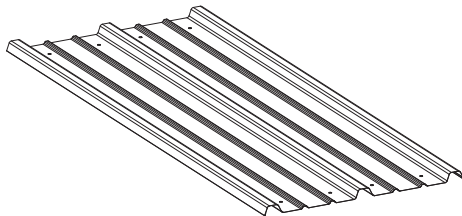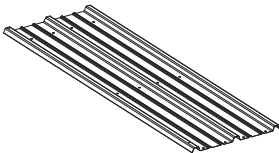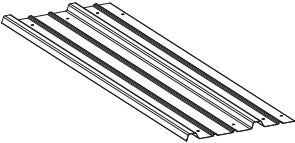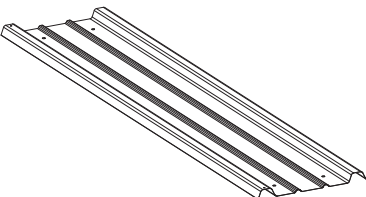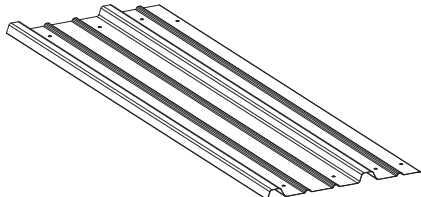
# PLATES















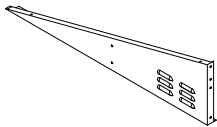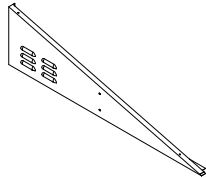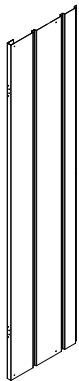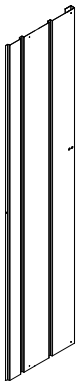

W1A X20 	WS2A X4 	PE9 X2 
WS3A X4 		PE4 X10 
PE3 X4 	PE6 X2 	PE7 X2 
		PE5 X2 

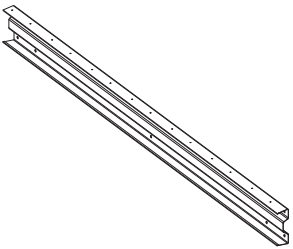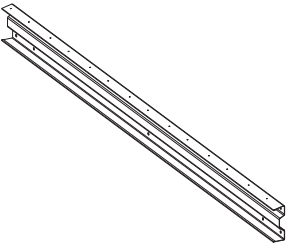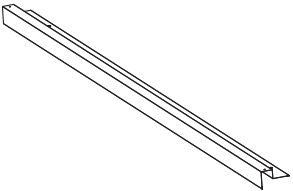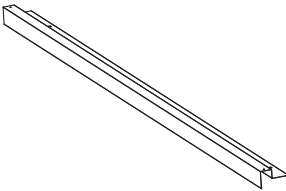




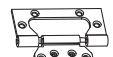
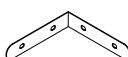
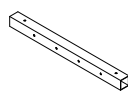
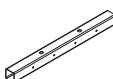

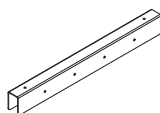


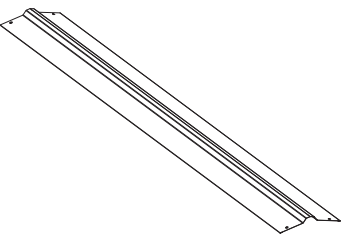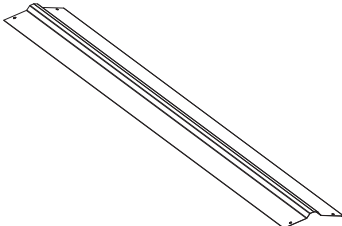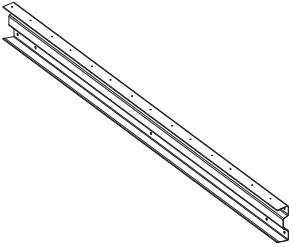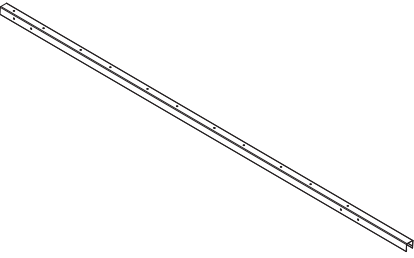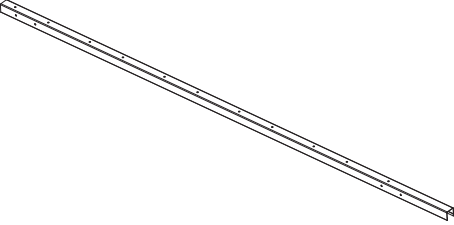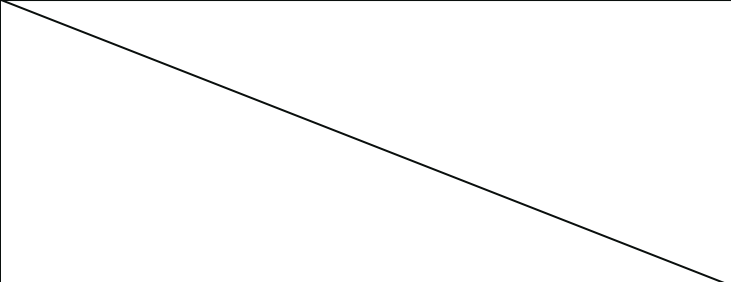
# PLATES

 <p>A3 X2</p>		 <p>A4 X2</p>	
 <p>DLA X1</p>	 <p>DLB X1</p>	 <p>DRB X1</p>	 <p>DRA X1</p>
 <p>ULA X1</p>	 <p>UR1 X1</p>	 <p>DX2 X4</p>	
 <p>UE1 X1</p>		 <p>UE7 X2</p>	
 <p>UE5 X1</p>		 <p>UE5R X1</p>	




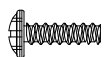


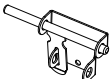

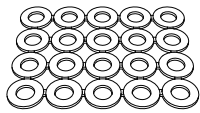








# STRIPS


 <p>M16 X4</p>		 <p>M18 X4</p>	
 <p>M9 X2</p>		 <p>M10 X2</p>	
 <p>L16 X4</p>		 <p>L17 X2</p>	
 <p>16 X2</p>		 <p>17 X1</p>	
 <p>M17 X4</p>		 <p>UE8 X2</p>	
 <p>UE9 X2</p>			
 <p>C4L X2</p>	 <p>20 X4</p>		
		 <p>C5 X4</p>	 <p>C4R X2</p>
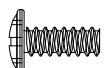
# STANDARD



			
DG X1	DF X1	DC X2	DH X4
			
C2 X4	GR X1	GR1 X4	GE X2
			
GS1 X1	GC X4	V1 X 224	V2 X422

# SCREW



   <p>F1(X584) M4*10</p>	    <p>F2(X68) M4*10</p>
   <p>F3(X32) M5*12</p>	    <p>F4(X5) M6*10</p>
   <p>For GC F5(X4) M4*16</p>	

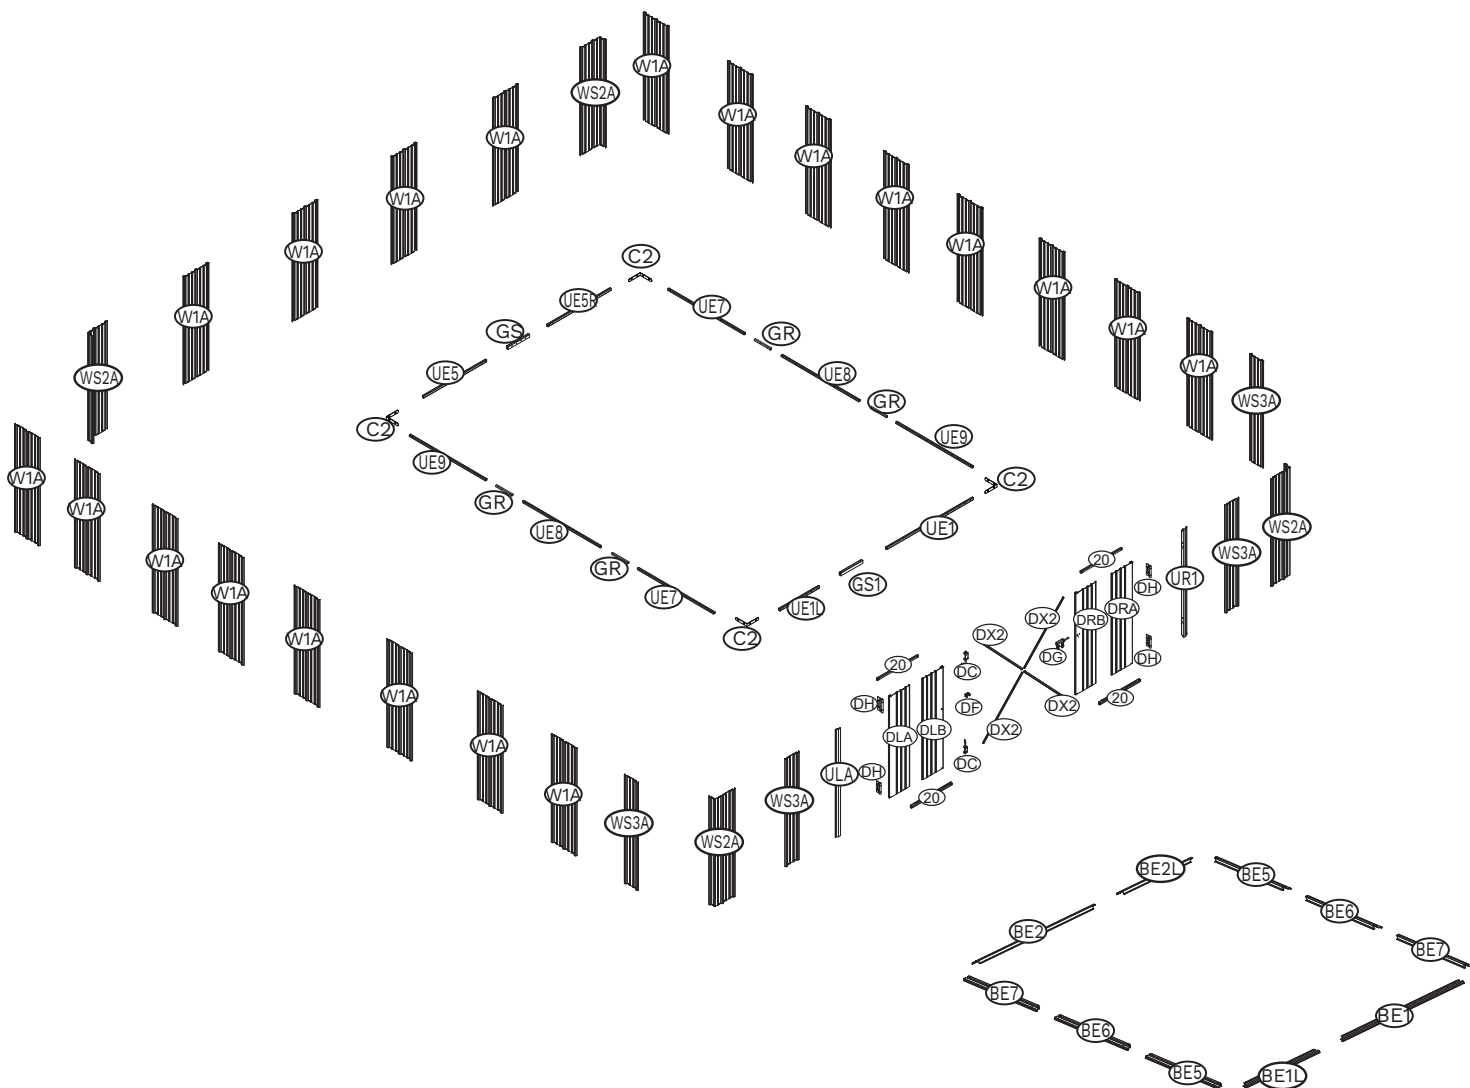


## STEP 1

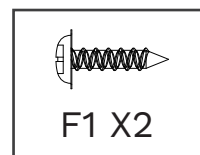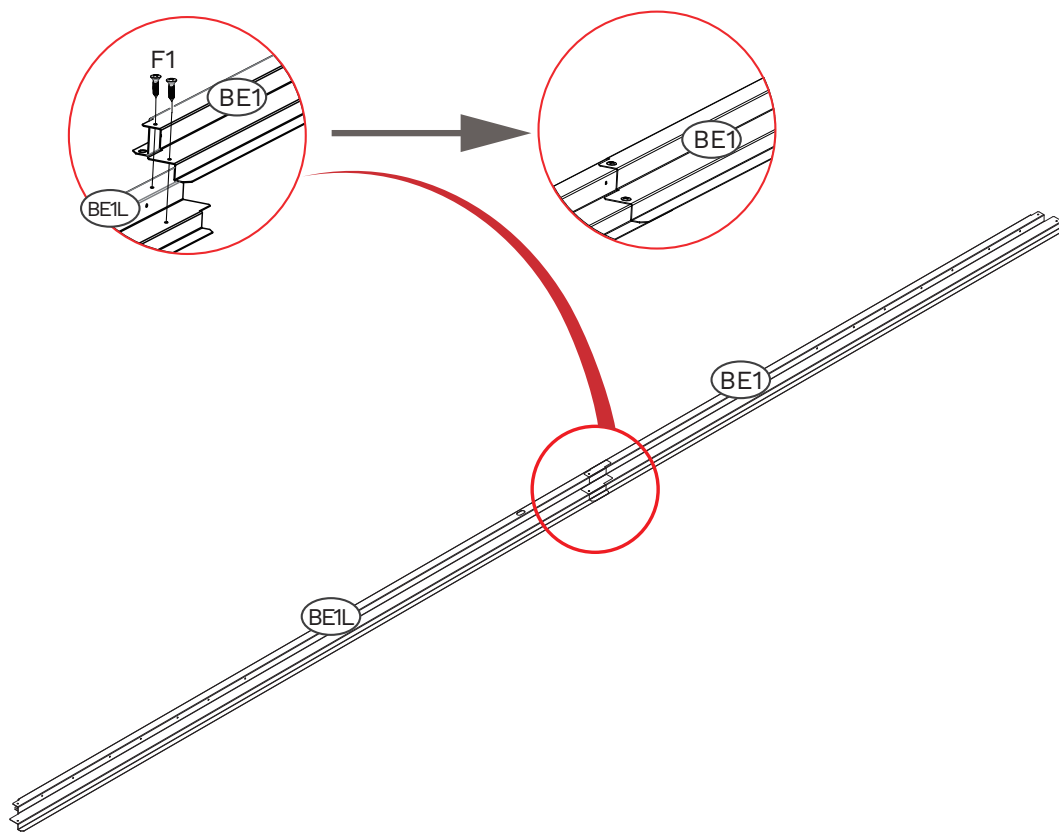


## STEP 2

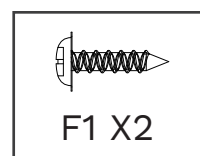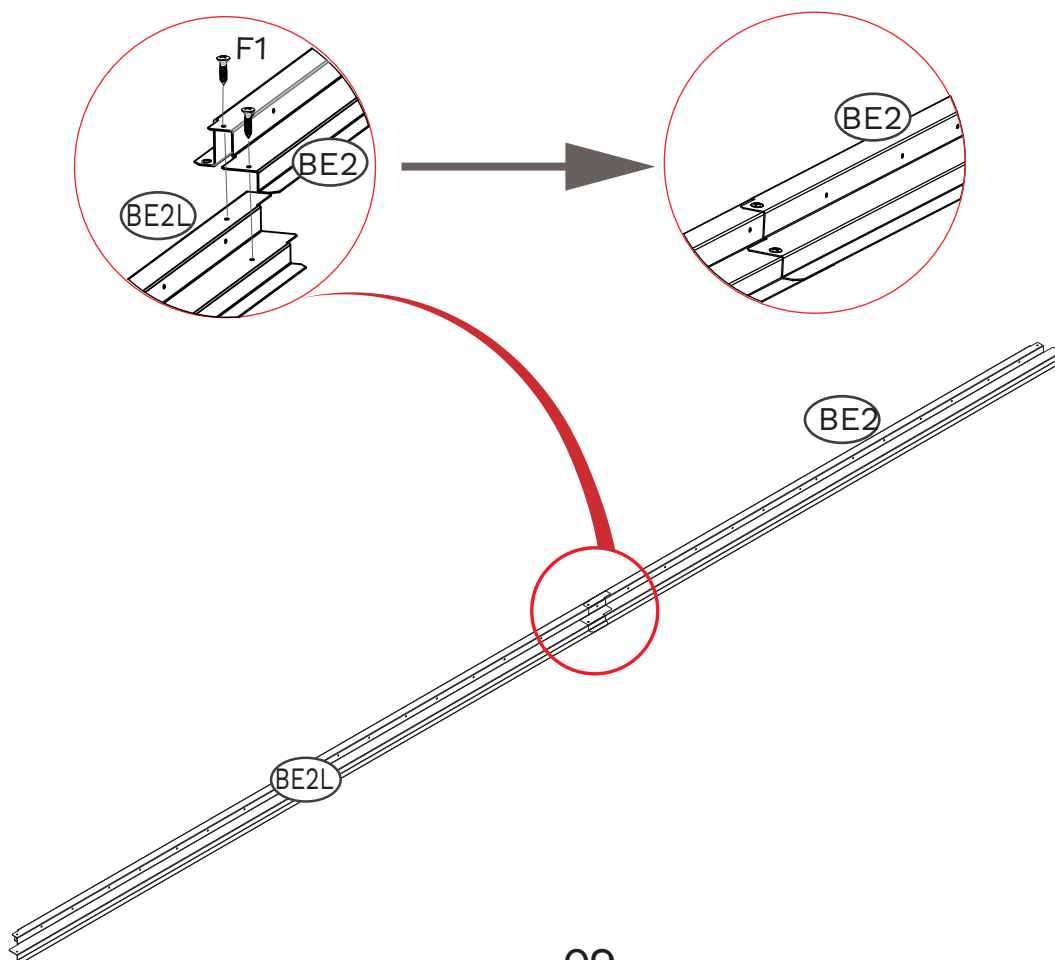


## STEP 3

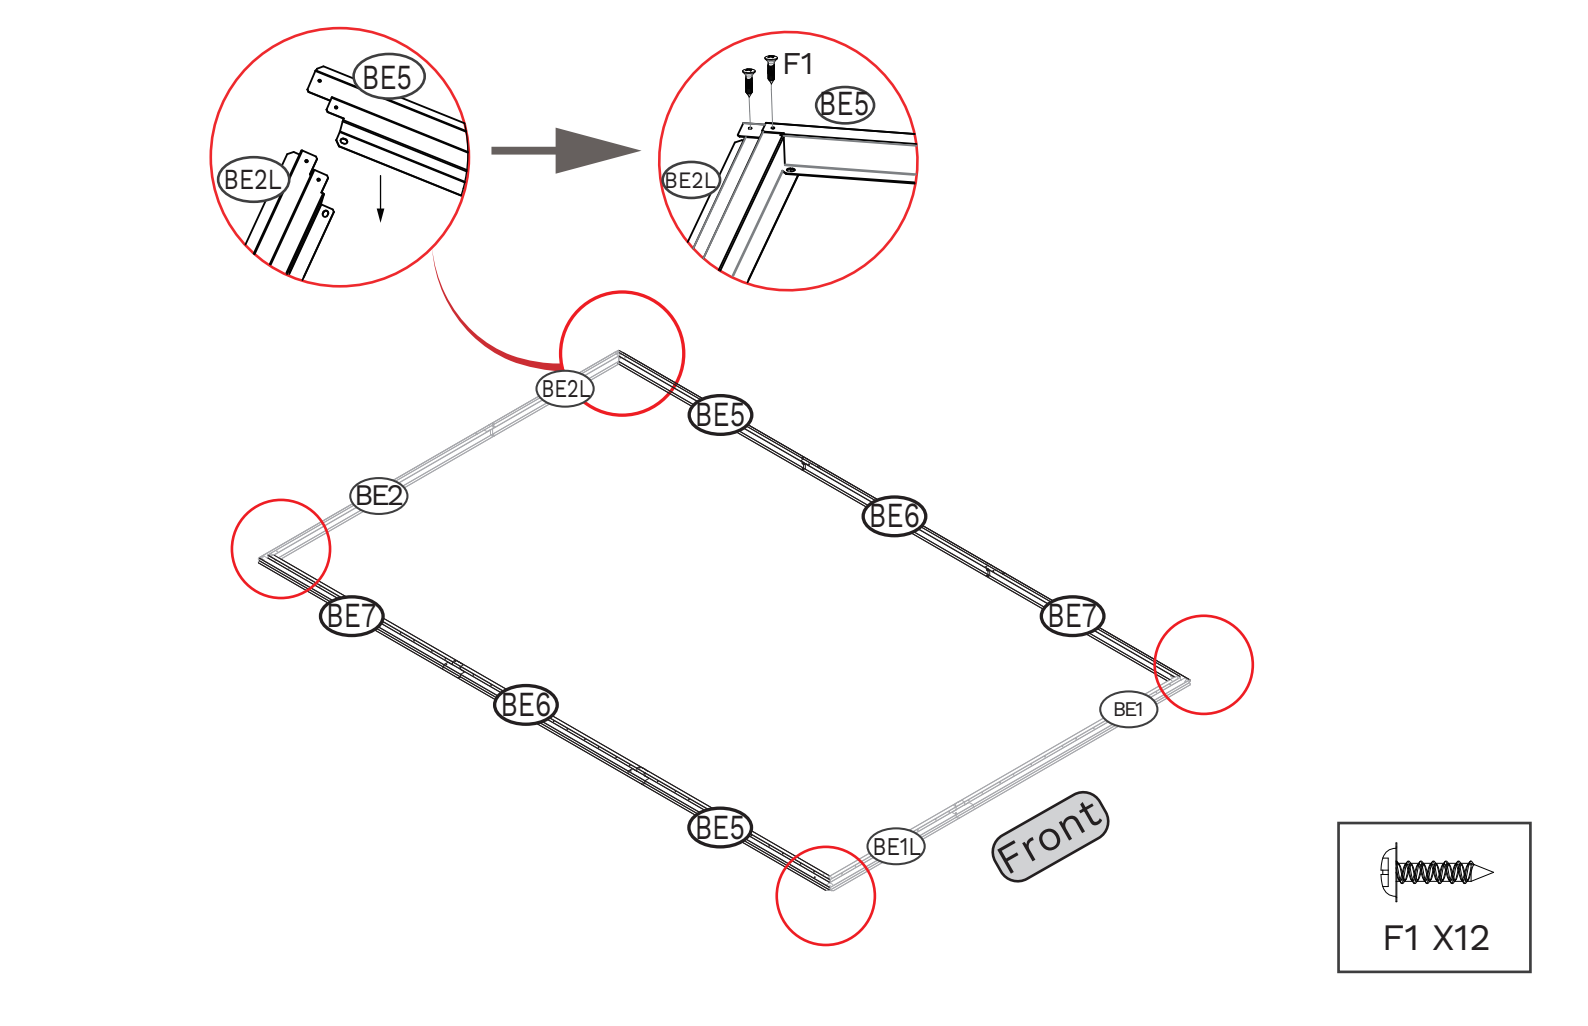


## STEP 4

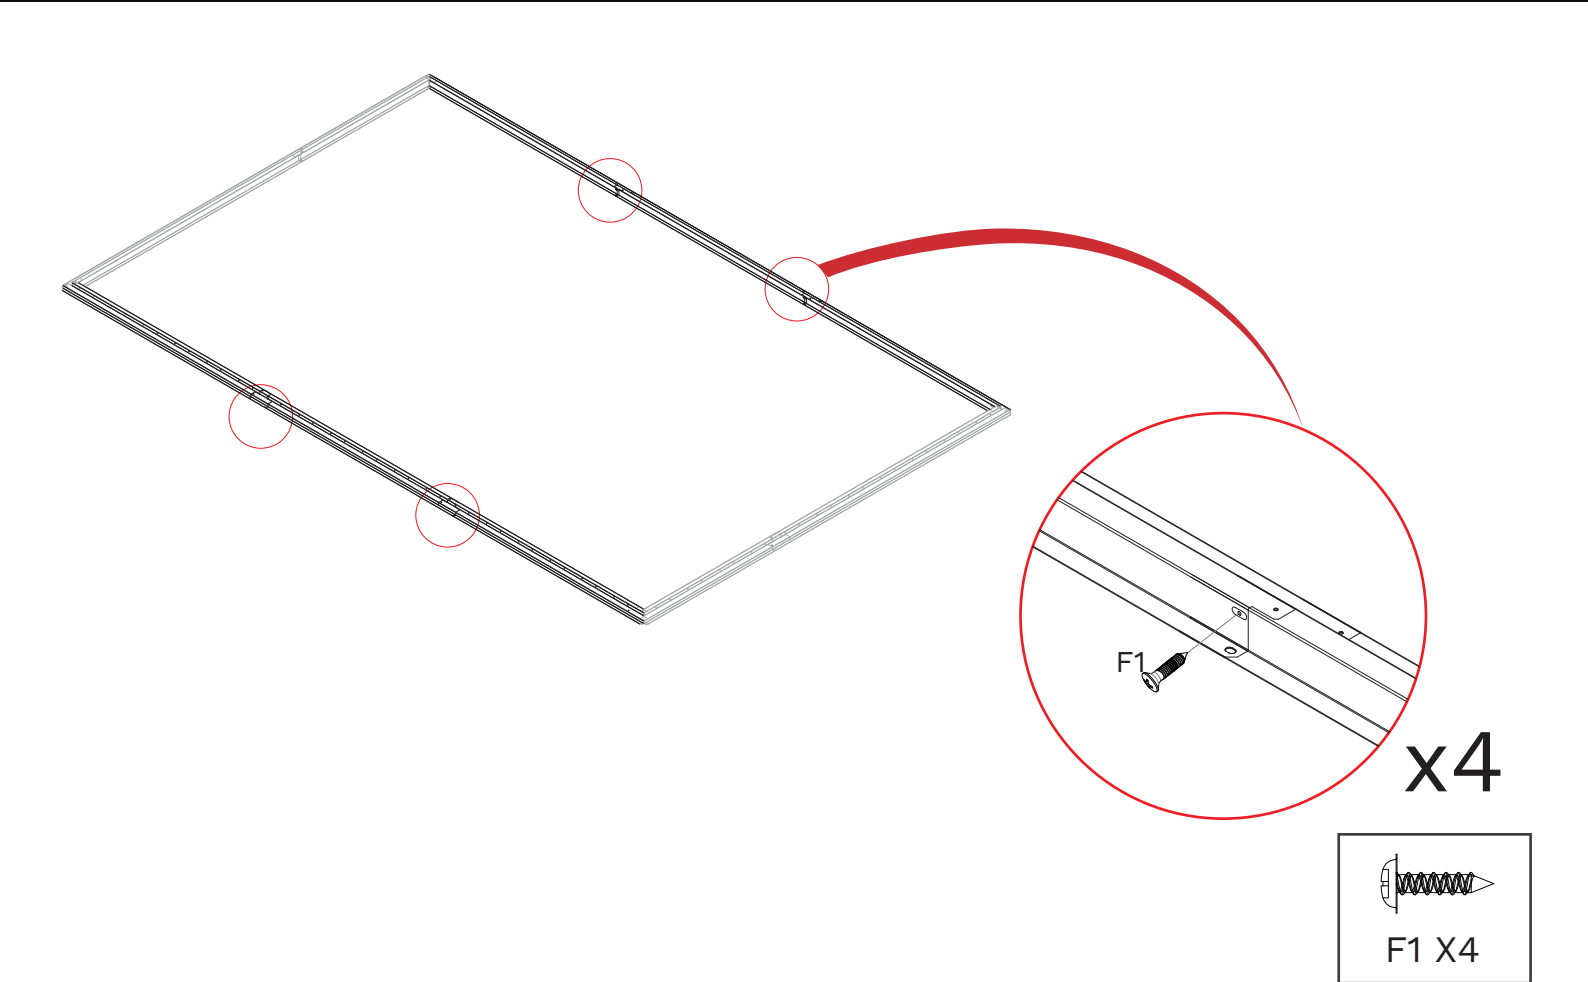


## STEP 5

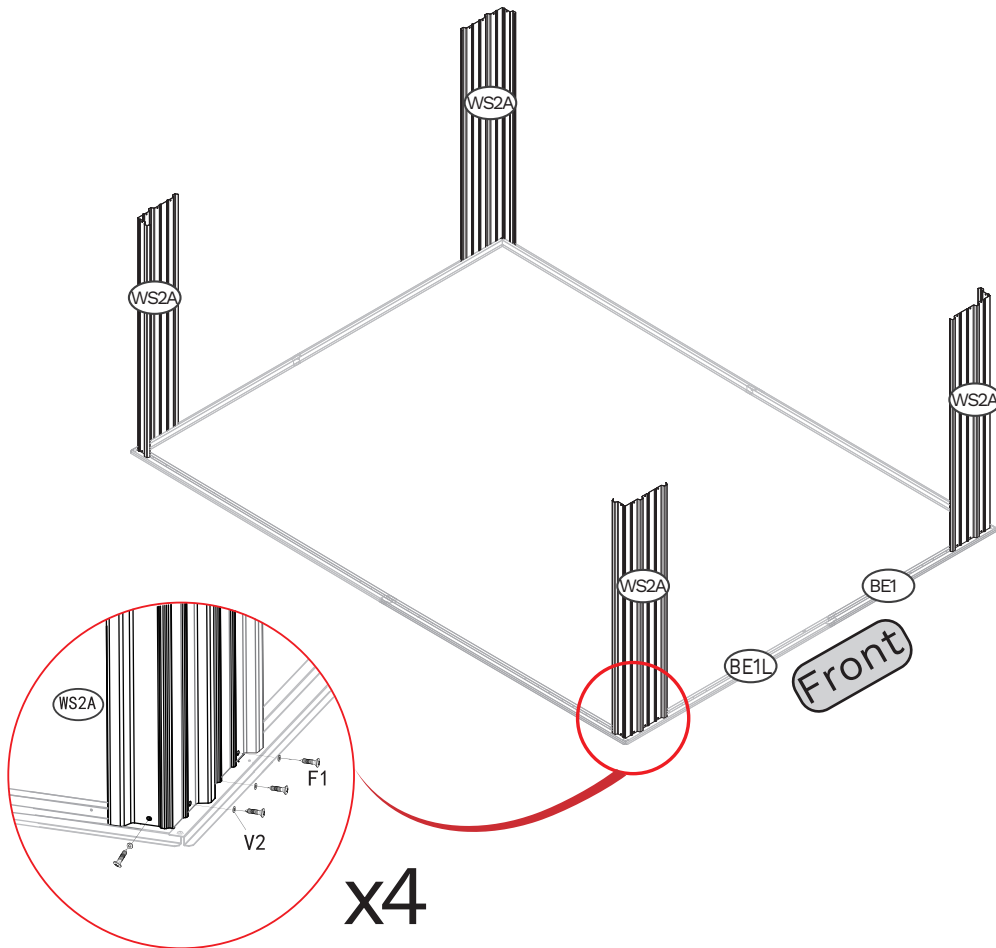


## STEP 6

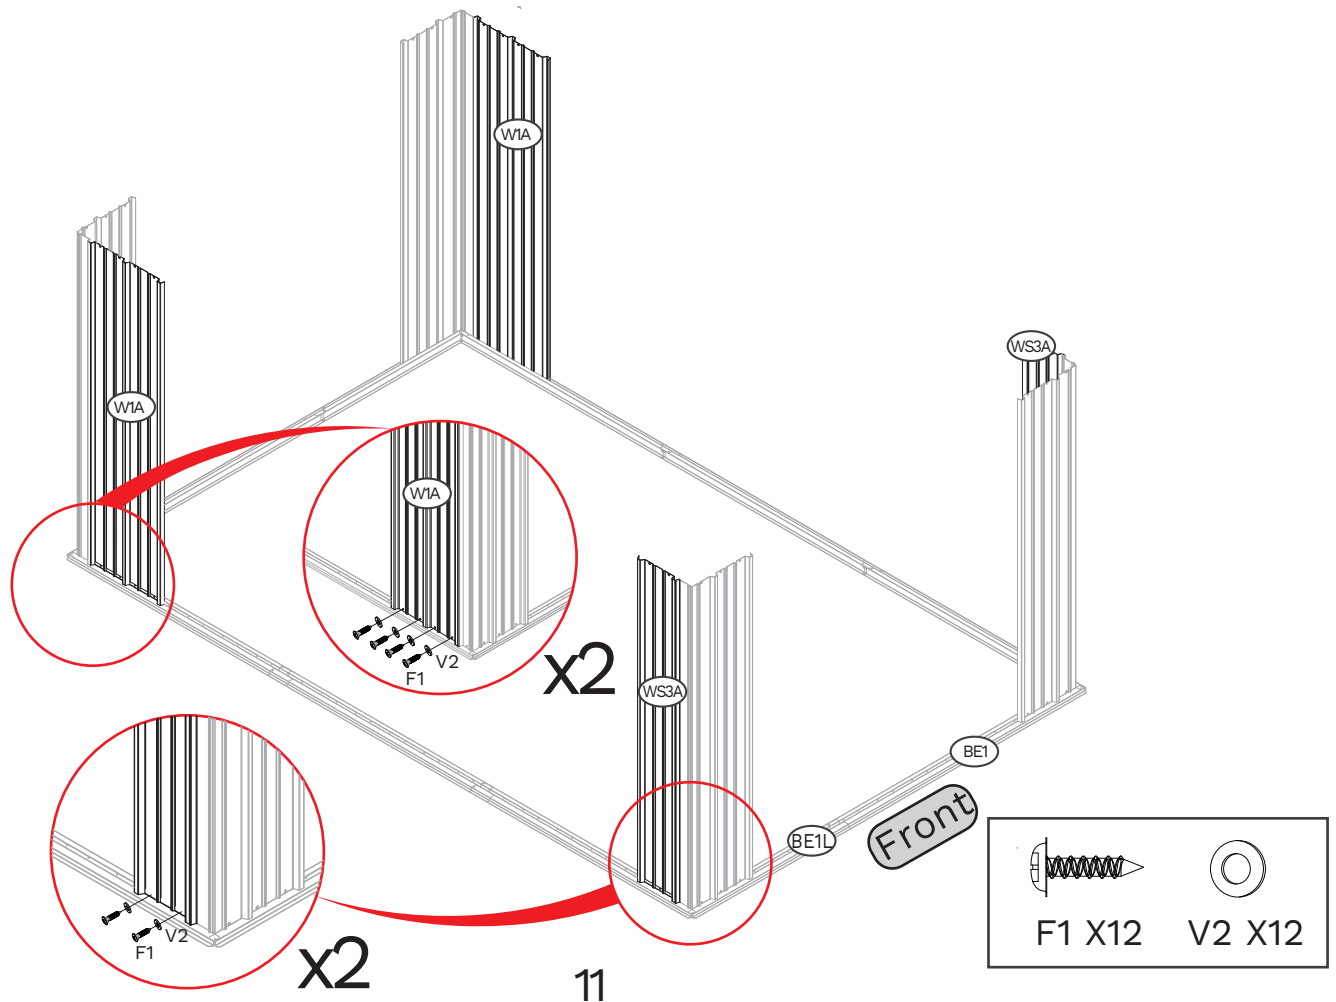

## STEP 7

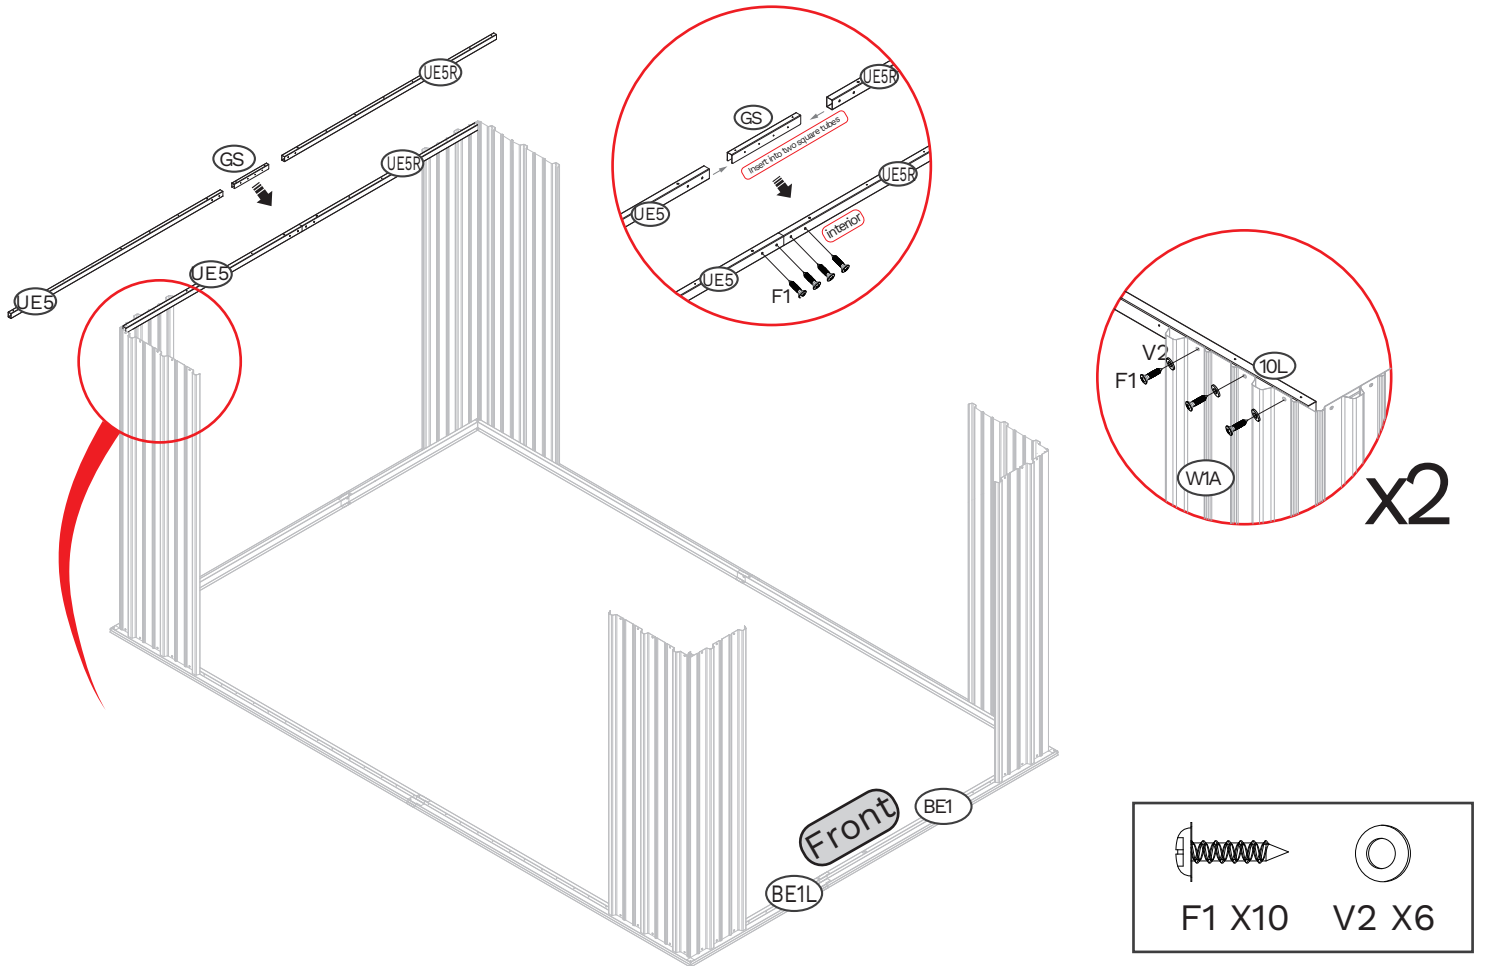


## STEP 8

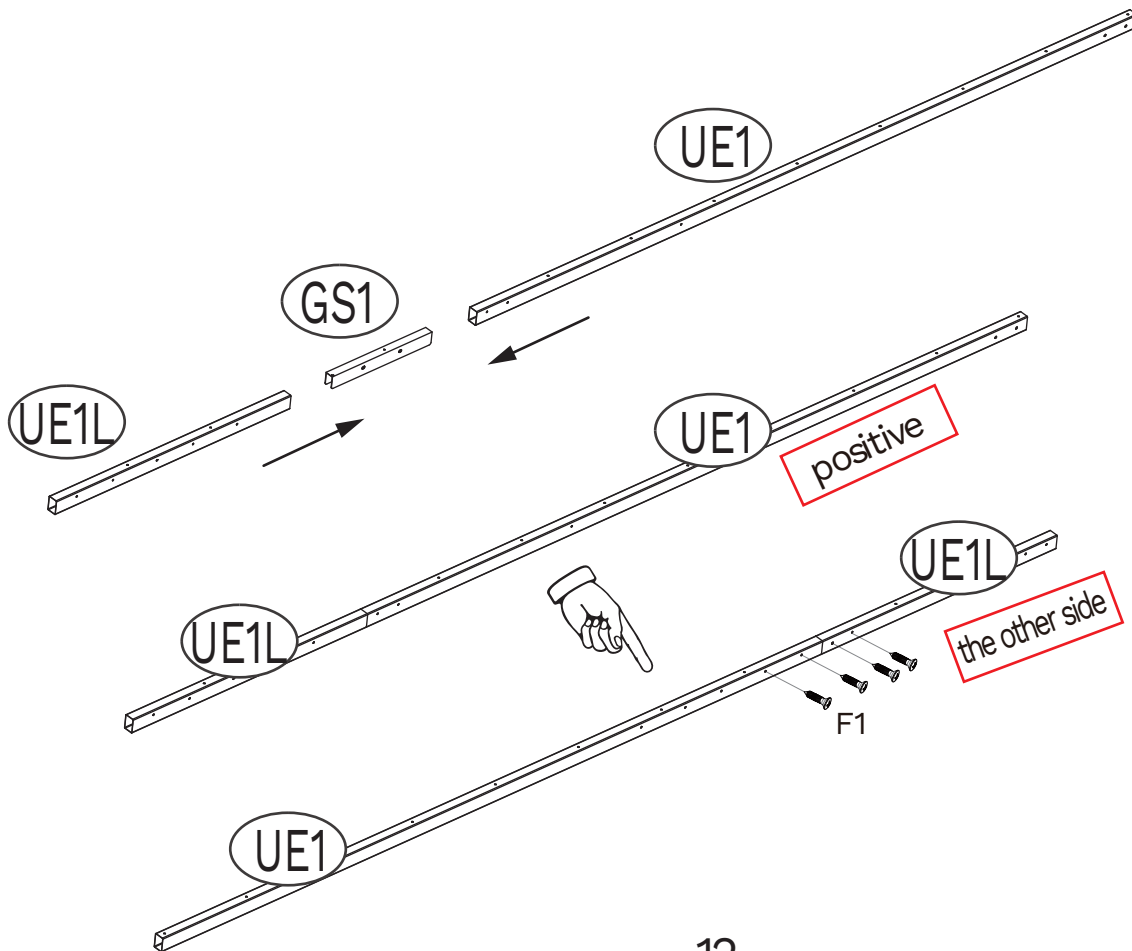






## STEP 9

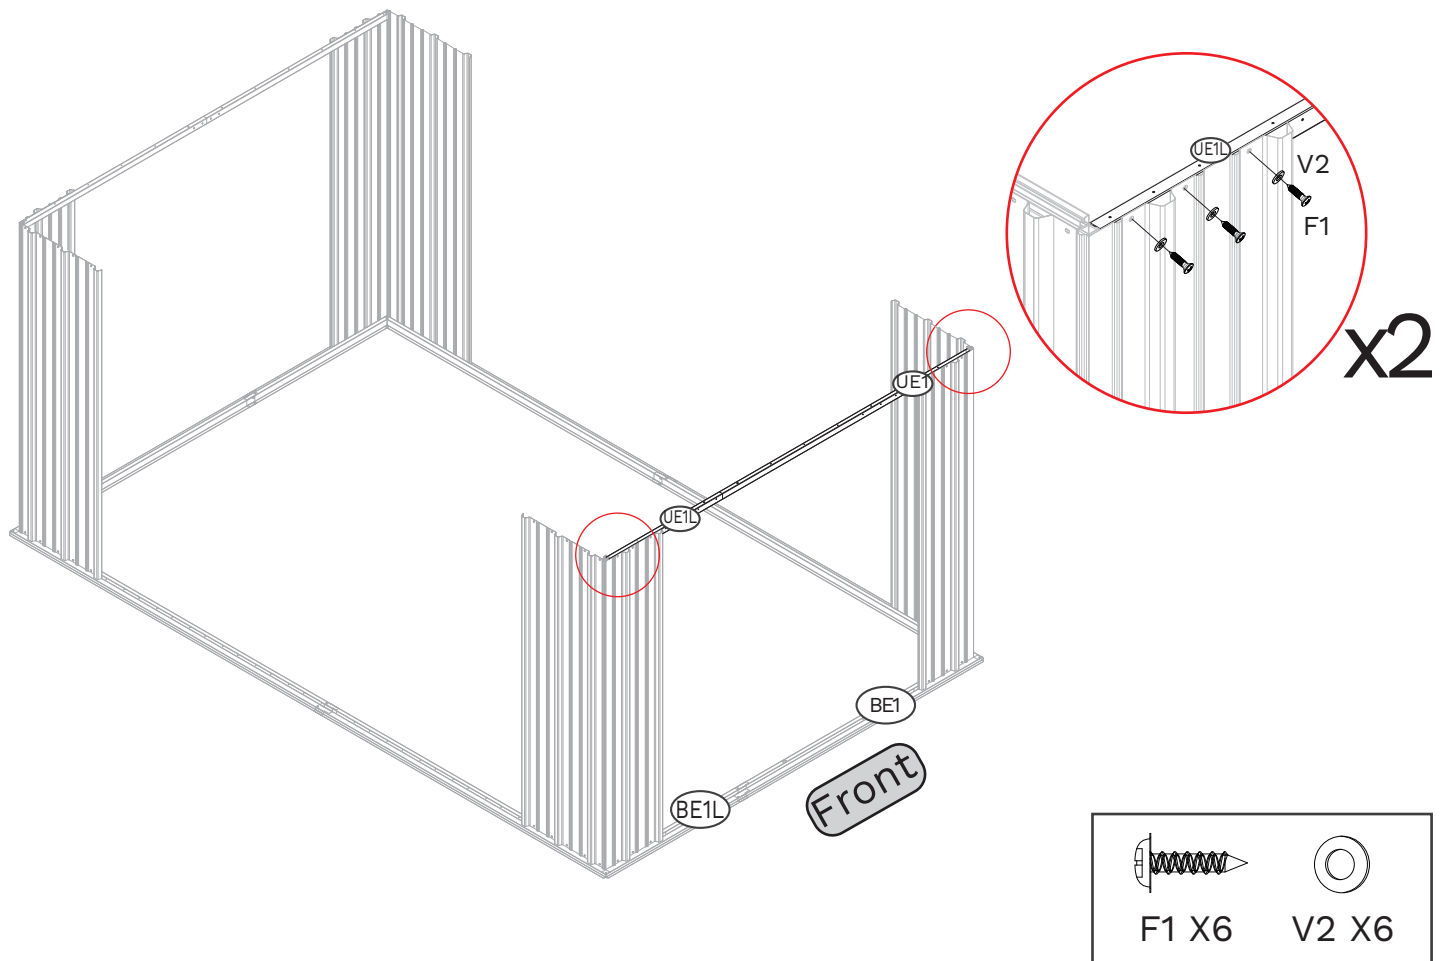




## STEP 10

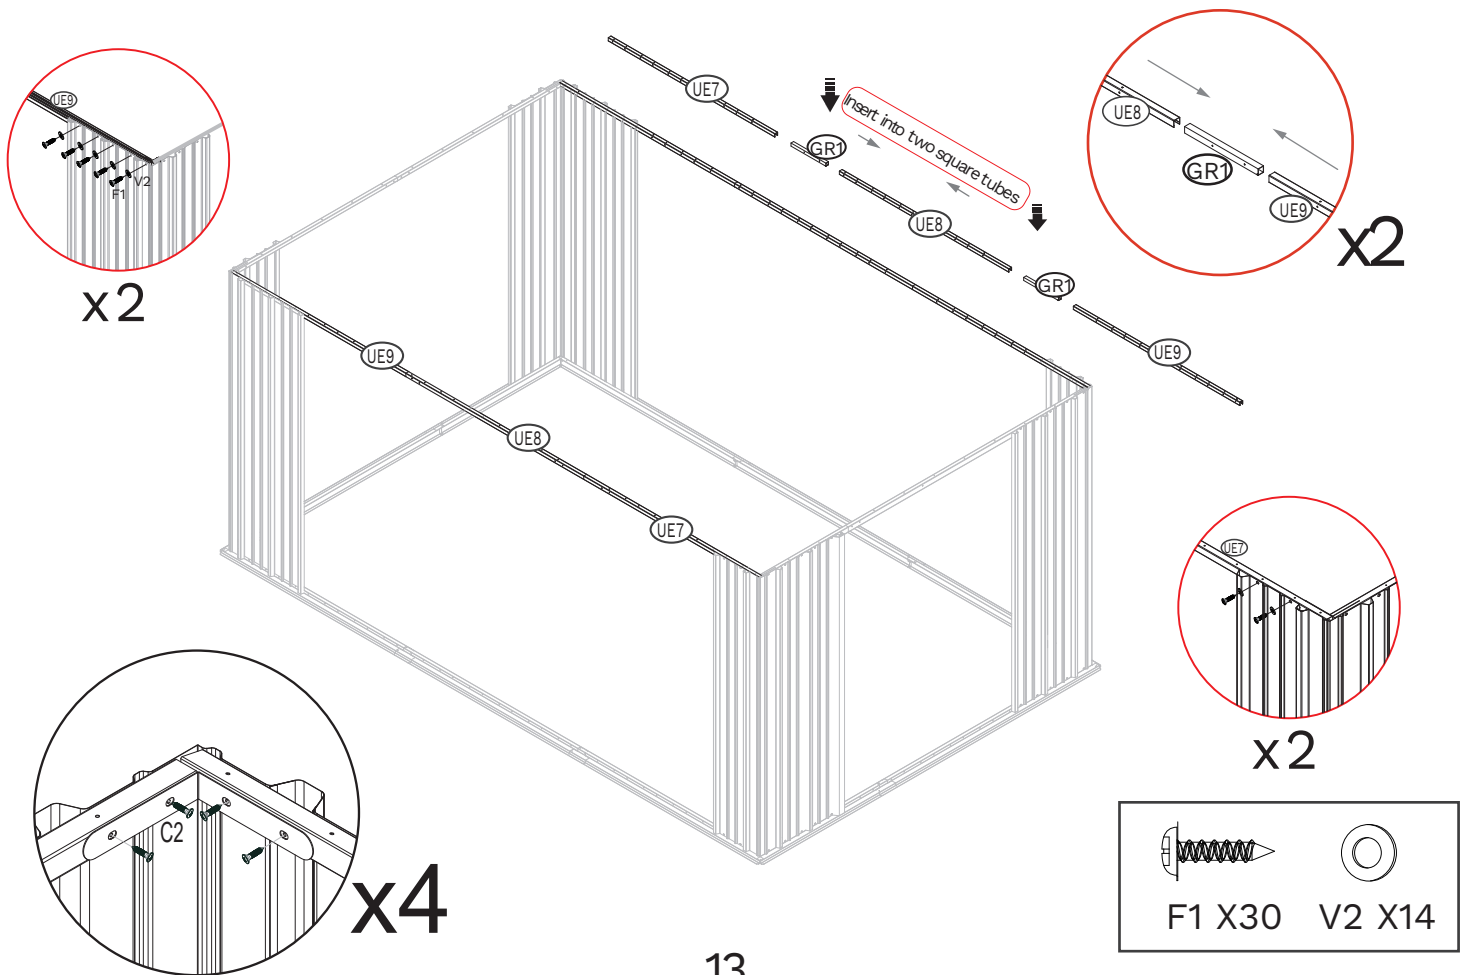



## STEP 11

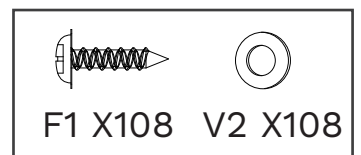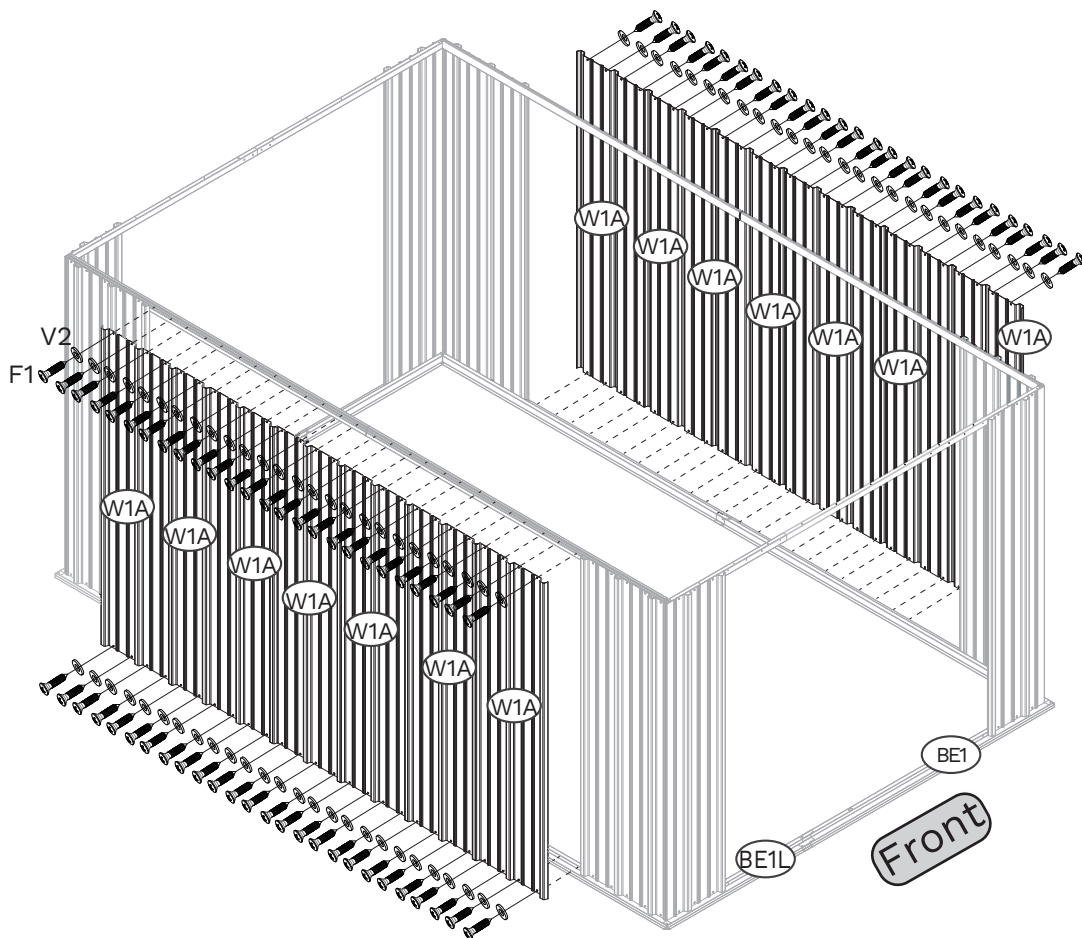




## STEP 12

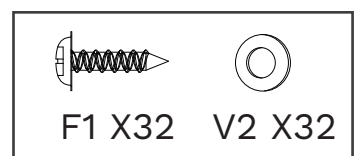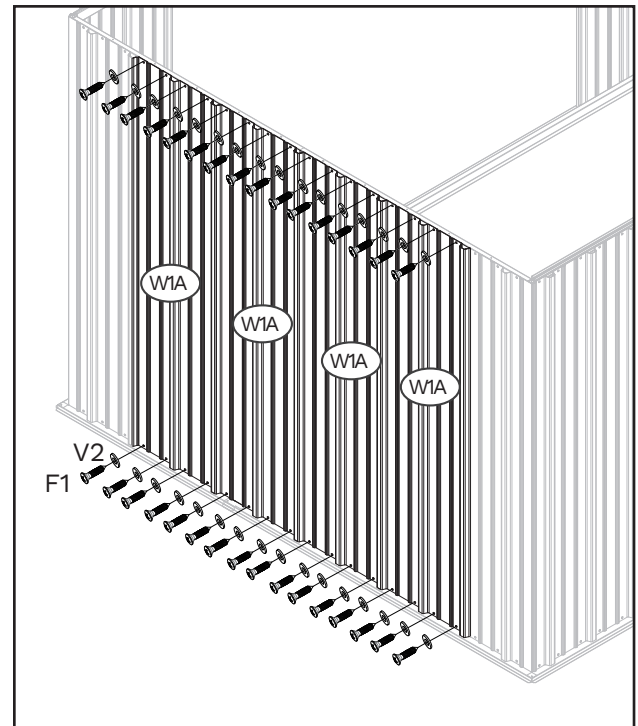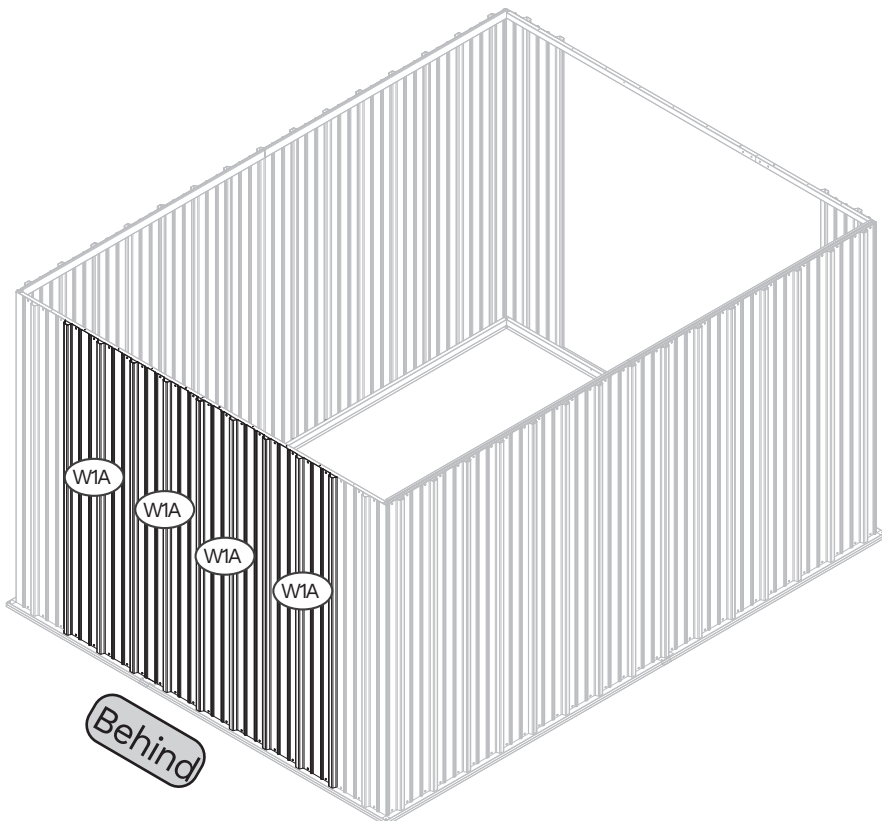


## STEP 13

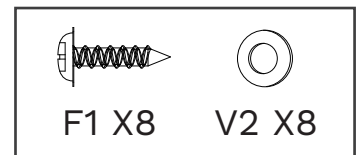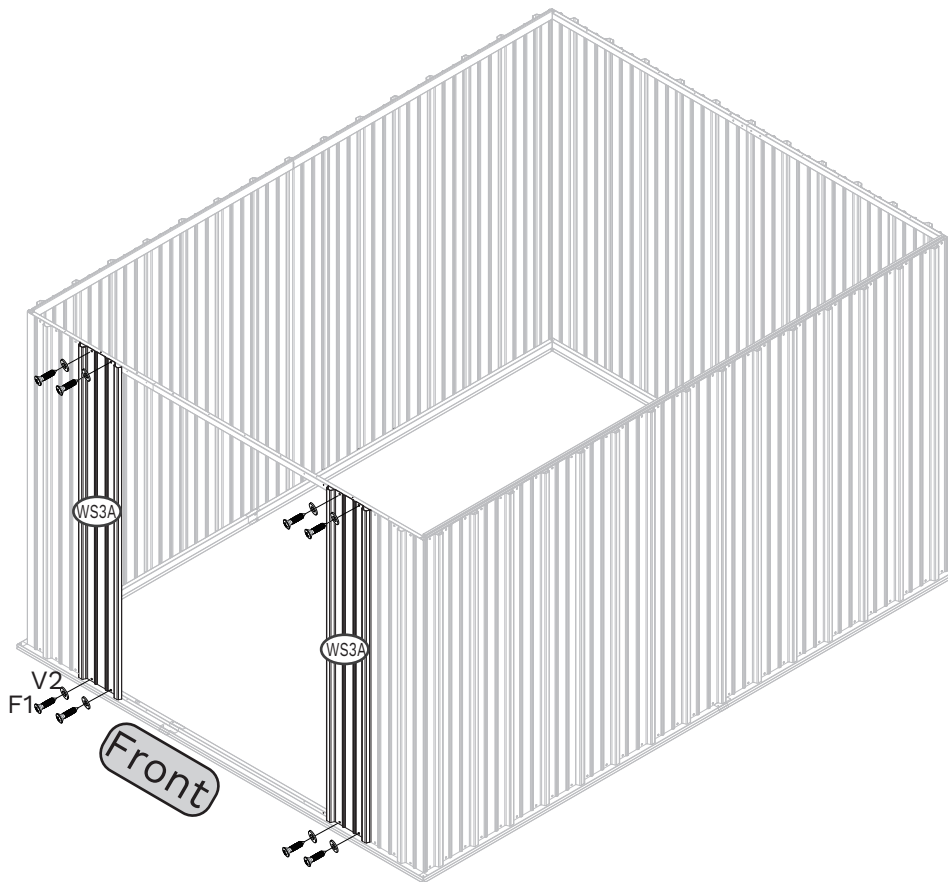


## STEP 14

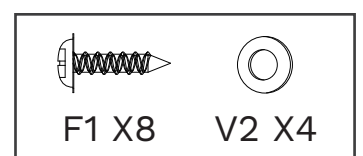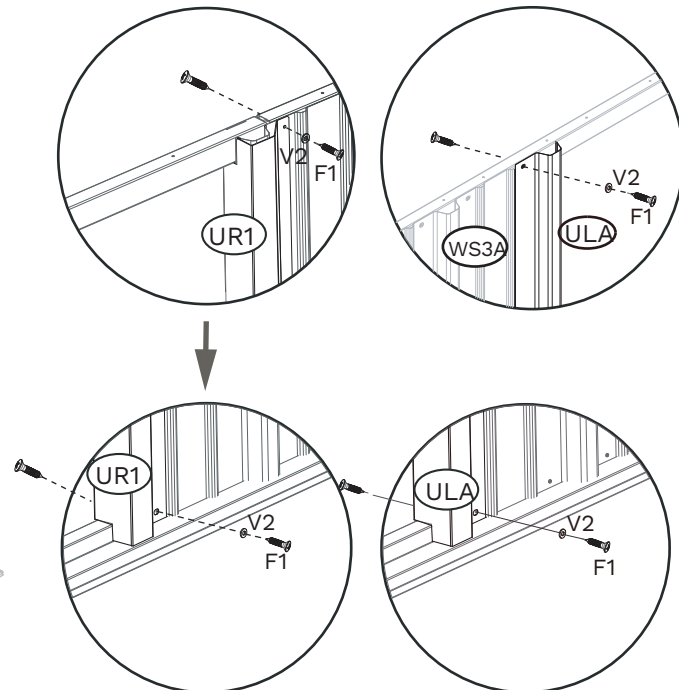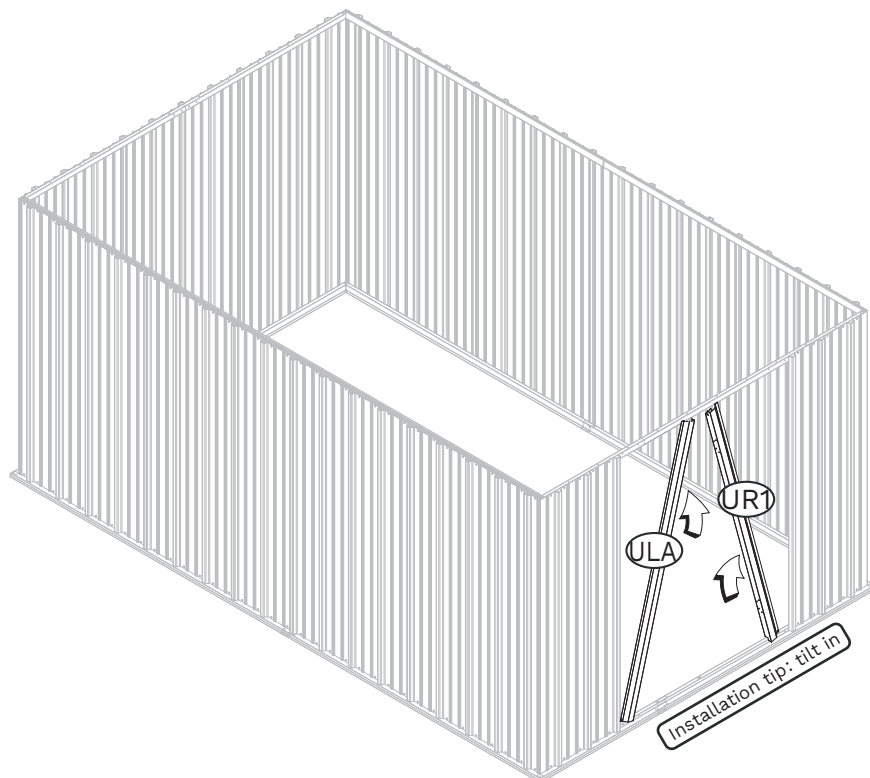

## STEP 15

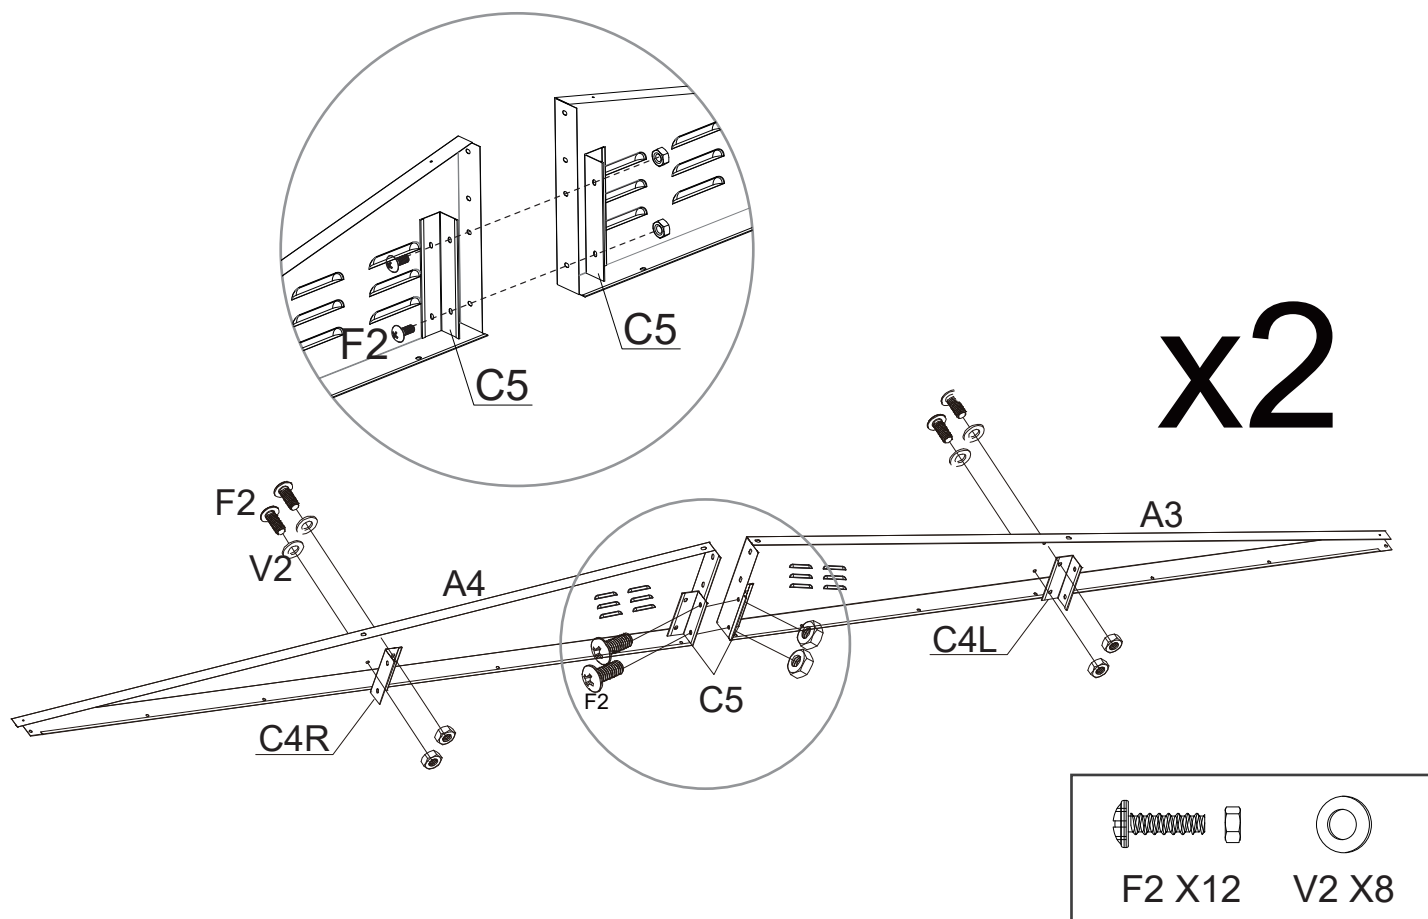


## STEP 16

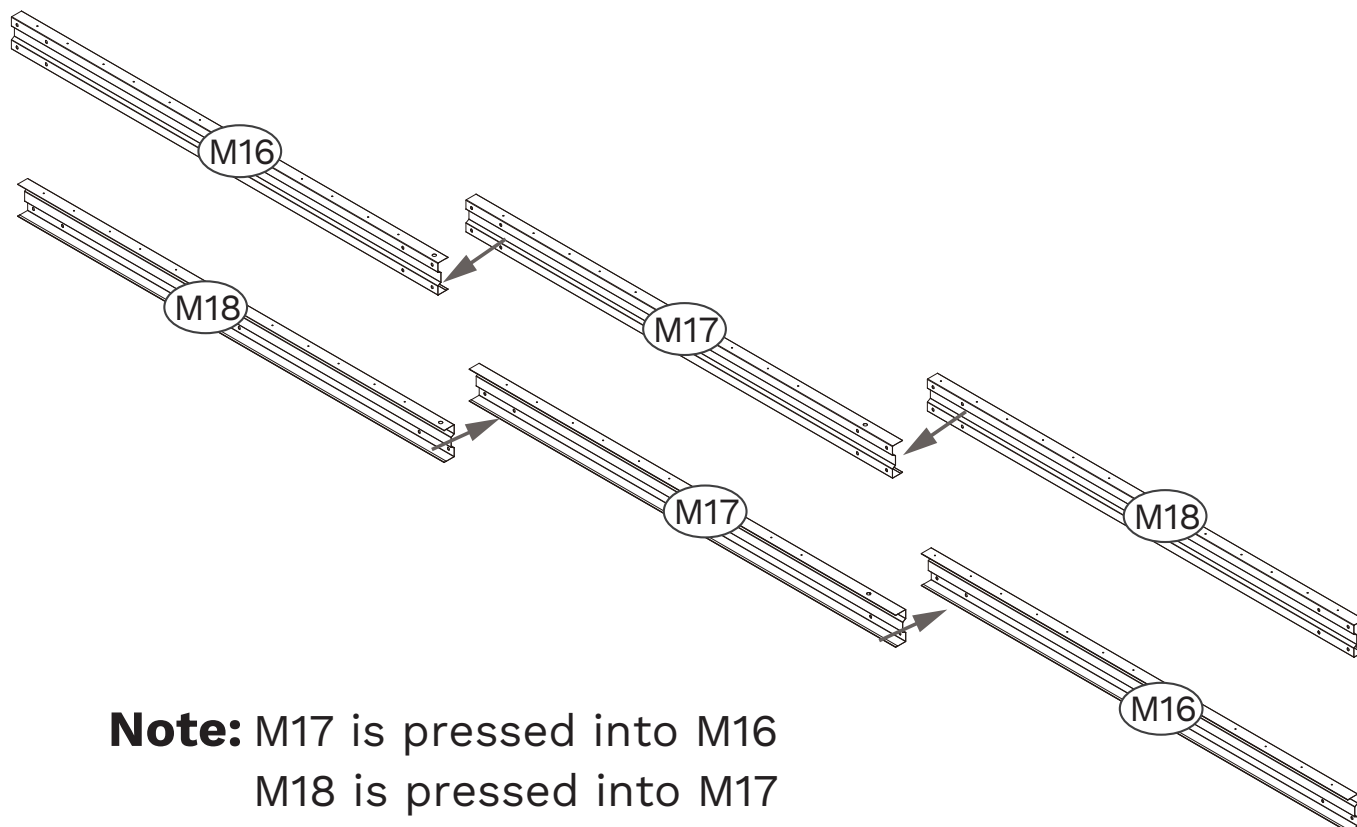


**Note:** M17 is pressed into M16  
M18 is pressed into M17

## STEP 17



Don't tighten these two screws too tightly

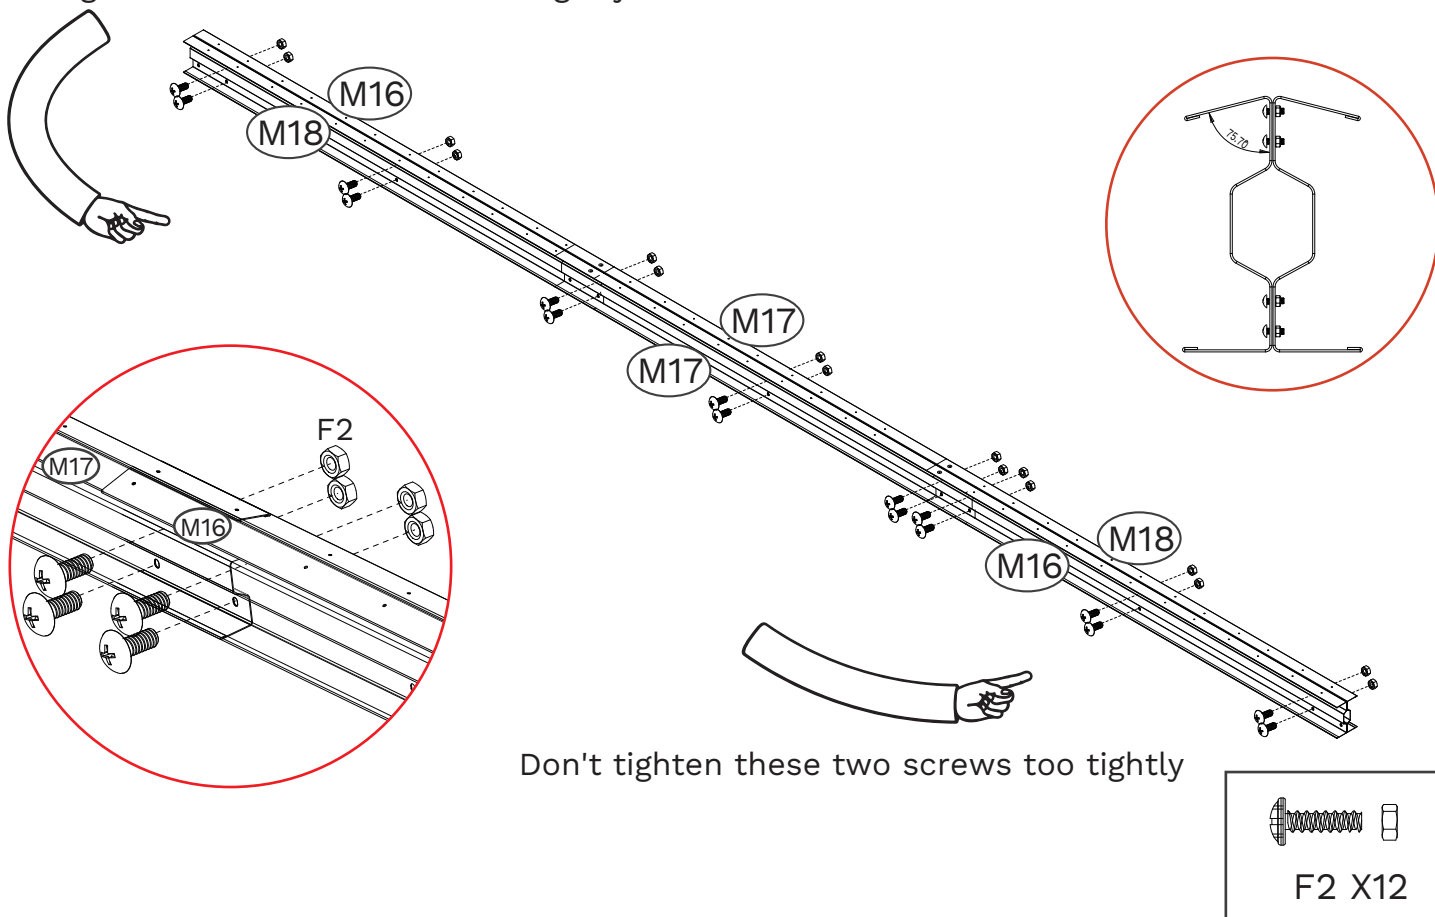


## STEP 18

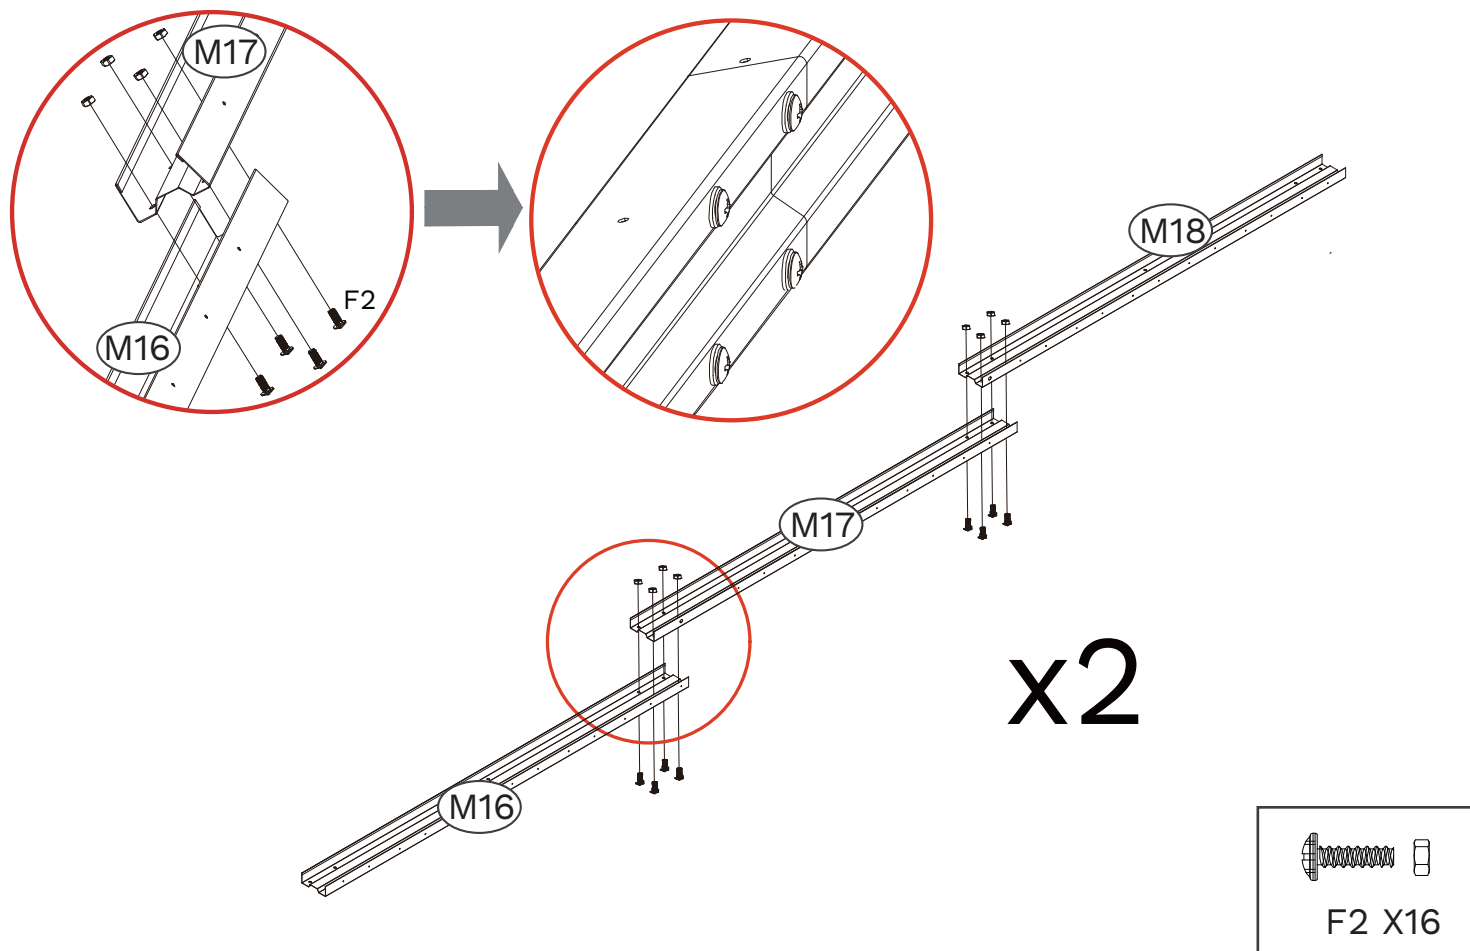



## STEP 19

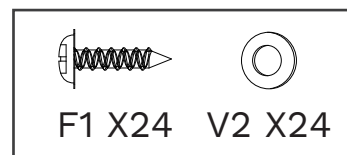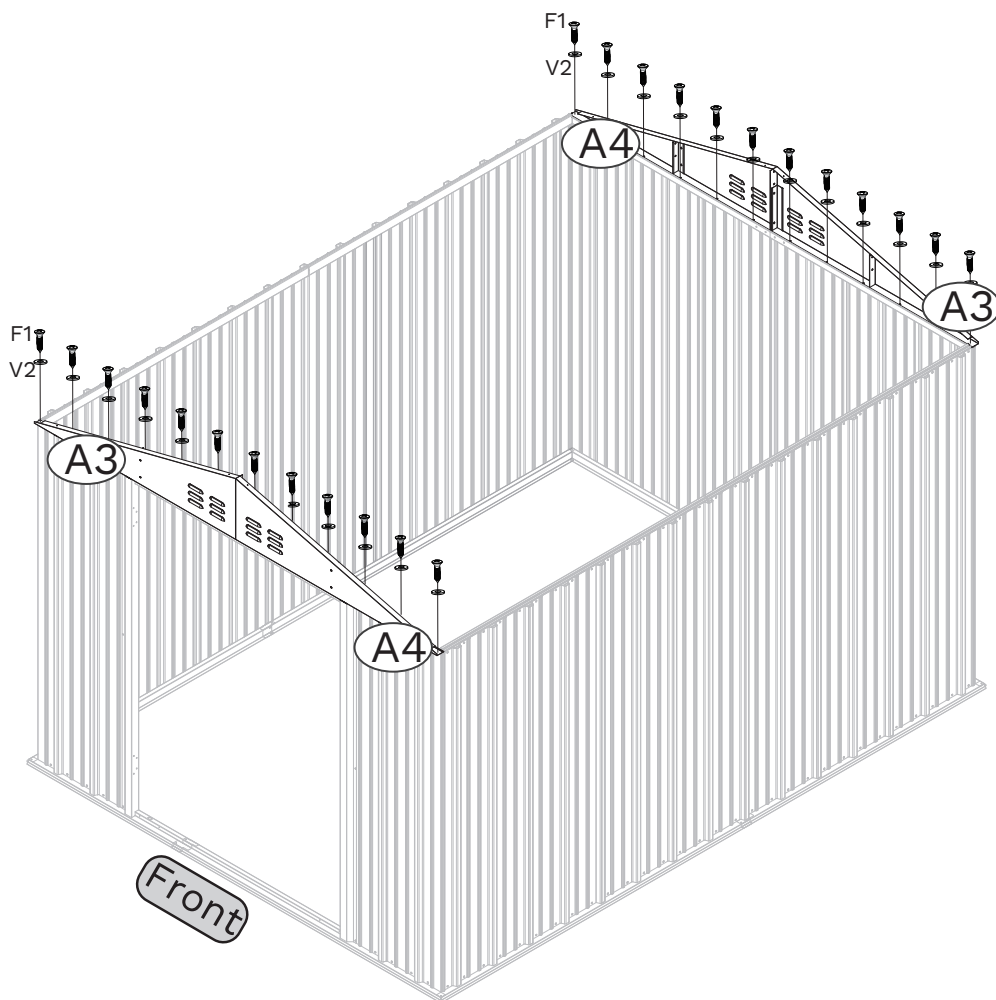

## STEP 20




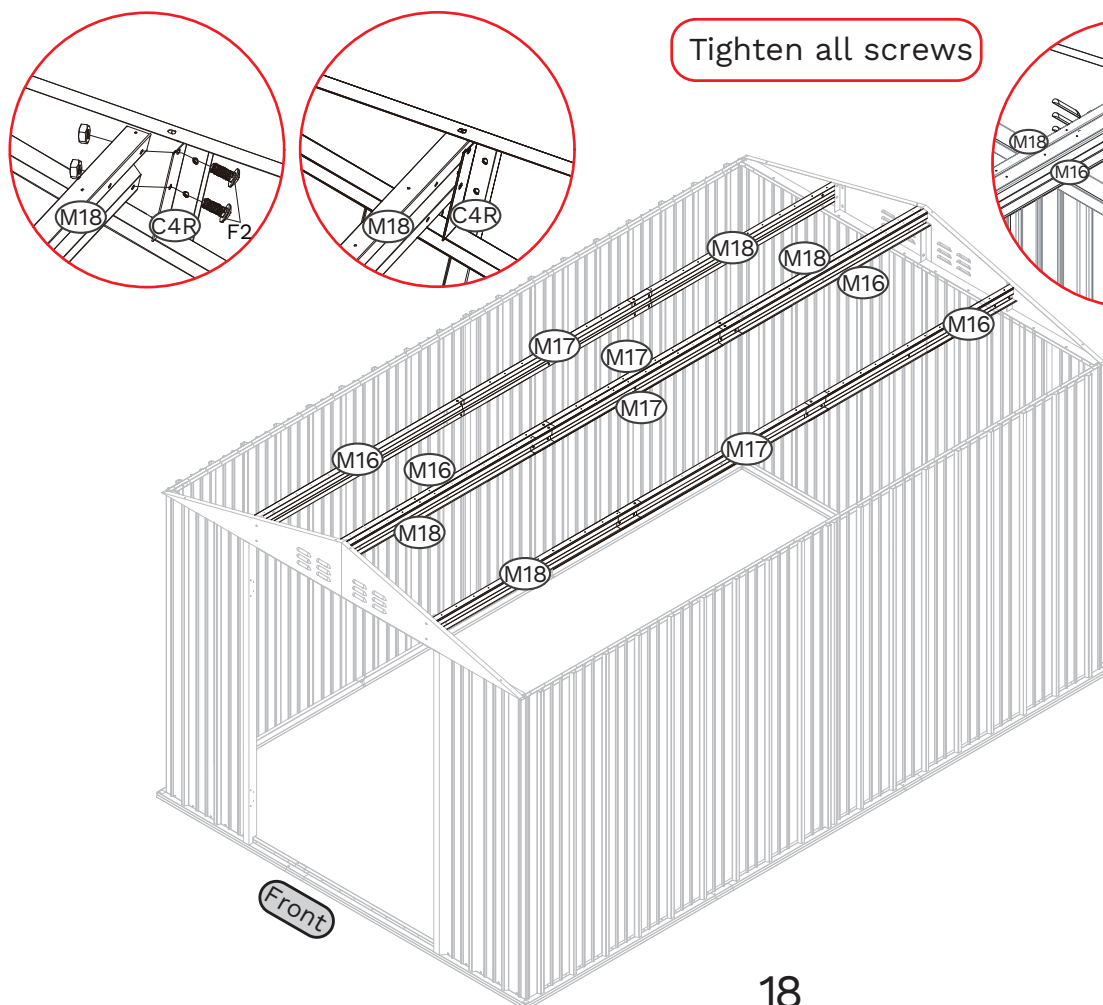


Tighten all screws

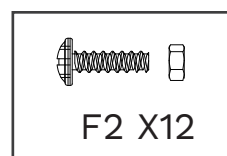
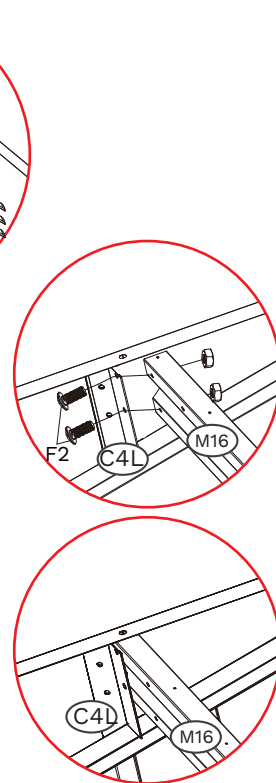





## STEP 21

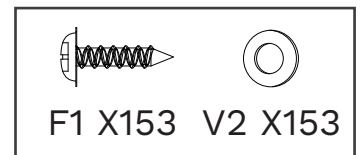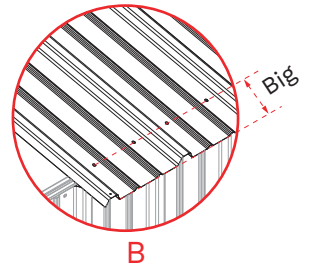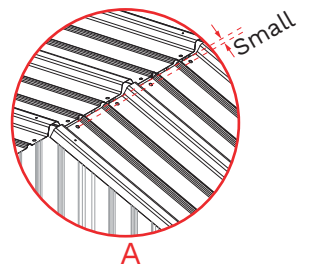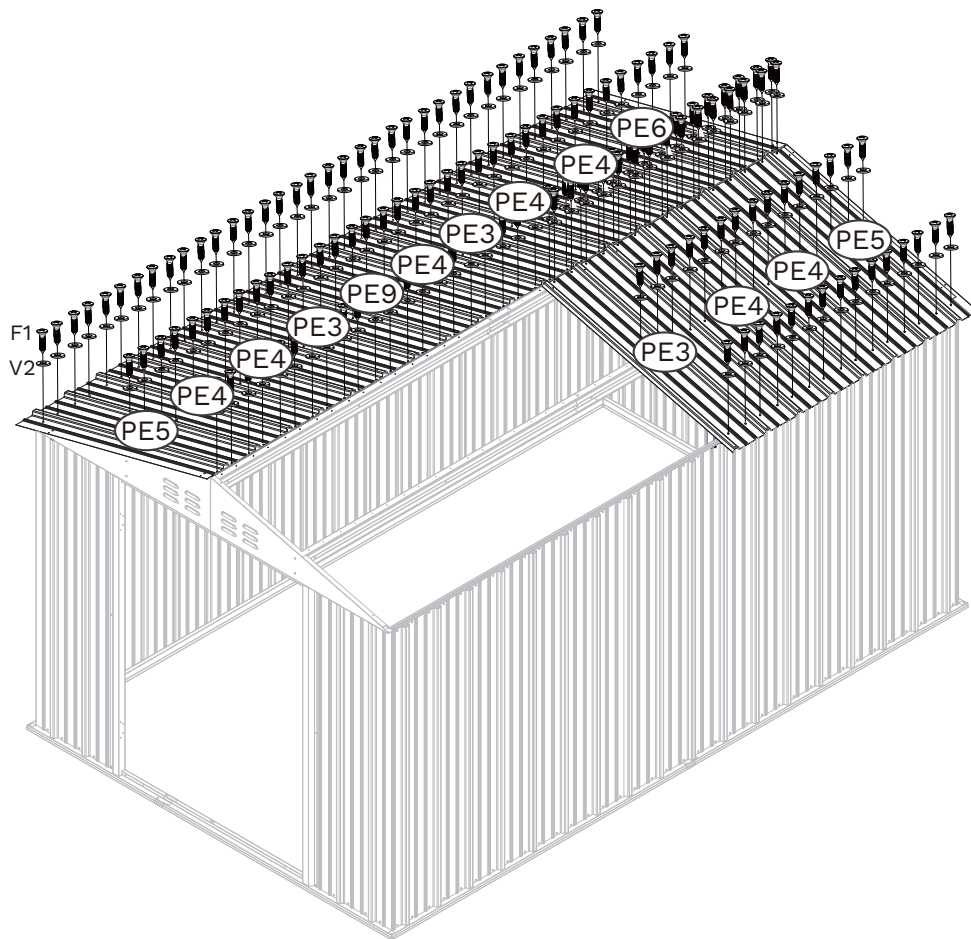

## STEP 22

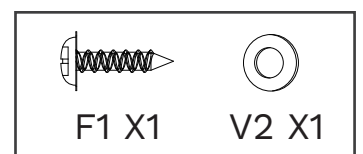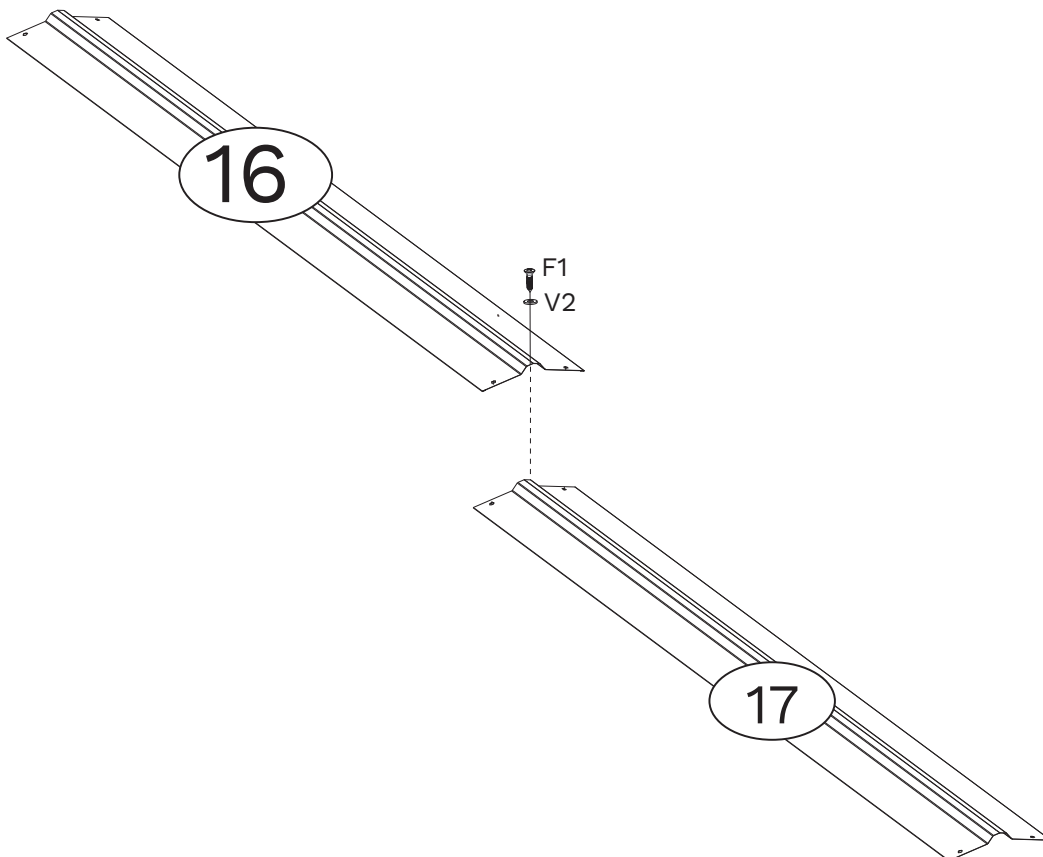


## STEP 23

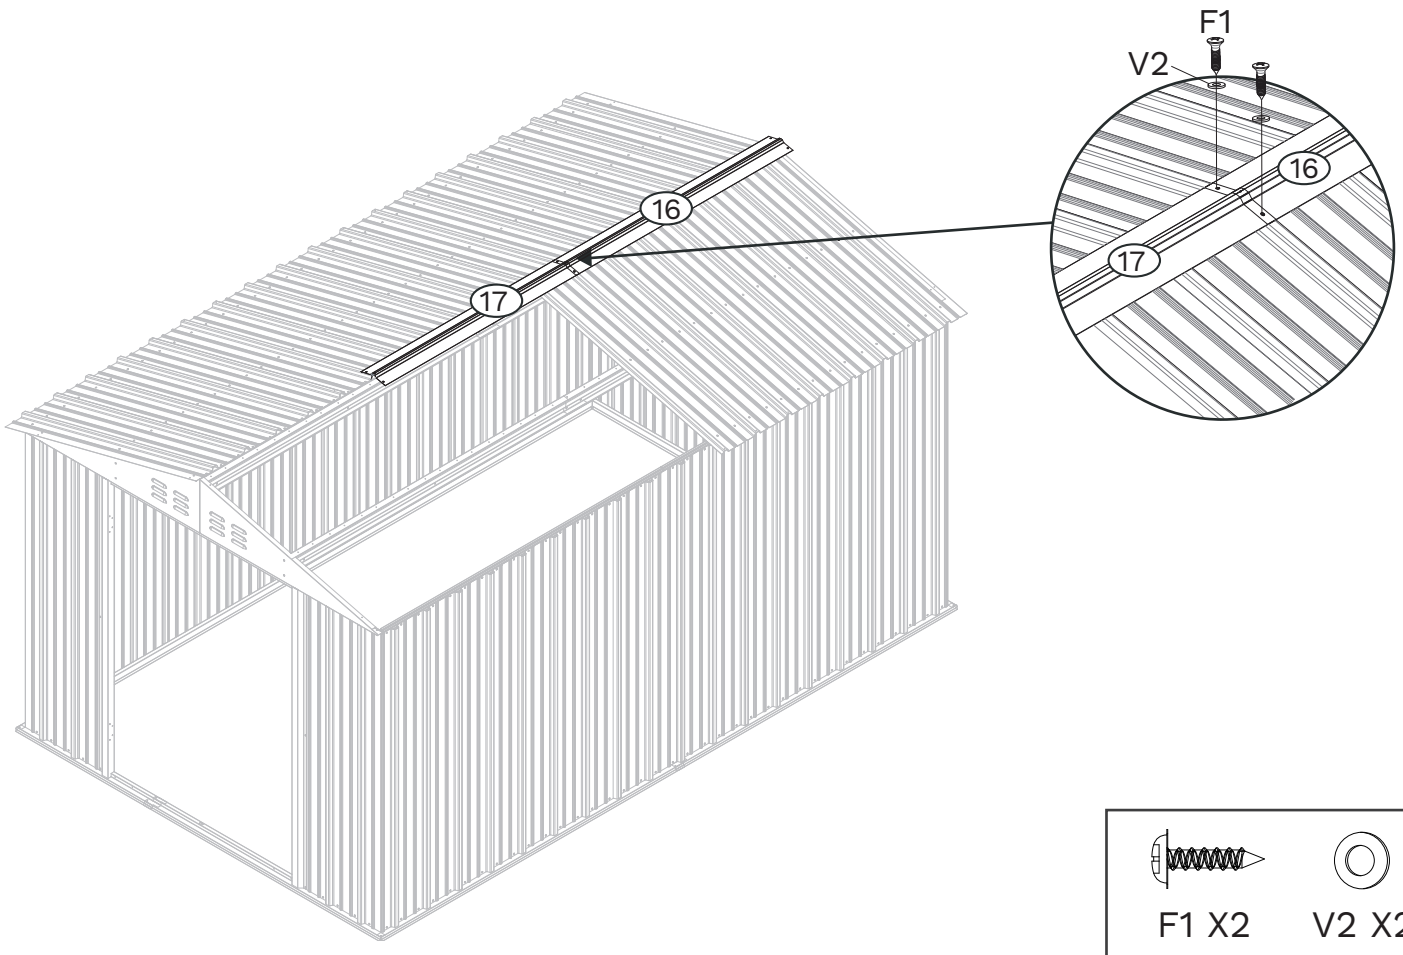




## STEP 24

**Installation tips** You need to gently lift the 19B and then screw it.

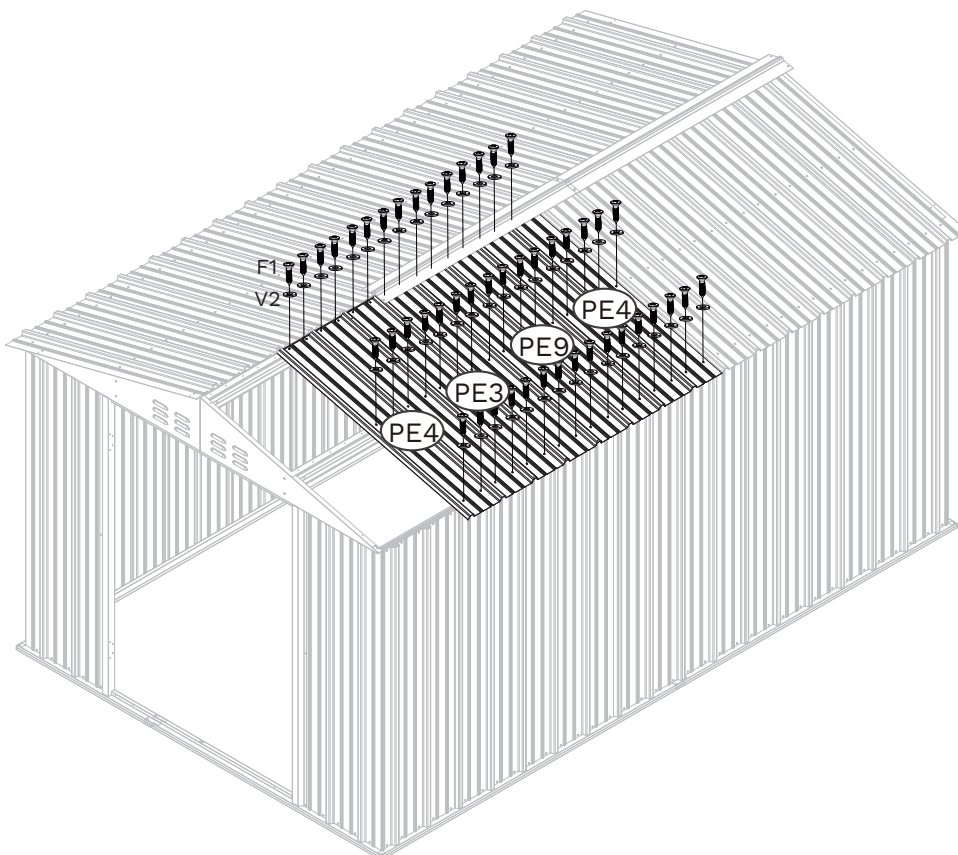





## STEP 25

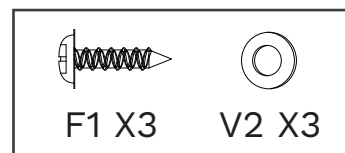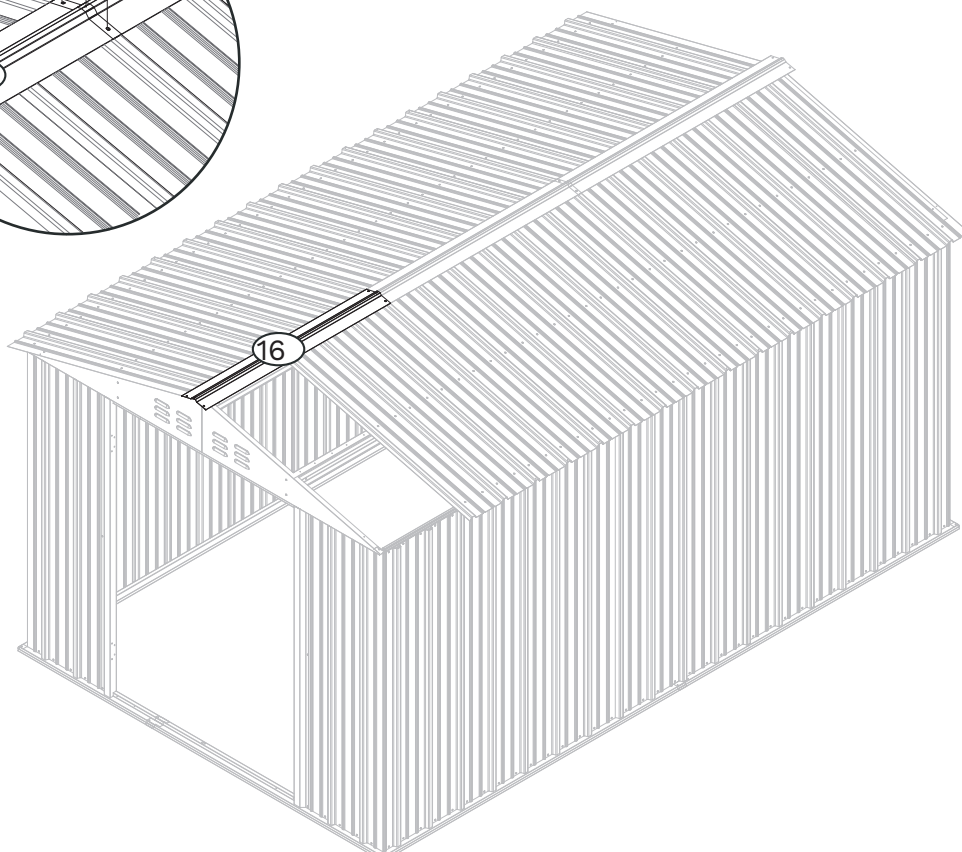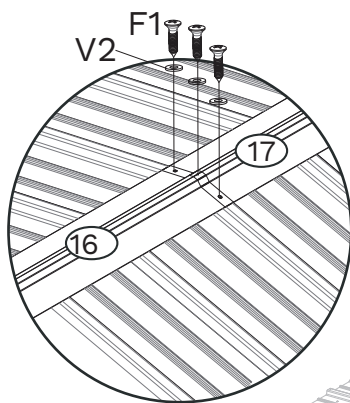



## STEP 26

**Installation tips** You need to gently lift the 19B and then screw it.

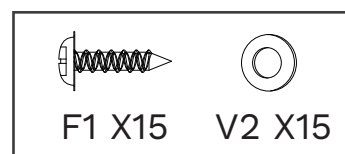
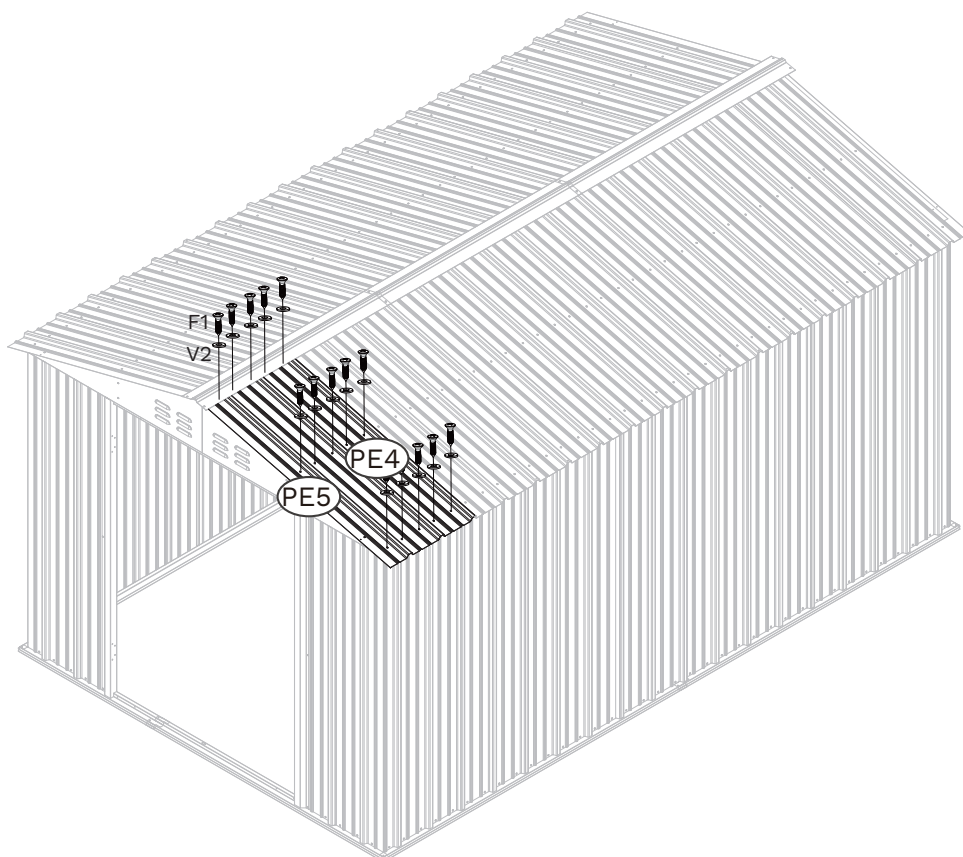


## STEP 27


In this step, hide 19/19A/19B and don't show it for the time being.

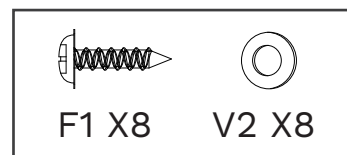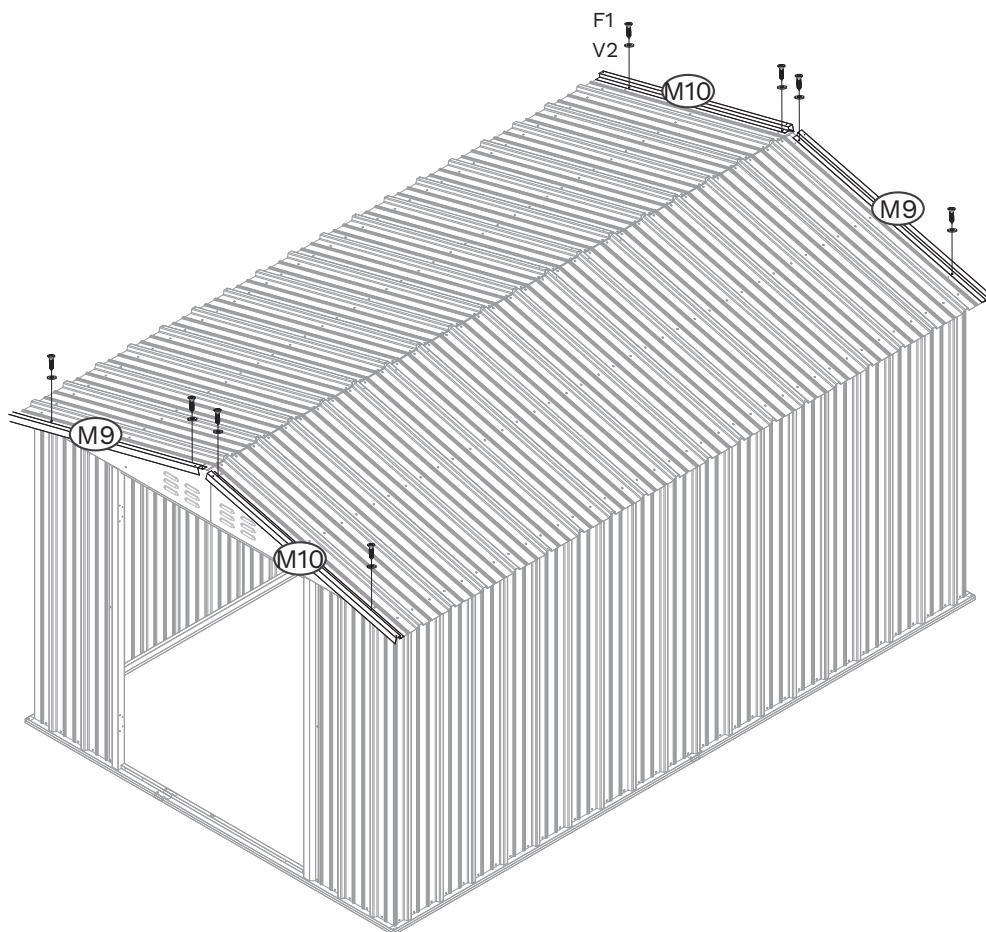


## STEP 28

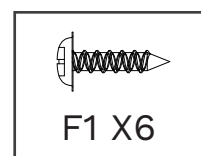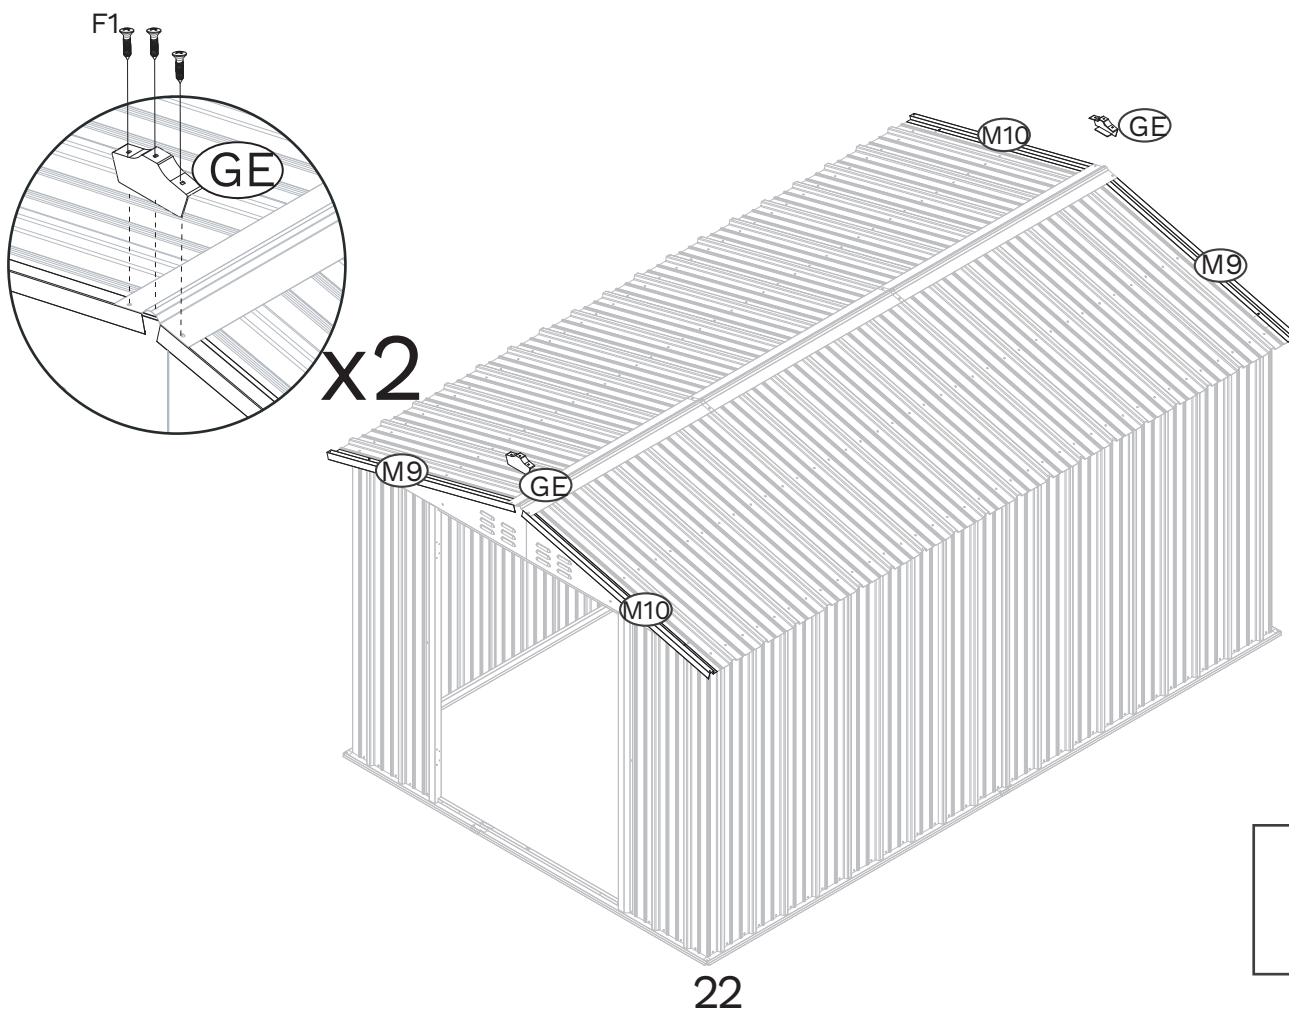

## STEP 29


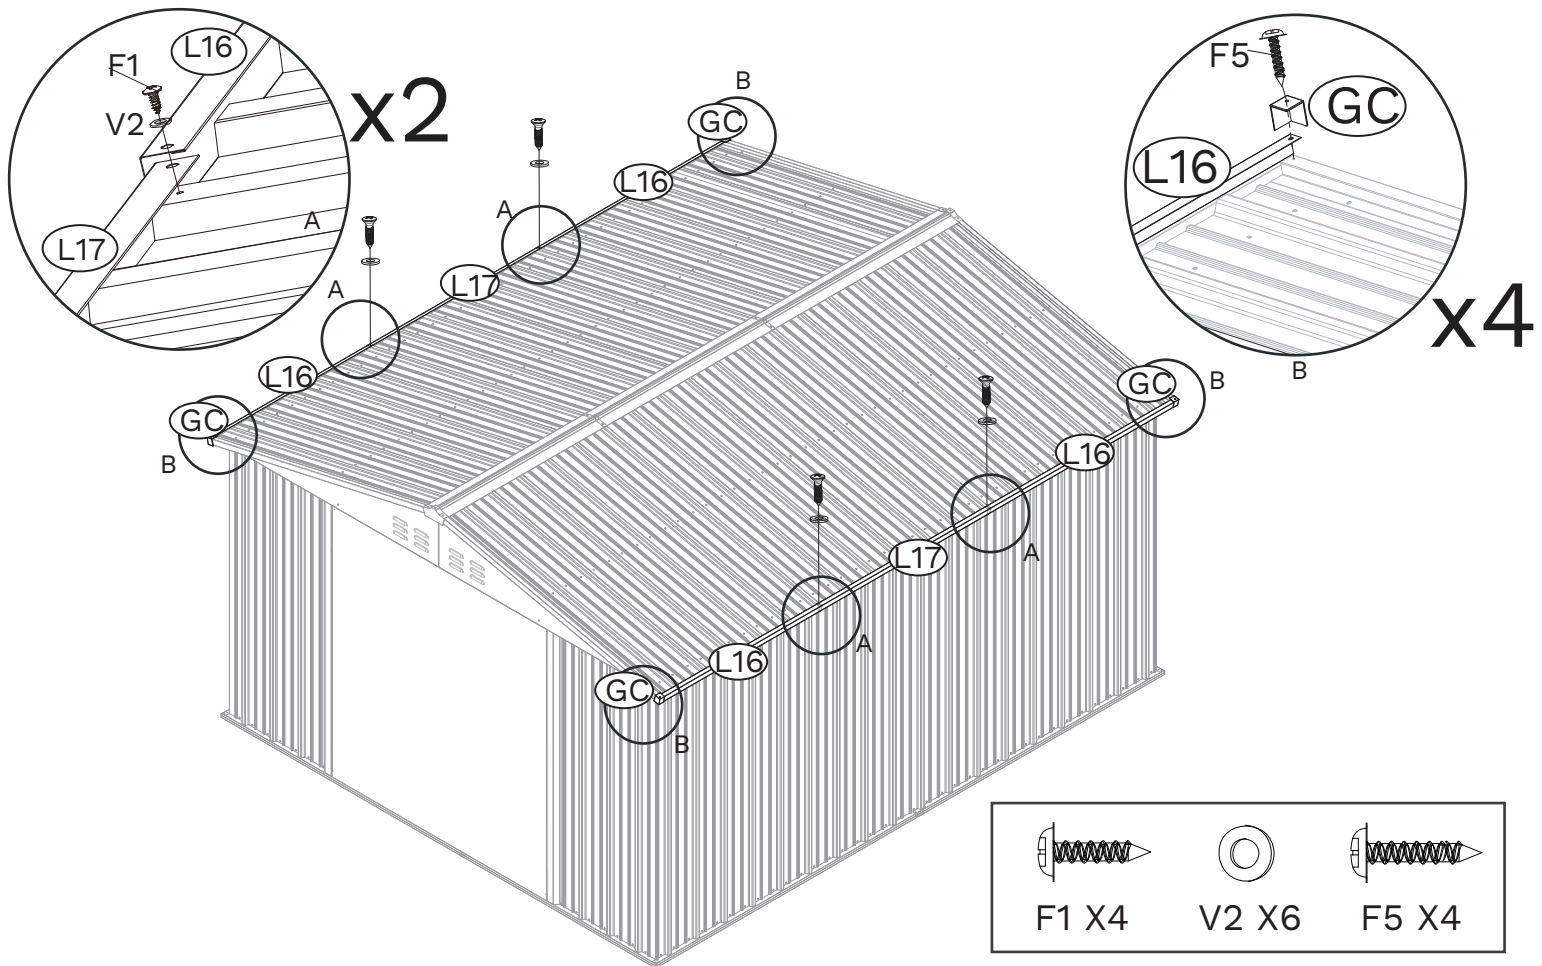


## STEP 30

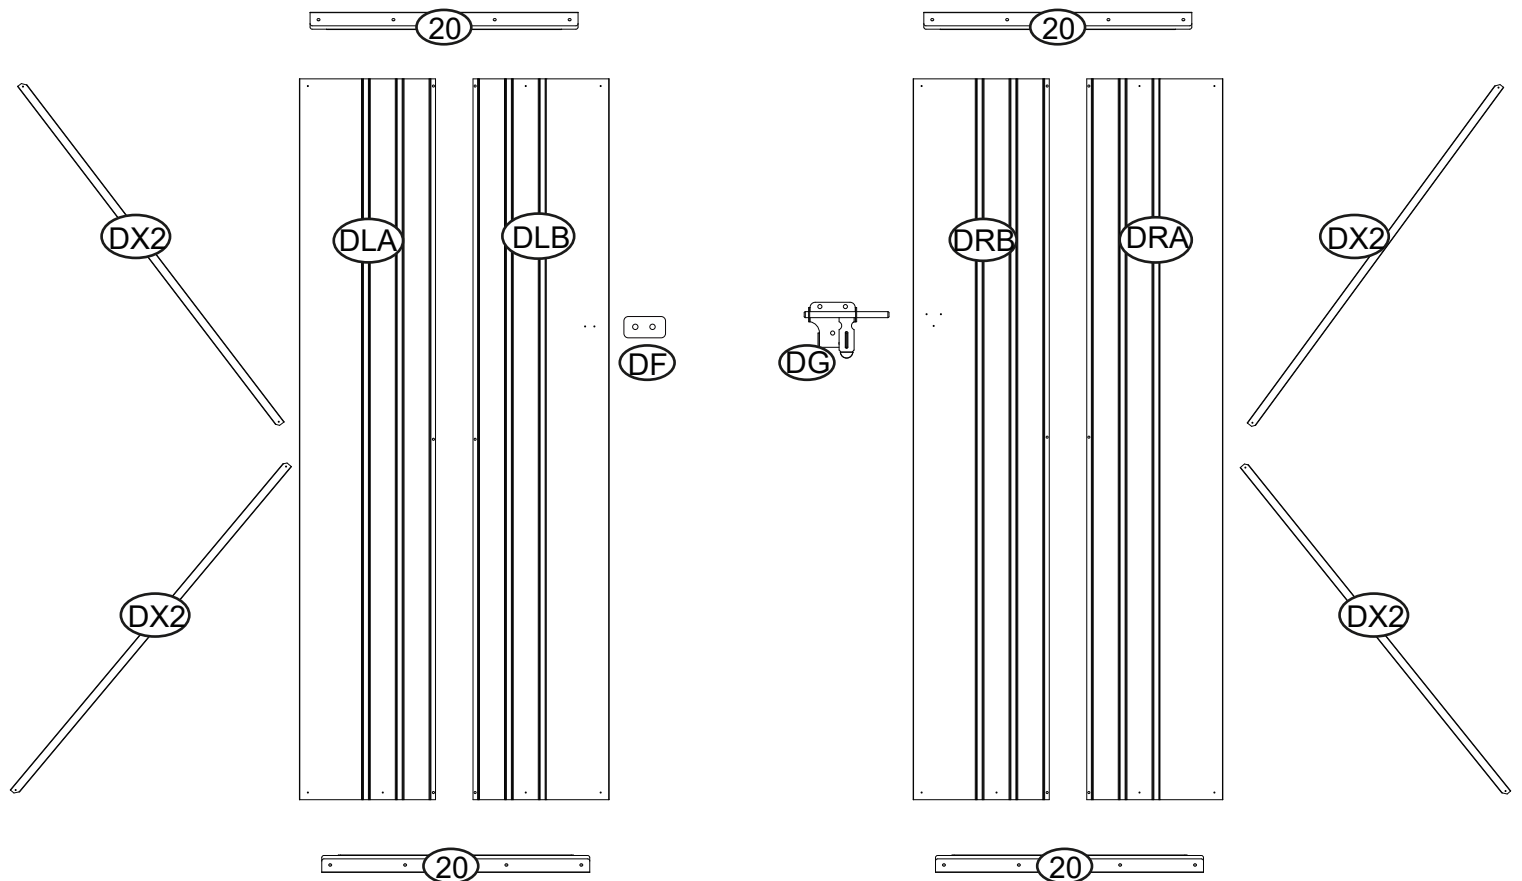


## STEP 31


The other door operates the same way

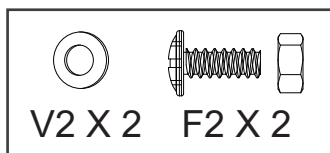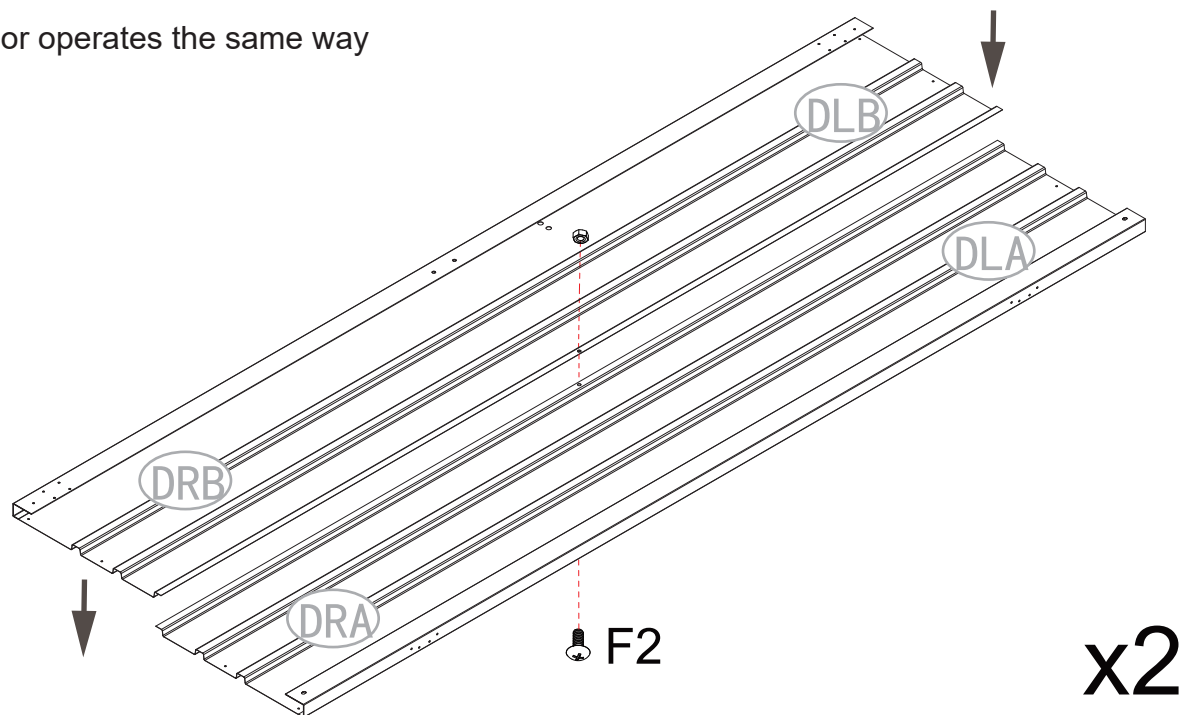



## STEP 32

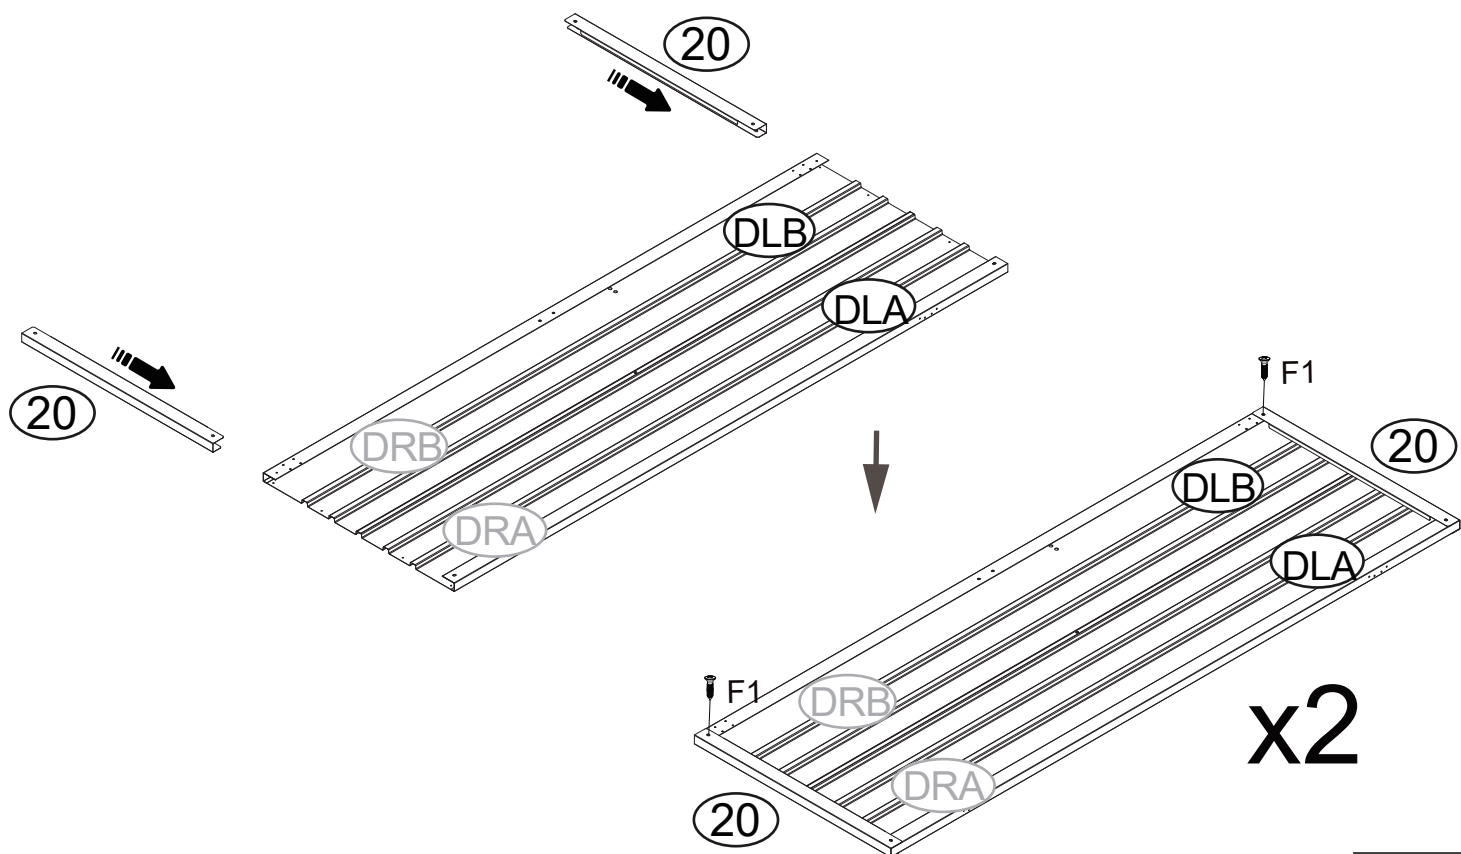



The other door operates the same way

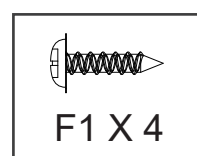

# STEP 33




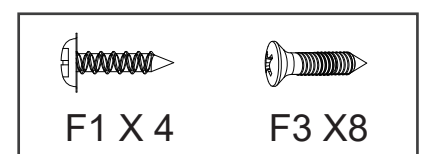
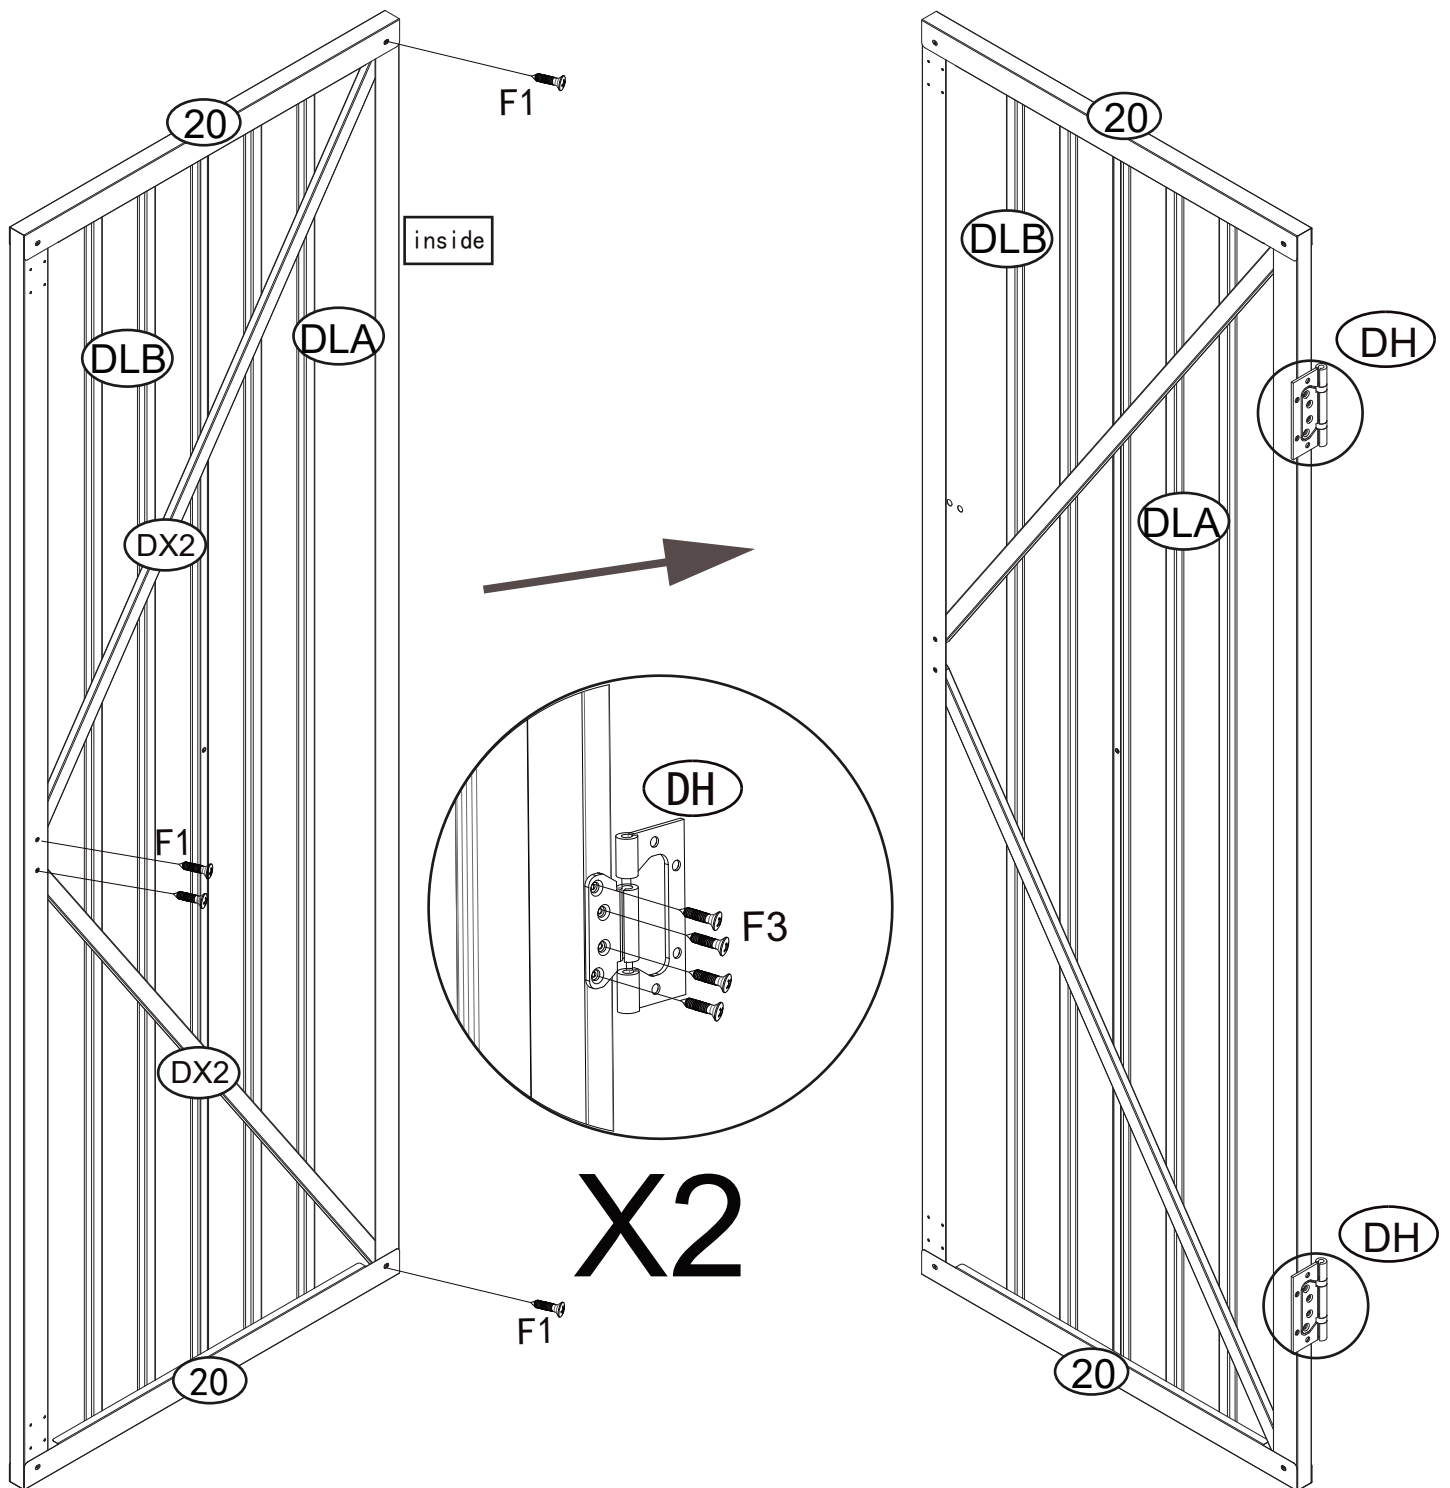


# STEP 34


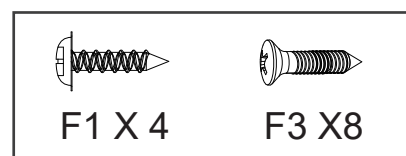
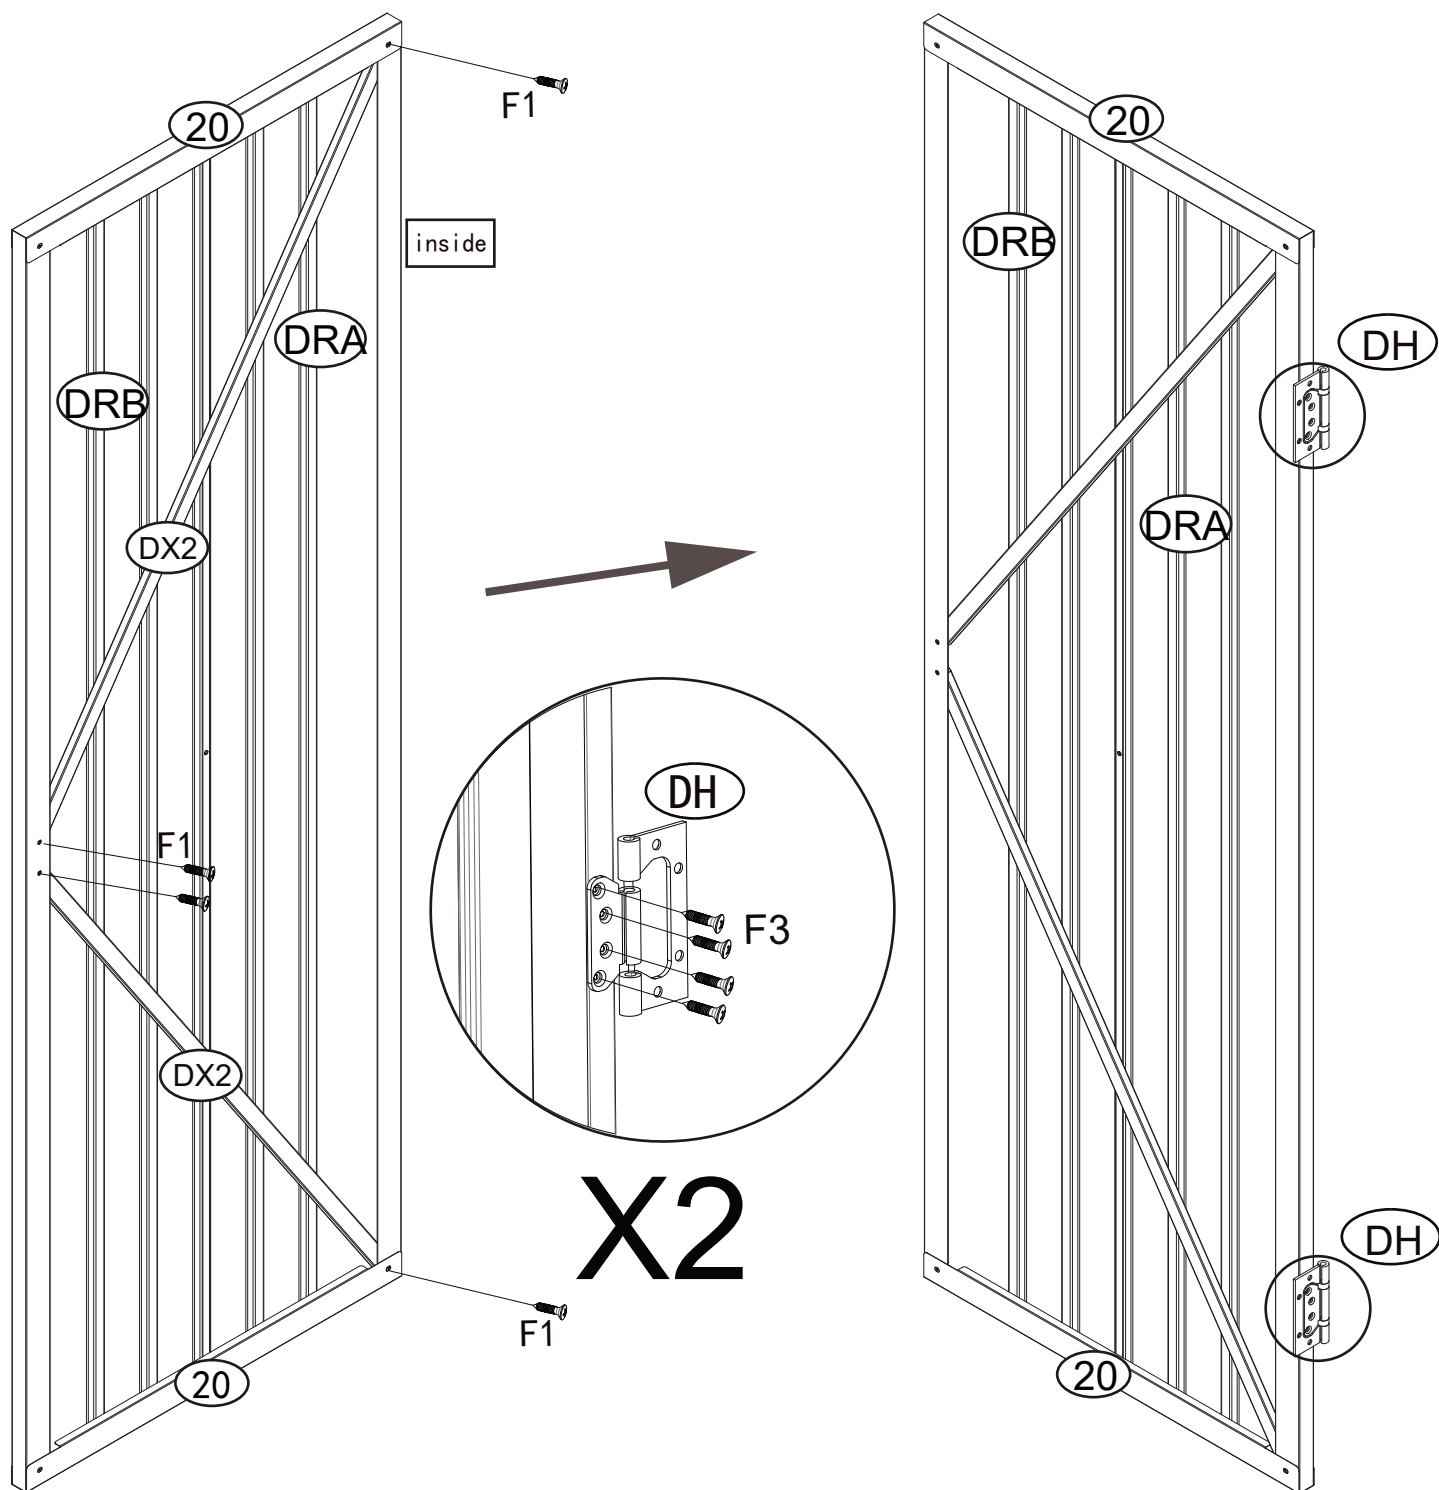







# STEP 35

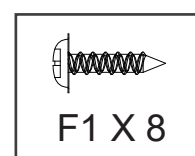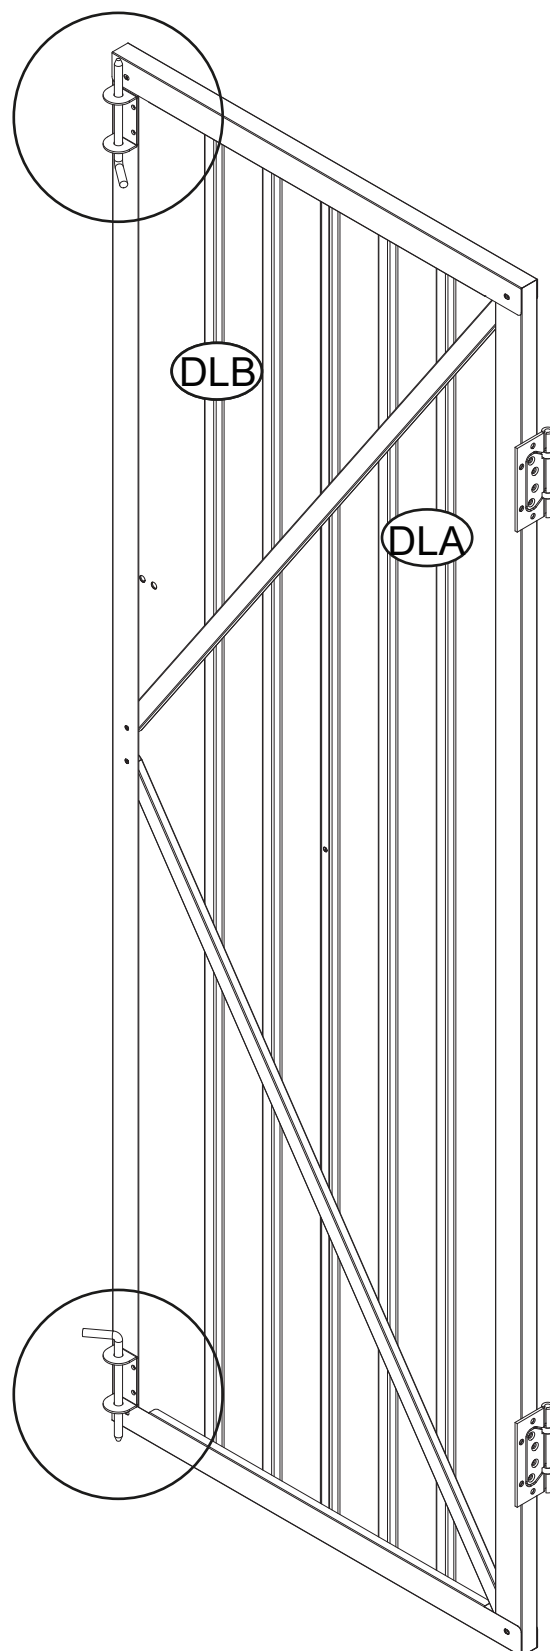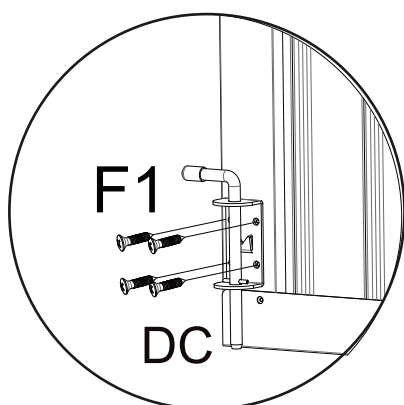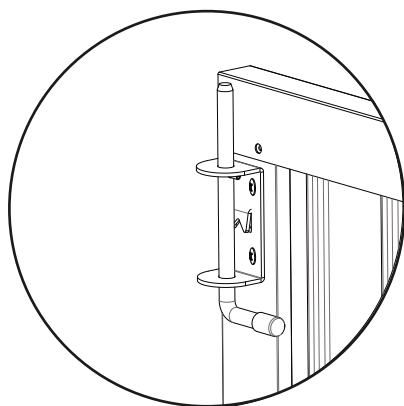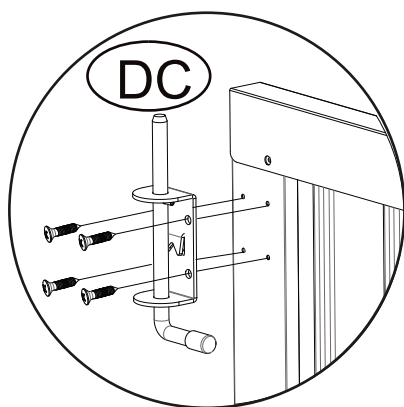

# STEP 36

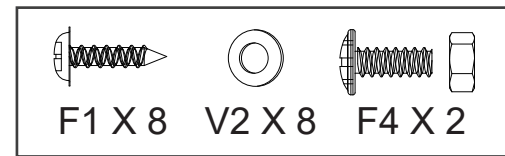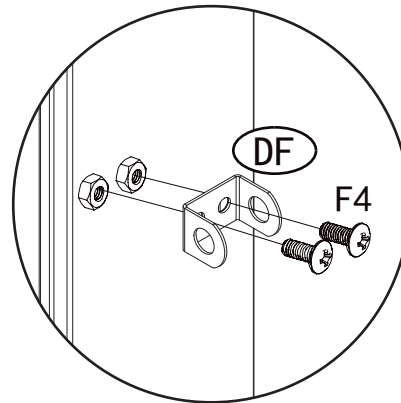
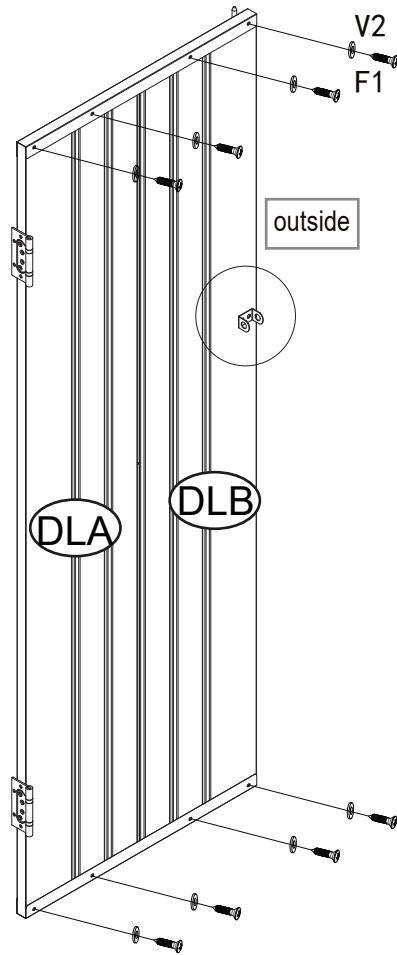


# STEP 37

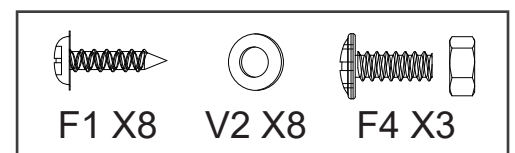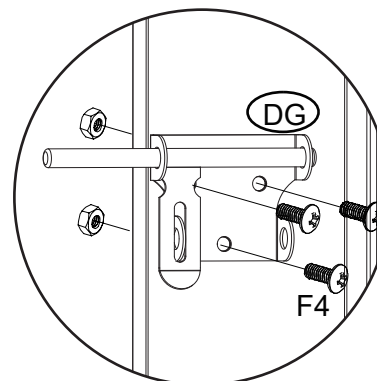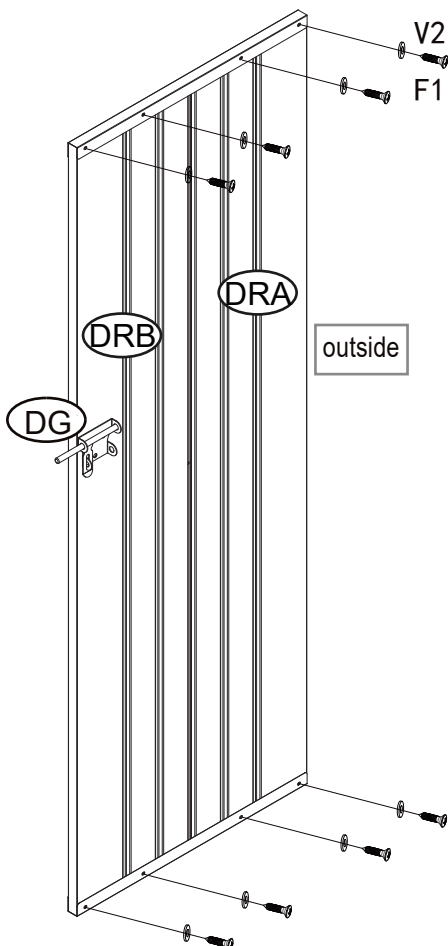






# STEP 38

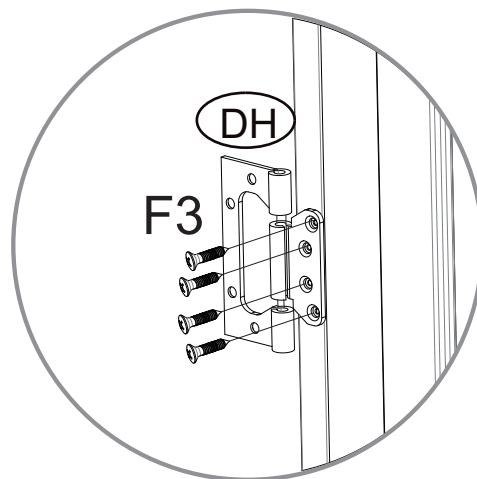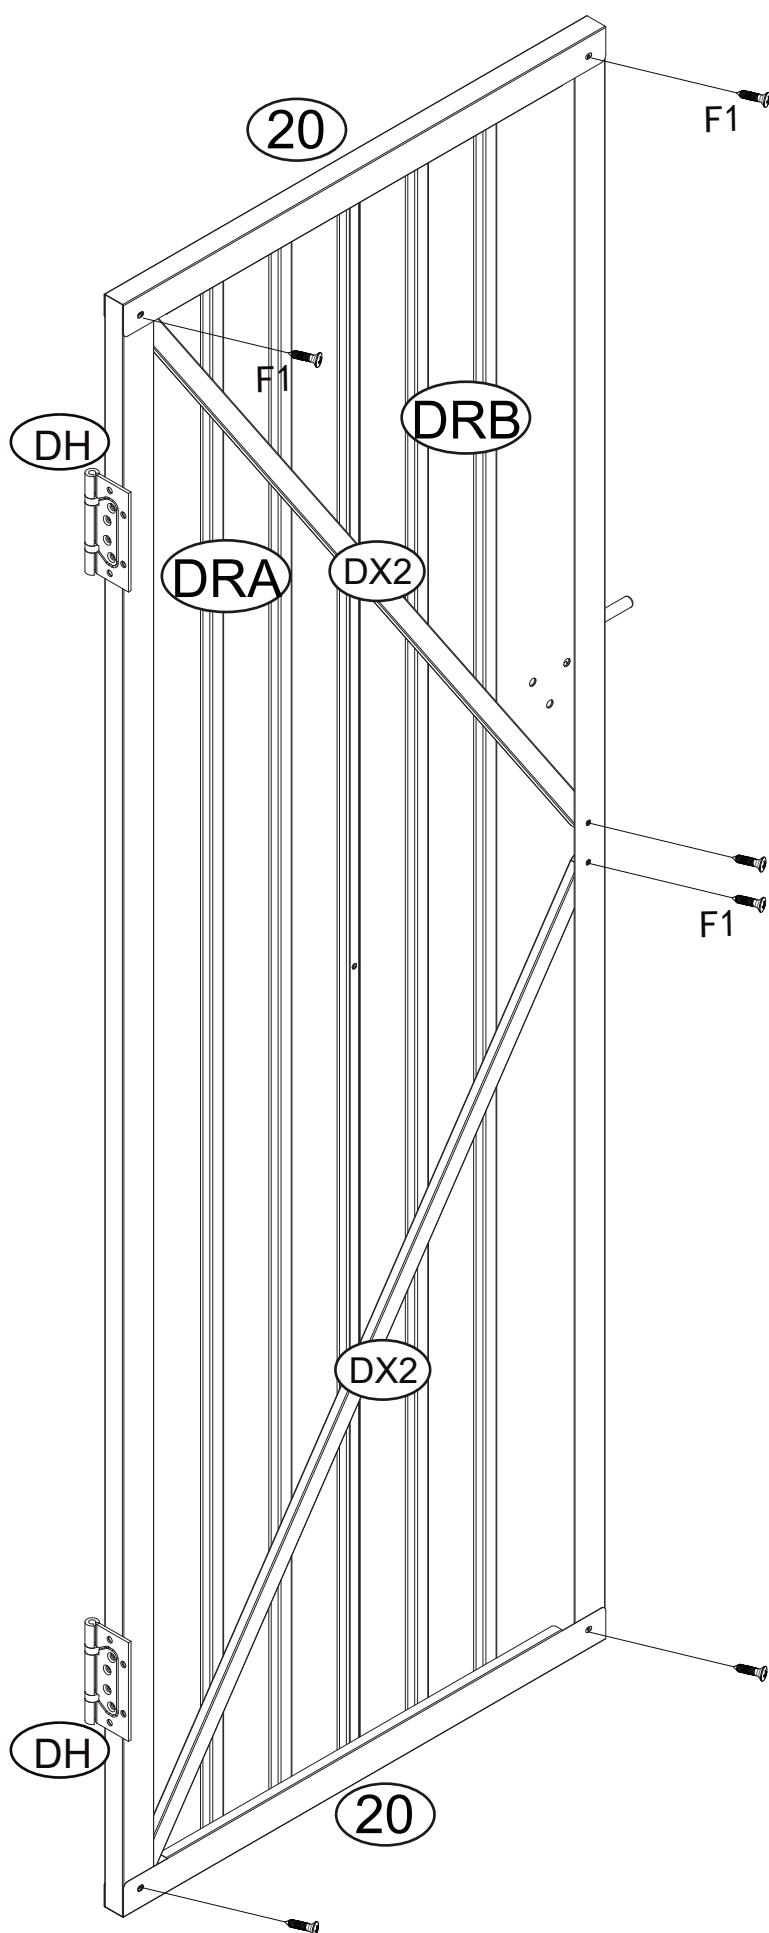


**X2**

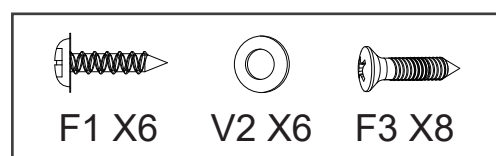


# STEP 39

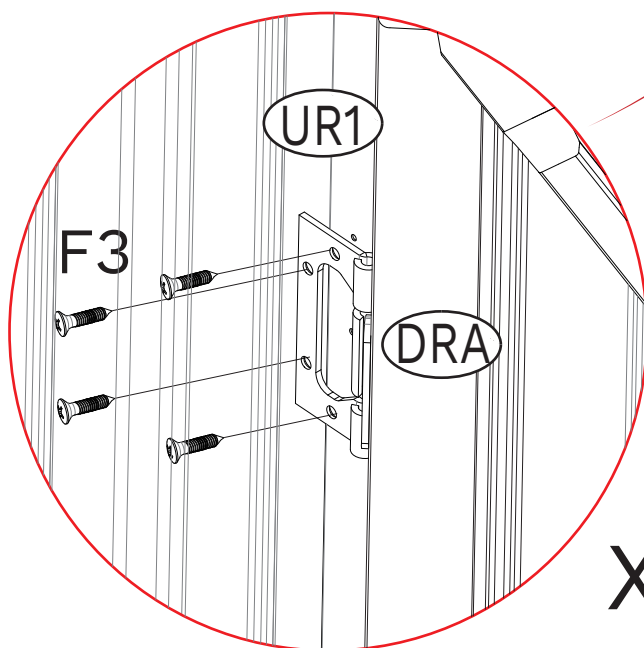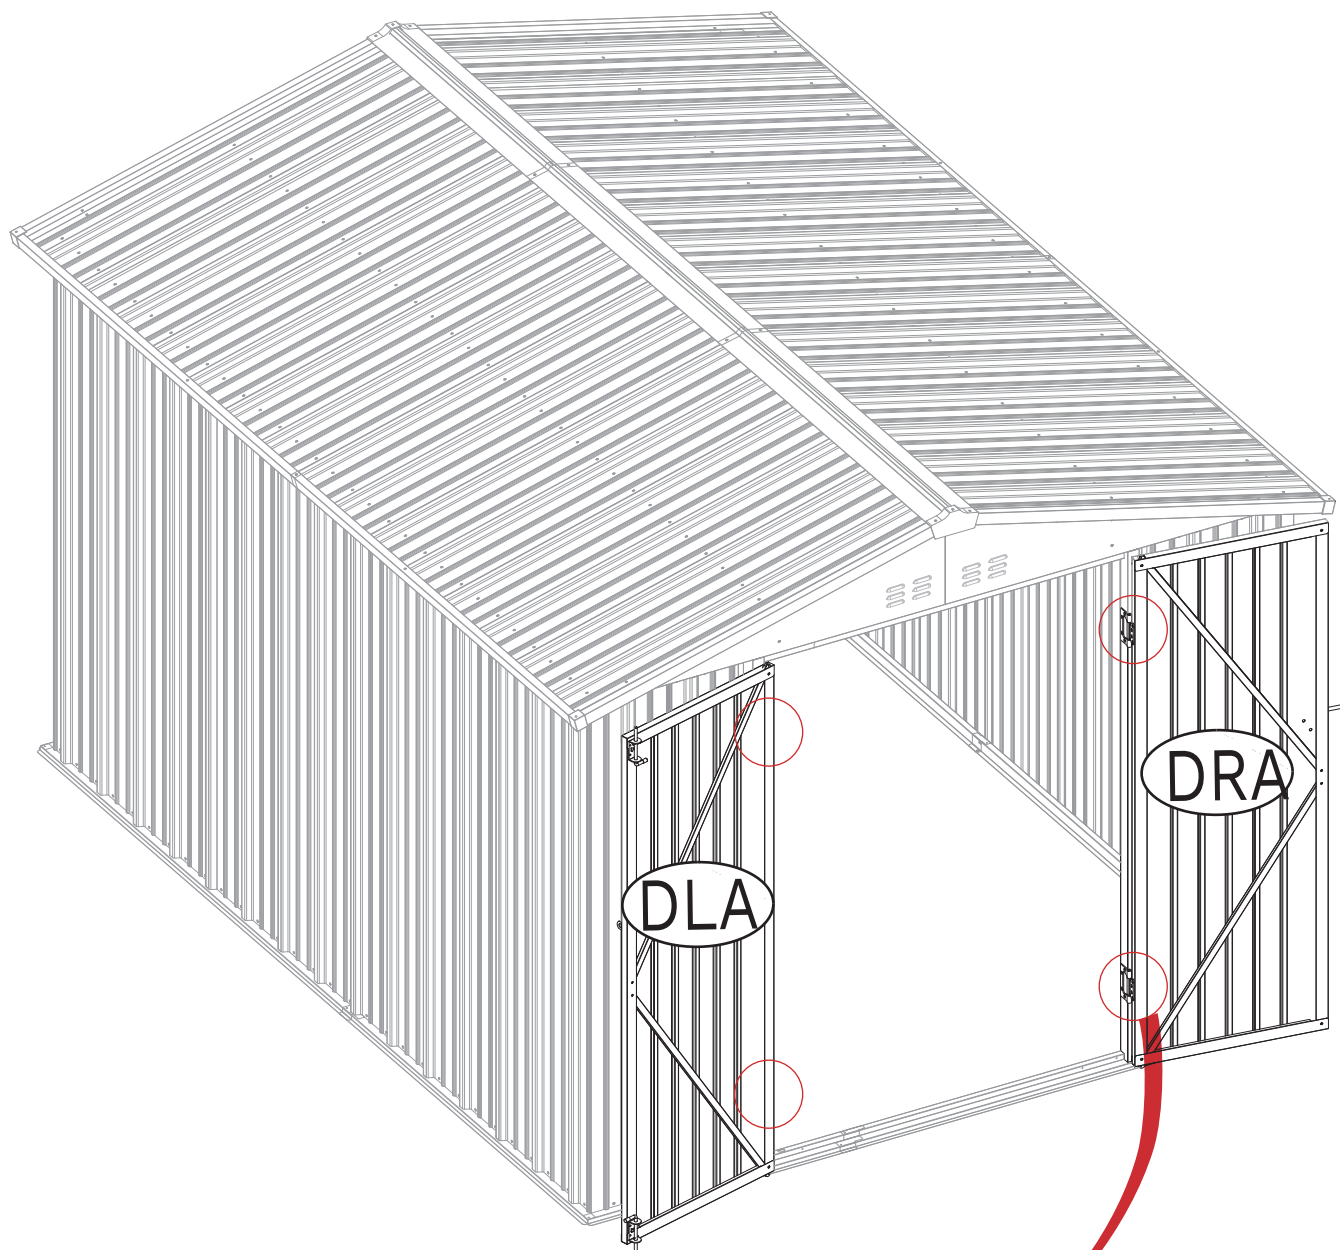


X4

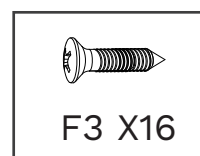

## STEP 40

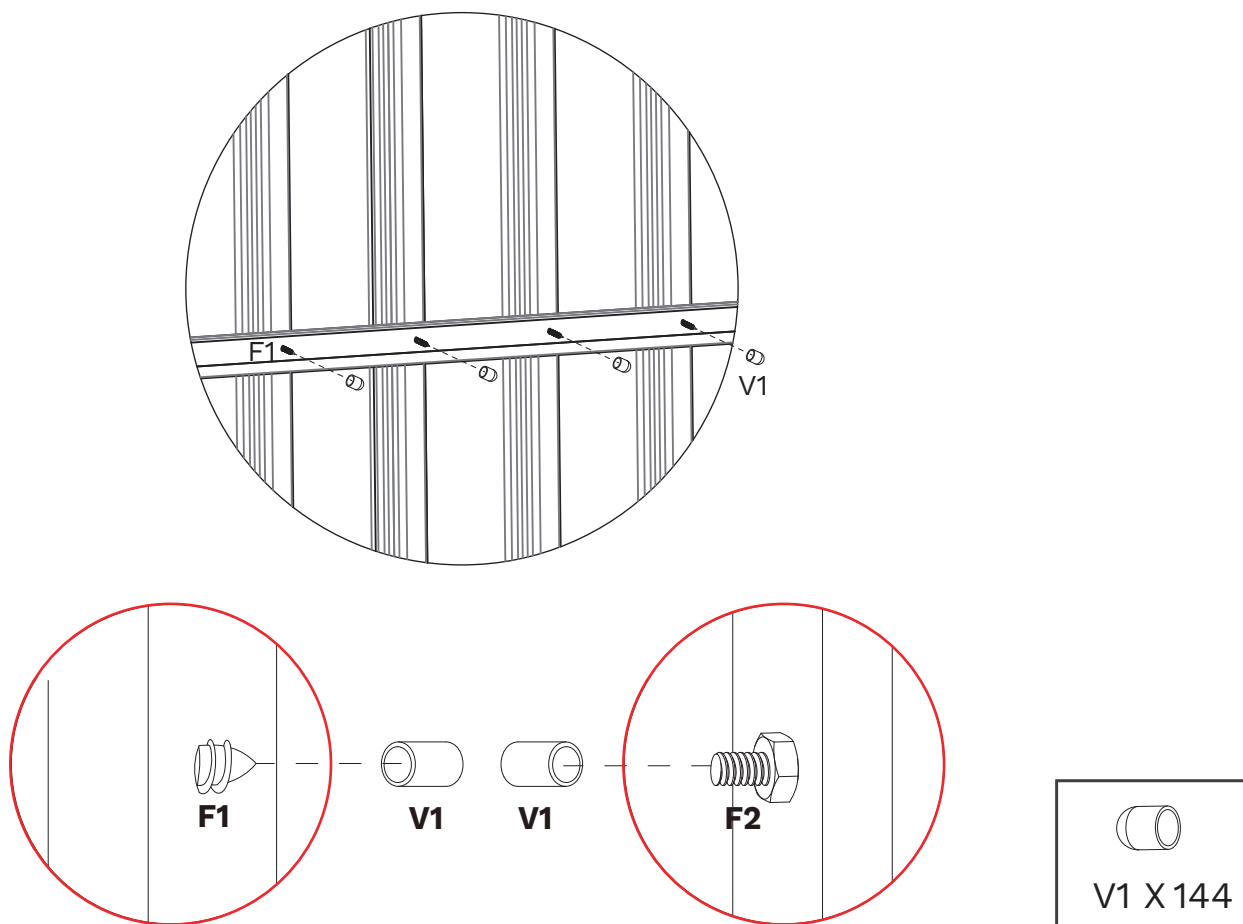

## FINISH

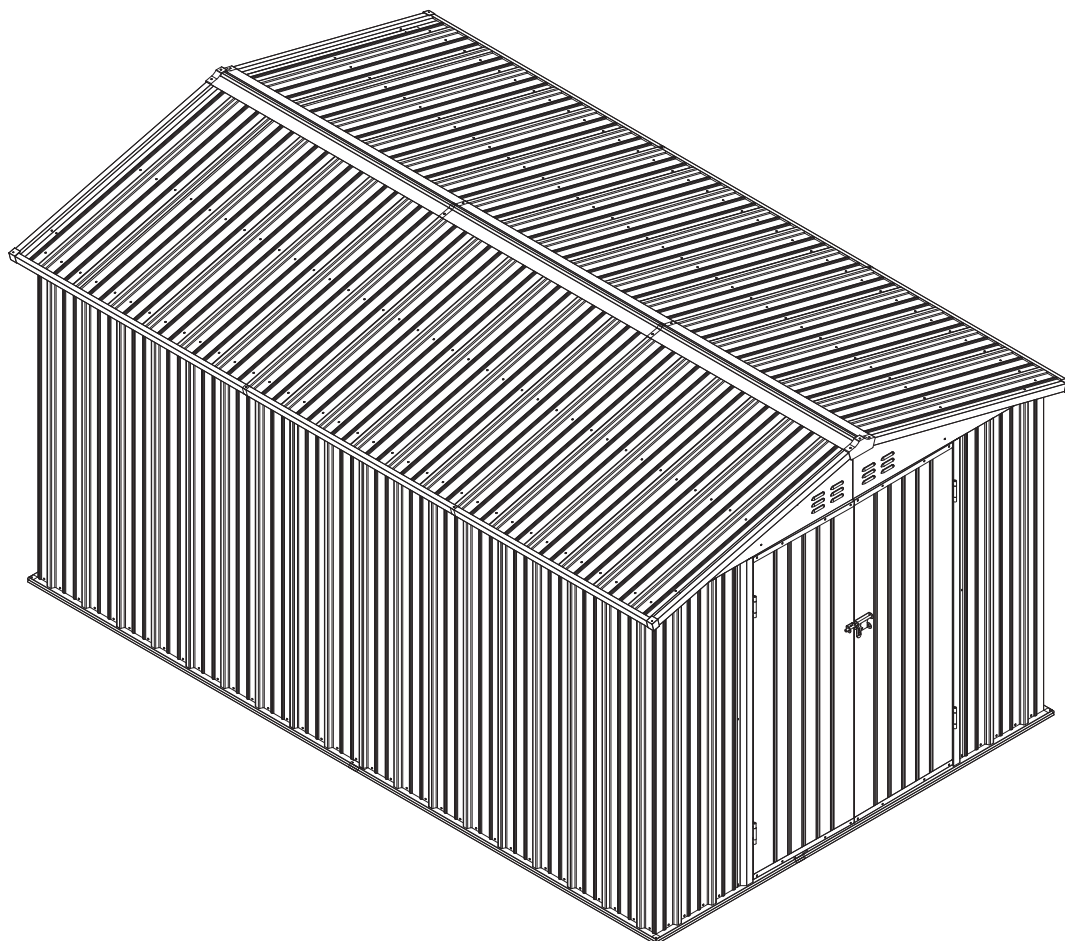

## CARE & SAFETY

- In case of fire, do not attempt to extinguish any burning polypropylene with water. Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9"-3", screws are not included).
- Wear safety-goggles and always follow the manufacturer's instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.