



# Trex® Protect™

## JOIST, BEAM & RIM TAPE

### TREX JOIST, BEAM & RIM TAPE INSTALLATION

---

- » Trex Protect Tape can be applied to horizontal and vertical surfaces including all joists, rim joists, beams, steps, stair stringers, blocking, ledger board, under joists hangers and other surfaces.
  - » When pulling deck boards onto the deck, a piece of plywood or wafer board can be used to overhang the edge of the deck. This will prevent the product from rolling up and pulling up from the joist.
  - » Trex Protect tape has three widths making it convenient to apply to all wood surfaces.
    - Use 1-5/8" x 50' (4.13 cm x 15.24 m) Joist Tape for joists
    - Use 3-1/8" x 50' (7.94 cm x 15.24 m) Beam Tape for all double beams
    - Use 11" x 50' (27.94 cm x 15.24 m) Rim Tape for rim joists, stairs and all flat-blocked surfaces
- NOTE:** *Trex Protect cannot be used to install Trex RainEscape*

---

### INSTRUCTIONS

#### STEP 1




- » Clean the wood surface making sure it is dry and free of any debris.

#### STEP 2

- » Remove the backing while applying the tape directly to the surface. Run your hand over the tape and firmly press onto the wood surface.

#### STEP 3

- » After covering the wood surface with tape, cut the tape to length with a utility knife or scissors.

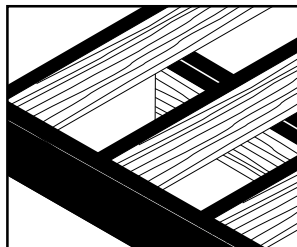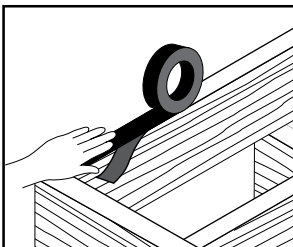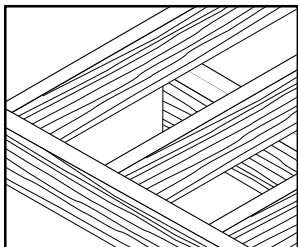

For more information, visit [www.trexprotect.com](http://www.trexprotect.com)