


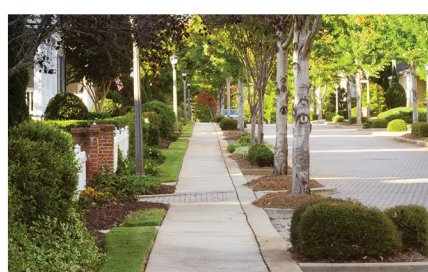

SikaQuick® Patch

High performance patch for concrete



Step 1: Roll

Simply roll pouch until seal is broken in the middle.



Step 2: Mix

Shake the pouch back-and-forth for at least **20 seconds** or until both components are fully mixed (no clumps).



Step 3: Cut

Cut pouch at corner with a pair of scissors or utility knife.



Step 4: Pour

Pour mortar into hole/spall to complete repair.



Sets in 10 to 20 minutes