



## Post & Frame Installation System


# How It Works

### Basic Installation Steps

**5½" WPC Tongue & Groove Slats installed with 72" Horizontal Fence Kits\* on 75" Posts\***

- 1.** Bolt down 1st Post\*.
- 2.** Loosely screw Slat Channels\* into pre-drilled Posts. Adjust Channels to Slat thickness and tighten screws.
- 3.** Slide first Slat\* into channels. Secure with Slat Locking Screws. Continue adding Slats.
- 4.** Add Topper Slat and secure with screws and brace strap.  
*See detailed instructions included.*

*\*Sold separately. All hardware is included with Slat Fence Kits and Posts.  
Illustrations not to scale.*

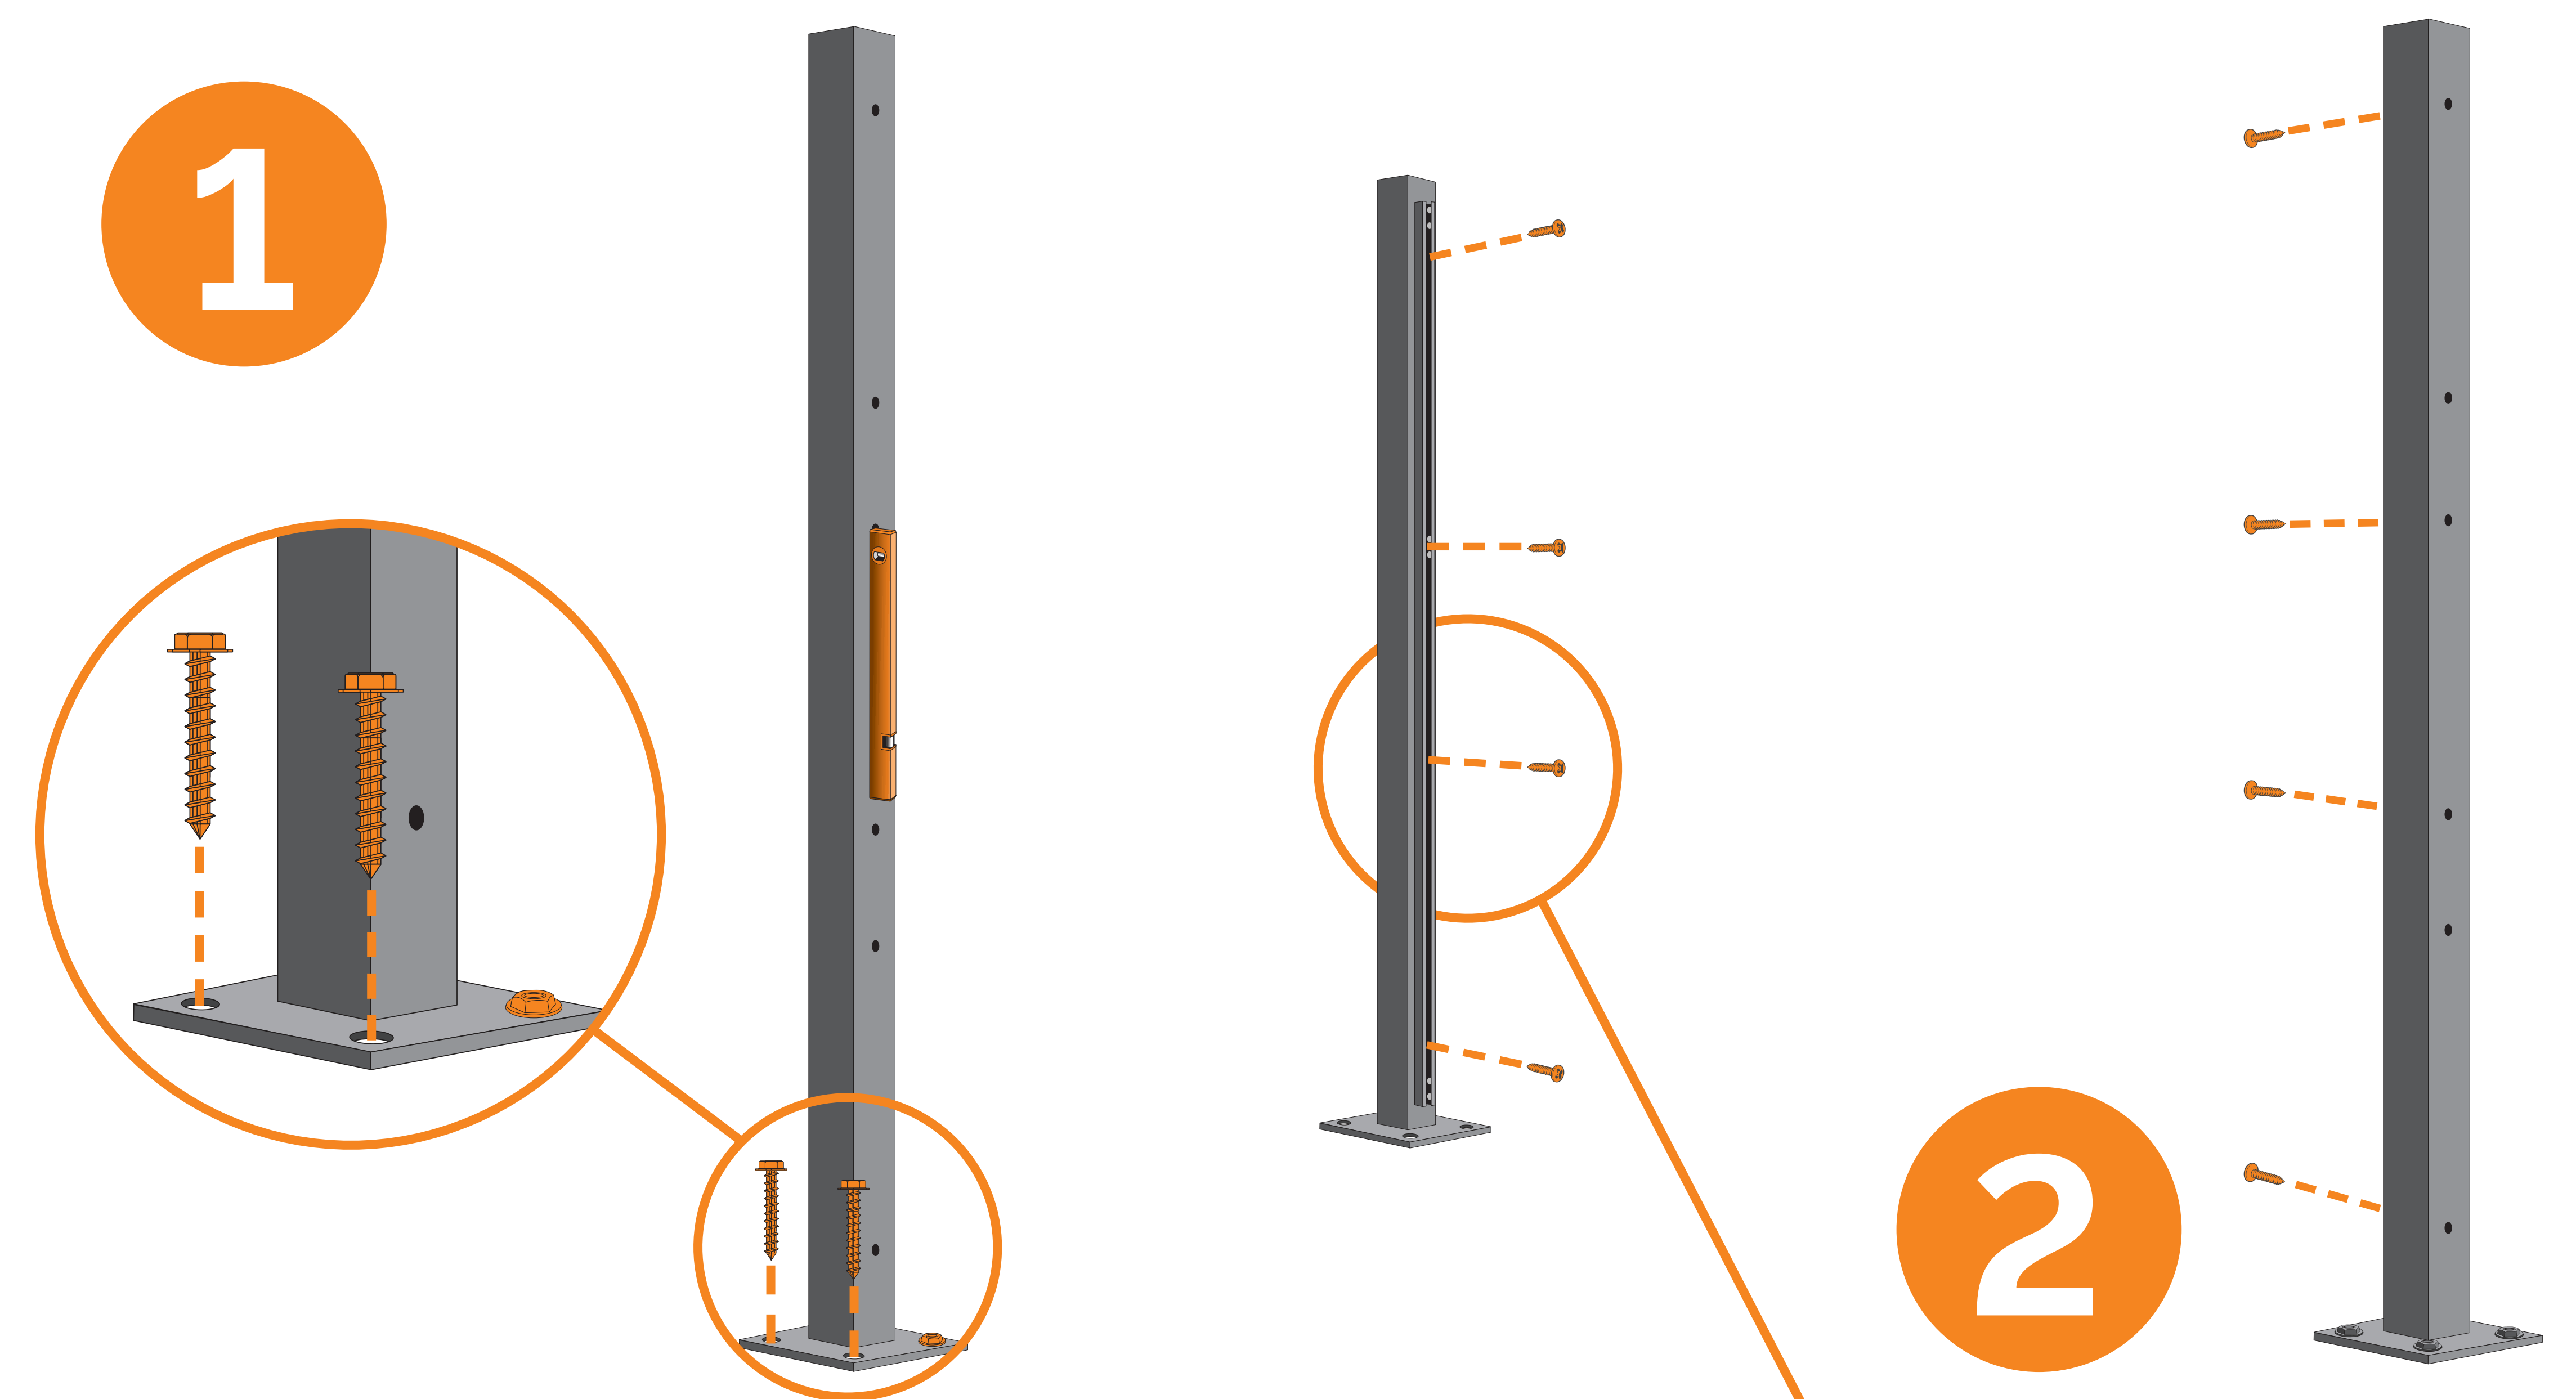

### Channel Adjustment

Channel sets adjust to fit Slats ½" to 1" thick.

