


88 5023 95C Kitchen Island with Breakfast Bar

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

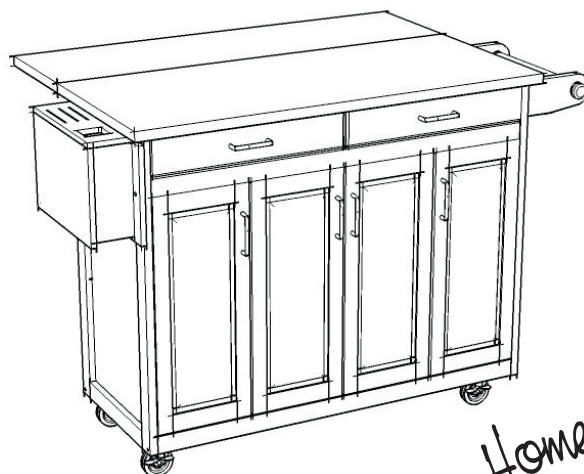


Home
Styles

PART LIST

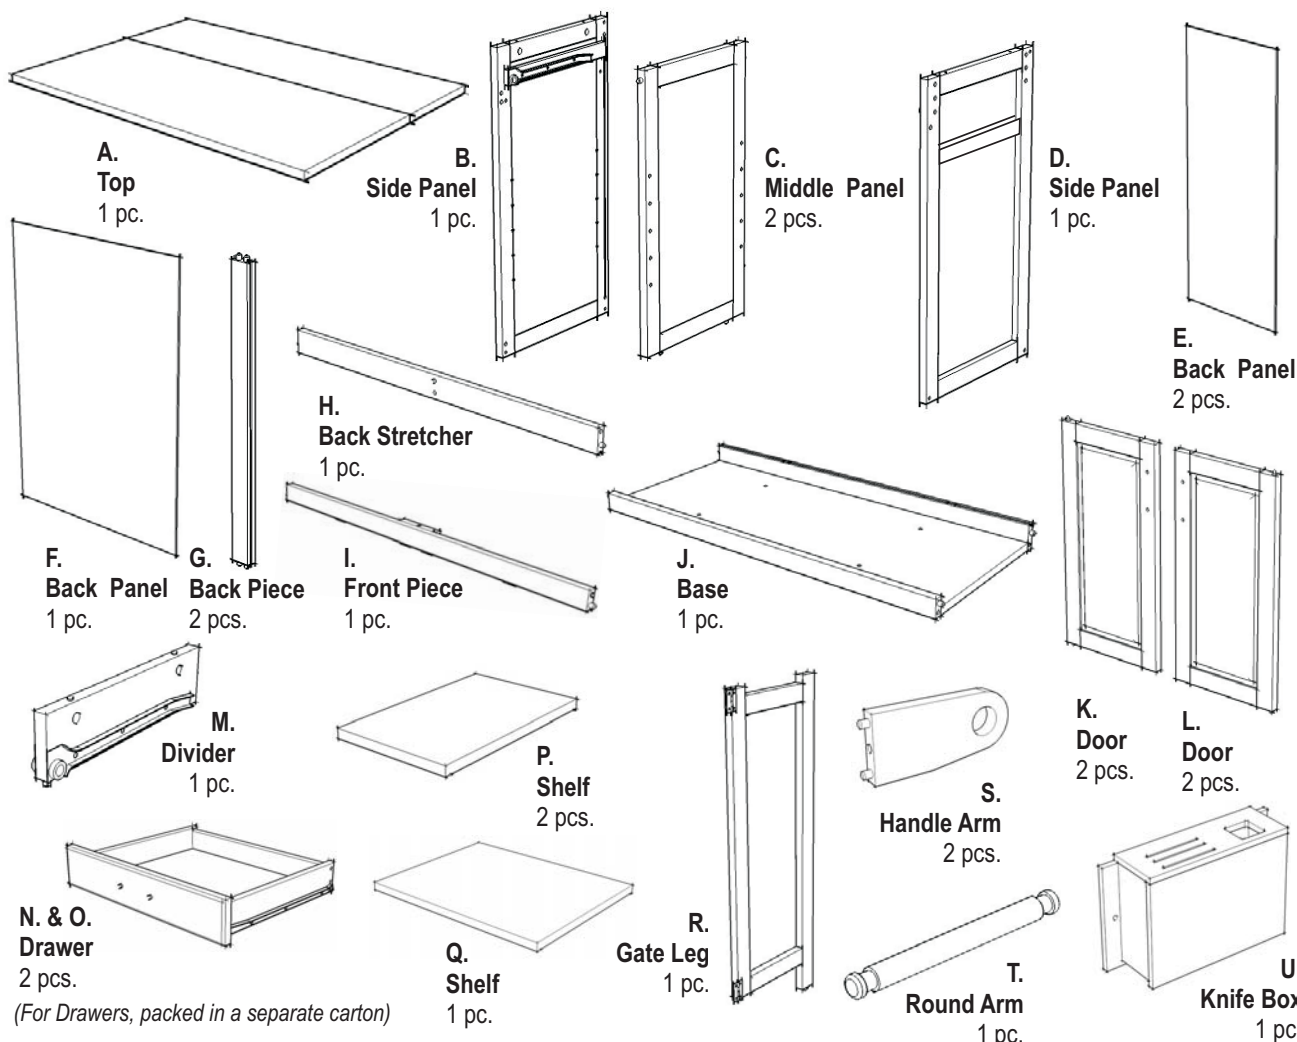

HARDWARE LIST

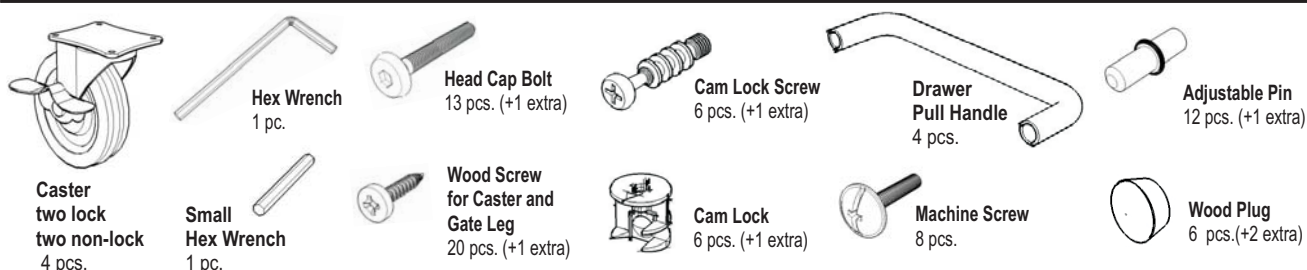

Tools Required For Assembly : Phillips screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319

servicedesk@homestyles-furniture.com

Revised date : 23Mar2011


Assembly Instructions 2/4

IMPORTANT

*Do not tighten up all the screws until each part is properly assembled.
You should keep Hex Wrench in the safe place as you may need to
tighten up the Head Cap Bolts in the future.*

STEP 1

Attach four Casters to Base (J) with Wood Screws.
(See figure 1)

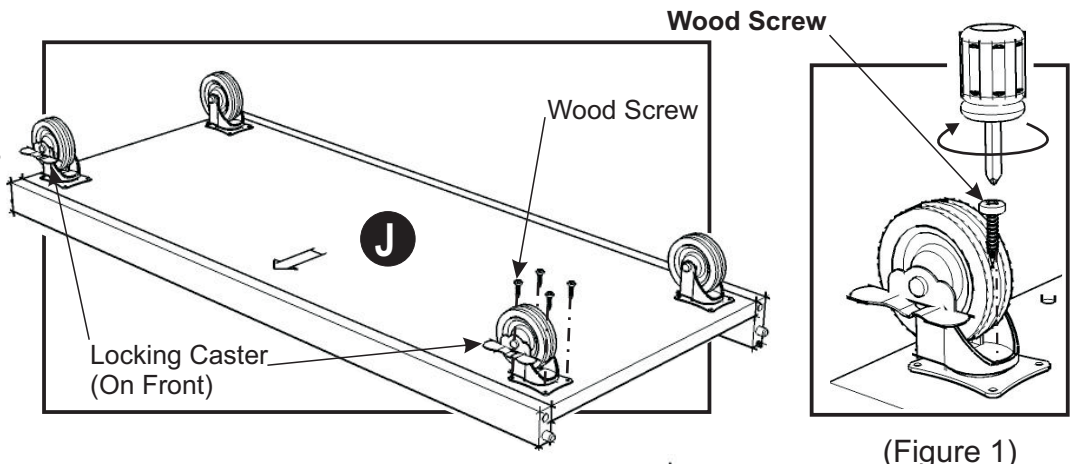


(Figure 1)

STEP 2

Attach Side Panel (B) to Base (J) with Head Cap Bolts.

Attach Middle Panel (C) and Back Piece (G) to Base (J).

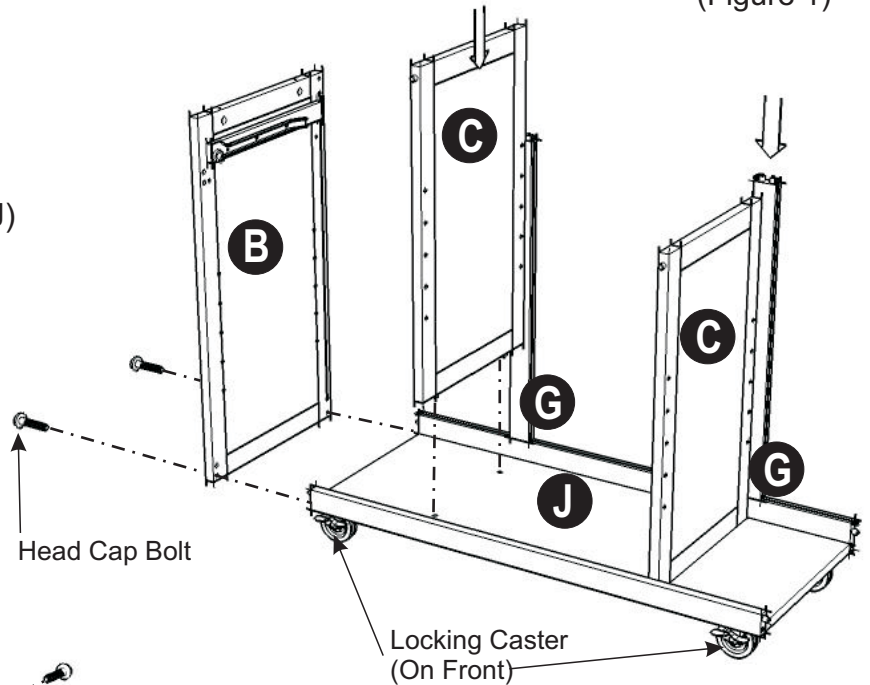


STEP 3

Slide Back Panel (E) and (F) to the unit.


Attach Back Stretcher (H) and Front Piece (I) to the unit with Head Cap Bolts.

Attach Side Panel (D) and Divider (M) to the unit with Head Cap Bolts.

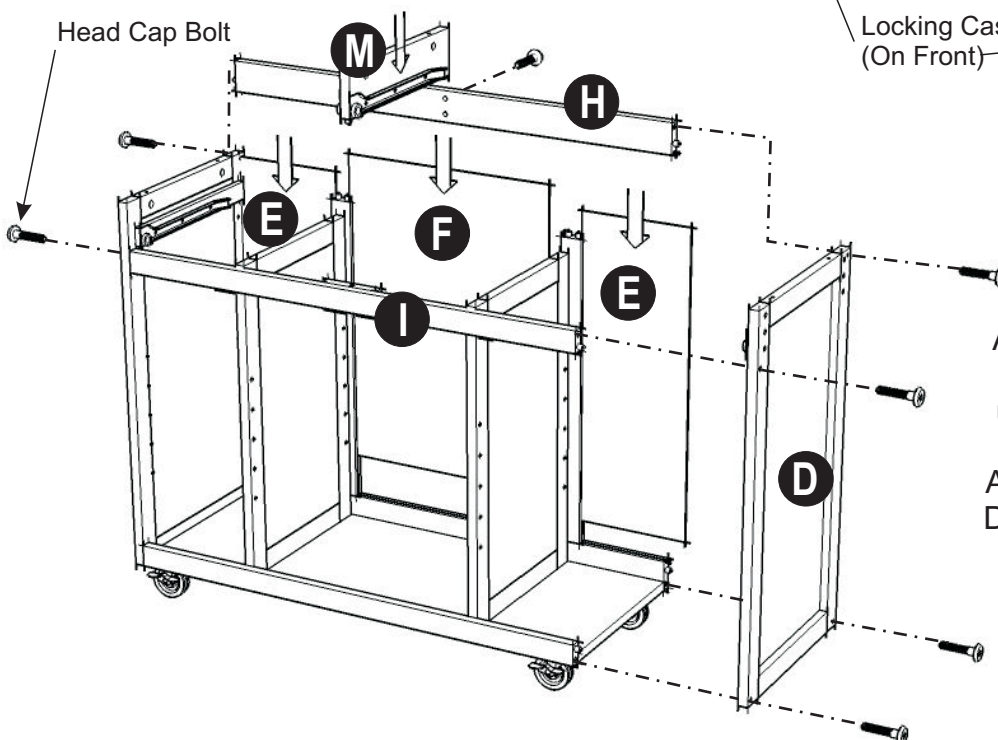


STEP 4

Attach Gate Leg (R) at the back of unit with Wood Screws.
(See figure 2)

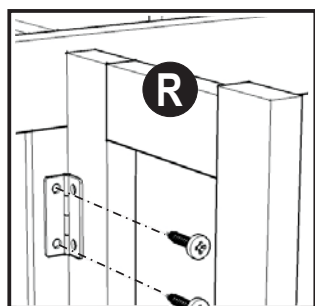


(Figure 2)

Wood Screw

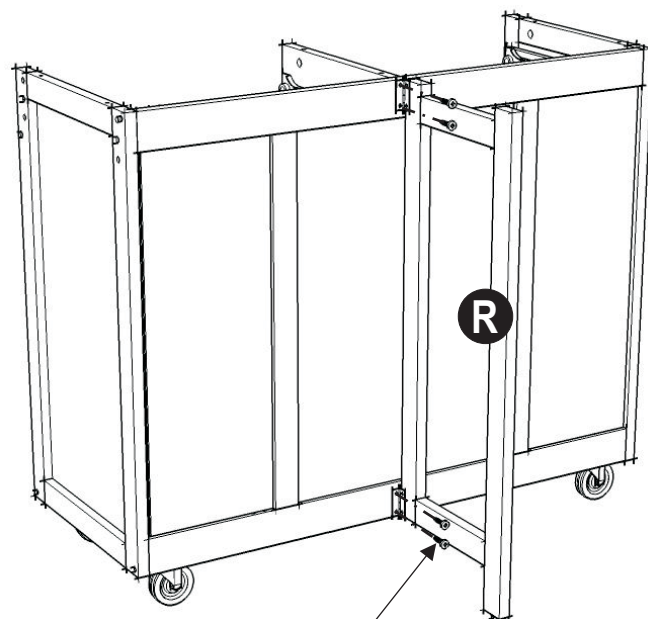

Wood Screw

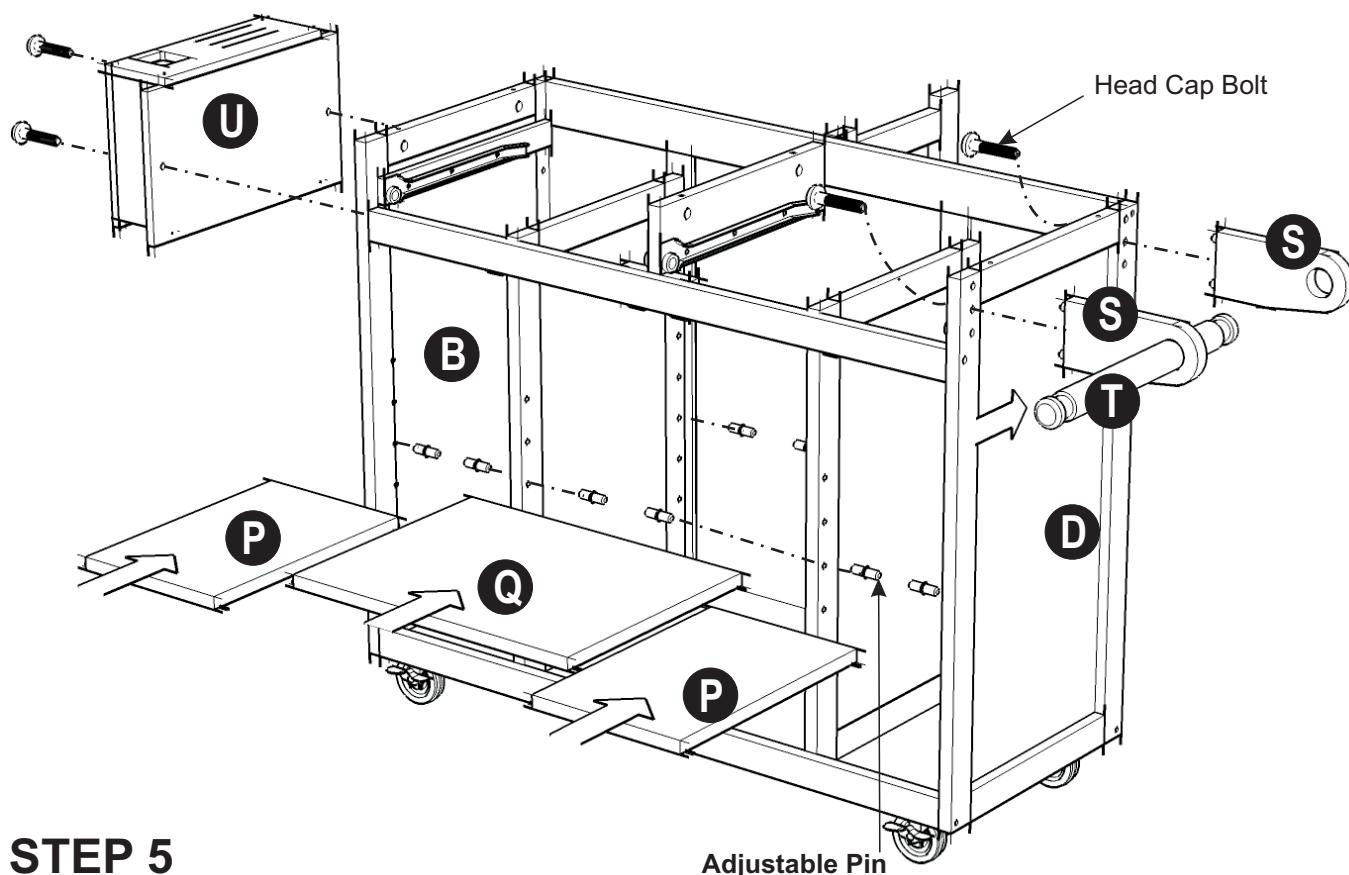

Head Cap Bolt

Adjustable Pin


STEP 5

Assemble Handle Arm (S) to Side Panel (D) with Head Cap Bolts.

Slide Round Arm (T) into place.

Attach Knife Box (U) to Side Panel (B) with Head Cap Bolts.


Insert Adjustable Pins into side panels and middle panels at the desired level.
Place Shelf (P) and (Q).

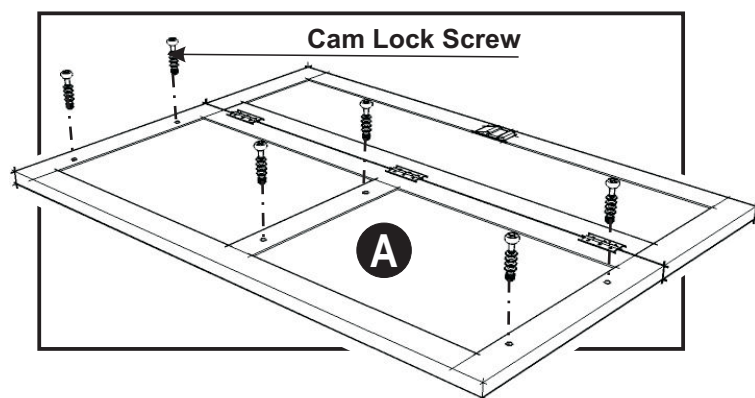



STEP 6

Put Cam Lock Screws into the pre-drilled holes at Top (A).


Place Top (A) onto the unit, using Cam Locks. (See figure 3)

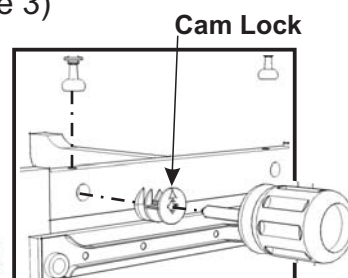

(Figure 3)

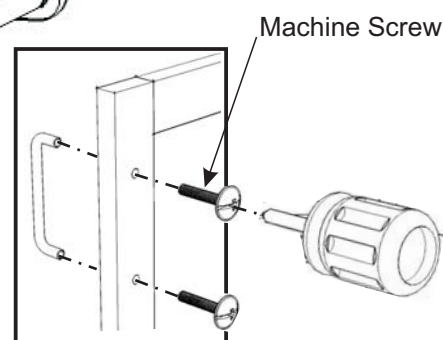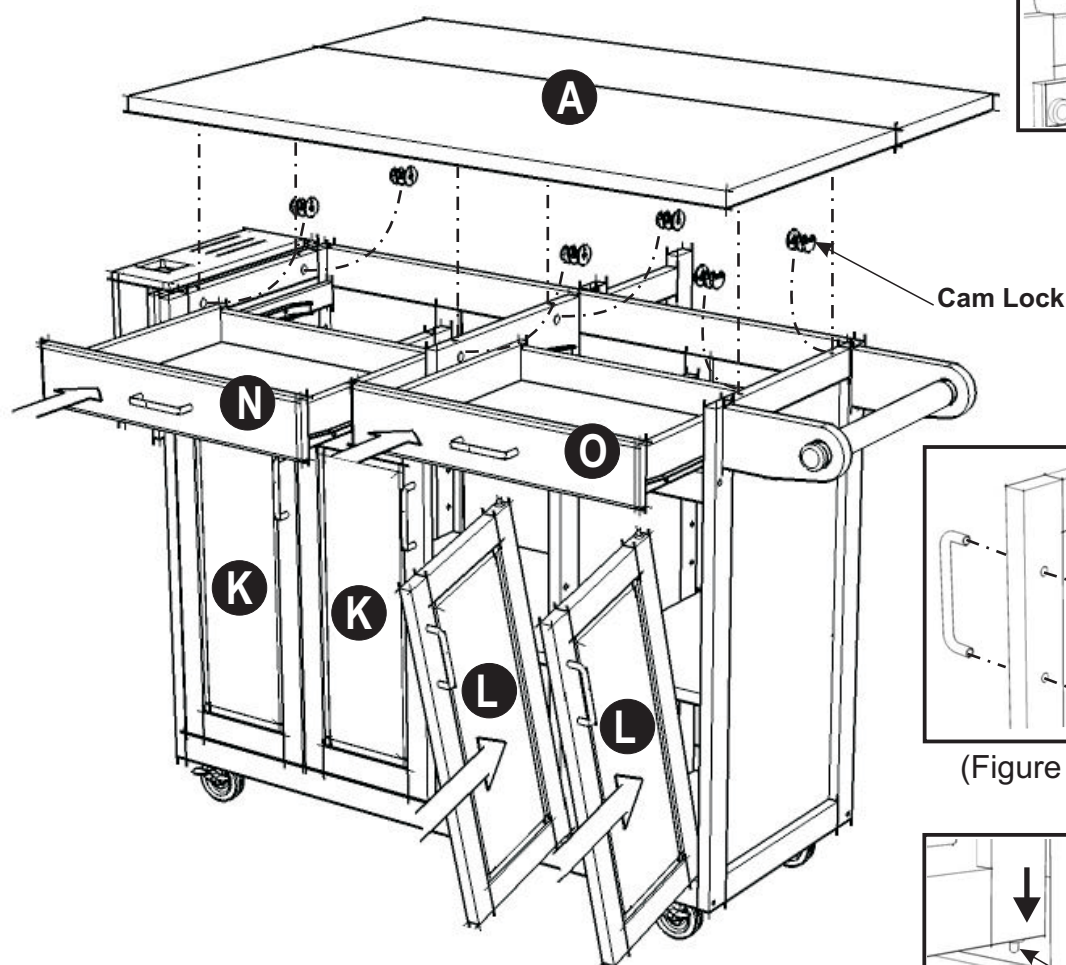

(Figure 4)

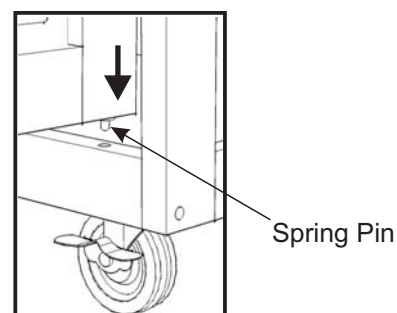

(Figure 5)


STEP 7

Assemble Pull Handles to Door (K) and (L) with Machine Screws. (See figure 4)

Attach Door (K) by inserting the lower Spring Pin into the hole until it clicks (See figure 5) and then do the same for the upper Spring Pin.

Do the same process for Door (L).

Slide Drawer (N) and (O) into place.

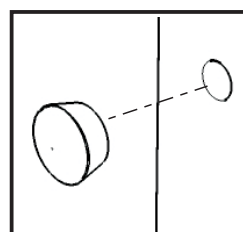


STEP 8

Cover up all holes with Wood Plugs.


88 5023 95

Drawer (N)


Drawer (O)

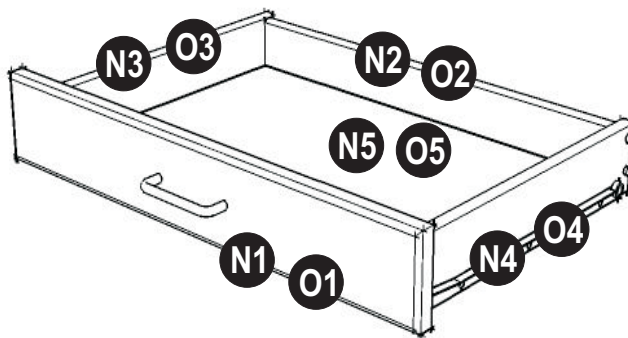


PART LIST

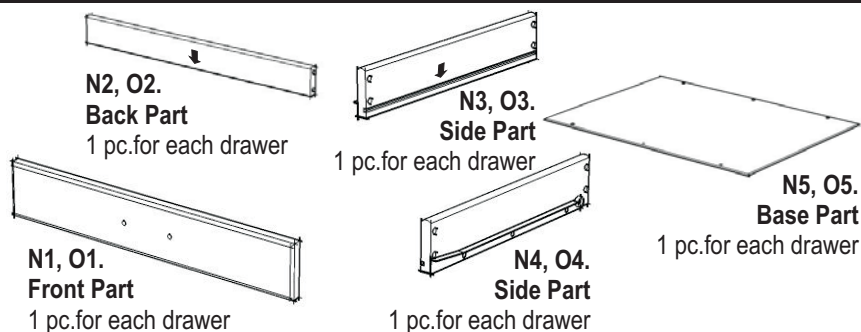

HARDWARE LIST


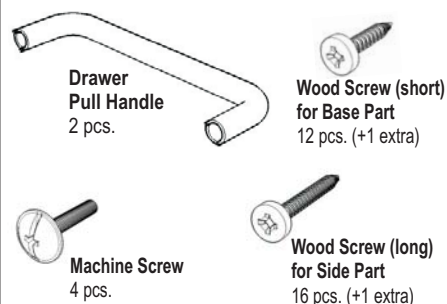


Assembly Instructions

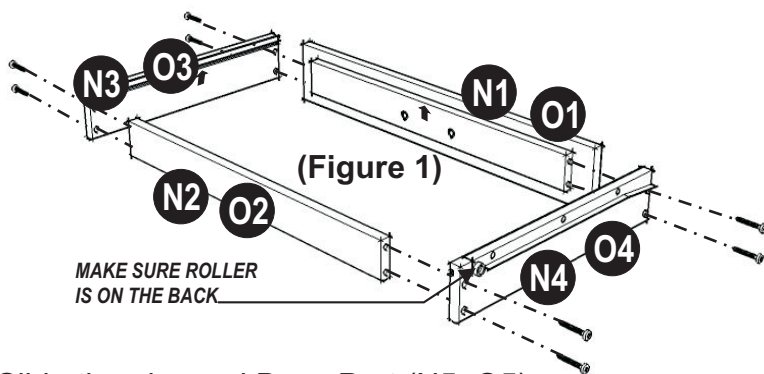

Using a Philips screwdriver, insert Wood Screws (long) into the pre-drilled holes as shown, tighten half way. (See figure 1)

Slide the plywood Base Part (N5, O5) into the grooves on Side Parts (N3, O3) and (N4, O4). Be sure to push the plywood all the way forward so it meets the Front Part (N1, O1). (See figure 2)

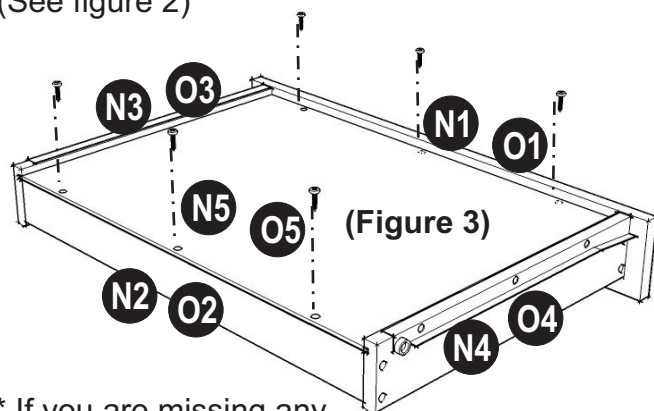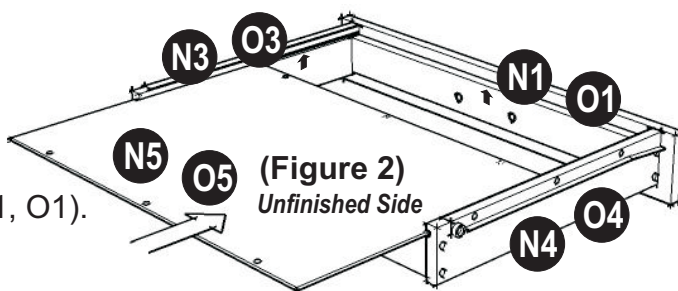

Insert Wood Screws (short) into the pre-drilled holes on Base Part (N5, O5), then tighten all Wood Screws. (See figure 3)

* If you are missing any of these parts, please contact our DMI Customer Service Department at 1-877-831-0319 or fax us at 1-800-755-2878.

Assemble the Pull Handle with Machine Screws on the Front Part (N1, O1). (See figure 4)

