

Tools Needed:

Implementos
necesarios:




For warranty info visit
mdbuildingproducts.com

Para obtener información sobre la garantía,
visite mdbuildingproducts.com

FLUSH CUP PULL

1. Position flush pull 2" from edge and 40" from floor, and mark around base of flush pull.
2. Bore hole 2-1/8" diameter, 3/8" deep.
3. Nail with supplied finish nails.

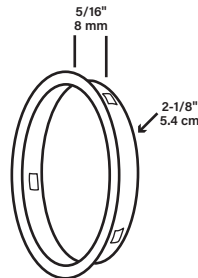

TIRADOR DE CAZOLETA ENRASADO

1. Coloque el tirador a ras a 2" del borde y a 40" del piso, y marque alrededor de la base del tirador a ras.
2. Taladre un orificio de 2-1/8" de diámetro y 3/8" de profundidad.
3. Fije con los clavos de remate suministrados.

Made in China. Hecho en China.
M-D Building Products, Inc.
Oklahoma City, OK 73118
Rev 07/24 mdteam.com

⚠WARNING: Cancer and Reproductive Harm
- www.P65Warnings.ca.gov.

ADVERTENCIA: Cáncer y Daño
Reproductivo - www.P65Warnings.ca.gov.



QUESTIONS? | PREGUNTAS?

800.654.8454

MDBUILDINGPRODUCTS.COM

