


ASSEMBLY INSTRUCTIONS


TWIN DAY BED WITH TRUNDLE

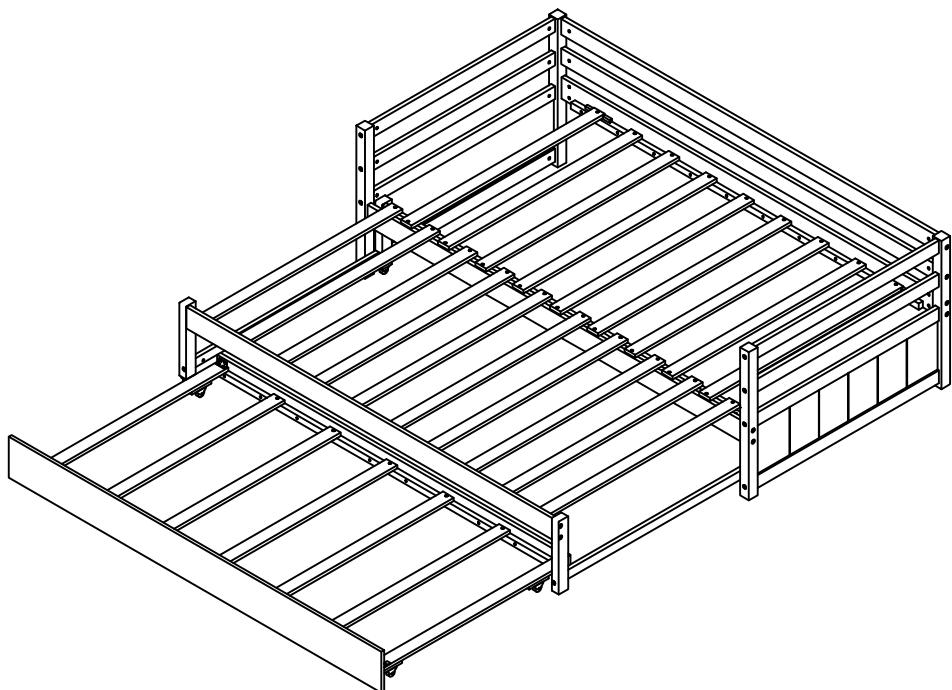

If you have any questions, please feel free to contact us.
Email: service@qualfurn.net













WF290883

Detail View

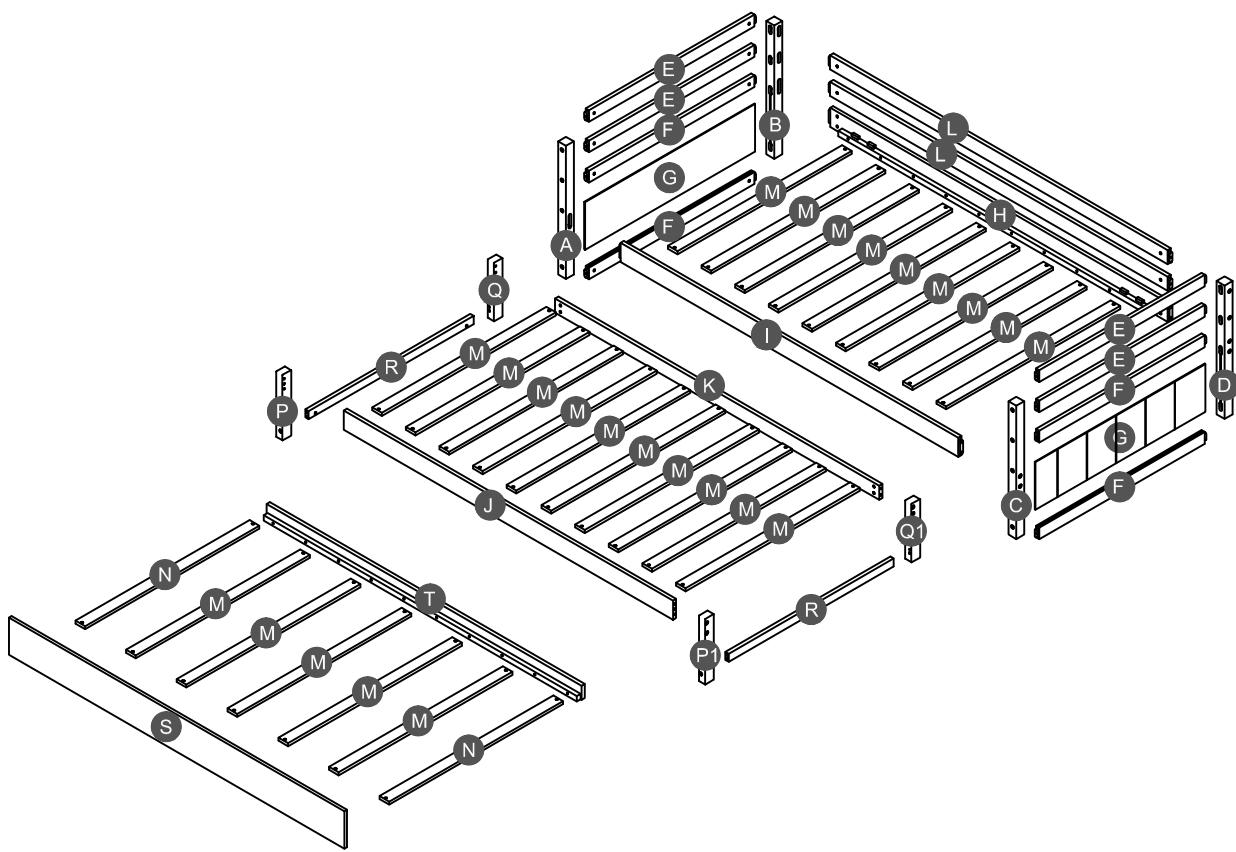


Part List


WF290883

A  Leg (left front) - 1pc	B  Leg (left back) - 1pc	C  Leg (right front) - 1pc
D  Leg (right back) - 1pc	E  Horizontal bar - 4pcs	F  Horizontal bar - 4pcs
G  Side panel - 2pcs	H  Side rail (back) - 1pc	I  Side rail (front) - 1pc
J  Side rail (front) - 1pc	K  Side rail (back) - 1pc	L  Long guard rail - 2pcs
M  Slat -24pcs	N  Slat -2pcs	P  Leg (left front) - 1pc
P1  Leg (right front) - 1pc	Q  Leg (left back) - 1pc	Q1  Leg (right back) - 1pc
R  Horizontal side (L/R) - 2pcs	S  Trundle front panel -1pc	T  Trundle back panel -1pc

Hardware List


1  Ø8*30mm Wood dowel (6pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (16pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (24pcs)
4  (1/4")4.5*58mm Allen key (1pc)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(40pcs)	6  Ø4*30mm Wood screws (60pcs)
7  45*20*35 mm Wheels (4pcs)	8  100*63*20mm Wheels (4pcs)	9  95*95*18*3mm Metal bracket (4pcs)
10  Ø3.5*15mm Wood screws (24pcs)	11  40*18*18*2mm Metal bracket (2pcs)	12  Ø3.5*19mm Wood screws (8pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

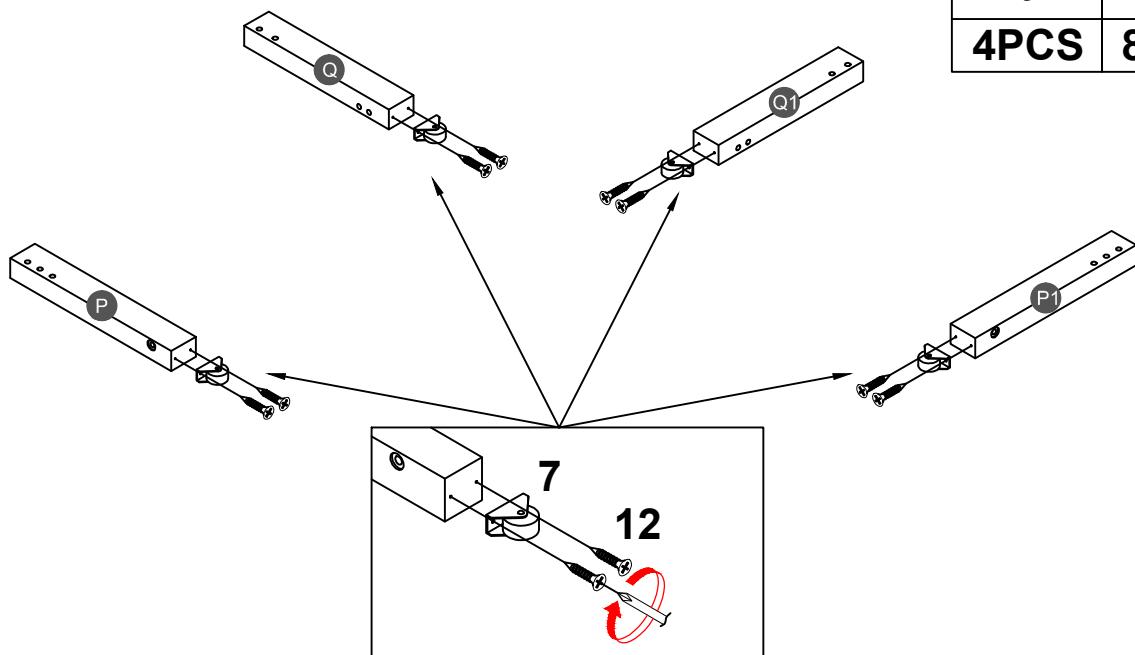

STEP 2:

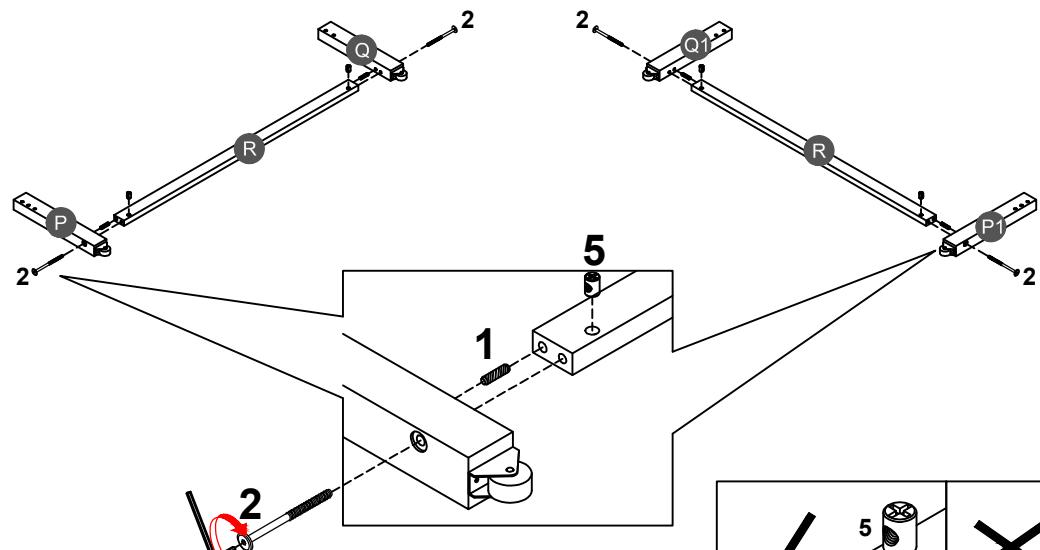


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

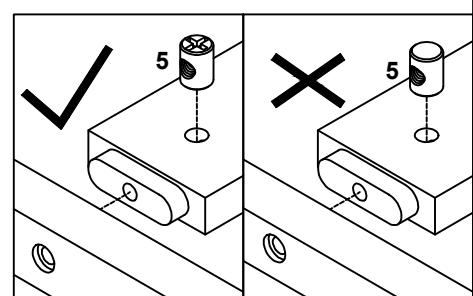


STEP 3:

1	3	5
2PCS	8PCS	8PCS

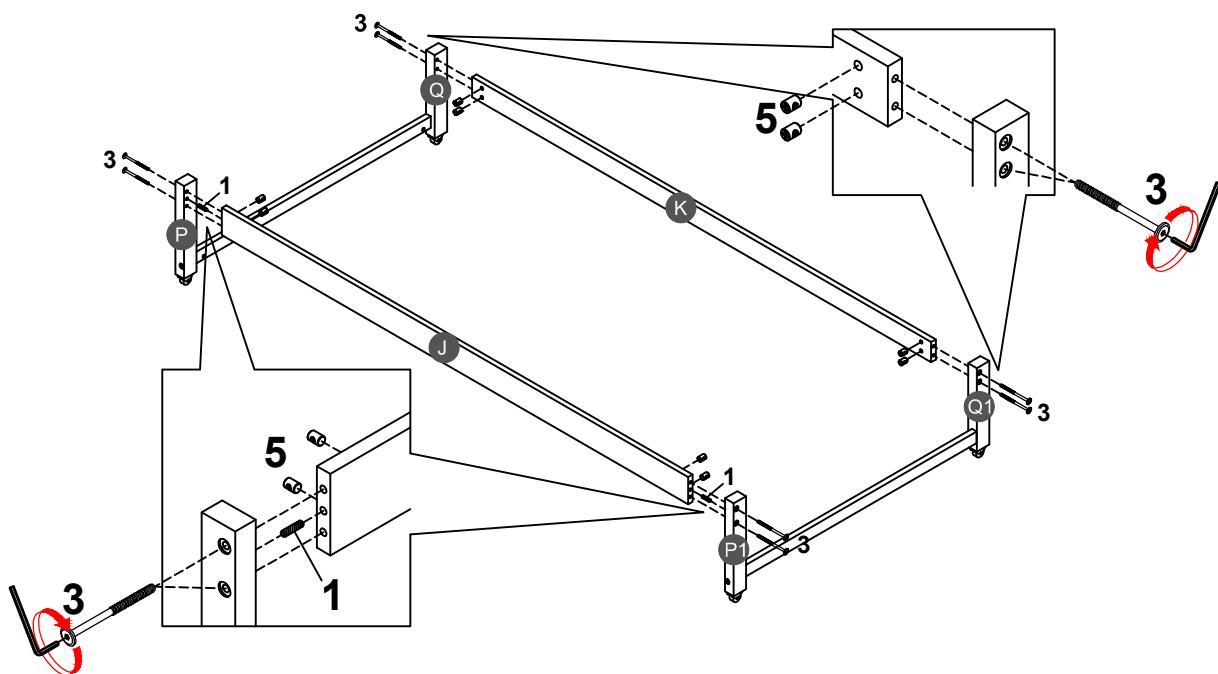


STEP 4:

9	10
2PCS	8PCS

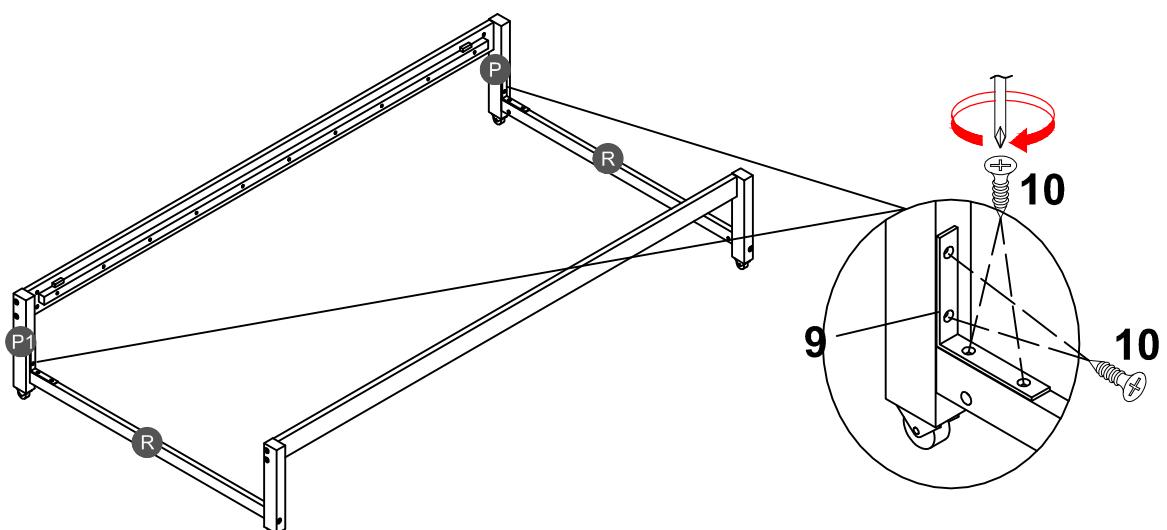


STEP 5:

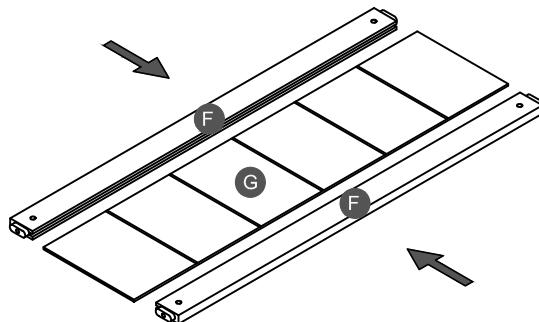


x 2

STEP 6:

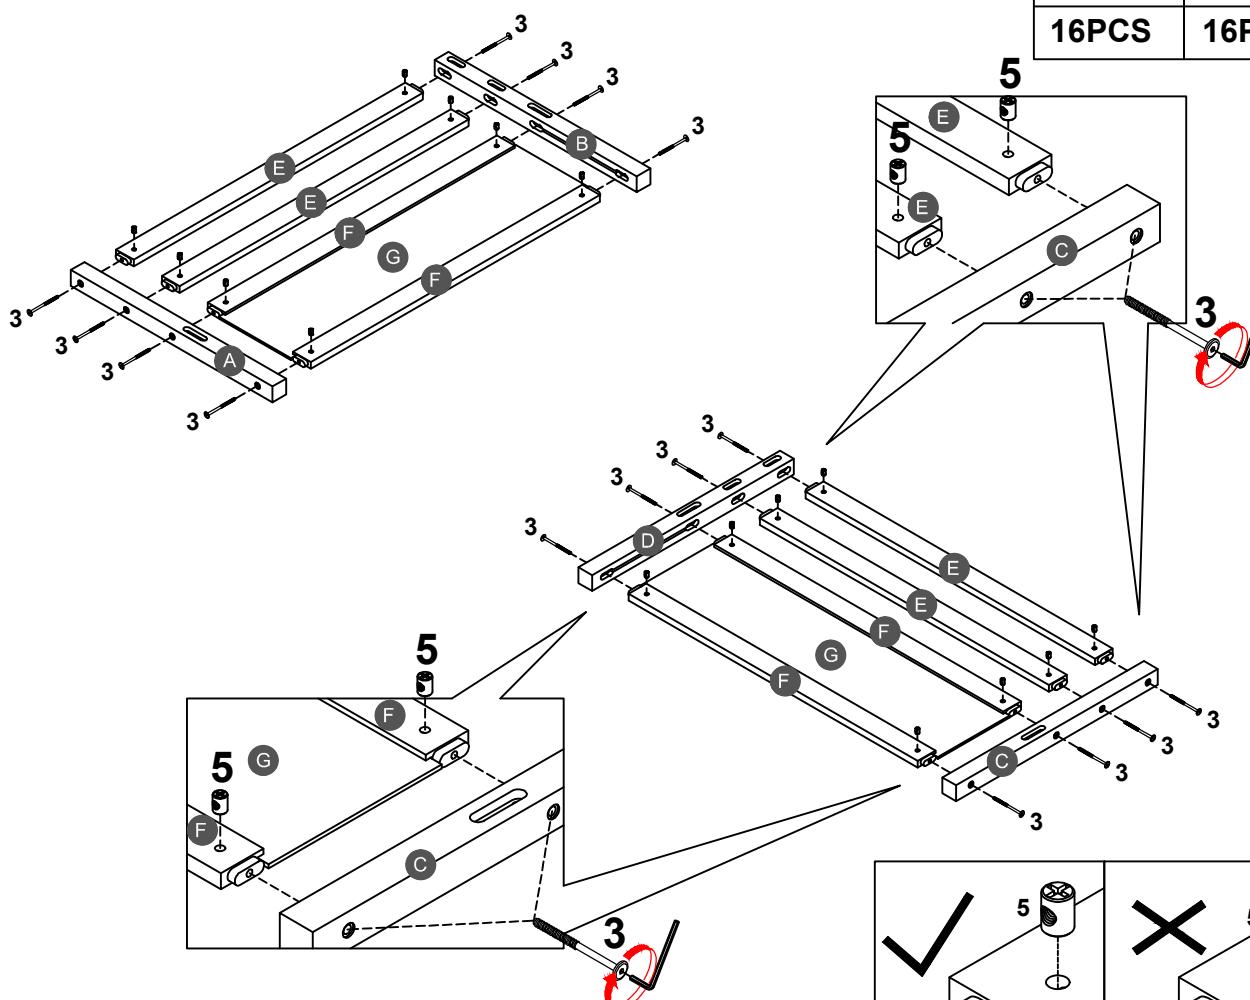


3		5	
16PCS		16PCS	


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

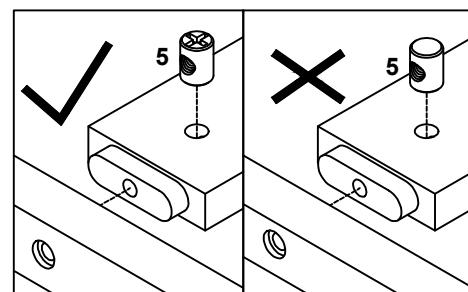

STEP 7:

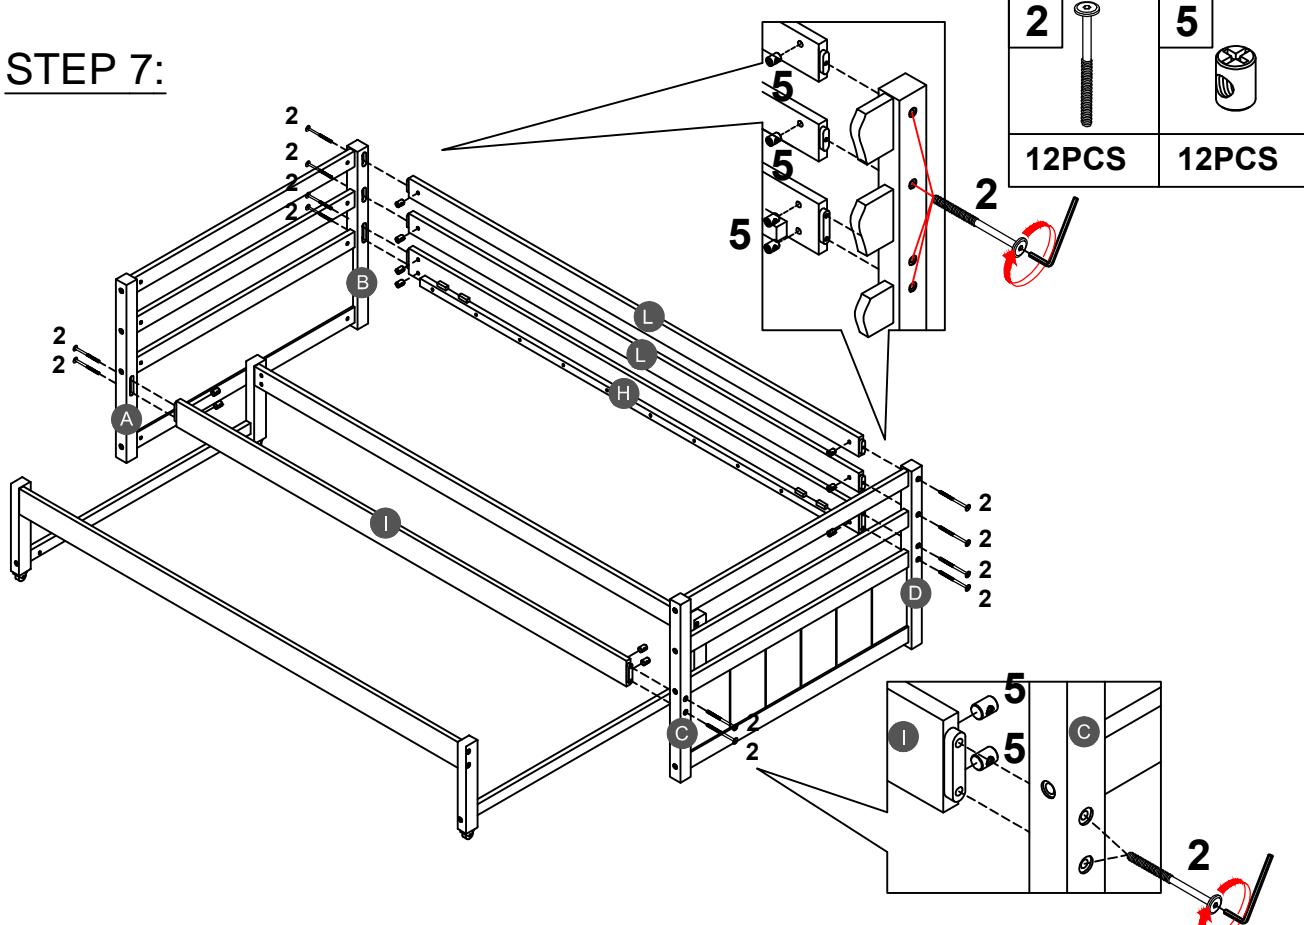

STEP 8:

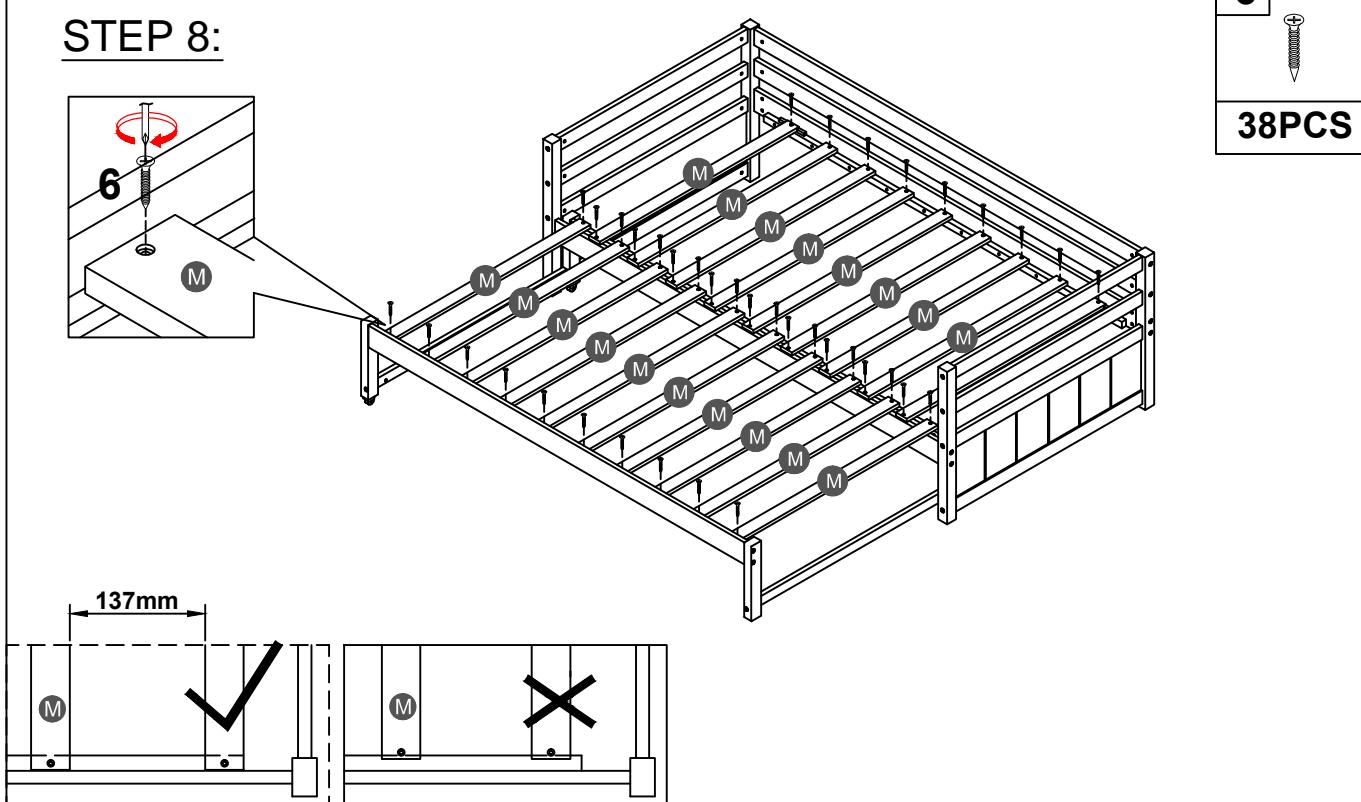


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 9:

8	6
	


4PCS **8PCS**

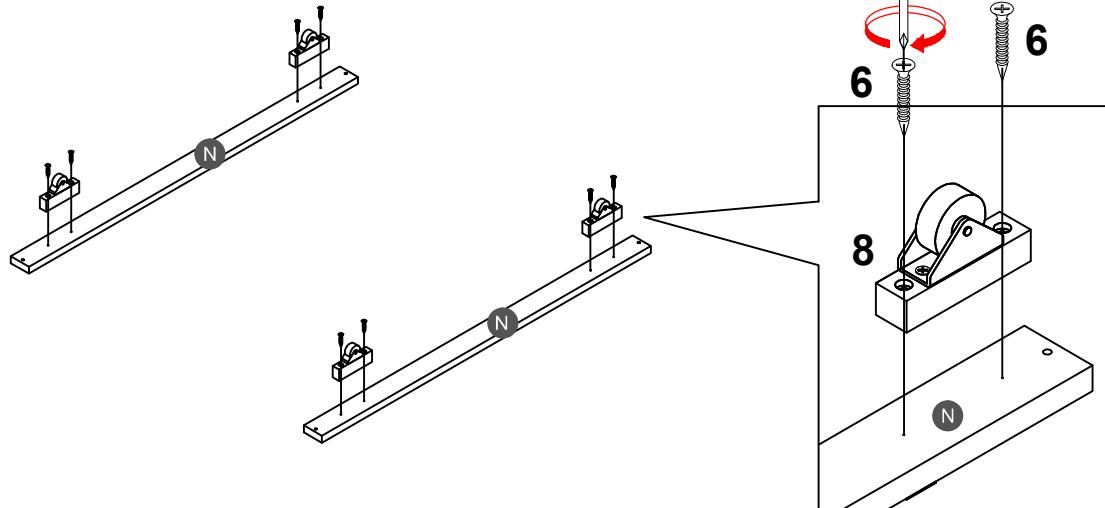

STEP 10:

6


14PCS

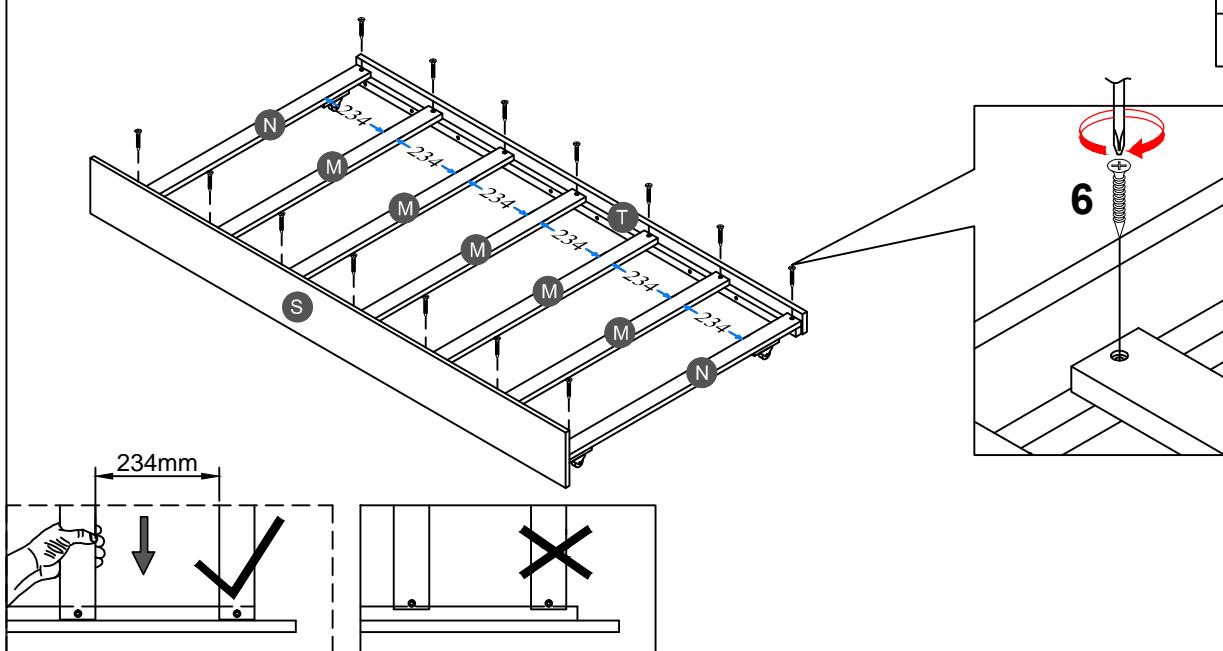


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 11:

9	10
2PCS	8PCS

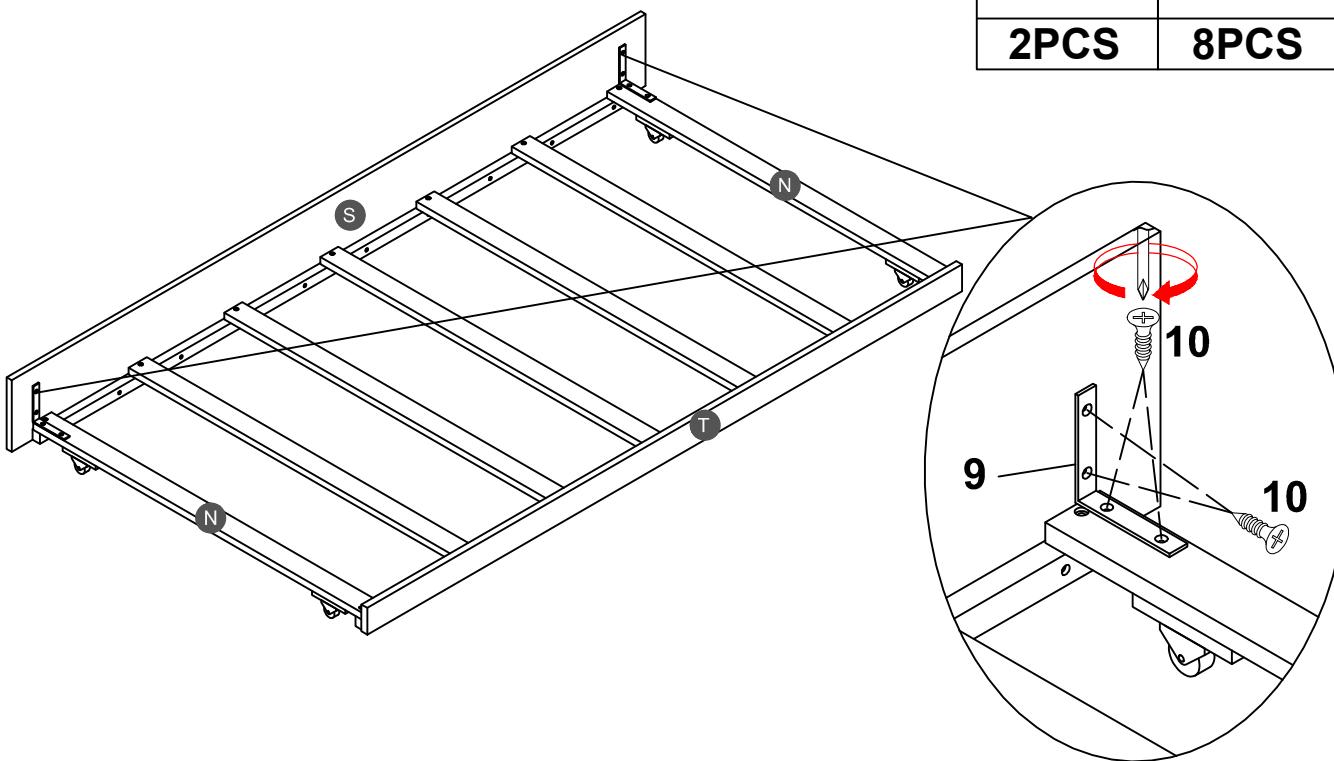


STEP 12:

10	11
8PCS	2PCS

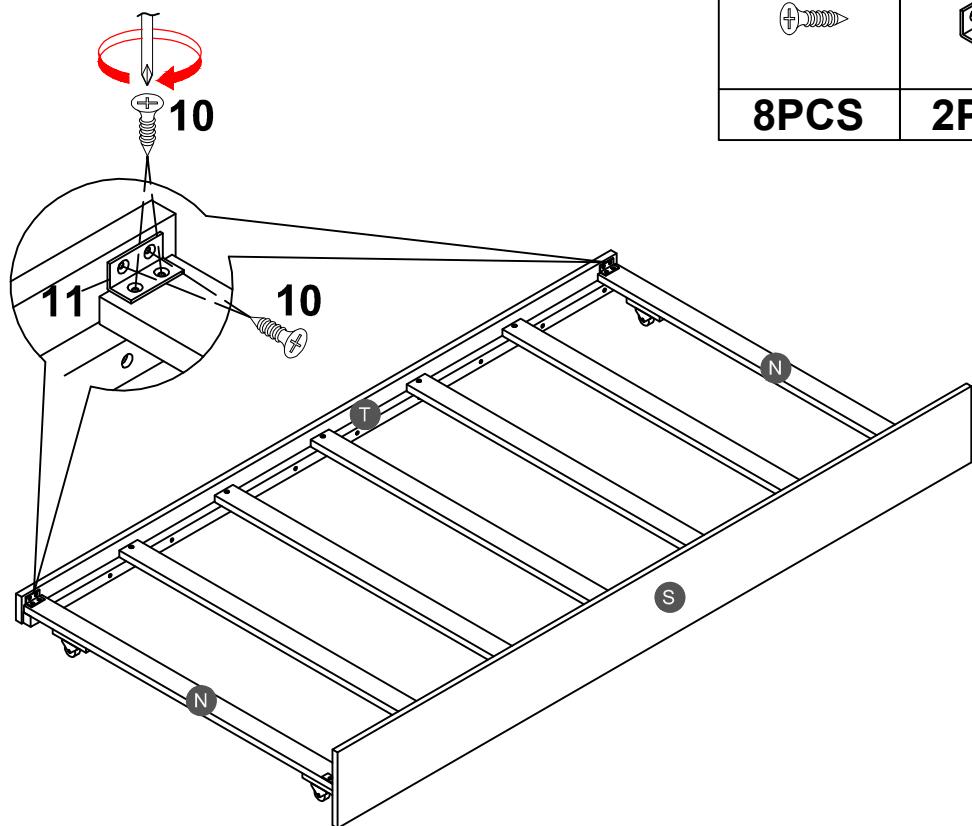

STEP 13:

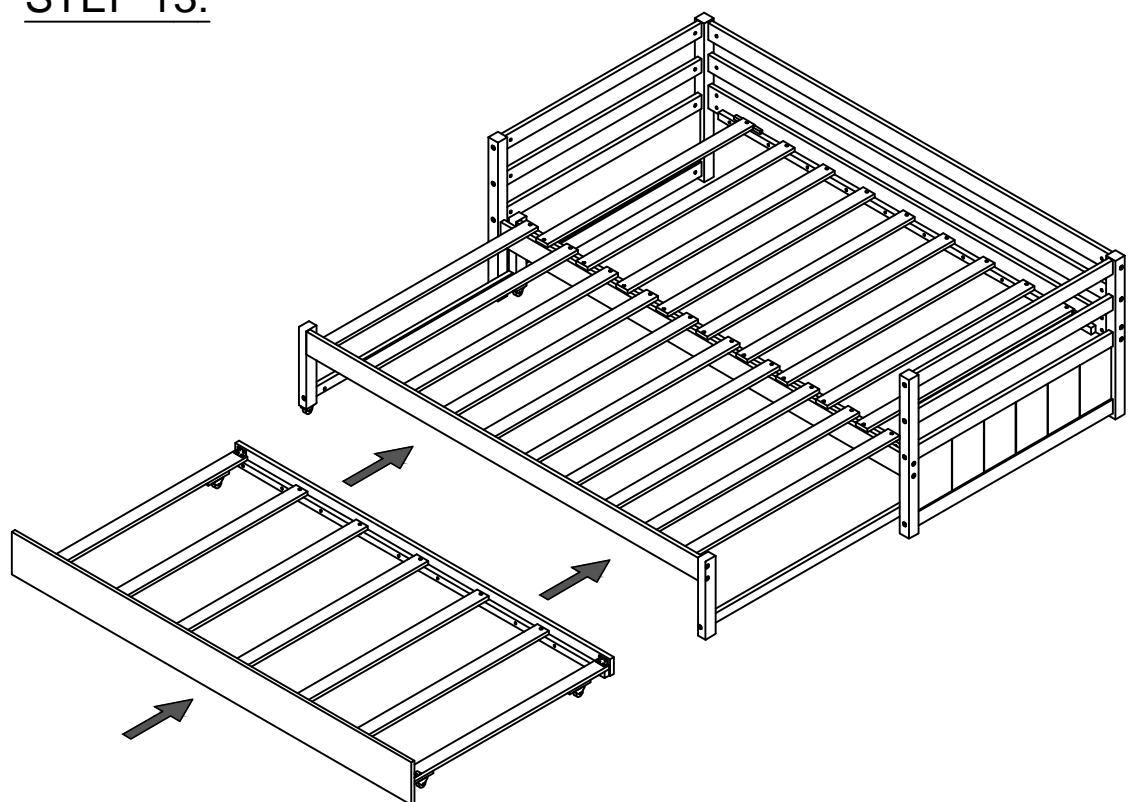

Push Trundle under the bottom of daybed.

