







ASSEMBLY INSTRUCTION

SKU:WF316050 / WF316051


ATTENTION:



- 1.Check to ensure all parts and hardware are present.
- 2.We have provided Extra Hardware of B/C/D/E/F/G/H in case of any bolts missing in the boxes.
- 3.Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.

Part List

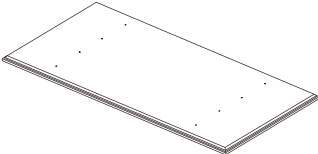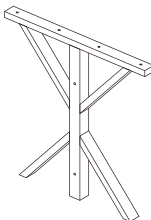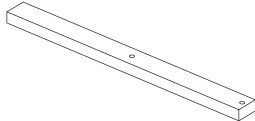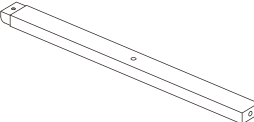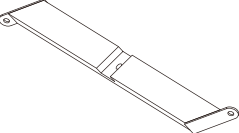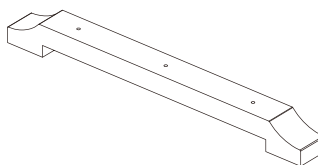
		
① x1PC	②x2PCS	③x2PCS
		
④ x2PCS	⑤x2PCS	⑥x2PCS

Hardware

			
M4 A x2PCS	M6*15mm B x7PCS	M6*35mm C x8PCS	M6*50mm D x6PCS
			
M6*70mm E x4PCS	M6 F x1PC	G x6PCS	H x6PCS

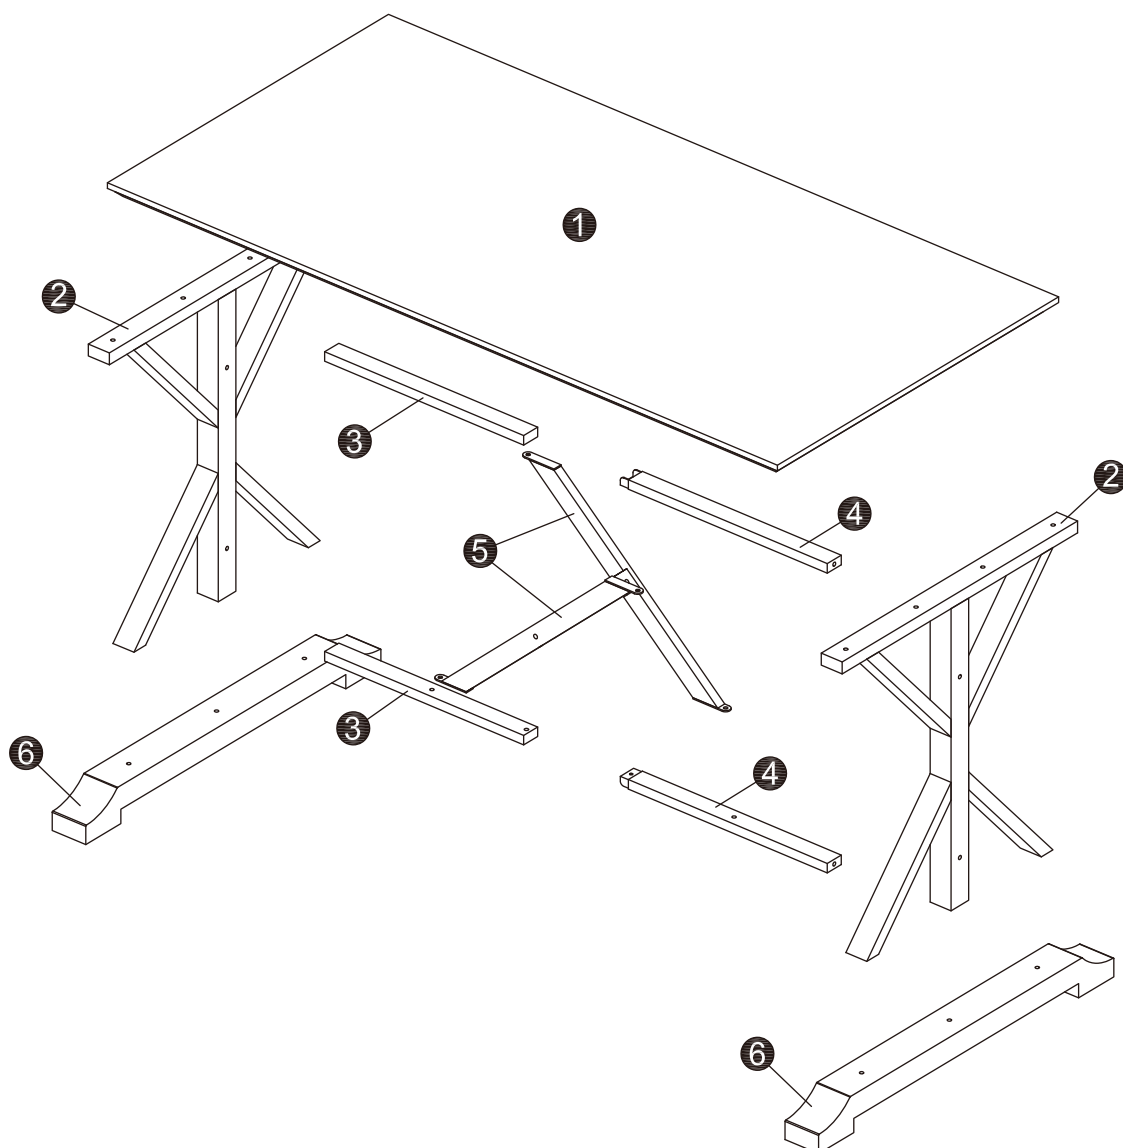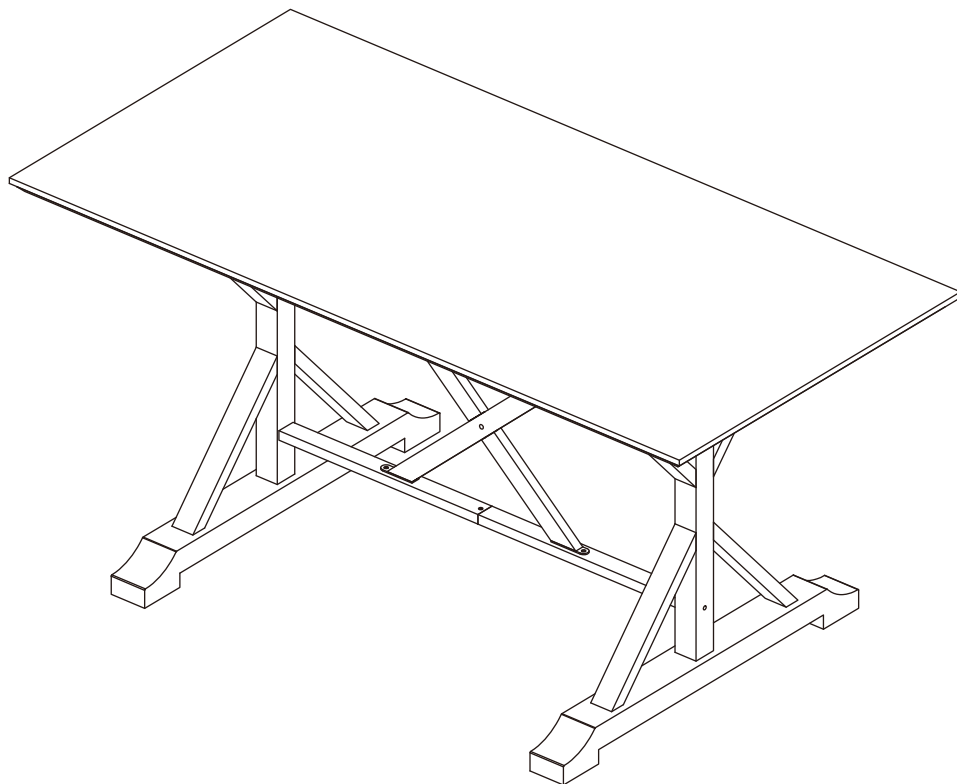


Step 1

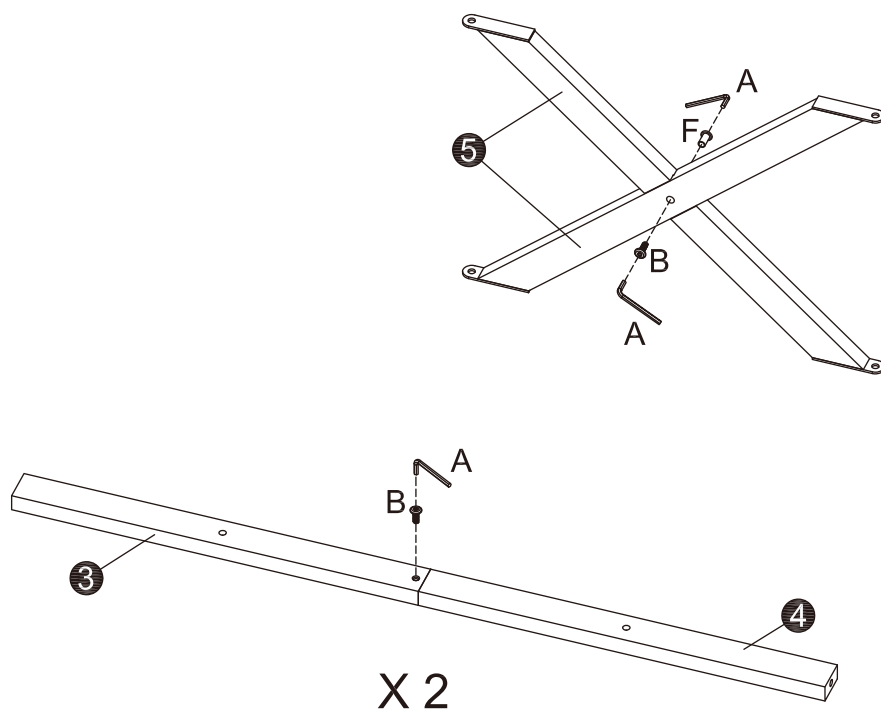


A		2PCS
B		3PCS
F		1PC

Step 2

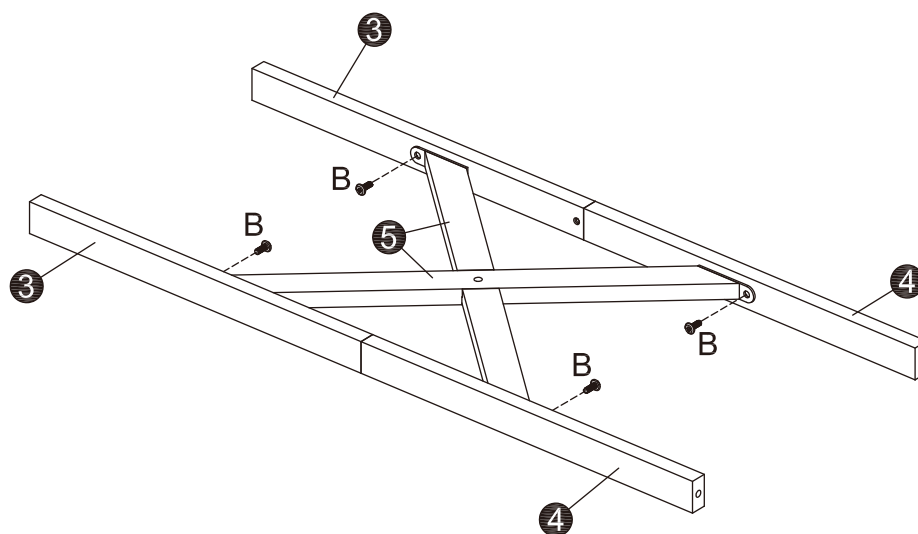

B		4PCS
---	---	------


Step 3

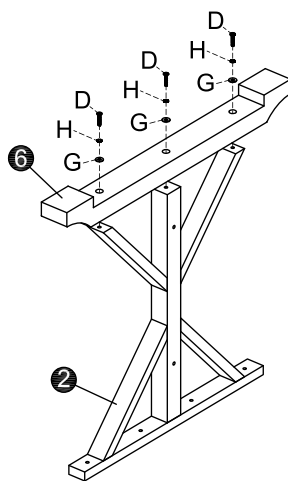

X 2


D		6PCS
G		6PCS
H		6PCS

Step 4

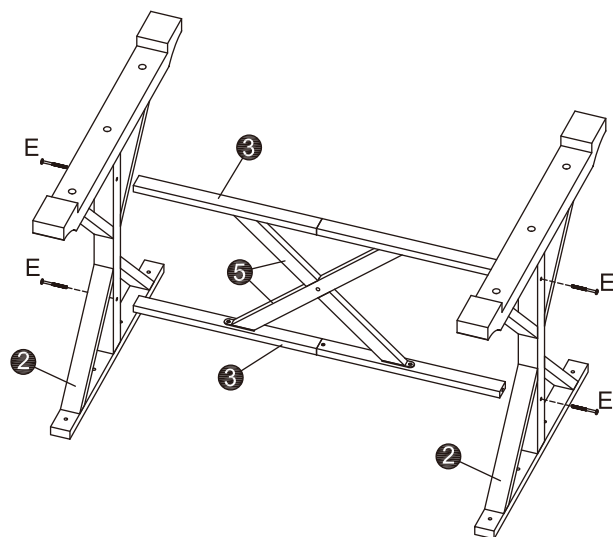

E		4PCS
---	---	------

Step 5

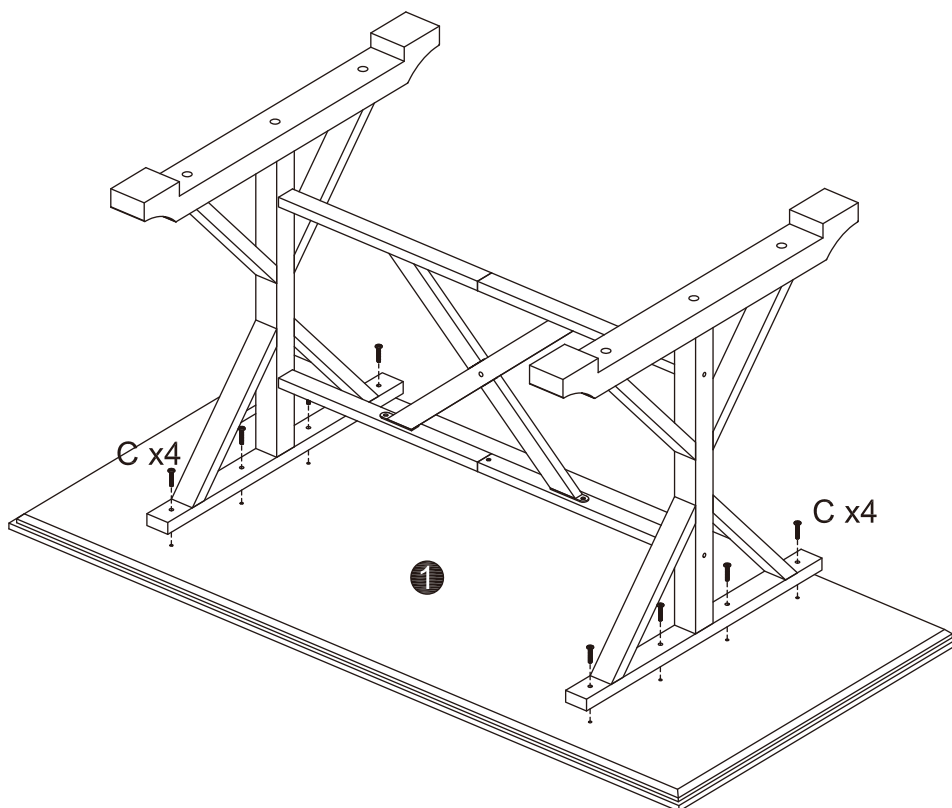

C		8PCS
---	---	------