


Ca'Lefort Panel Ready Door Installation




Removing the Original Door

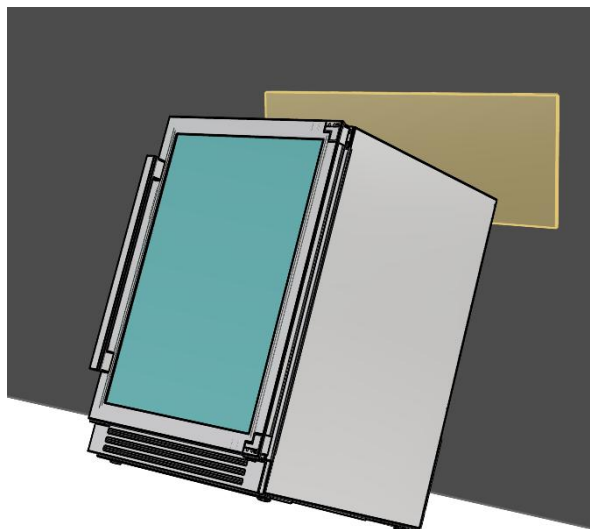


1. Tilt the cabinet slightly backward so the back rests against a hard wall.

Place a cardboard sheet between the cabinet and the wall to prevent scratches.

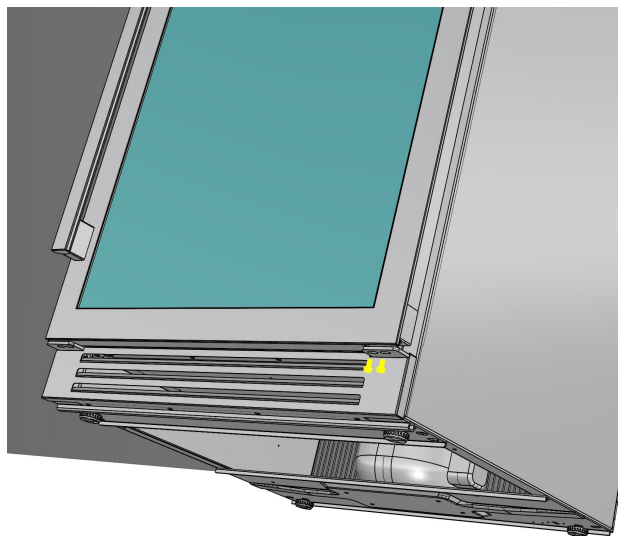

2. Unscrew the two nuts from the bottom hinge

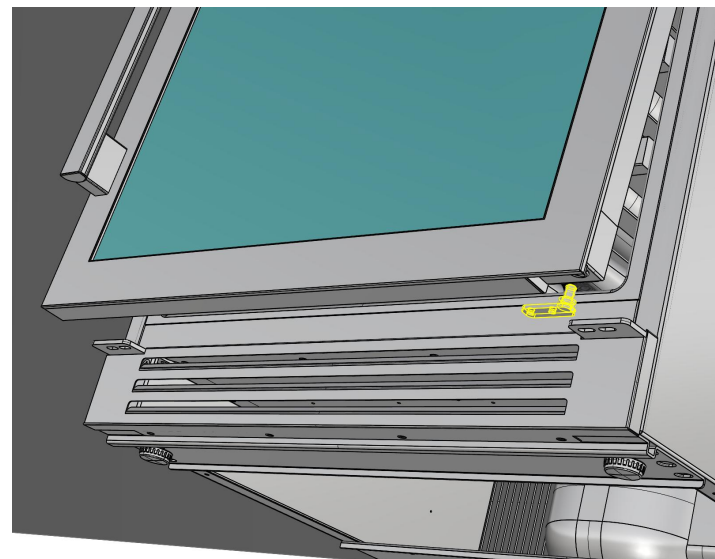

3. Slightly tilt the bottom of the door outward and lift it off the cabinet.
Safely store the following components:
Top and bottom hinge bushings
Hinge spacers
Two fastening nuts


Door shaft sleeve

Door hinge shaft gasket


Fastening nut x 2

After removing the door body, be sure to save the door shaft sleeve (at the top and bottom of the door panel), door hinge shaft gasket and fastening nut


Installing the New Hinge

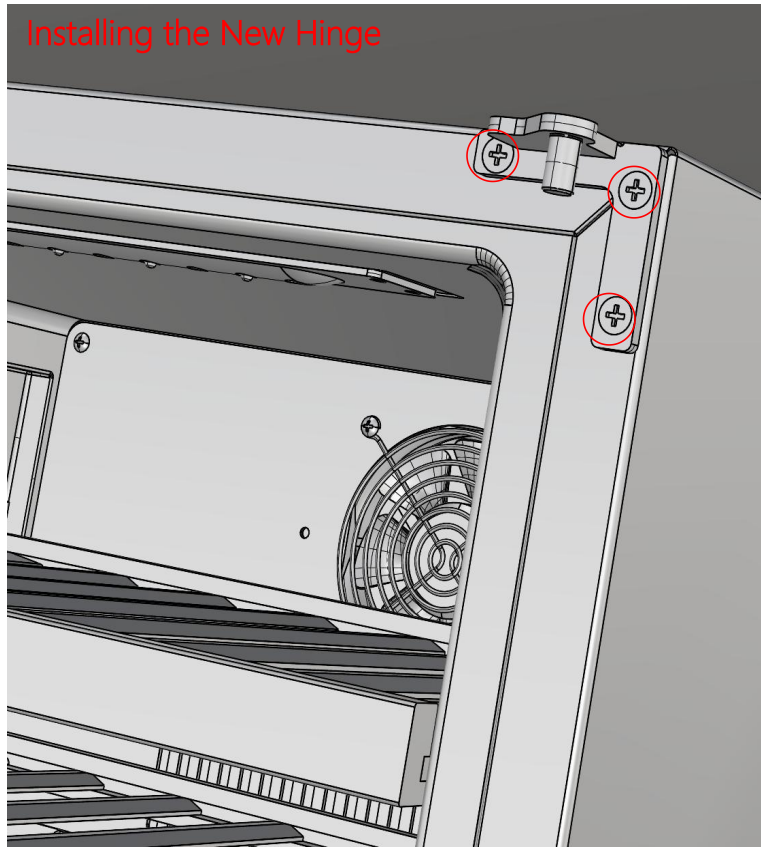


6.Remove the three nuts on the upper door hinge (indicated in red) and remove the old door hinge;

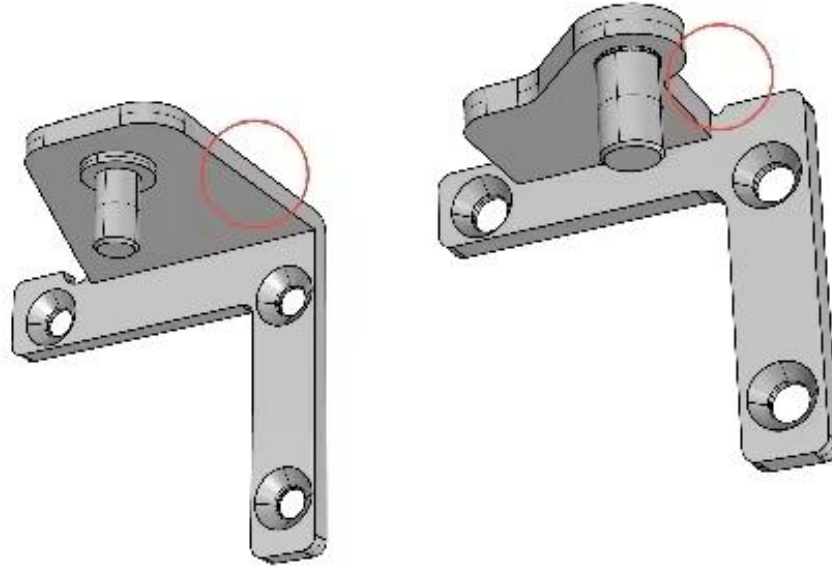

7.Attach it to the top right side of the cabinet as shown in the diagram.

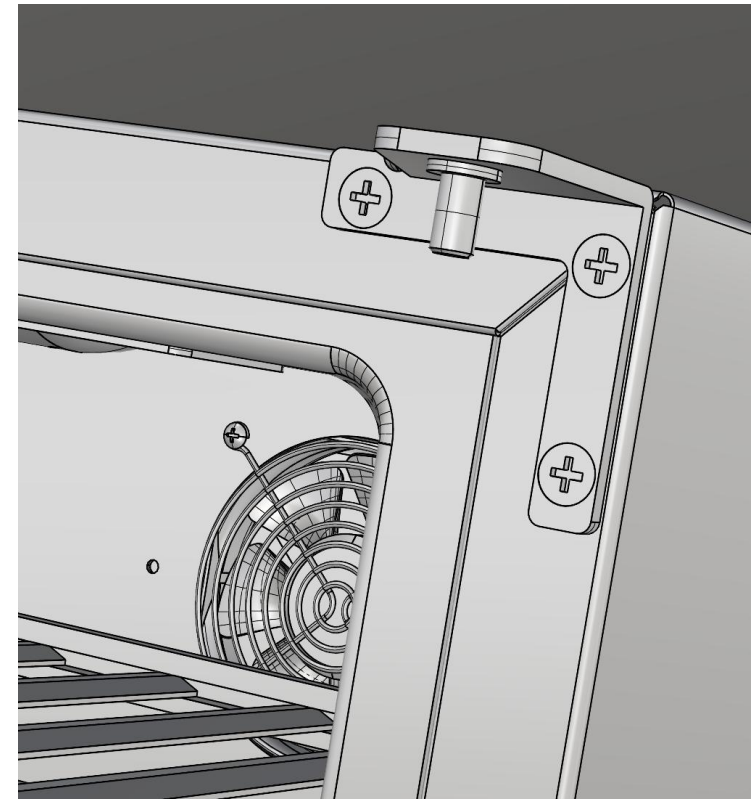

Opening on the door

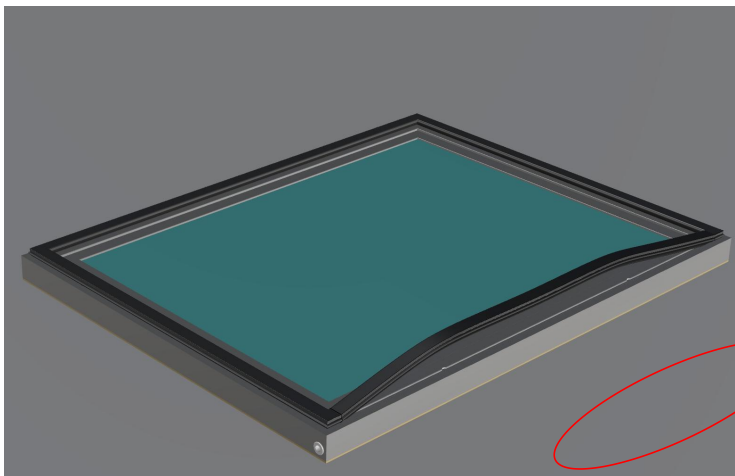

9. Place the new door on a soft, flat surface. Start by pulling up from the center of the black door seal and remove the entire seal.




8. Print the drilling template at 1:1 scale.

Secure it to the back of the wood overlay panel.


Drill holes according to the diagram:

Blue holes = full through-holes.


Red holes = blind holes approximately 0.6" deep.

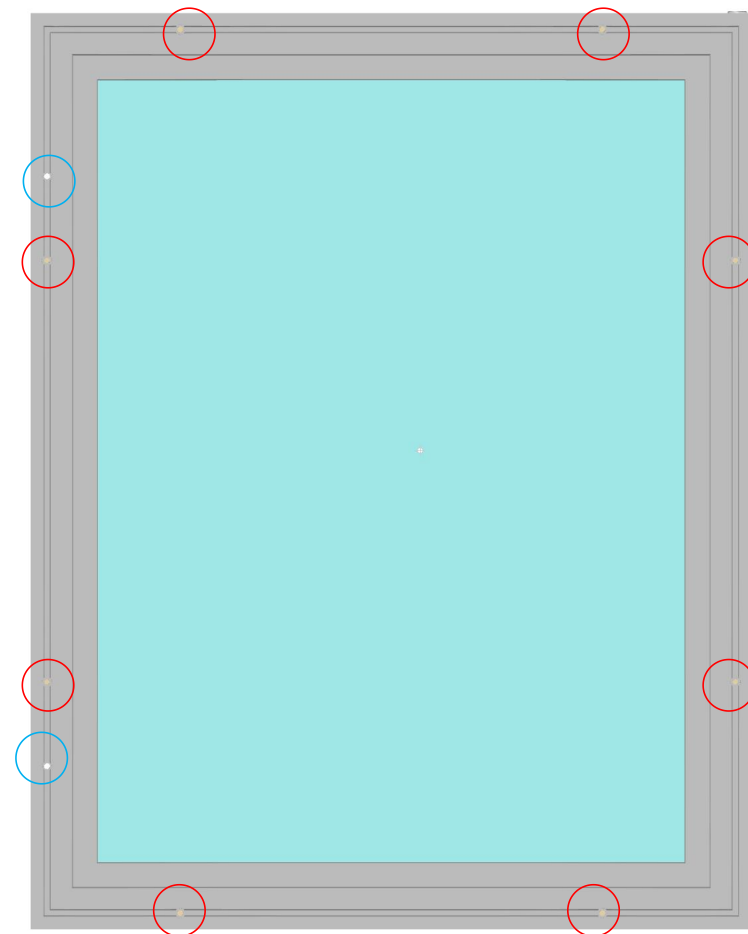

Assembly of new doors and facing wood panels


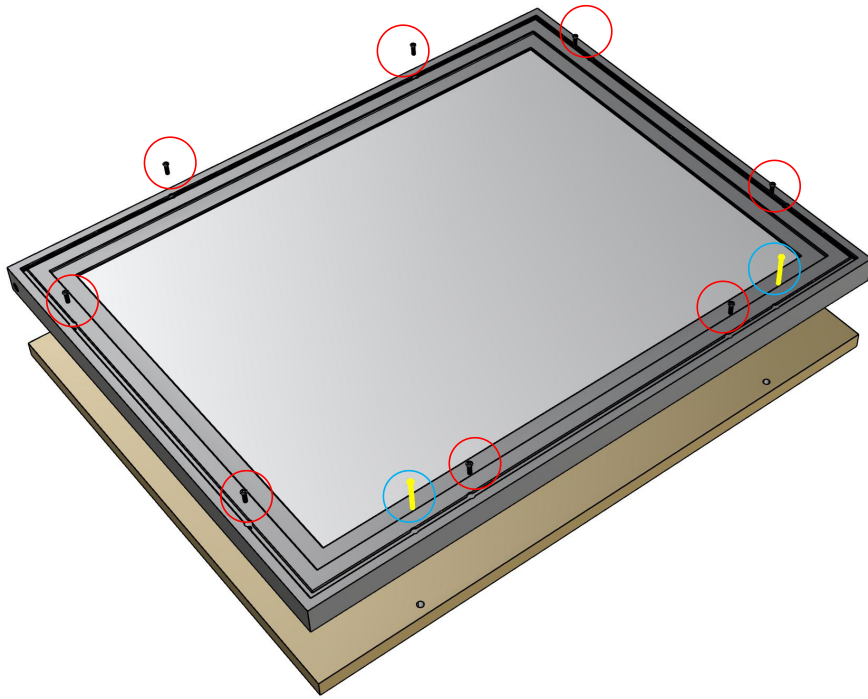


10. Put the drilled wooden board on a flat surface, overlap the new door panel with it, and fix the new door panel and the decorative door panel through the holes. Pay attention to distinguish the two yellow handle nuts.

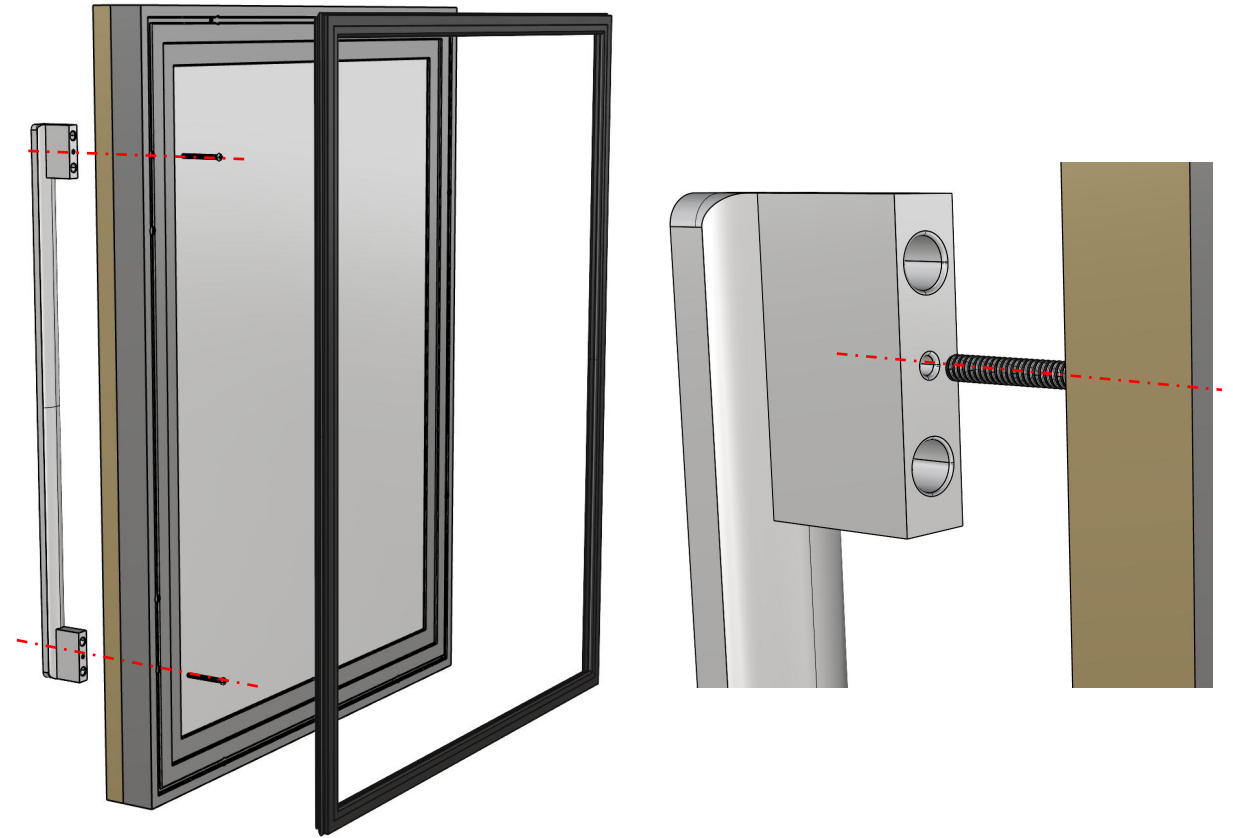

11. Stand the door panel upright. Insert the two long handle screws from the back of the panel. Align the handle from the front and secure it. Finally, reattach the door gasket by pressing it firmly into the gasket groove, ensuring smooth alignment.
Note: Secure the handle using the second (smallest) pre-drilled hole.



Installing the New Door

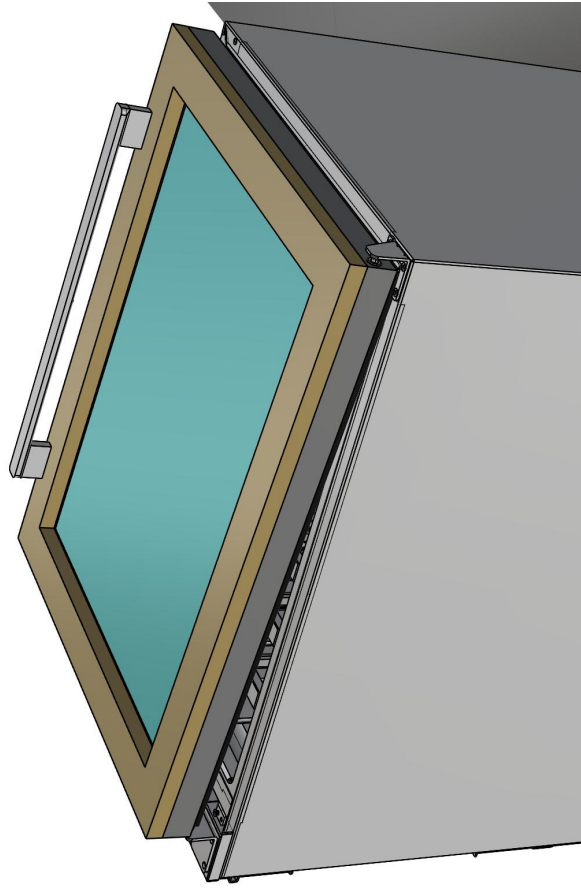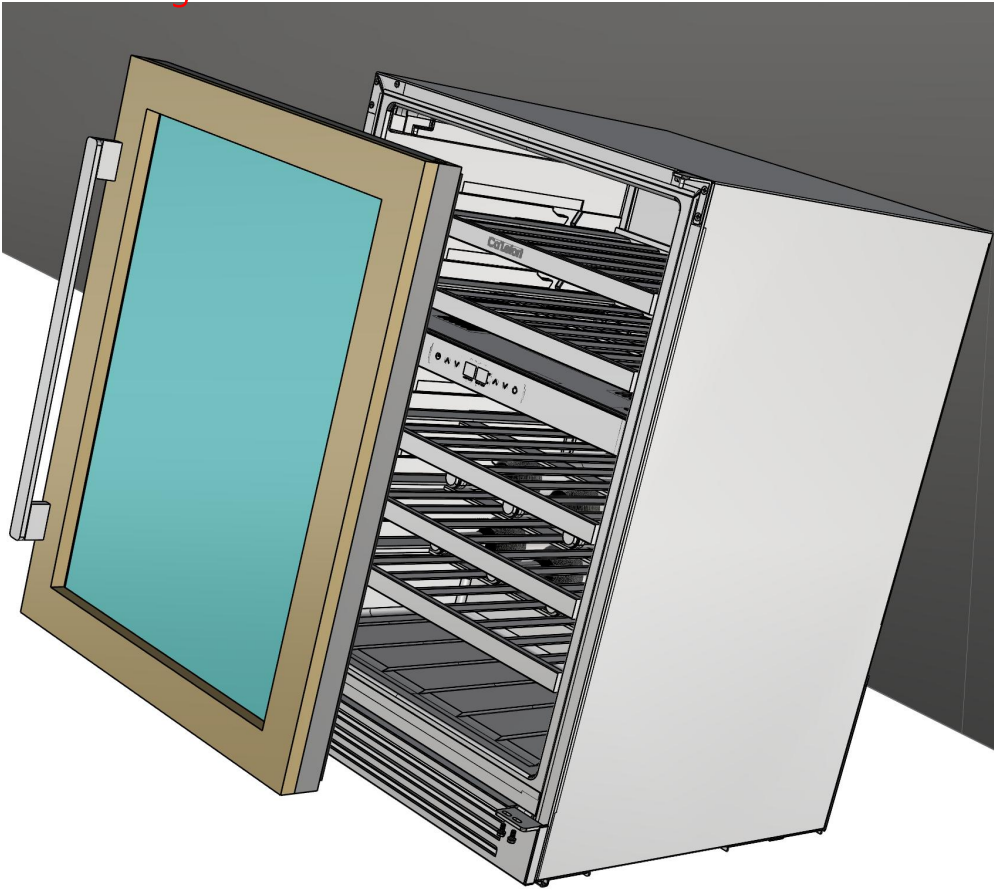


12. Check whether the top and bottom bushings are properly seated in the door panel.

Tilt the door slightly and insert the top bushing into the top hinge pin.

Installing the New Door

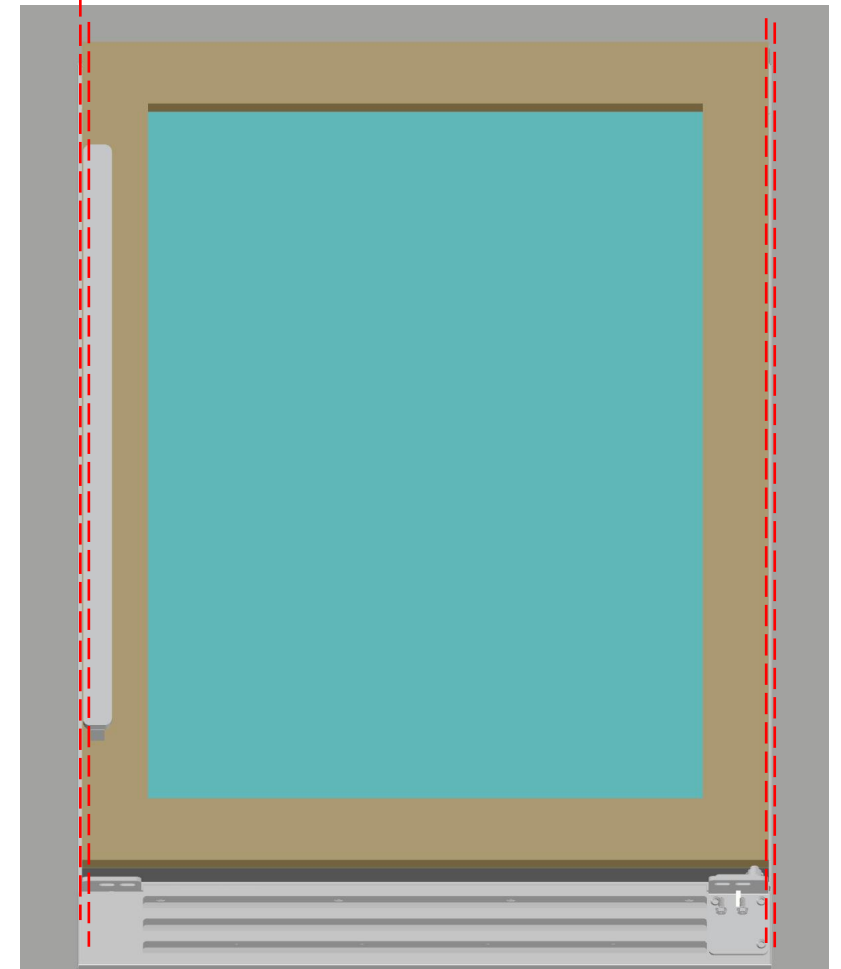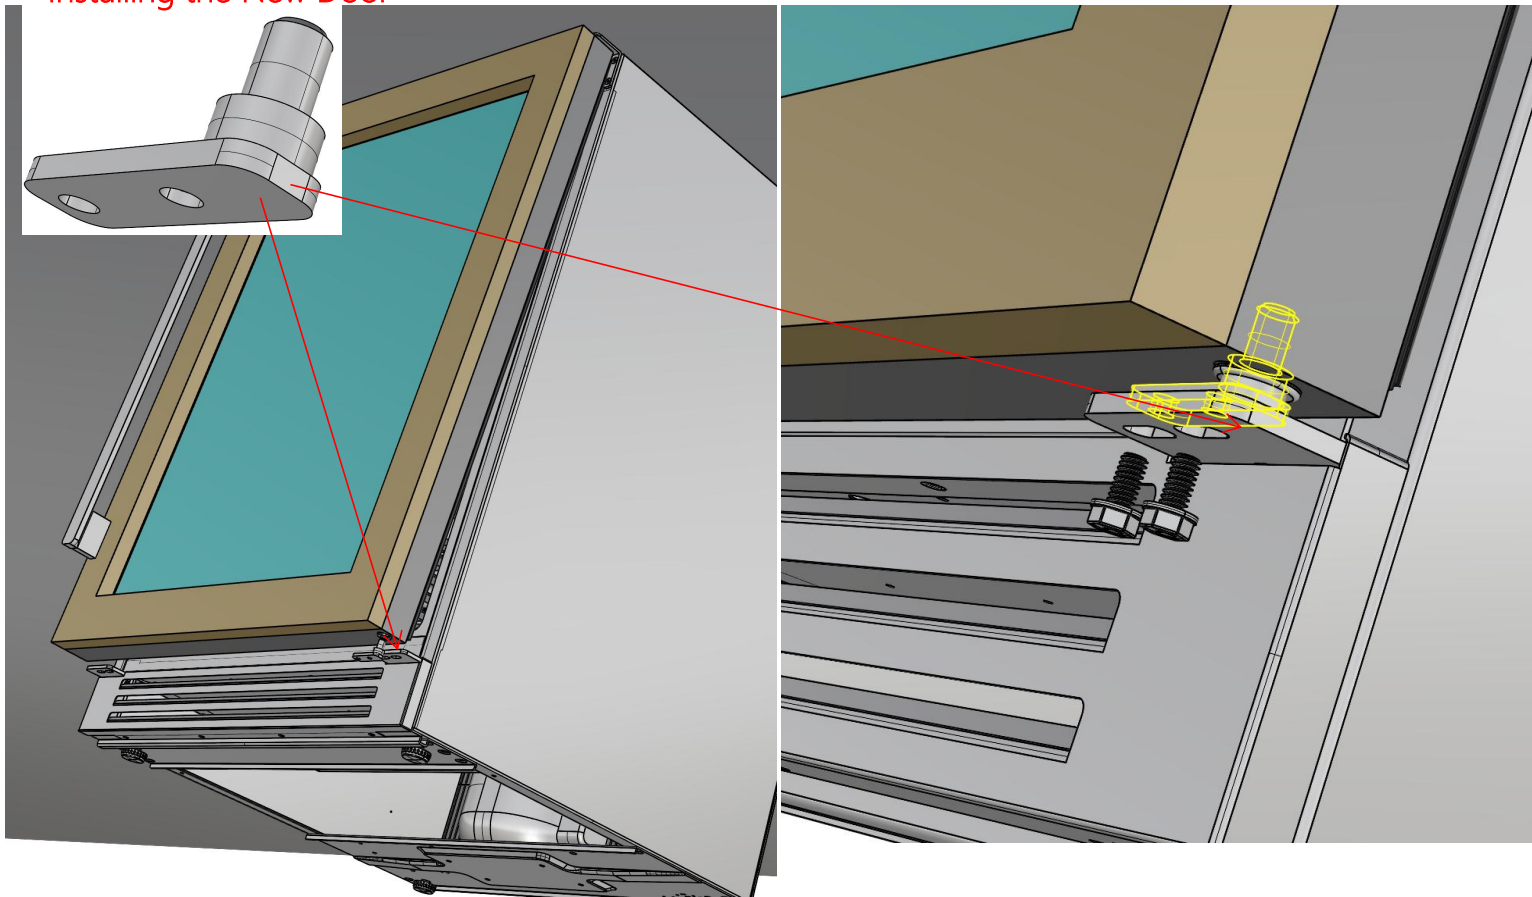

13. Tilt the door bottom outward and insert the hinge spacer into the bottom bushing.
Align the spacer with the bottom hinge surface.
Insert and tighten the two screws from underneath.
Make sure the door is parallel to the cabinet sides.
Open and close the door several times to check for any abnormal sounds or resistance.

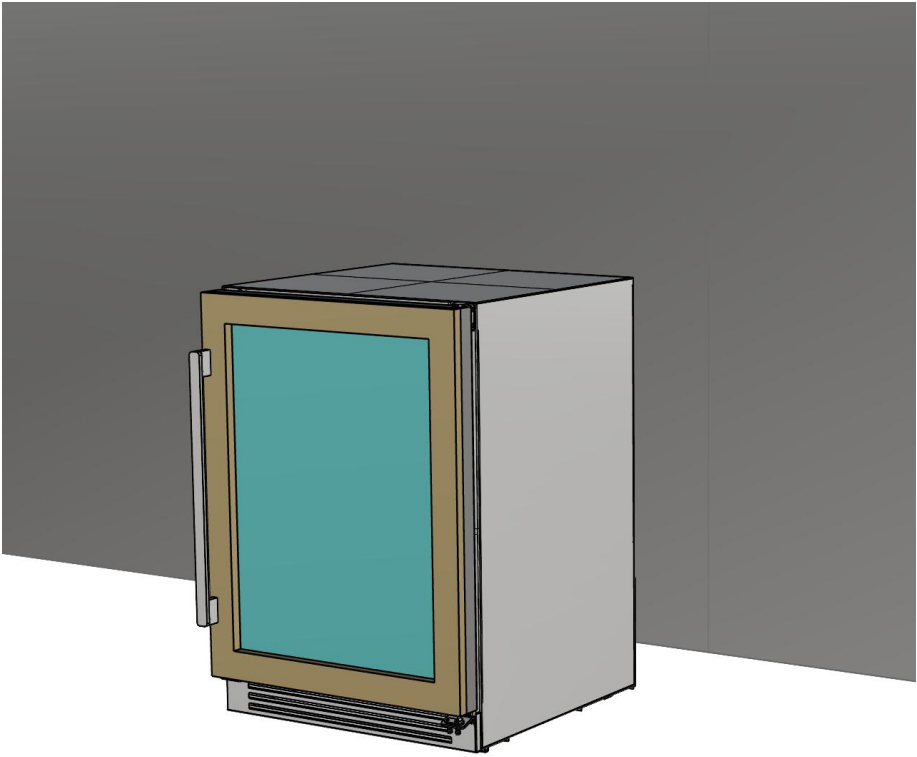

14.Lay the wine fridge flat and let it rest for 24 hours before plugging it in