

# 88 5050 61 Oak Hill Buffet

## IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Home  
Styles

## Part List

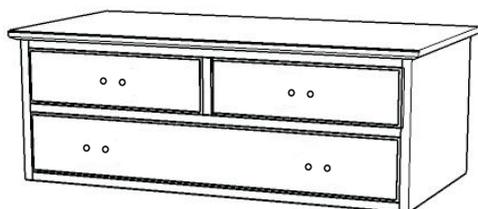


**A.**  
**Cabinet**  
1 pc.

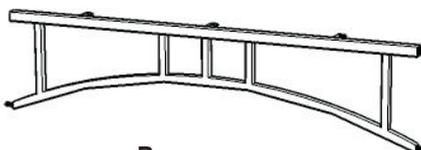

**B.**  
**Front Stretcher**  
1 pc.




**C.**  
**Back Stretcher**  
1 pc.

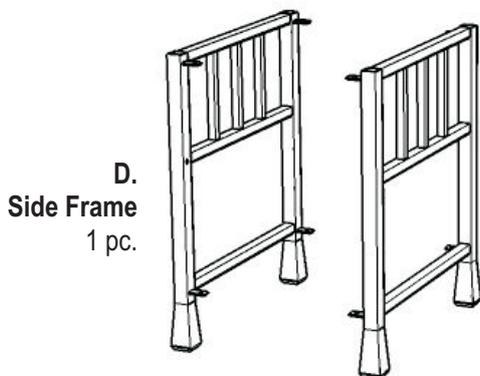

**D.**  
**Side Frame**  
1 pc.

**E.**  
**Side Frame**  
1 pc.

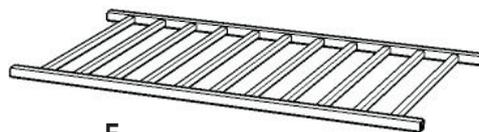

**F.**  
**Shelf**  
1 pc.

## Hardware List



**Hex Wrench**  
1 pc.




**Small Hex Wrench**  
1 pc.



**Head Cap Bolt**  
8 pcs. (+1 extra)



**Spring Washer**  
8 pcs. (+1 extra)



**Flat Washer**  
8 pcs. (+1 extra)



**Wood Screw (long)**  
3 pcs. (+1 extra)



**Wood Screw (short)**  
3 pcs. (+1 extra)

Tools required for assembly : **Phillips** screwdriver

**Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319**  
**servicedesk@homestyles-furniture.com**

# Assembly Instructions 2/3

## IMPORTANT

You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.

## STEP 1

Attach Front Stretcher (B) and Back Stretcher (C) to Side Frame (D) with Head Cap Bolts, Spring Washers and Flat Washers. (See figure 1)



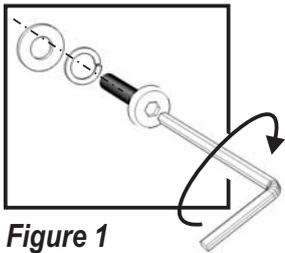


Figure 1

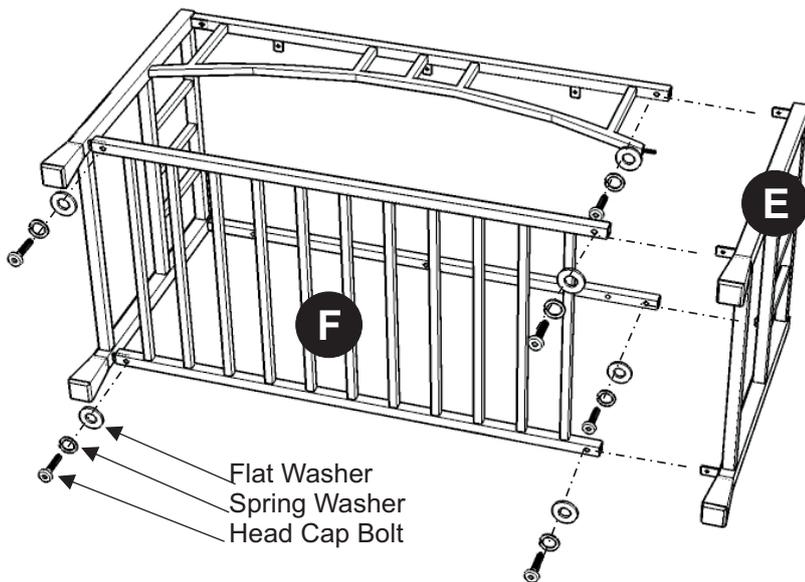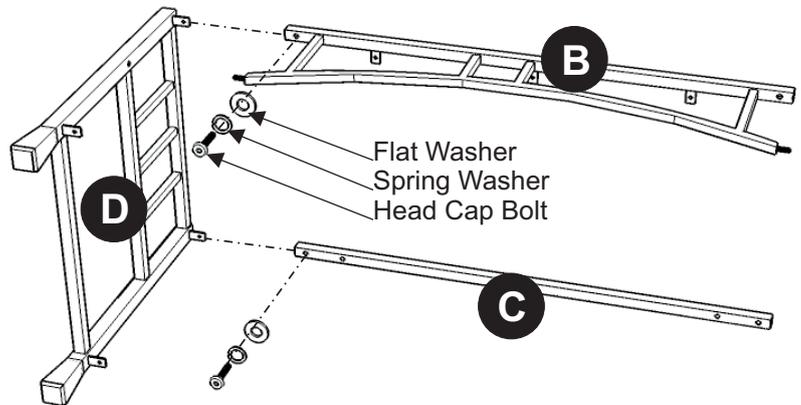


## STEP 2

Attach Shelf (F) to unit with Head Cap Bolts, Spring Washers and Flat Washers.

Attach Side Frame (E) to unit with Head Cap Bolts, Spring Washers and Flat Washers.

## STEP 3



Remove all drawers, then place Cabinet (A) upside down on a soft cloth.

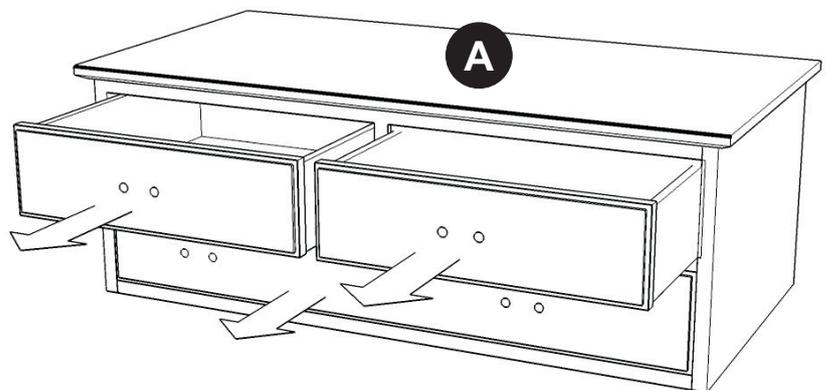

## STEP 4

Attach unit onto Cabinet (A) with 3X Wood Screws (short) for Front Stretcher and 3X Wood Screws (long) for Back Stretcher.

Turn the unit to its' upright position  
Slide all drawers into position.

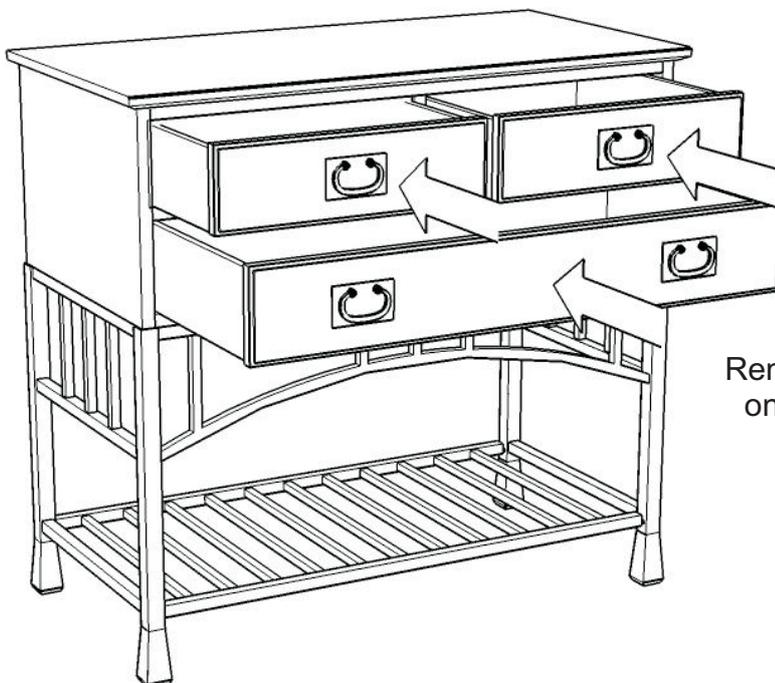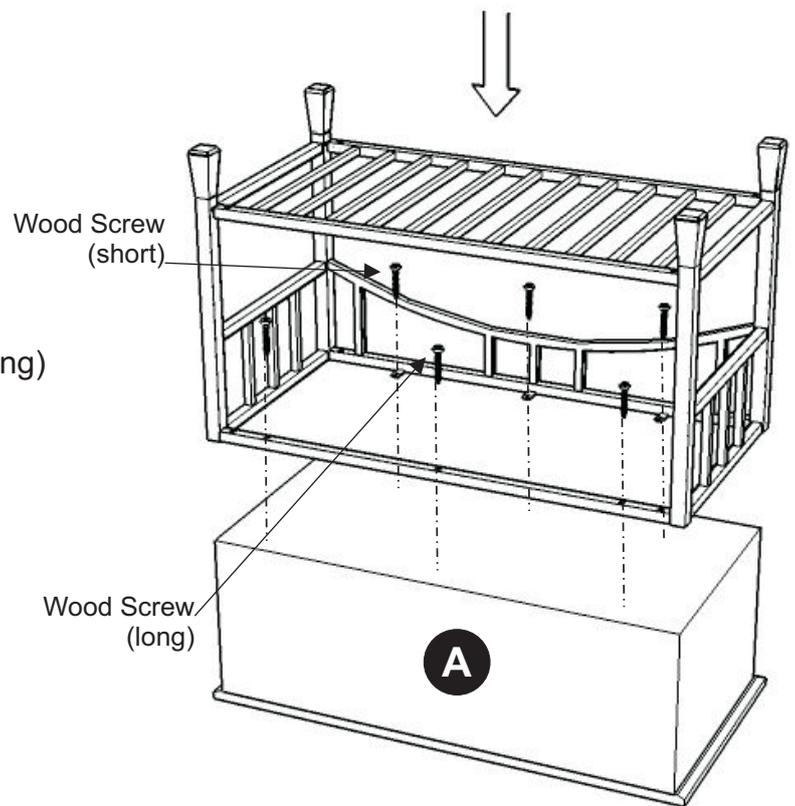


## STEP 5

Turn the unit over to its' upright position.

Remove the Pull Handles that are installed on the inside of the drawers and re-install them on the outside of the drawer. (See figure 1)

Slide the drawers into position.

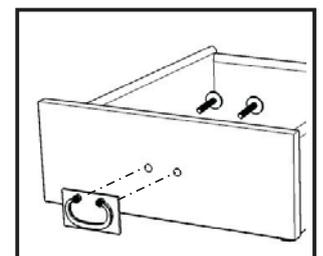



(Figure 1)

# 88 5050 65 Oak Hill Hutch

## IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

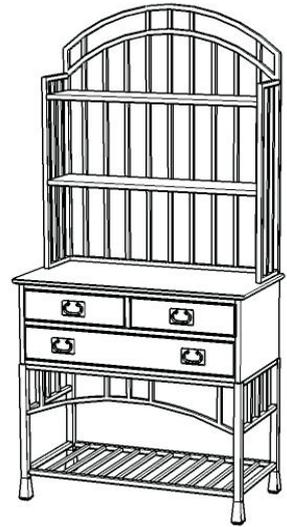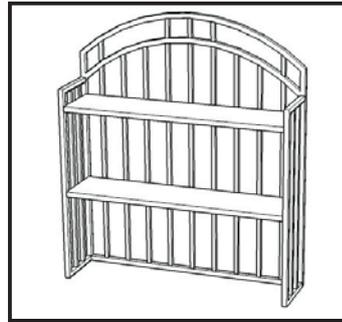


*Home  
Styles*

## Part List



**A.  
Back Frame**  
1 pc.

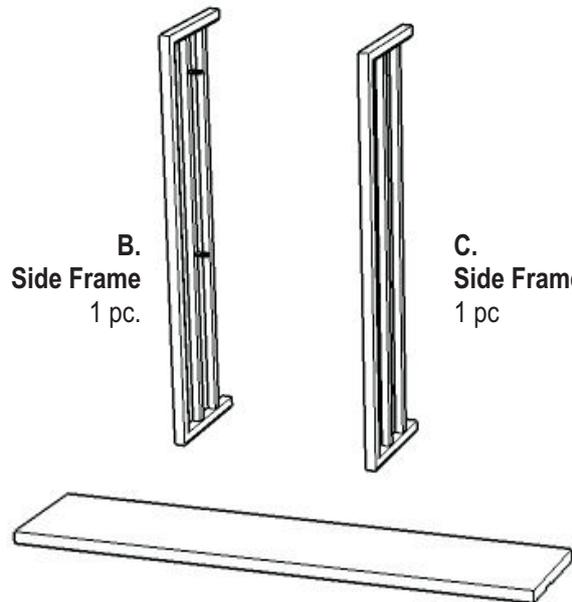


**B.  
Side Frame**  
1 pc.

**C.  
Side Frame**  
1 pc

**D.  
Shelf**  
2 pcs.

## Hardware List

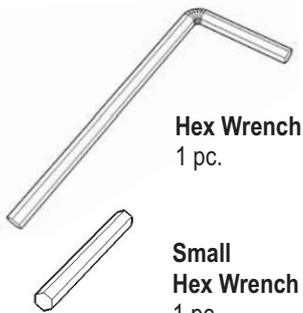

**Hex Wrench**  
1 pc.

**Small  
Hex Wrench**  
1 pc.




**Head Cap Bolt**  
4 pcs. (+1 extra)



**Wood Screw (long)**  
4 pcs. (+1 extra)



**Wood Screw (short)**  
8 pcs. (+1 extra)

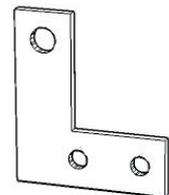

**Steel Plate Connector**  
2 pcs. (+1 extra)

Tools required for assembly : **Phillips** screwdriver

**Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319**  
**servicedesk@homestyles-furniture.com**

# Assembly Instructions

## IMPORTANT

You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.

## STEP 1

Attach Side Frame (B) and (C) to Back Frame (A) with Head Cap Bolts. (See figure 1)



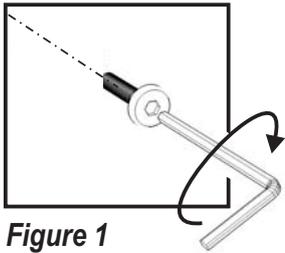


Figure 1

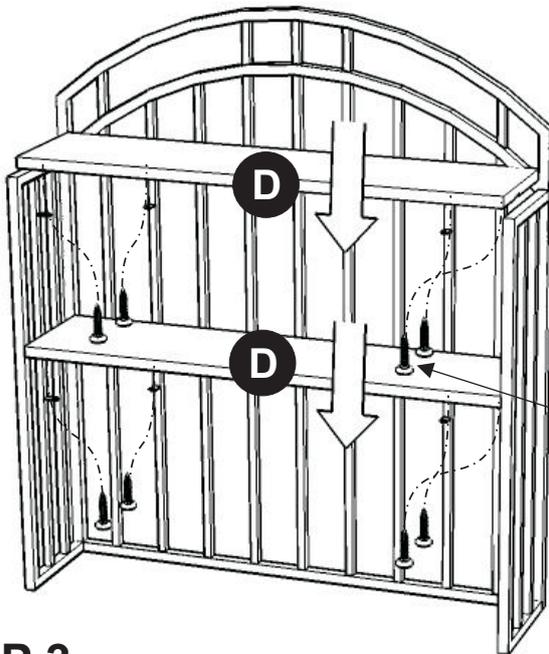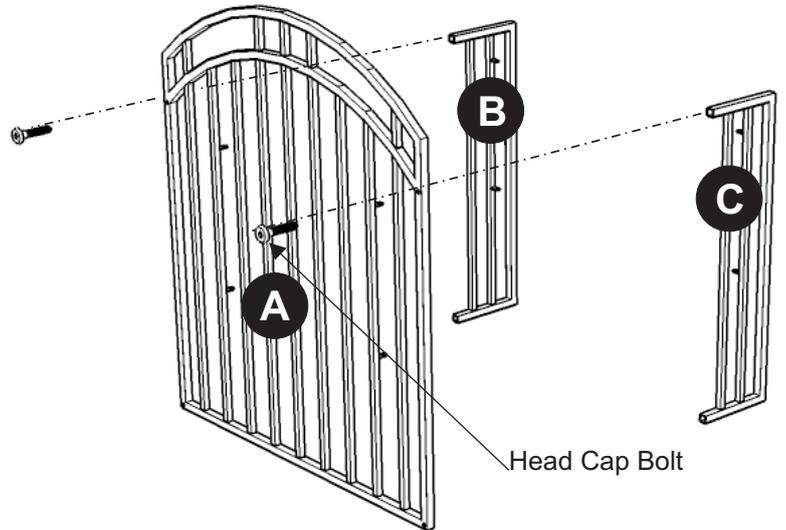

## STEP 2

Attach Shelves (D) to unit with Wood Screws (short).

Wood Screw (short)

## STEP 3

Place unit onto Buffet unit.

Attach Steel Plant Connectors to unit at the pre-drilled holes, then tighten Head Cap Bolts and Wood Screws (long). (See figure 2)

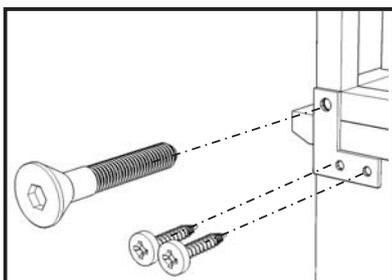


Figure 2

