


ASSEMBLY INSTRUCTION

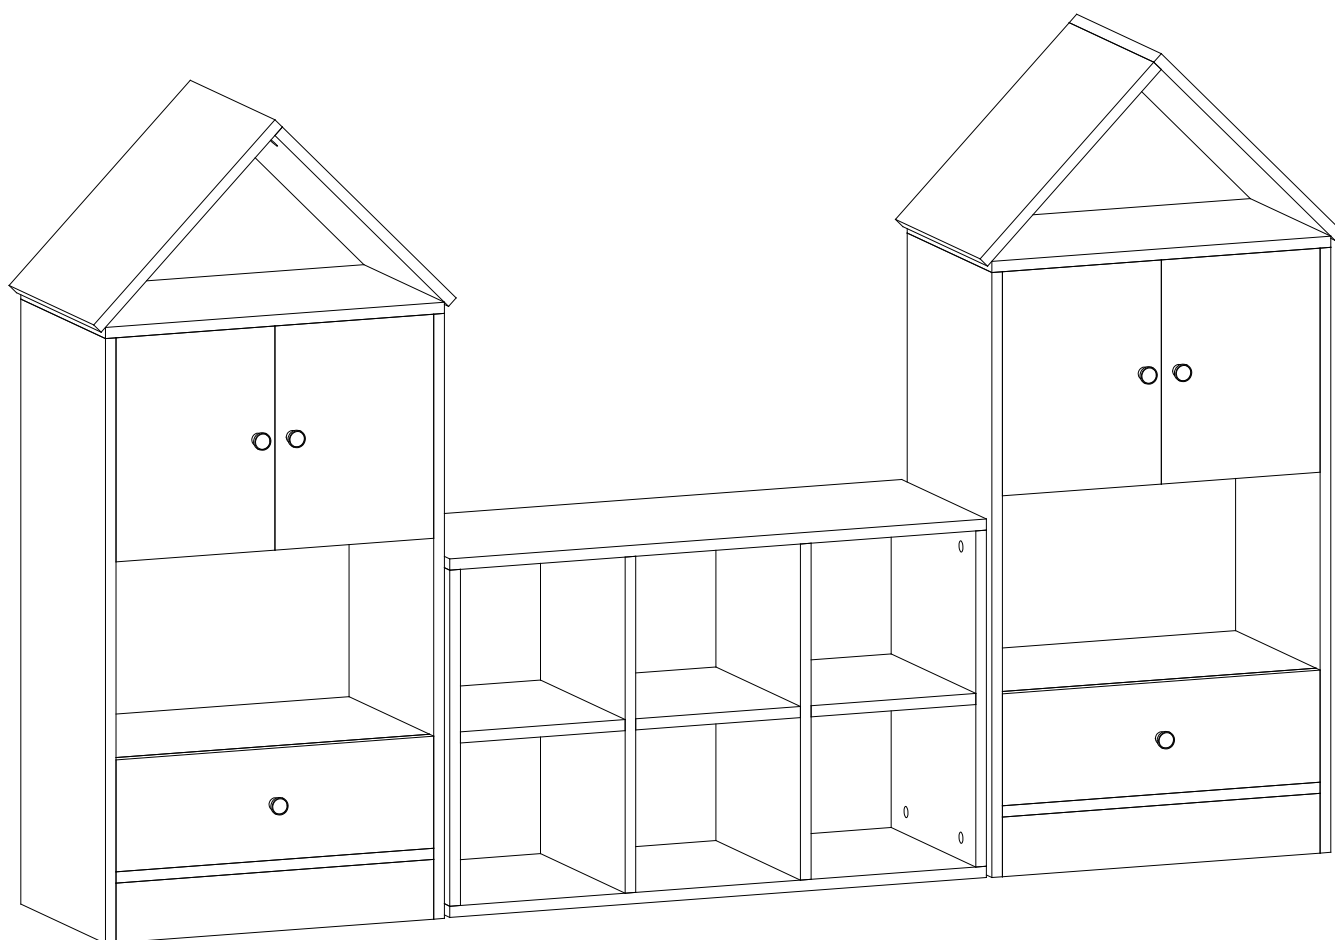



Ax96



Bx94



Cx8



Dx4




Ex48



Fx6


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

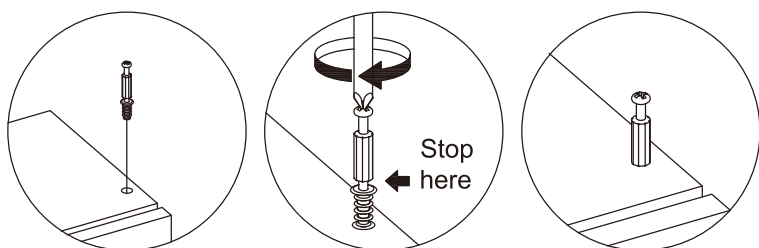


2. Compruebe la dirección de la tuerca







This direction of the marked nutis consistent with the direction in which the scre is inserted


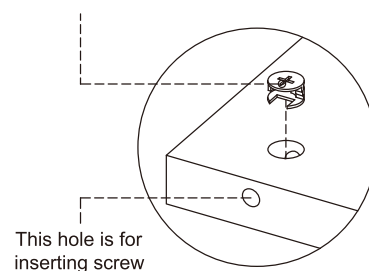


3. Installation on thr board with fixing screws

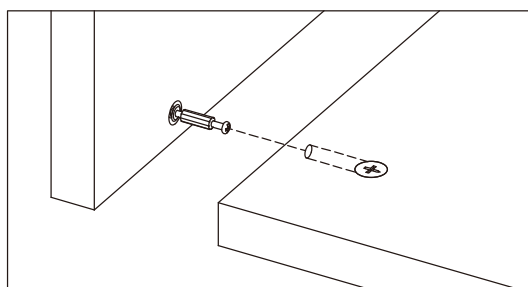


3. Rotate slowlyuntil it stops

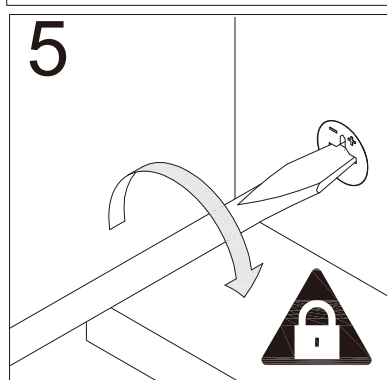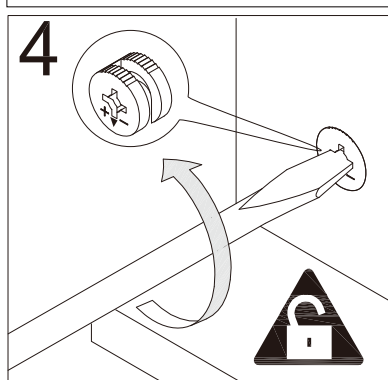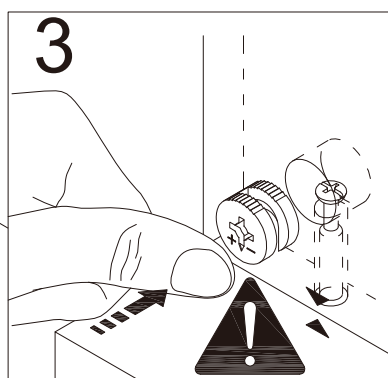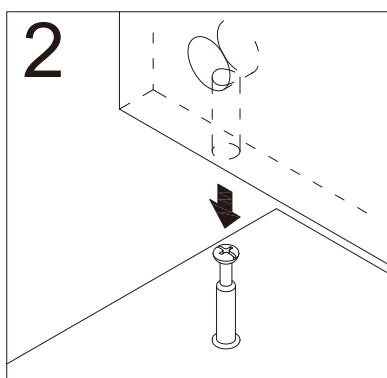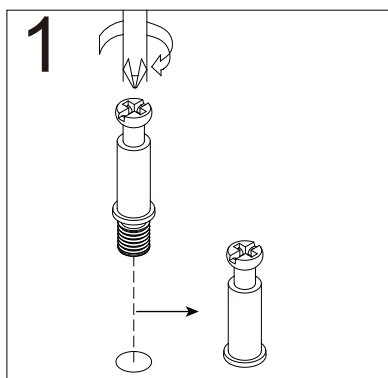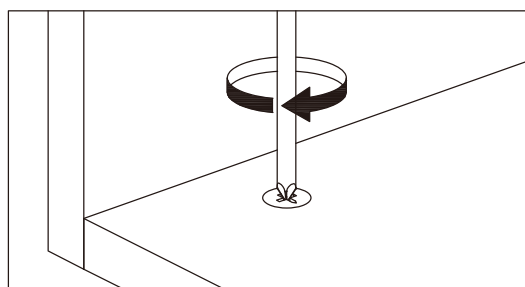


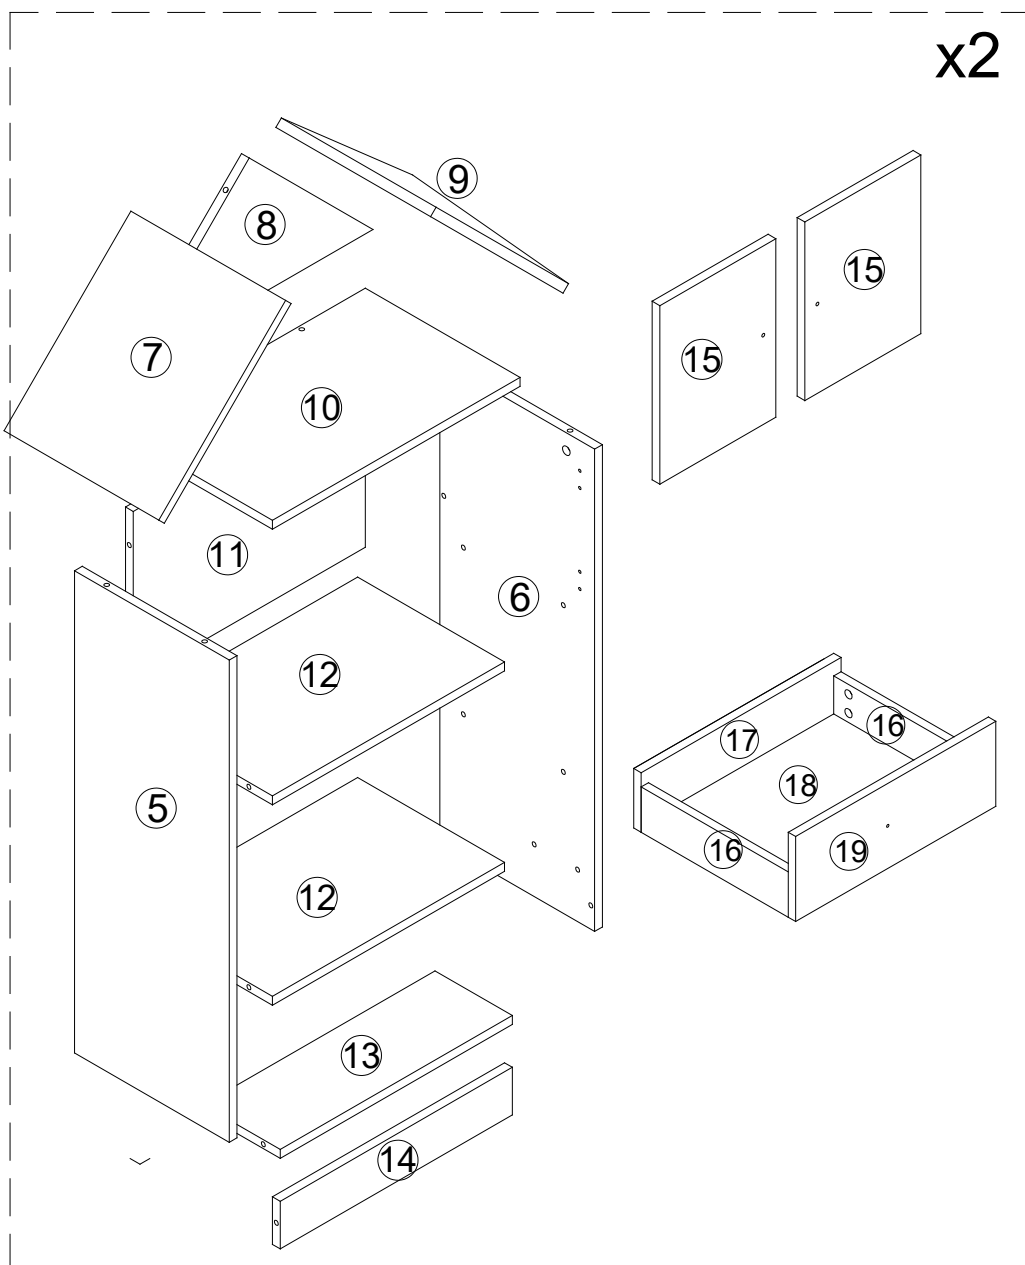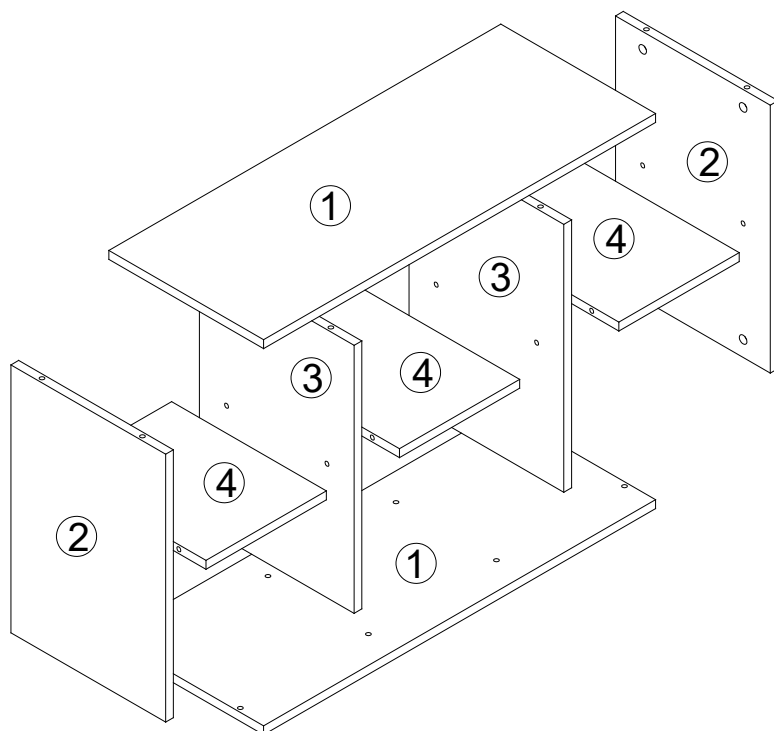


STEP 1

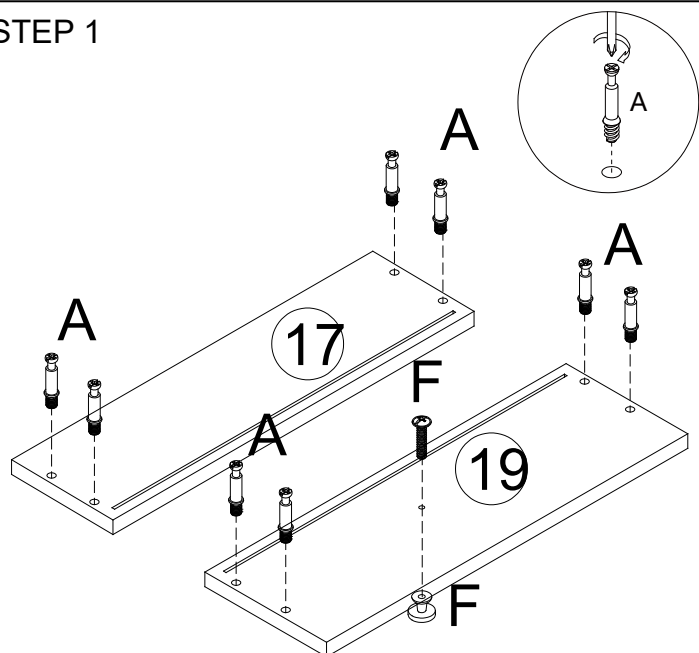


STEP 2

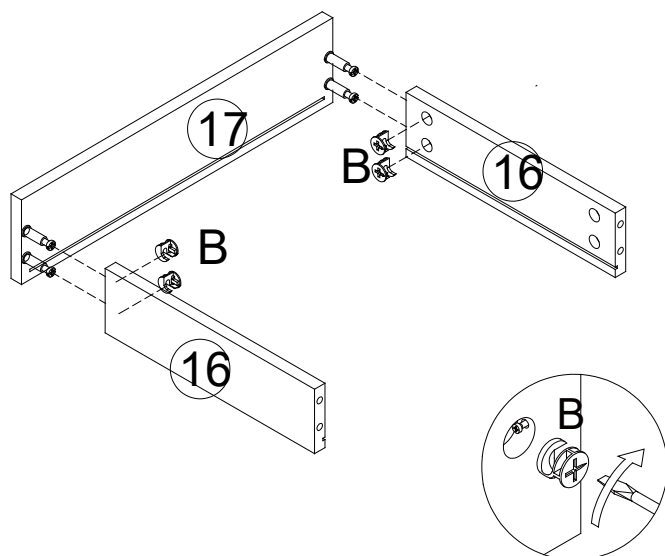


STEP 3

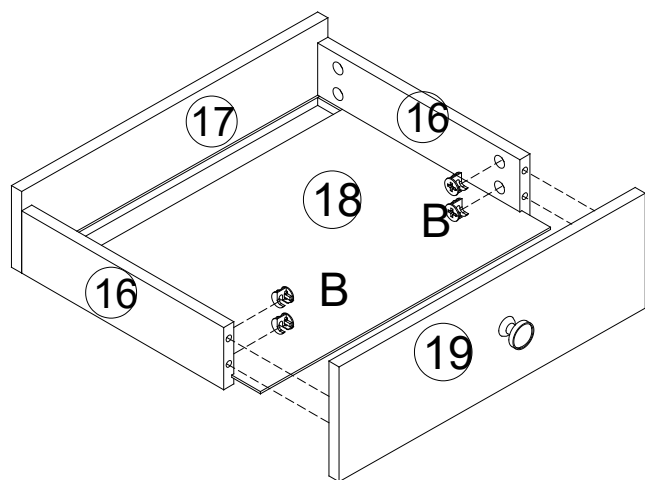


STEP 4

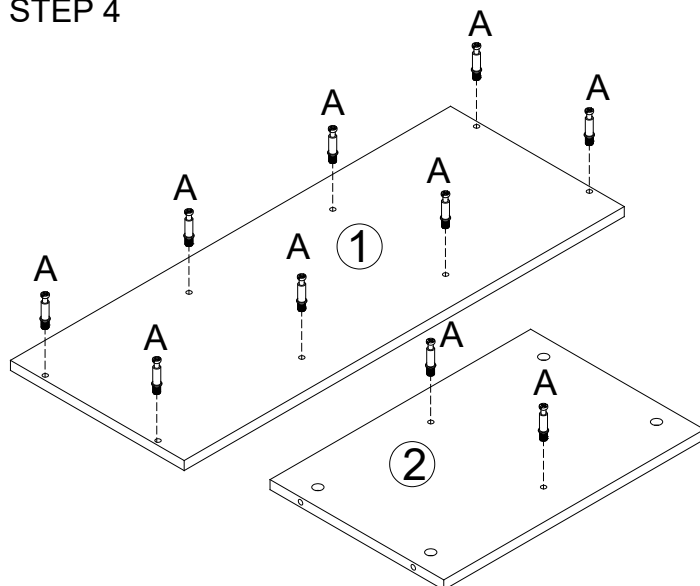


STEP 5

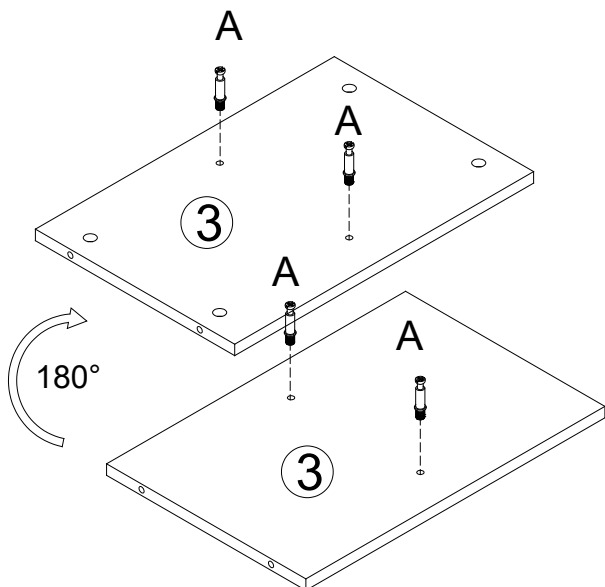


STEP 6

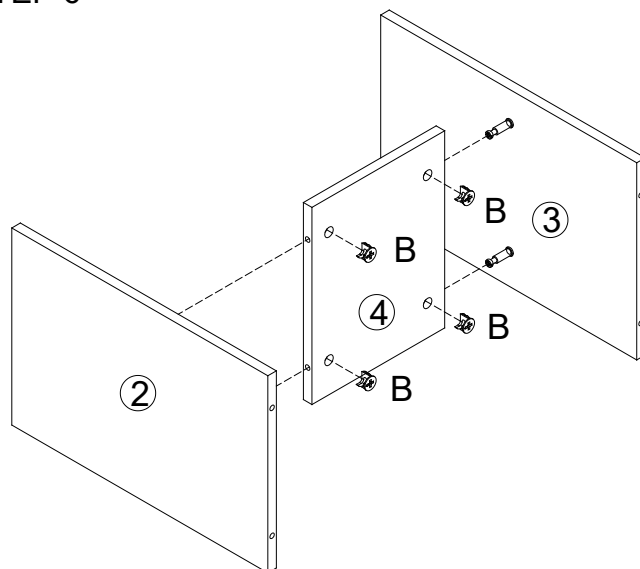


STEP 7

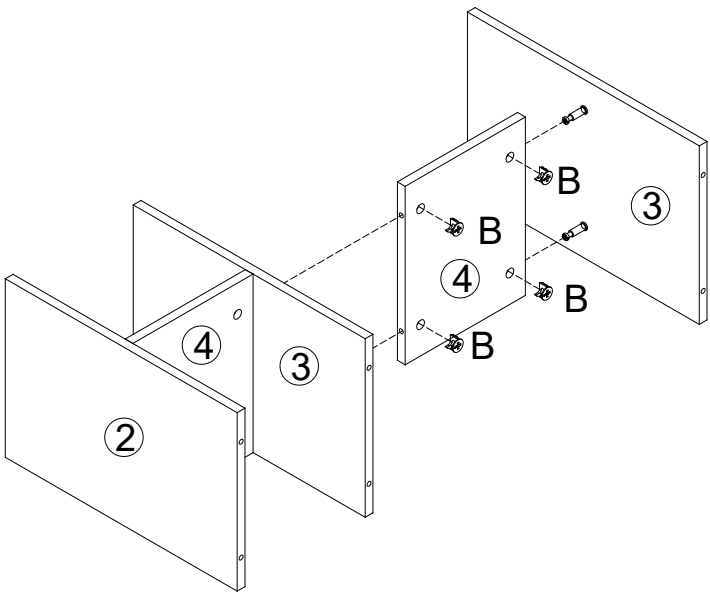


STEP 8

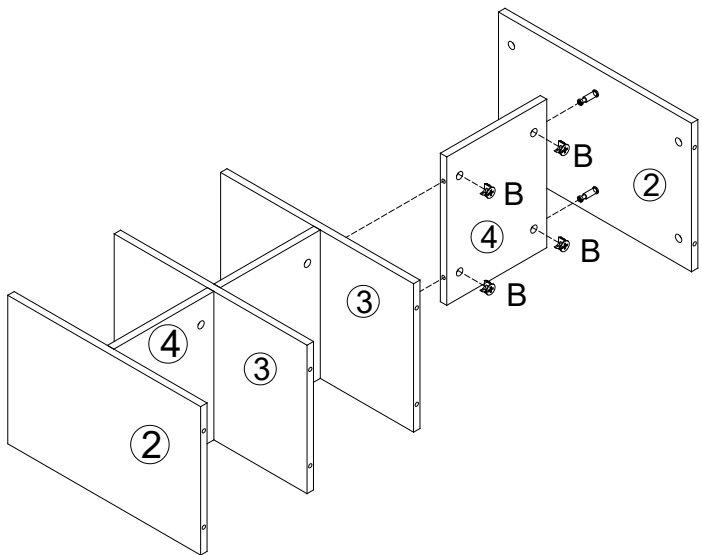


STEP 9

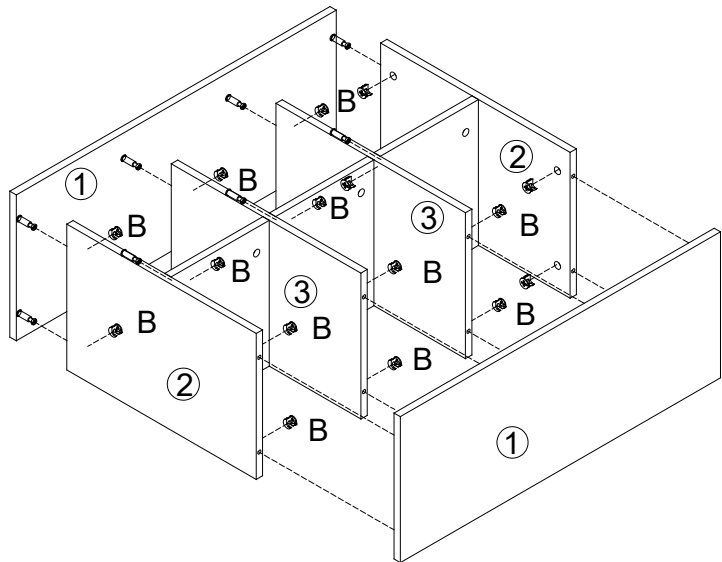


STEP 10

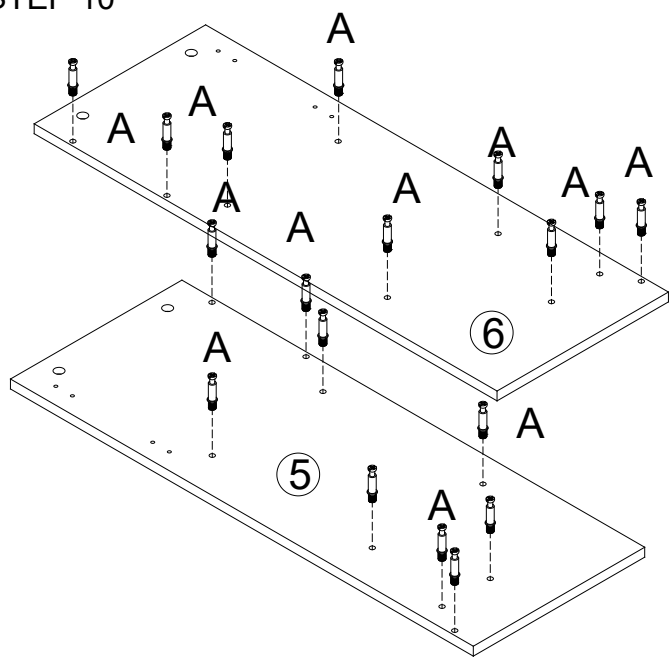


STEP 11

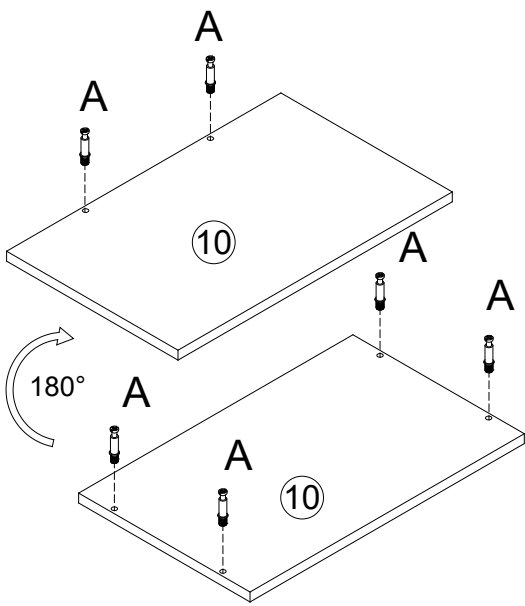


STEP 12

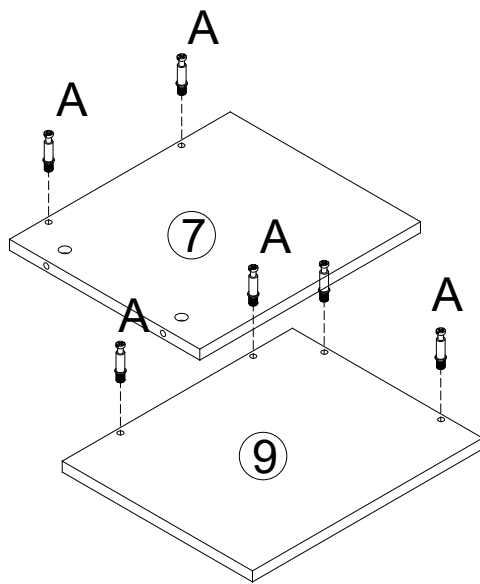


STEP 13

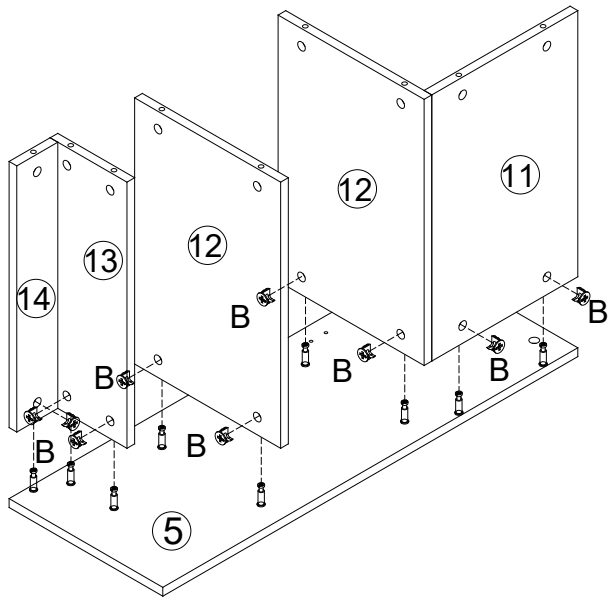


STEP 14

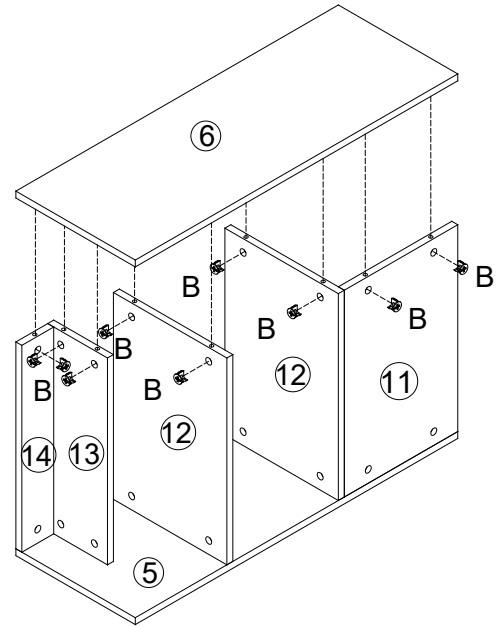


STEP 15

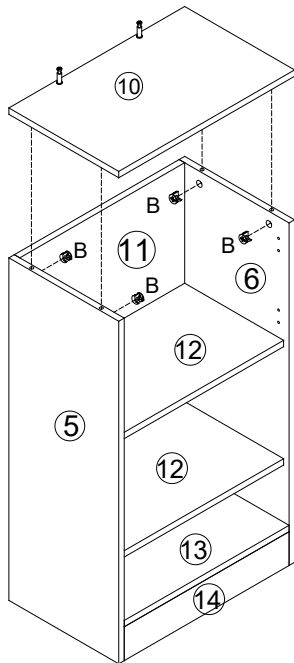


STEP 16

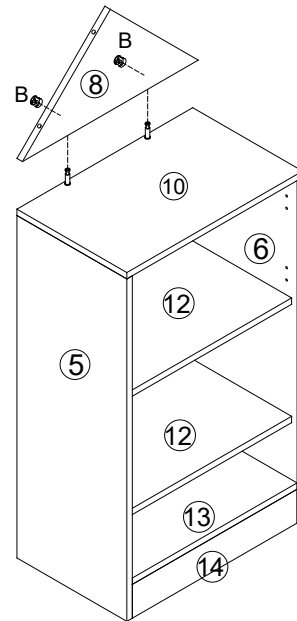


STEP 17

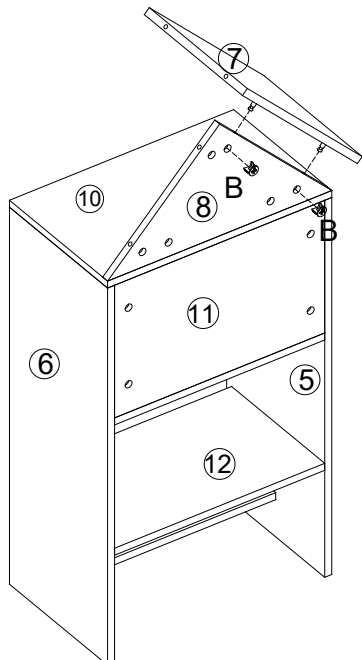


STEP 18

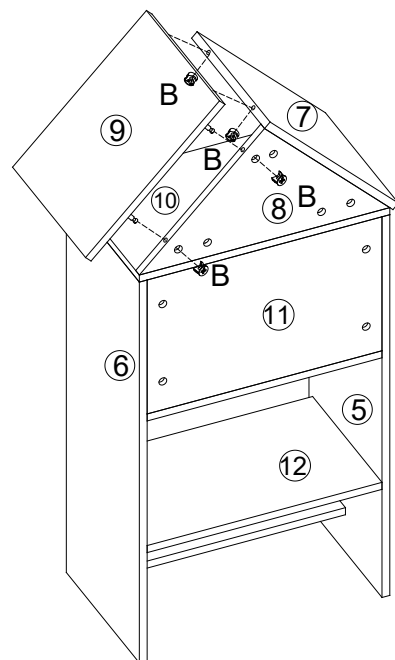


STEP 19

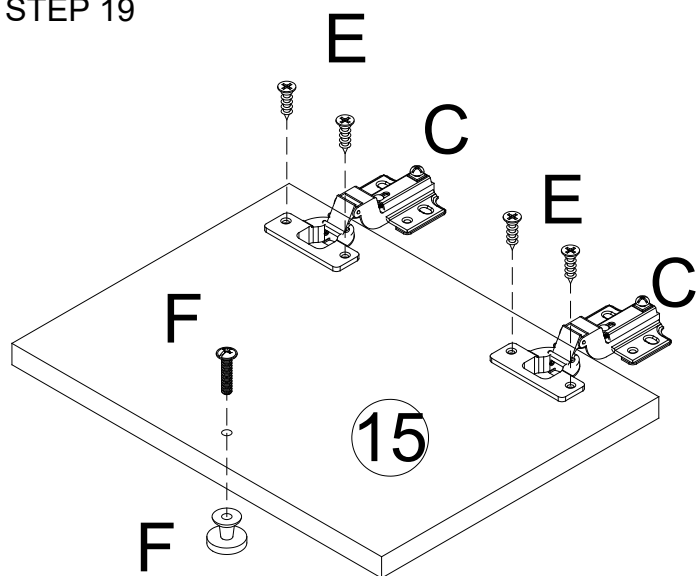

STEP 20

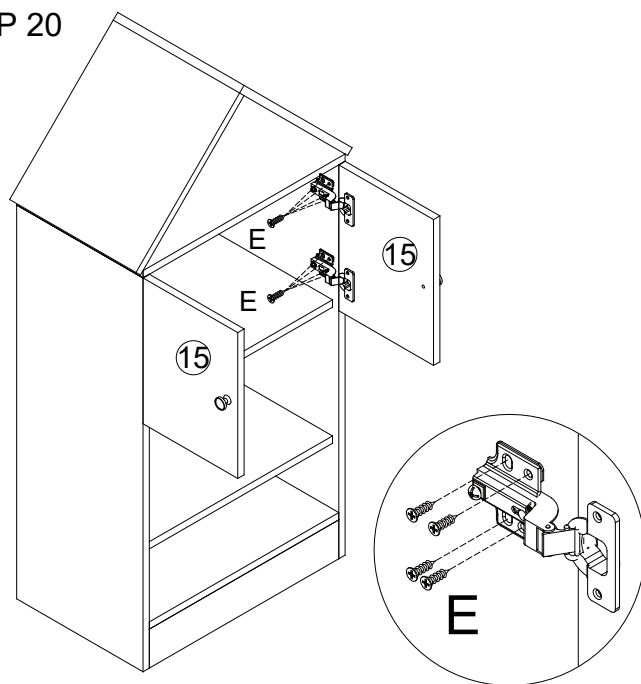

STEP 21

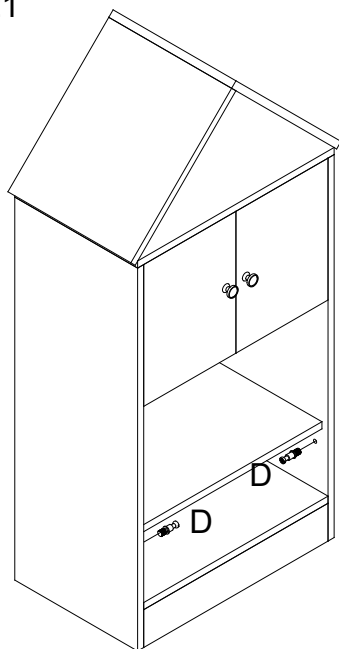

STEP 22

