

















Part List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Back		1x
B	Seat		1x
C	Left Arm		1x
D	Left Leg		1x
E	Right Arm		1x
F	Right Leg		1x
G	Support Back		2x

Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	Bolt and nut	 M6x45	4x
HW2	Bolt & Round nut	 M6x70	2x
HW3	T Bolt & nut	 M6x45	2x
HW4	Screw L	 M6x60	2x
HW5	Screw S	 M6x30	2x
HW6	Bolt and nut	 M8x50	2x
HW7	Extra bolt	 M6x45	1x
HW8	Wrench		1x
HW9	Allen Key		2x

JY

JONATHAN Y

MODEL# PAT1001

Product Dimension: 31.69" x 26.97"W x 32.28"H






Scan the QR code on the right to view a video that shows how to assemble this product.




PREPARATION

Tool required for assembly (included): Allen Key.

1

HW3		M6x45	2x
HW4		M6x60	2x
HW5		M6x30	2x

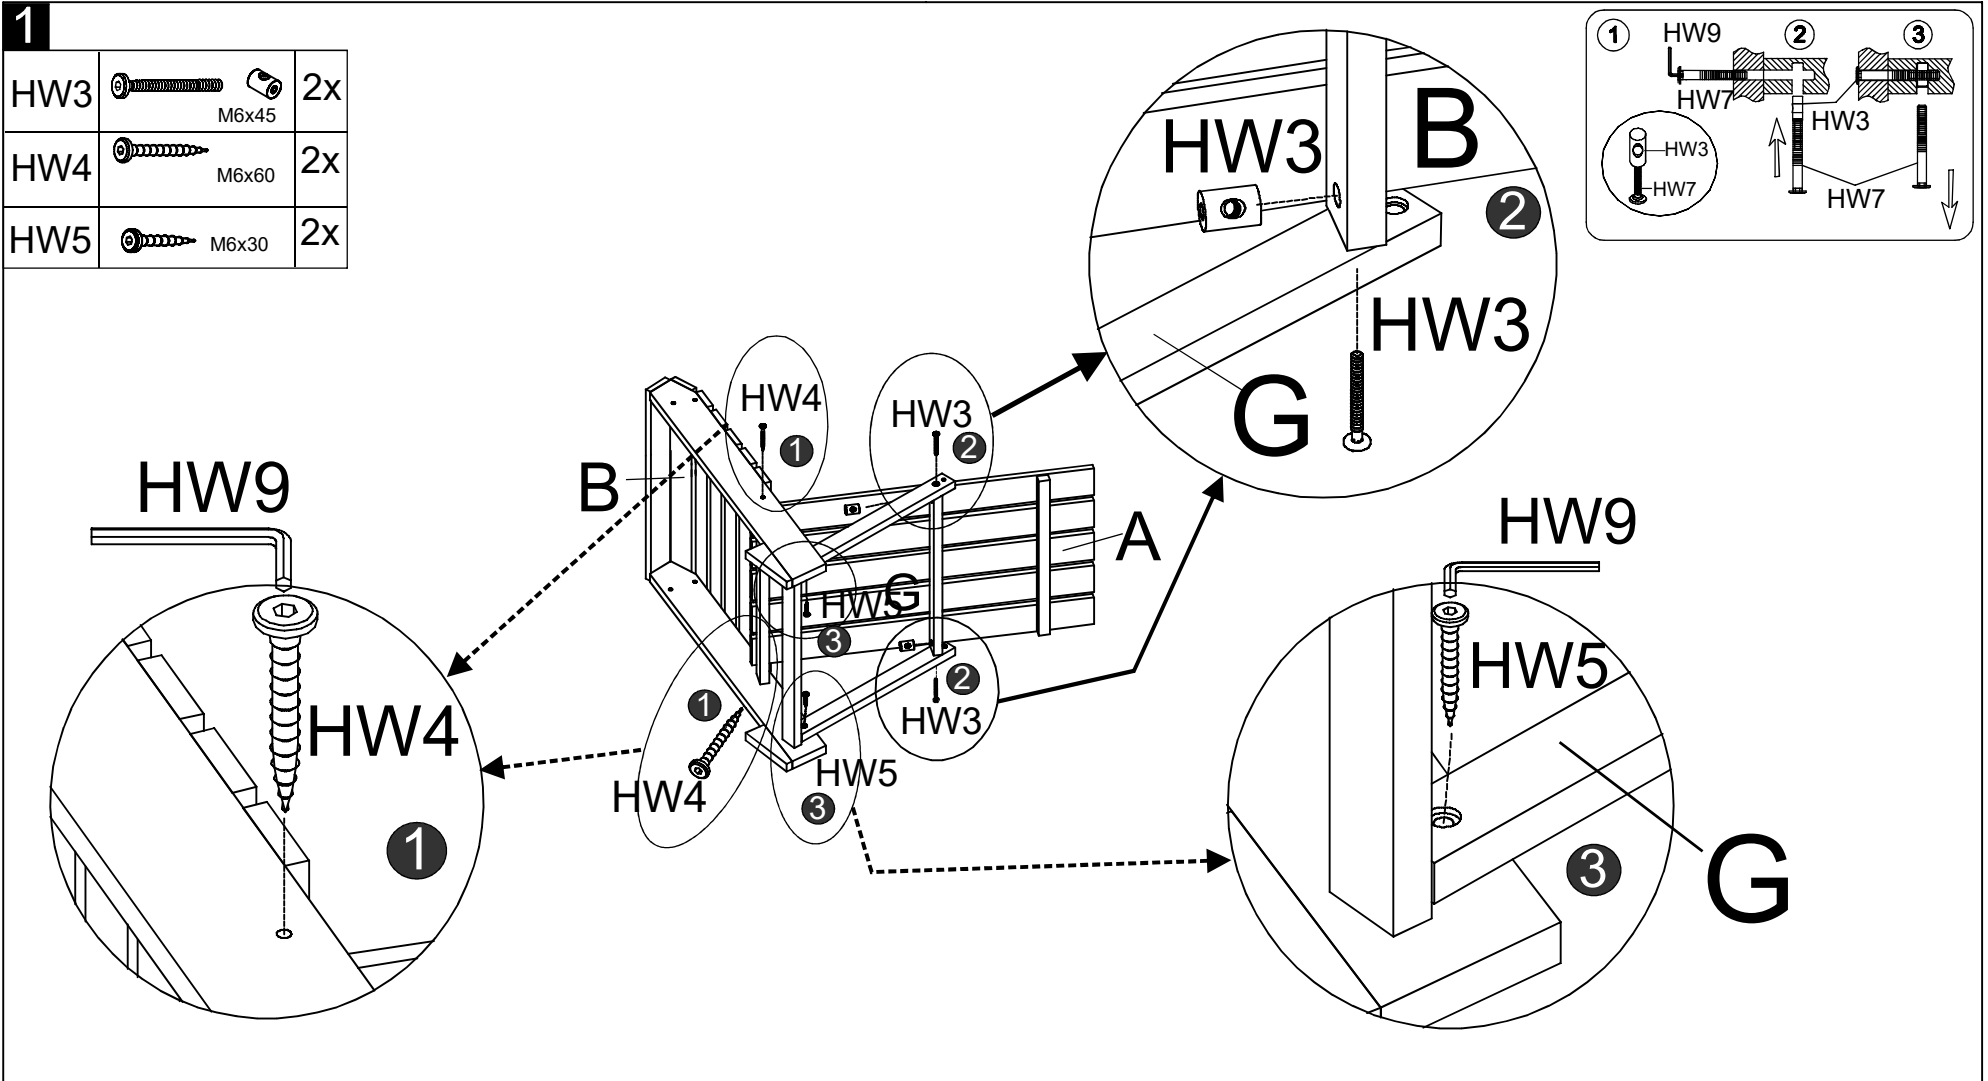

Step 1: Attach the Back (A) ,support back (G) to the Seat (B) as shown in the picture (1) .Using Screw (HW4) to fix the Back (A) to the Seat (B)_pic (1) .After that use the T Bolt & nut (HW3) to fix the Support (G) to the Back (A) by the Allen key (HW9) and Extra bolt (HW7) pic (2) . At last use Screw S (HW5) to fix the Support back (G) to the Seat (B) both side by using the Allen key (HW9) as shown on the picture- pic (3).



PREPARATION

Tool required for assembly (included): Allen Key and Wrench.

2

HW1  2x
M6x45

HW9

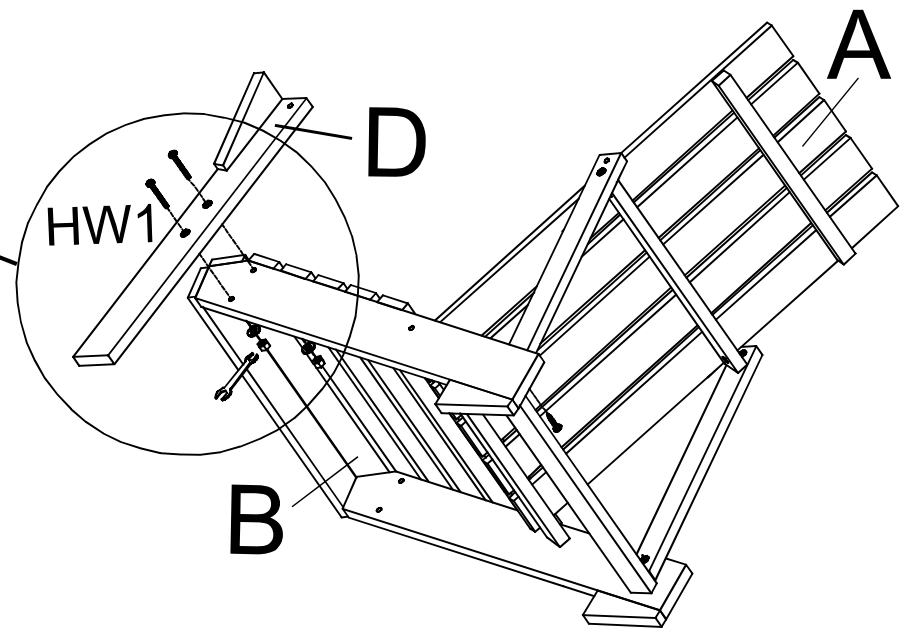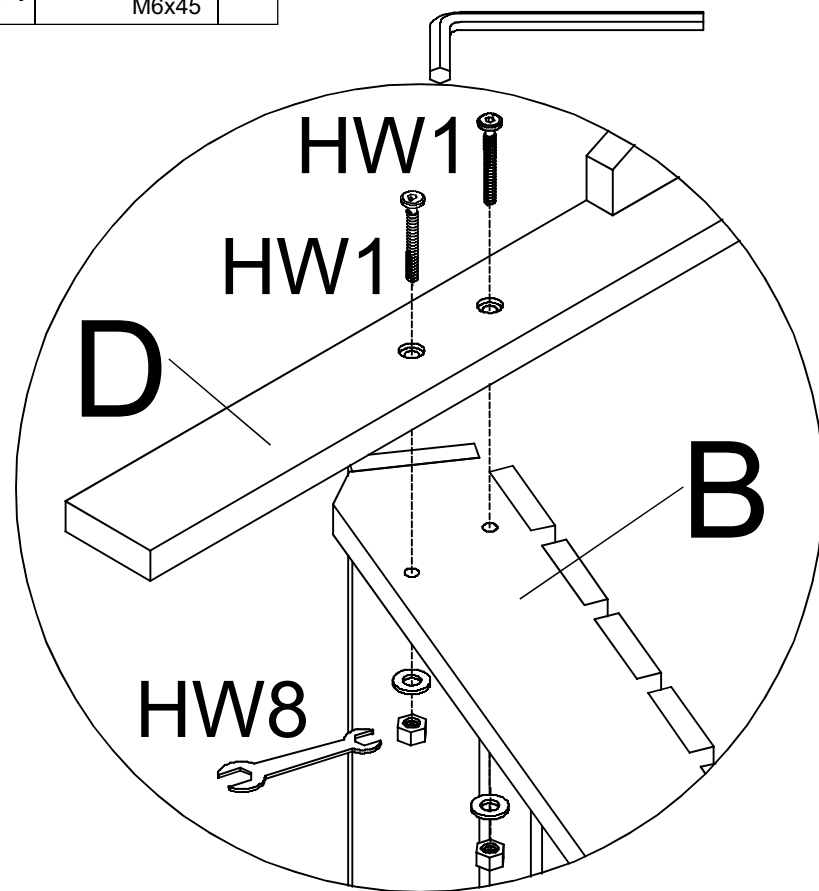






Step 2: Attach the Left leg (D) to the Seat (B) as shown on the picture. Using the Bolt & nut (HW1) and tighten with the Allen key (HW9) and Wrench (HW8).

PREPARATION

Tool required for assembly (included): Allen Key and Wrench.

3

HW2	 M6x70	1x
HW6	 M8x50	1x

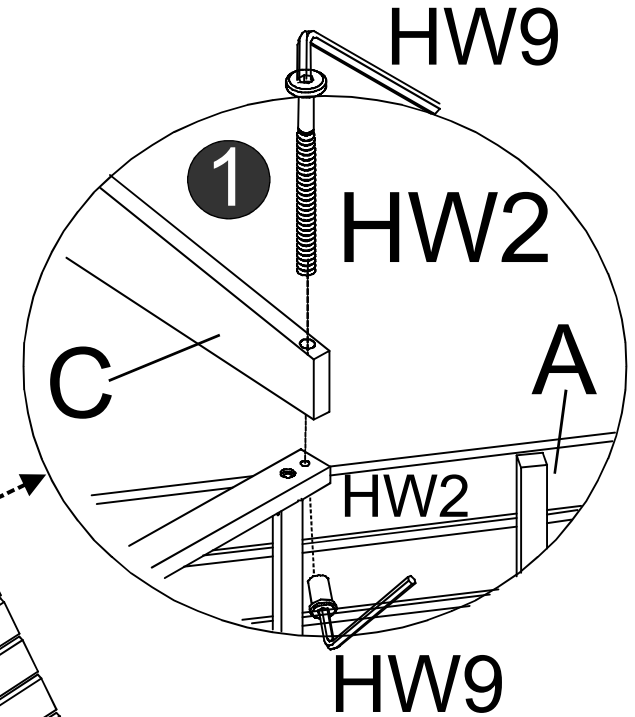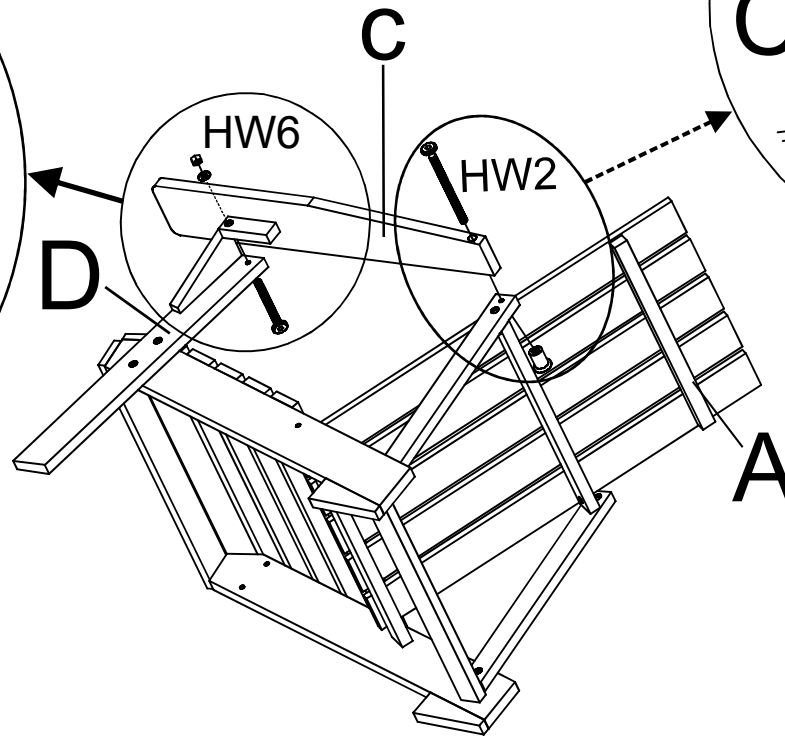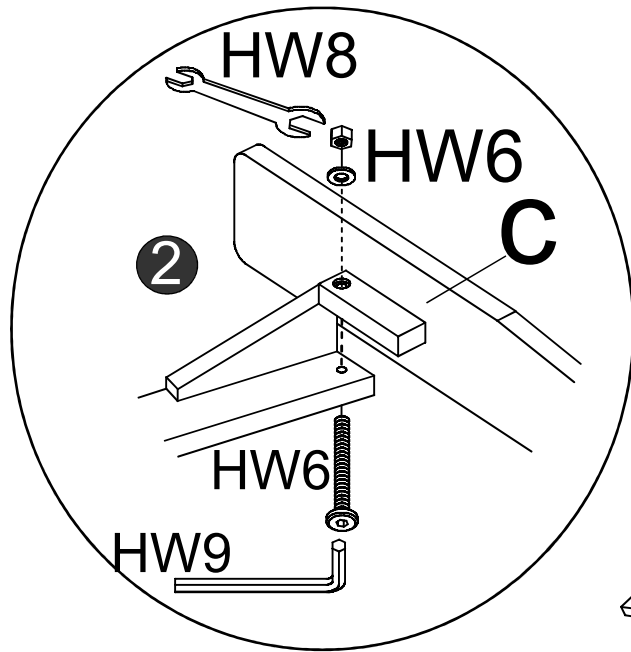


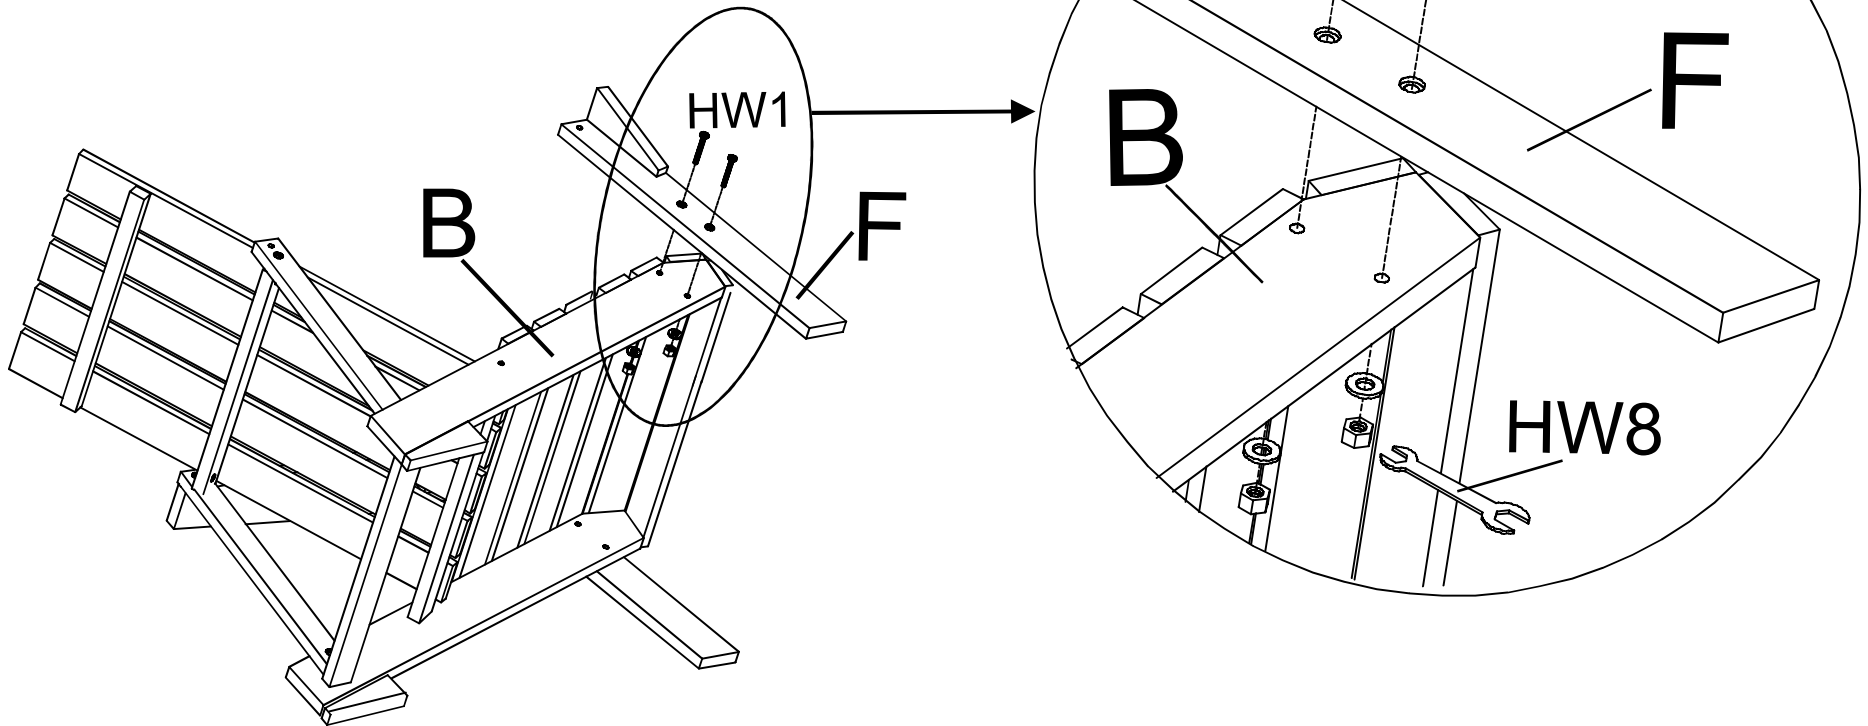
Step 3: Attach the Left Arm (C) to the Left leg (D) as shown on the picture. Fix the Left arm (C) to the Support back (G) by using the Bolt & round nut (HW2), tighten it by using the Allen key (HW9) as shown on the picture (1). At last using the Bolt & nut (HW1) to fix the Left arm (C) to the Leg (D) by the Allen key (HW9) and Wrench (HW8) as shown on the picture (2).

PREPARATION

Tool required for assembly (included): Allen Key and Wrench.

4


HW1		2x
	M6x45	



Step 4: attach the Right leg (F) to the Seat (B) and using the Bolt & nut (HW1) and tighten it by the Wrench (HW8) and Allen key (HW9) as shown on the picture.

PREPARATION

Tool required for assembly (included): Allen Key and Wrench.

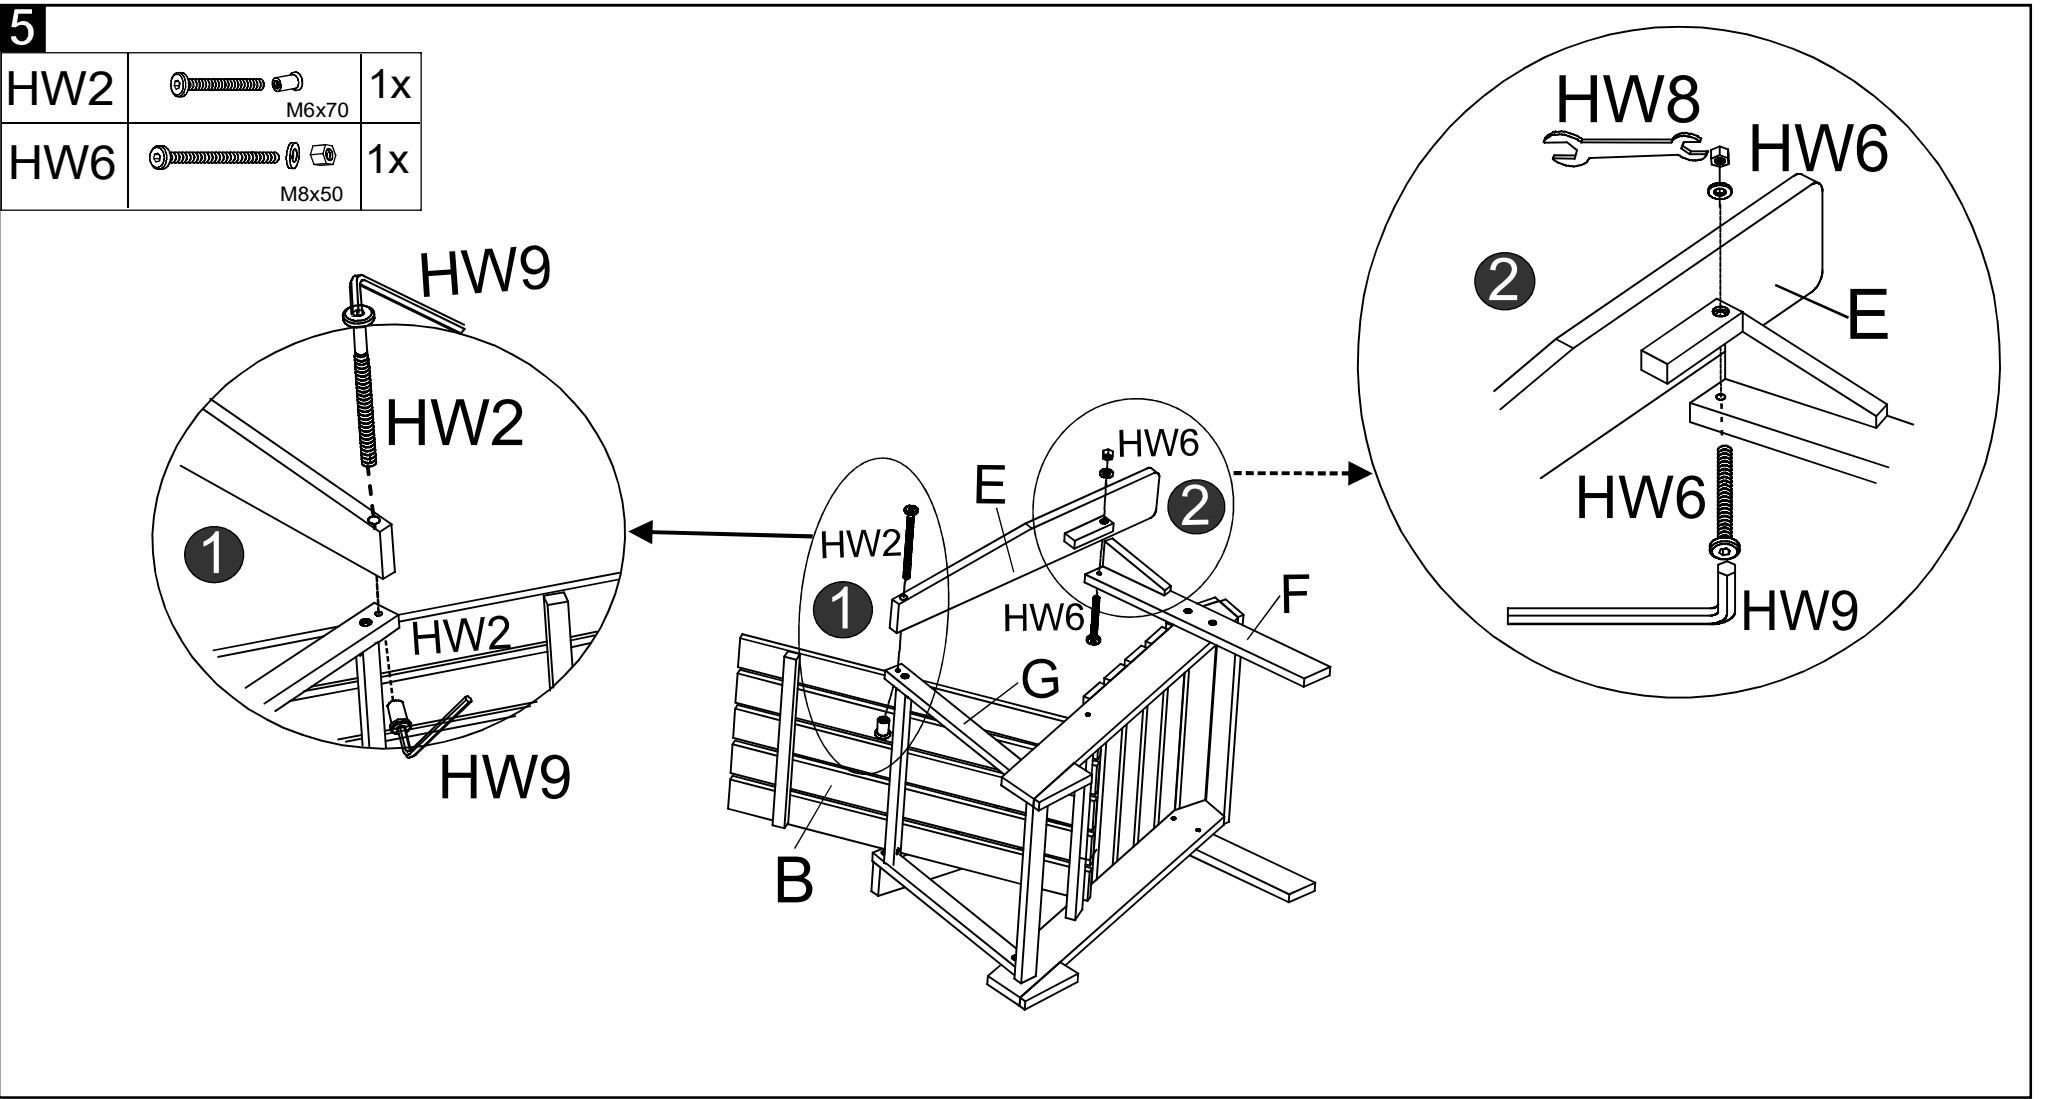

Step 5: attach the Right arm (E) to the Right leg (F) and the Support (G) as shown on the picture. Using the Bolt & round nut (HW2) tighten it by the Allen key (HW9)- pic (1). At last using the Bolt & nut (HW6) to fix the Right arm (E) to the Right leg (F) it as shown on the picture-pic (2).